

User Manual

FCC ID: 2ABBL-M10181

Model Name: M10181



Warning: This product is not a toy, adult SUPERVISION is Recommended.

Important Safety Precautions

Please always follow these basic safety precautions when using your tablet. This reduces the risk of fire, electrocution and Injury.

- Please avoid exposing the device to direct sunlight and heat sources.
- Be sure to protect the power Cord. Please install the power cables so that they cannot be trampled or pinched by objects placed on or against it. Pay special attention to the place where the cord connects to the Unit.
- Only use the AC adapter supplied with the unit. The use of another power adapter will void the warranty.
- Do not remove the back cover. This device does not contain any elements that may be repaired by the User.
- If the appliance is damaged, it must be repaired by the manufacturer, its after-sales service or by a similarly qualified person.
- This device is not intended for use by children under the age of 3.
- Children over 3 years of age may use this product exclusively under parental supervision. (adults have the responsibility to control the websites, apps and games used by the child)
- The product must never be disassembled by the User.
- The product should not be used in a humid room, in the rain or at the beach.
- Do not leave the product in an unventilated place.
- Do not disassemble the unit. This will void the warranty.
- Do not exert excess pressure on the screen.
- Unplug the appliance during a thunderstorm or if it is not being used for a long time.
- Do not use the product next to explosive or flammable products.
- Do not use near strong magnetic fields.
- Do not drop the appliance and protect it from shocks and impact.
- Do not use next to medical devices or pacemakers.

Package Contents:

- Tablet
- Keyboard
- AC Adaptor
- USB Cable
- User Guide

Technical Specifications:

Processor	Quad Core RK3126C - 1.3 GHz
GPU	MALI 400 MP
OS	Android™ 8.1 (Go edition)
Internal Memory	16 GB
Ports	USB 2.0
Wifi	Wifi 802.11 b/g/n
Ram	1 GB
display	10.1" IPS
Resolution	1280 x 800
Camera	2MP Front / 2MP Back
Battery	5000 mAh

Front and side View:



Back View:

(1)



(2)

 
- (1) Back Camera
- (2) MicroSD Card Slot

Powering Tablet On/Off

Power On: Press and hold the power button for 3 seconds.

Turning Off: Press and hold the power button for 3 seconds, → Tap power off → Tap OK.

Once the tablet is powered on slide your finger from bottom of the screen to the top to unlock the device and access the home screen

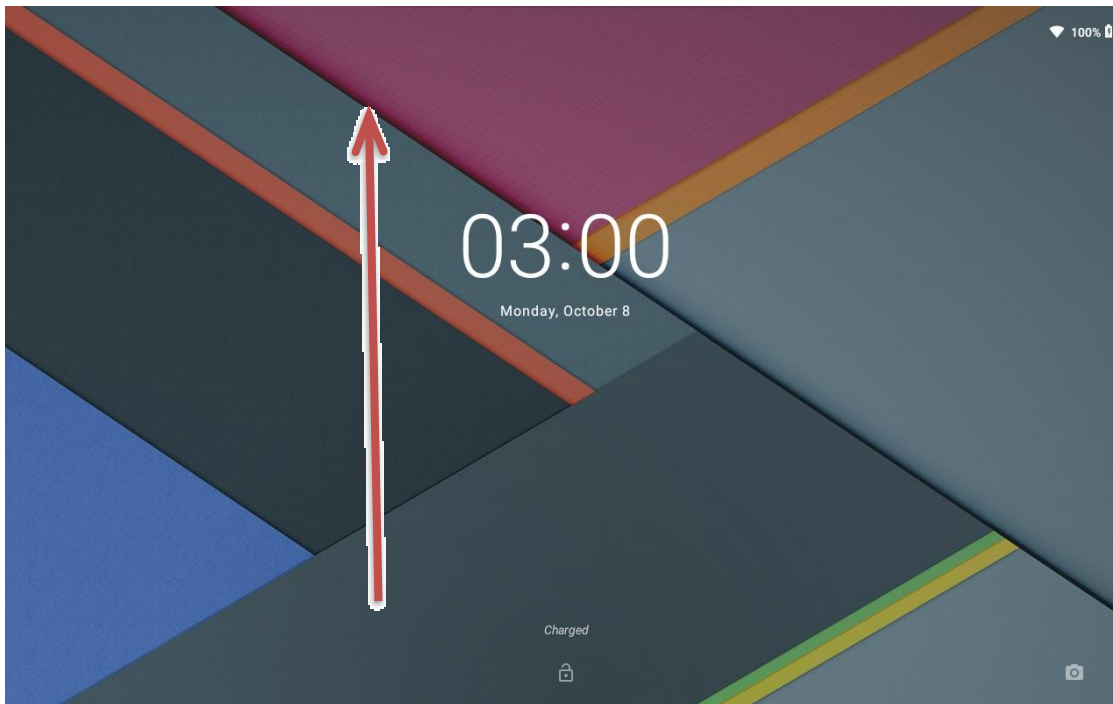

Inserting a memory Card

The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to increase memory capacity of the tablet.

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.





To release and remove the memory card

1. Unmount the memory card.
 - a. In the home screen, tap the launcher Tab and then touch Settings to show the settings menu.
 - b. Touch Storage to show the storage settings.
 - c. Touch unmount Sd card to prepare the memory card for safe removal.
 2. Push the card further into the slot until you hear a click. The card will spring out of the slot.
 3. Grasp the card by its edge to remove it.
-

Getting Started

Charging the unit

The current battery status will be always displayed in the lower right of the screen in the system information bar. The battery icon  will change in accordance with the battery status. When connected to the DC charger, the status area on the bottom bar will display the charging icon . Note the lightning symbol inside the battery icon.

To charge the battery:

 
1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

Connecting to a Wi-Fi Network


1. Turn on the Wi-fi radio if it is not already on already


To turn on Wi-fi:

- a. Go to the Home Screen.
- b. Open the Application Menu: Slide up from the bottom of the home screen to the top of the screen to access App Menu.
- c. Select the Settings icon.
- d. Open the Wireless & Networks menu: Touch Network & Internet.
- e. Open the Wi-Fi settings menu: Touch Wi-Fi.
- f. Make sure that the Wi-Fi option box is set to ON. Touch and slide the block to the right to enable the Wi-fi connections.

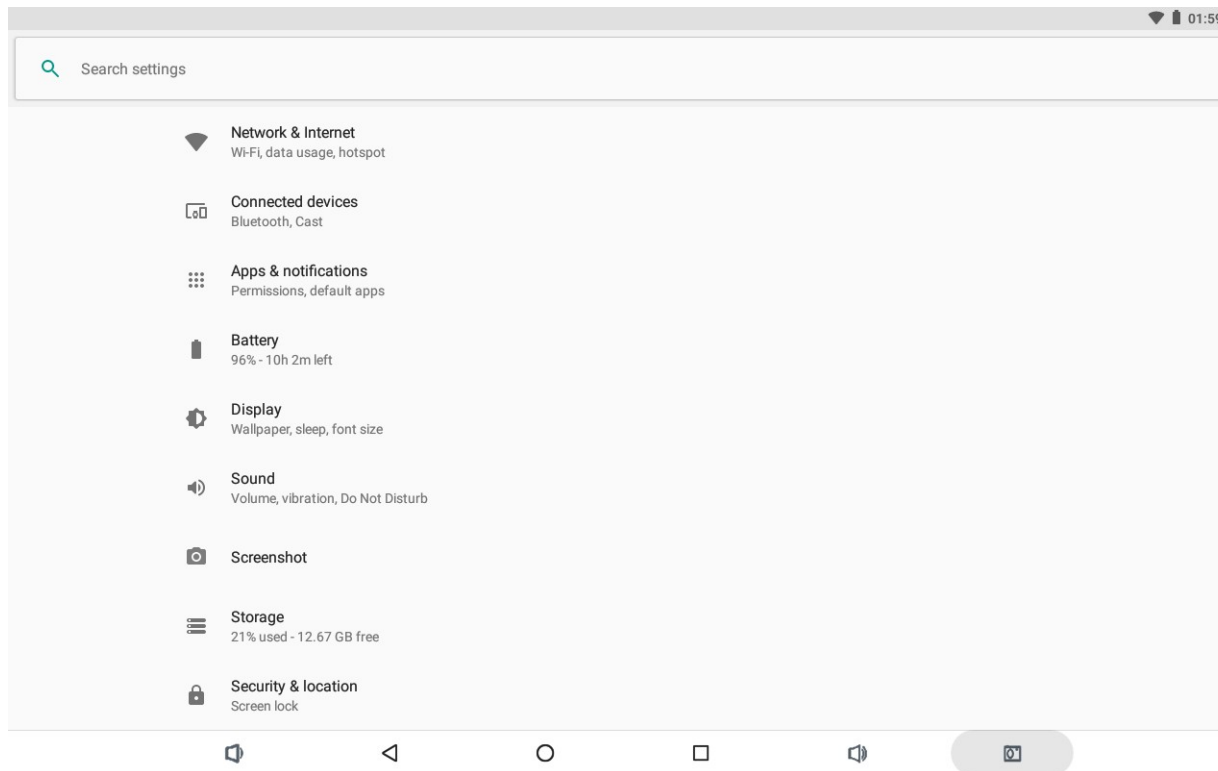


  2. Select an available Wi-fi network to connect to: In the same Wi-Fi settings menu above, touch a network in the list. If the network is open, the tablet will prompt you to confirm connection to the network. Touch Connect to confirm. If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm.

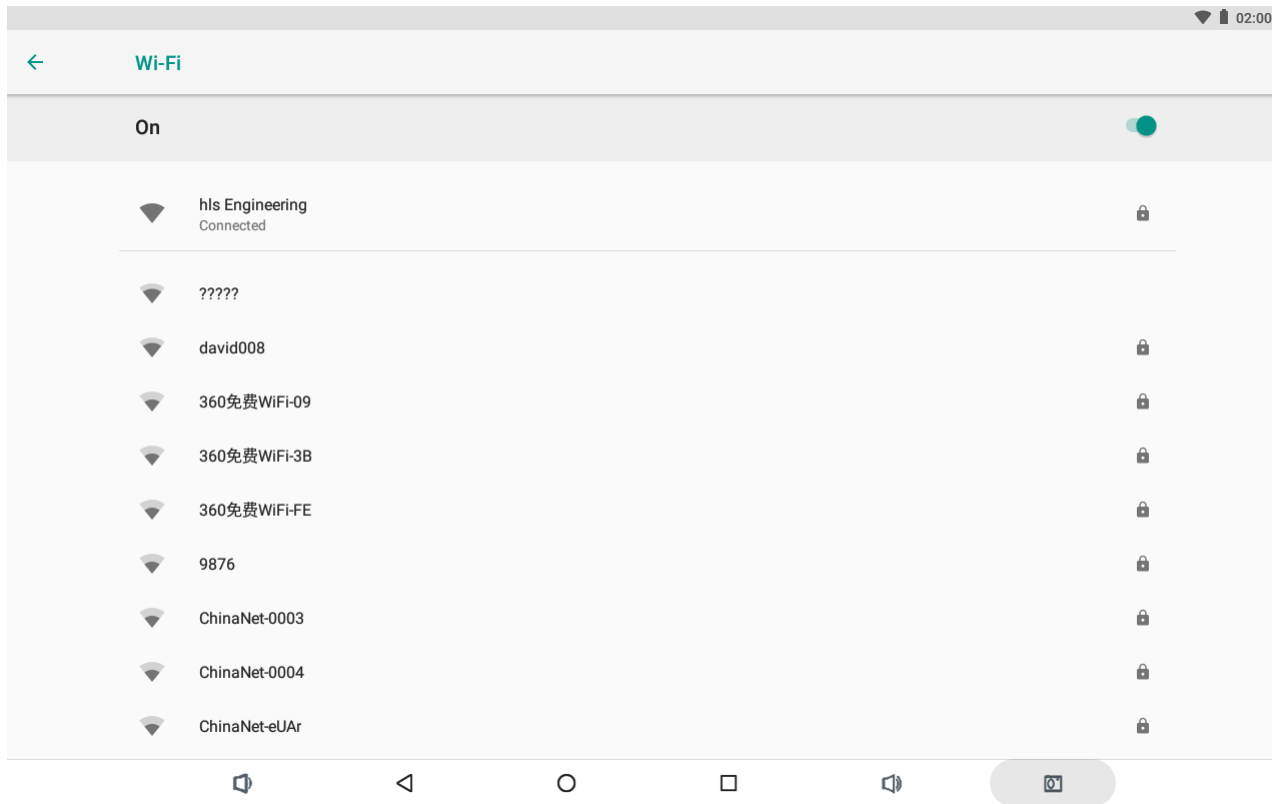

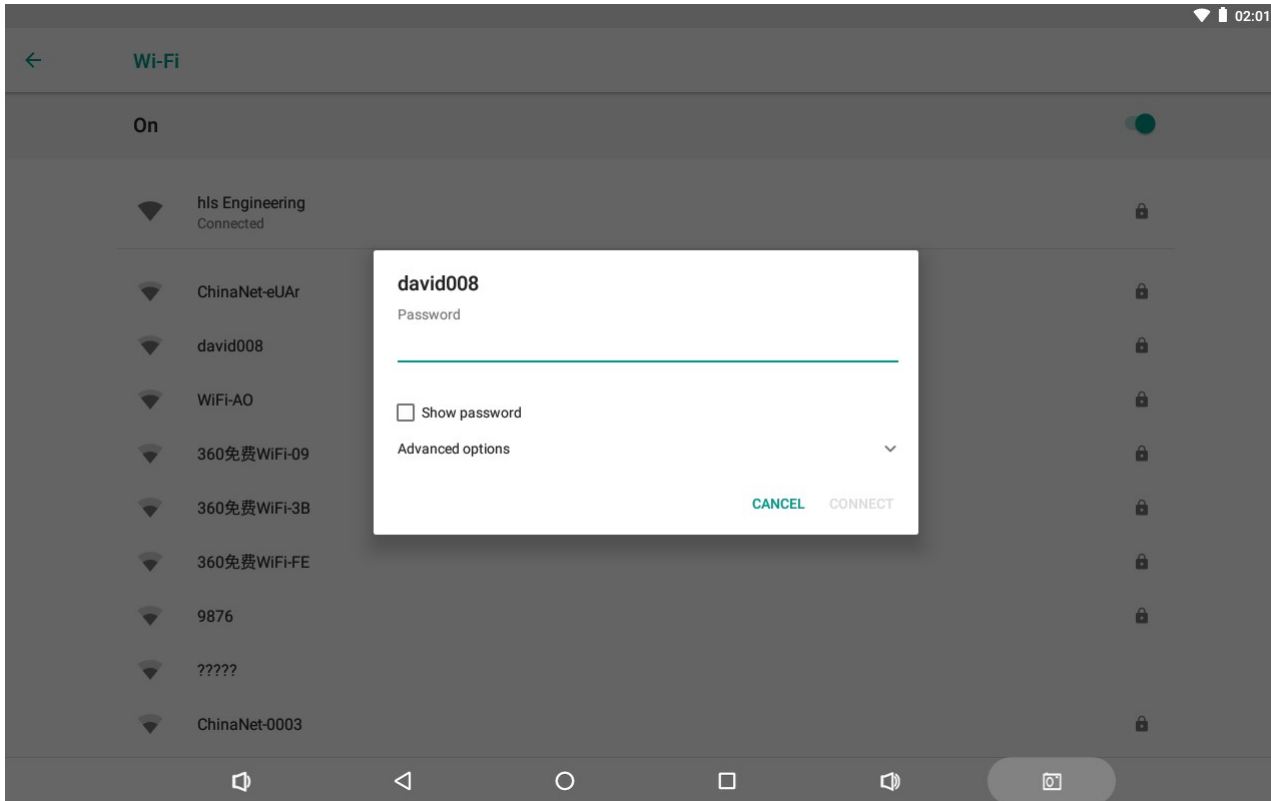

Home PAGE

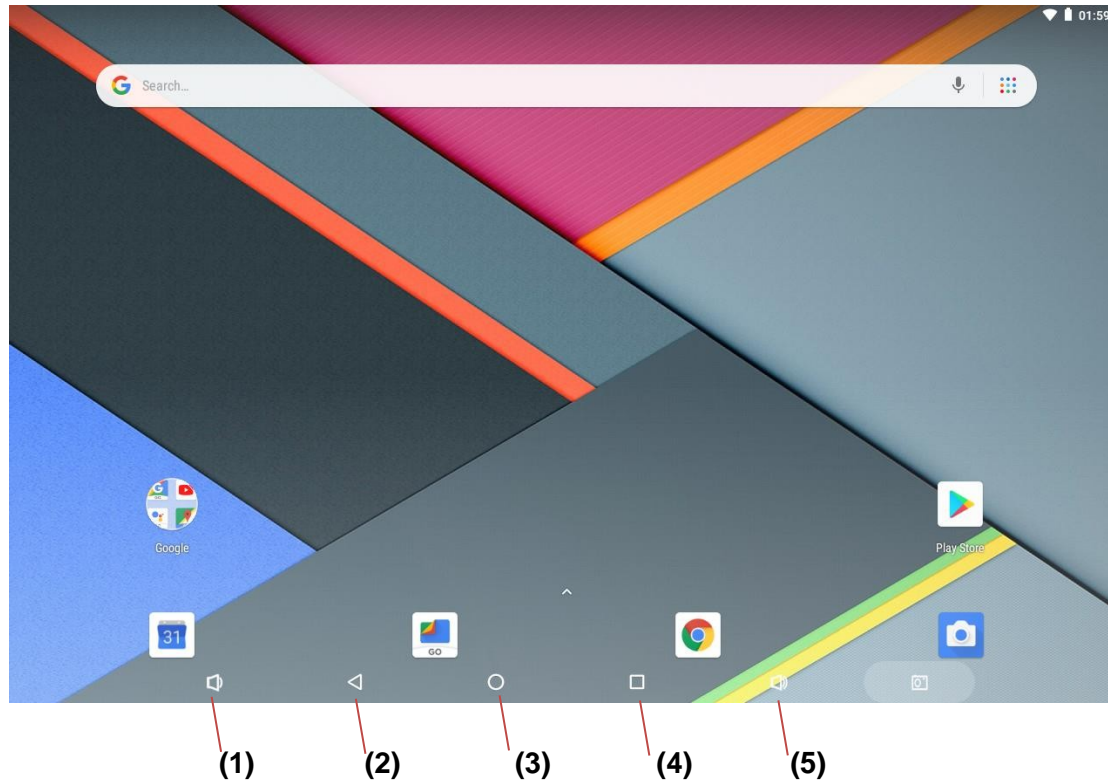 

The desktop icons on this screen are examples that can vary from those displayed on your product.
(photo applications may vary depending on your model)

- (1) Volume Down Button: Press to lower speaker volume
- (2) Return Button: Press to go to the previous screen
- (3) Home Icon: Press to go to the home screen
- (4) Recent Apps: Press to view recently used and open applications
- (5) Volume Up Button: Press to increase speaker volume

*** * To download APPLICATIONS you must use the Google™ PLAY APP * ***

To download applications that are not already pre-loaded on the tablet you will have to use the Google Play app. Please open and register an account if you don't already have one.,



Google, Android, Google Play and other marks are trademarks of Google LLC.

Warranty

Limited Warranty

The Astro Tab brand and its products are owned by Inspira Technologies LLC (“Astro Tab” or the “Company”). This is a limited warranty for the product purchased and contained in this package (the “Product”). For Astro Tab to honor this limited warranty, the original retail purchaser (“you”) must present a valid proof of purchase of the Product, such as a receipt.

This warranty is void if Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage, or tampering of the bar code of the Product unit. This warranty is a limited warranty for repair/replacement of product, subject to the conditions set forth herein.

INSPIRA TECHNOLOGIES LLC IS NOT LIABLE FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES AND COMPANY’S TOTAL LIABILITY HEREUNDER SHALL NOT EXCEED AN AMOUNT GREATER THAN THE RETAIL PURCHASE PRICE OF THE PRODUCT.

Subject to the applicable provisions set forth herein, with regard to this limited warranty, you are responsible for all costs in connection with the shipping and handling of the Product to Astro Tab, and Astro Tab is likewise responsible for all shipping and handling of the Product back to you. Astro Tab bears no risk of loss of the Product in connection with the transportation and shipment of the Product in any way relating to this limited warranty.

90 Days parts & labor

Limited Manufacturer’s Warranty – Astro Tab warrants to you as the original retail purchaser of the Product, that should the Product have any defect, under normal conditions, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company’s option) without charge, if submitted to Astro Tab within a period of 90 days from the date of purchase of Product. This warranty only covers manufacturer defects and the Product must be returned to Company in its original condition. Proof of Purchase, in the form of a valid receipt, is required.

1 Year limited parts

The 1 year limited parts warranty gives you the option to return Product to Astro Tab for repair/replacement. You will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

Contact us

Our email address is: support@inspira-tech.com

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.