

Quick guide

Nokia xx

For your safety

 
Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further information, read the complete user guide.

- SWITCH OFF IN RESTRICTED AREAS**
Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.
- ROAD SAFETY COMES FIRST**
Obey all local laws. Always keep your hands free to operate the vehicle when driving. Your first consideration while driving should be road safety.
- INTERFERENCE**
All wireless devices may be susceptible to interference, which could affect performance.
- QUALIFIED SERVICE**
Only qualified personnel may install or repair this product.
- BATTERIES, CHARGERS AND OTHER ACCESSORIES**
Use only batteries, chargers, and other accessories approved by HMD Global for use with this device. Do not connect incompatible products.
- KEEP YOUR DEVICE DRY**
Your device is not water-resistant. Keep it dry.
- GLASS PARTS**
The device screen is made of glass. This glass can break if the device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch the glass parts of the device or attempt to remove the broken glass from the device. Stop using the device until the glass is replaced by qualified service personnel.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

SAR
This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 10 mm away from the body. The specific maximum SAR values can be found in the Certification Information (SAR) section of this user guide. For more info, go to www.sar-tick.com. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above-stated separation distance from the body. Note that mobile devices may be transmitting even if you are not making a voice call.

Keys and parts

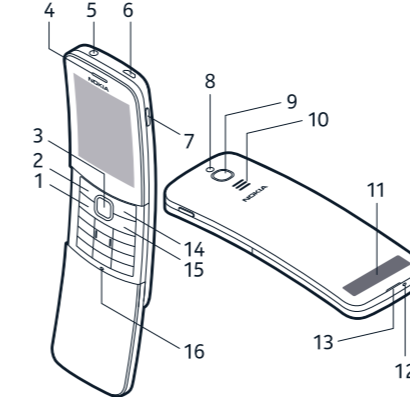

- 1 Call key
- 2 Left selection key
- 3 Scroll key
- 4 Earpiece
- 5 Headset connector
- 6 USB connector
- 7 Power key
- 8 Flash
- 9 Camera
- 10 Loudspeaker
- 11 Antenna area
- 12 Microphone
- 13 Back cover opening slot
- 14 Right selection key

- 15 End/Back key
- 16 Microphone

To lock the keys and screen, close the slider.
To unlock the keys, open the slider and press and hold *.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

Note: You can set the phone to ask for a security code. Press the scroll key and select **Settings**. Scroll right to **Privacy & Security**, and select **Screen Lock > Screen Lock > On**, and create a four-digit code. Note, however, that you need to remember the code you created, as HMD Global is not able to open or bypass it.

5. Select **Send**. If asked, select which SIM to use. You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

Camera

1. To switch the camera on, press the scroll key to open the apps list, and select **Camera**.
 2. To take a photo, press the scroll key.
- Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a photo.

Listen to radio

To listen to the radio, you need to connect a compatible headset to the phone. The headset acts as an antenna.

Search for radio stations and listen to radio

Press the scroll key to open the apps list and select **FM Radio**.
To search for available stations, scroll left or right.
To save a station, select **Options > Add to favourites**. To switch to a saved station, select it from the list.
To change the volume, select **Options > Volume**, and scroll up or down.
To turn off the radio, select **Pause**.

Listen to music

You can listen to your MP3 music files with the music player. To play music, you need to store the music files on a memory card or the phone memory.
1. Press the scroll key to open the apps list and select **Music**.

2. Scroll right to **Songs** to see all your saved music. To listen to a song, select it. You can also select music from **Albums** or **Artists**.

After-sales support

If you need assistance after purchasing your phone, or if you have queries on the warranty that applies to your phone, you may contact the distributor or the store where you bought your phone. Keep your receipt as proof of purchase for warranty purposes.

Find your model number and serial number (IMEI)

If you need to contact your care point or your service provider, you may need info such as the model number and the serial number (IMEI). To see the model number, dial *#0000#. To see the serial number, dial *#06#. If you have a dual-SIM phone, only IMEI1 is needed. You can also find the info on your phone label, which is located under the battery.
The IMEI is also visible on the original sales box.

Product and safety info

For info on HMD Global Privacy Policy, go to www.nokia.com/en_intl/phones/privacy. For the online user guide, even more info, and troubleshooting help, go to www.nokia.com/mobile-support.

Network services and costs

You can use your device on the GSM 900/1800, WCDMA 1, 5, 8, and LTE B1, 3, 5, 7, 8, 20 networks. You need a subscription with a service provider.

Insert the SIM, memory card and battery

To use the phone, you need a micro-SIM card. If you have a dual-SIM phone, you need a micro-SIM card and a nano-SIM card.
Use only original micro and nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

 


Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.


1. Remove the back cover.

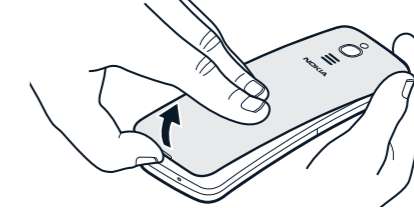


9266xxx
TA-1048/TA-1071

EN-EU DRAFT 0.1

 2. If the battery is in the phone, lift it out.

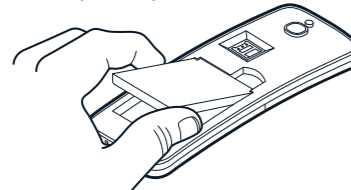


 3. Slide the micro-SIM in the SIM1 slot. If you have a memory card, slide it in the memory card slot.

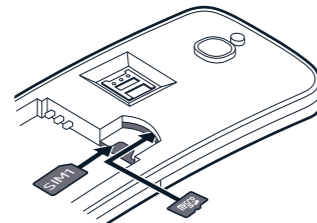

4. If you have a dual-SIM phone, slide the SIM2 holder to the right and open it up. Place the nano-SIM in the SIM2 slot face down, close down the holder and slide it to the left to lock it in place. Both SIM cards are available at the same time when the device is not being

 used, but while one SIM card is active, for example, making a call, the other may be unavailable.

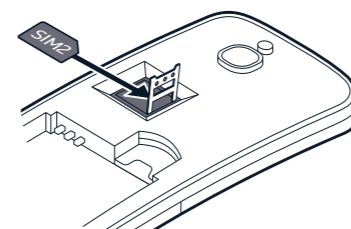

5. Put back the battery.

6. Put back the cover.

Note: On dual SIM capable devices, both SIM1 and SIM2 slots support 4G networks. However, if your SIM1 and SIM2 are both LTE SIM cards, the primary SIM supports 4G/3G/2G networks, while the secondary SIM can only support 3G/2G. For more information on your SIM cards, contact your service provider.

Remove the memory card

Open the back cover, remove the battery, and slide the card out.

Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

Remove SIM 1

Open the back cover, remove the battery, and slide the SIM card out.

Remove SIM 2

Open the back cover, remove the battery, slide the SIM2 holder to the right and open it up. Remove the nano-SIM,

close down the holder and slide it to the left to lock it in place.

Switch your phone on or off

Press and hold the power key.
To switch your phone off, press and hold the power key until **Power Off** is shown. Then press the power key again.

Charge the battery

1. Plug the charger into the wall outlet.
 2. Connect the charger to the phone. When done, unplug the charger from the phone then from the wall outlet.
- If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

Set which SIM card to use

Press the scroll key and select **Settings > SIM Manager**. To choose which SIM to use for calls, select **Outgoing Calls** and the SIM you want to use.

Make a call

1. Type in the phone number.

To type in the + character used for international calls, press and hold *.

2. Press **Call**. If asked, select which SIM to use.
3. To end the call, press **End call**.

Answer a call

Press **Call**.

Send and receive messages

1. Press the scroll key to open the apps list.
2. Select **Messages > New Message**.
3. In the **To** field, type in a phone number or the name of a contact in your contacts list.
4. Write your message.

Maximum transmit power

GSM 900	32.5 dBm
DCS 1800	30 dBm
WCDMA FDD I	24 dBm
WCDMA FDD V	24 dBm
WCDMA FDD VIII	24 dBm
LTE Band B1	23 dBm
LTE Band 3	23 dBm
LTE Band 5	23 dBm
LTE Band 7	23 dBm
LTE Band 8	23 dBm
LTE Band 20	23 dBm
Bluetooth	10 dBm
WLAN 2.4 G	18 dBm

Using some features and services, or downloading content, including free items, require a network connection. This may cause the transfer of large amounts of data, which may result in data costs. You may also need to subscribe to some features.

Emergency calls

Important: Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on
 - If the phone keys are locked, unlock them.
 - Move to a place with adequate signal strength.
1. Press the end key repeatedly, until the home screen is shown.
 2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
 3. Press the call key.
 4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.

