

Instruction Manual

Model: T492

Dear client,

We thank you for purchasing this product.



This appliance was submitted to several laboratorial tests, which certify its quality. To simplify the use of this appliance, this instruction manual has been provided. The instructions must ensure a quick and safe use.

Please read carefully the instructions and safety measures described in this manual.

We wish our clients great satisfaction in using their new appliance.

1. Safety Instructions.....	3
1.1. Power Energy.....	3
1.2. Power Cord and Other Cables.....	4
1.3. Humidity and Water.....	4
1.4. Cleaning.....	4
1.5. General Precautions.....	4
2. Utilization and Functioning.....	5
2.1. Product Description.....	5
2.2. Power On/Off.....	5
2.3. Desktop.....	6
2.4. Standby Mode (Screen Off Mode)/Unlock the Screen.....	6
2.5. System Settings.....	7
2.5.1. Wireless & Network.....	8
2.5.2. Sound	8
2.5.3. Display.....	8
2.5.4. Storage	9
2.5.5. Battery	9
2.5.6. Apps.....	11
2.6. Account & Sync	10
2.7. Location Service	10
2.8. Security	11
2.9. Language & Input.....	11
2.10. Date & Time	12
2.11. Accessibility	12
2.12. Developer Options	12
2.13. About Tablet	12
3. Installation	12
3.1. How to Connect/Disconnect the Device with/from the Computer.....	12
3.2. How to Install Applications (.apk file) into the Device	13
3.3. Desktop Icons	14
3.4. Keyboard Input	
4. Technical Specifications.....	15
4. Technical Specifications.....	16
5. Aftermarket	16
6. Environment Conservation.....	17
7. FCC Notice.....	18

1. Safety Instructions

	ATTENTION	
	Risk of Electric Shock Do Not Open	
Attention: to avoid the risk of electric shock, do not remove the cover. The interior does not contain any parts that may be repaired by the user. Ask for assistance to qualified personnel.		

Important Warnings

Before using your appliance, read carefully this instruction manual and keep it in a safe place, as you may need it for future consultations.

Before you start your appliance, and to ensure a correct use, do not use it if:

- It has fallen on the ground;
- You notice any evidence of damage;
- Any anomaly occurs during its operation;

To avoid hazards and deterioration of your appliance by an incorrect use, it is advisable to read the instructions carefully and attentively.

Your appliance must not be used to other ends than the ones foreseen in the instructions manual. Your safety is only guaranteed in a household use and not for commercial use. The incorrect use will not be covered and automatically cancels the right to warranty.

Assistance

Be sure that, in case of malfunction, you take your appliance to a qualified technician for assistance.

This appliance can be used by children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.

1.1. Power Energy

Make sure the voltage of the electric network is compatible with the one of the appliance. If it does not match, consult the vendor or Customer Support Service.

1.2. Power Cord and Other Cables

Do not roll up or pull the cord to disconnect the appliance, and do not use to twine the appliance. Keep the cord far from warm surfaces.

Never use the appliance if it has a damaged cable or socket, or if it is not working properly.

In case of damage of the power cord, do not use your appliance. Take it to technical assistance for its replacement.

1.3. Humidity and Water

Do not use your appliance in humid places. Do not let your appliance to catch water under any circumstance, as it may be dangerous. **TO AVOID FIRE HAZARD OR ELECTRIC SHOCK DO NOT EXPOSE YOUR APPLIANCE TO HUMIDITY OR WATER.** Do not place your appliance under water (for example for washing).

1.4. Cleaning

 
Turn off your appliance before cleaning it; some time after clean it with a soft and dry cloth. Do not use cleaning products.

1.5. General Precautions

- Please follow the instructions of the user manual, which helps properly installing and operating this product and enjoying its advanced features. Please keep the instructions for future reference.
- Read all instructions before using the appliance.
- Do not expose this product to fire.
- Do not expose this product to extreme temperatures, humidity or direct sunlight.
- Do not attempt to disassemble this product or any parts of it.
- Never allow liquid or small particles to enter the device.
- Do not place the product in hot, wet or dusty environment, especially in summer.
- Do not leave the product inside a car with all windows closed.
- Avoid dropping, impacting or shaking the product violently; otherwise it may cause damages or malfunctions.
- Select a proper volume to avoid hearing problem when using earphones.
- Be sure to use the provided chargers and accessories in the package.

2. Utilization and Functioning

2.1. Product Description

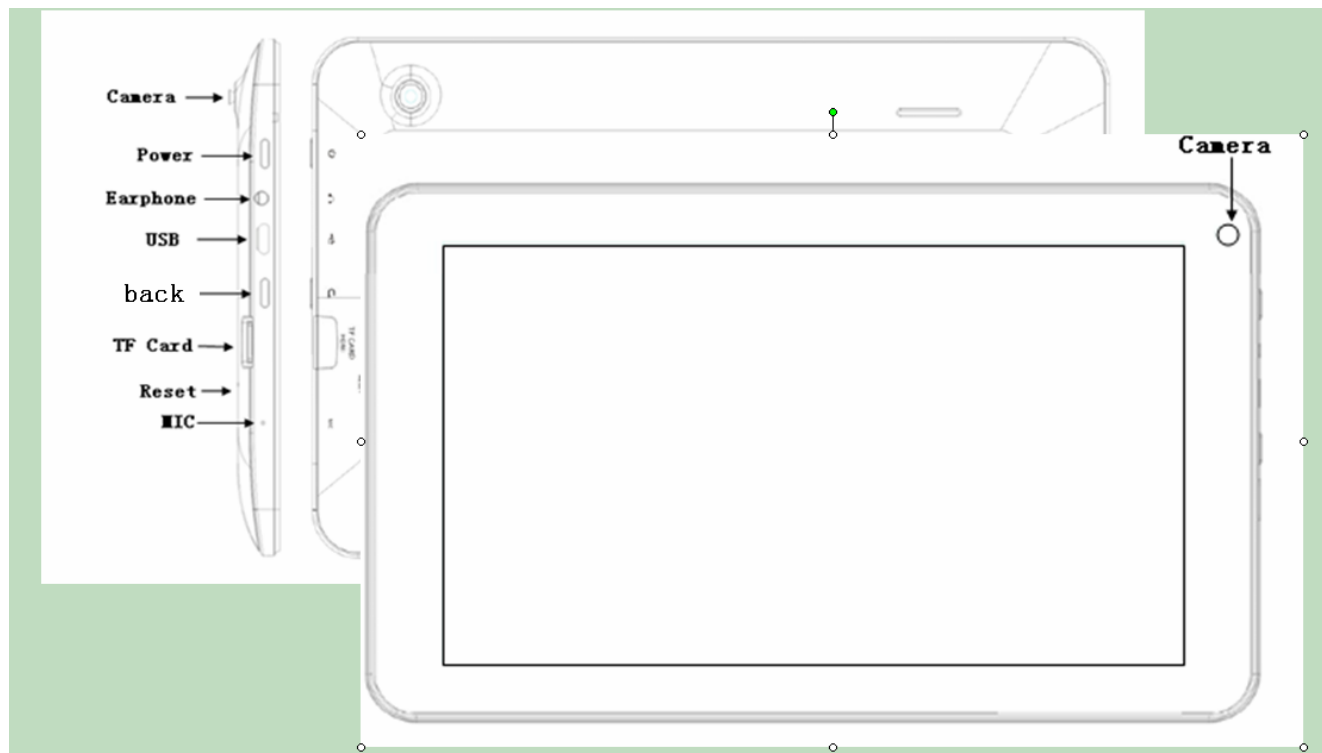

Important Notice

- If the device is freezing or stuck, long press power button for 10 seconds, or connect with adapter to activate device.
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

Caution

- For charging, be sure to use the power adapter (DC5V) that is provided in the package, otherwise, the device may be damaged and does not work.

2.2. Power On/Off

Long press power button to power on/off the device. It may take one minute to boot the device.

Short press power button to turn on/off the screen (Standby mode, refer to 2.4. below).

2.3. Desktop

 
Slide the screen lock standard, Show Desktop



2.4. Standby Mode (Screen Off Mode)/Unlock the Screen

Short press the power button to turn on/off the screen (Standby mode On/Off)

After standby mode off, slide the lock icon in order to unlock the screen.

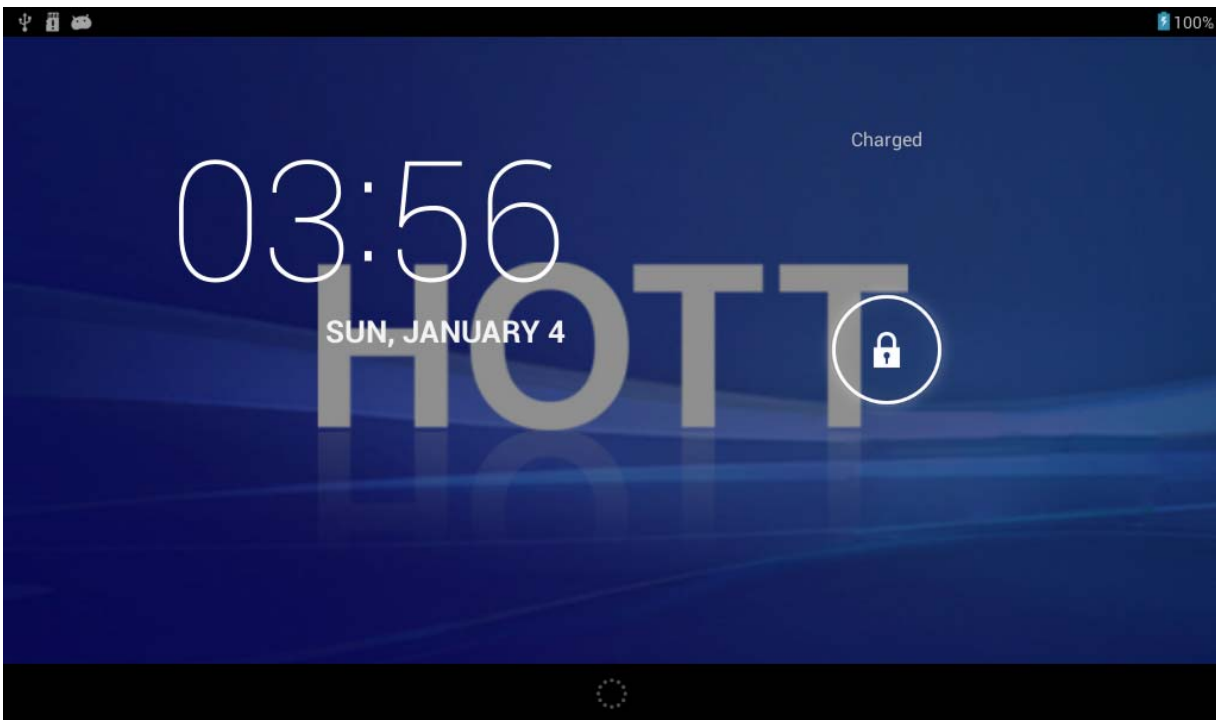


2.5. System Settings

On the desktop, press menu button and select system settings.



 2.5.1. Wireless & Network

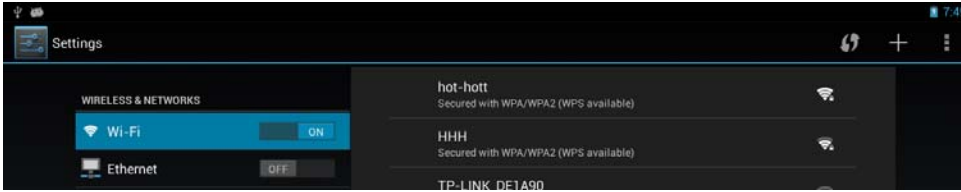


Wi-Fi: Off/On.

Wi-Fi settings: Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals.

Select the network you want to connect with.


2.5.2. Sound

 Set up each setting as you like.

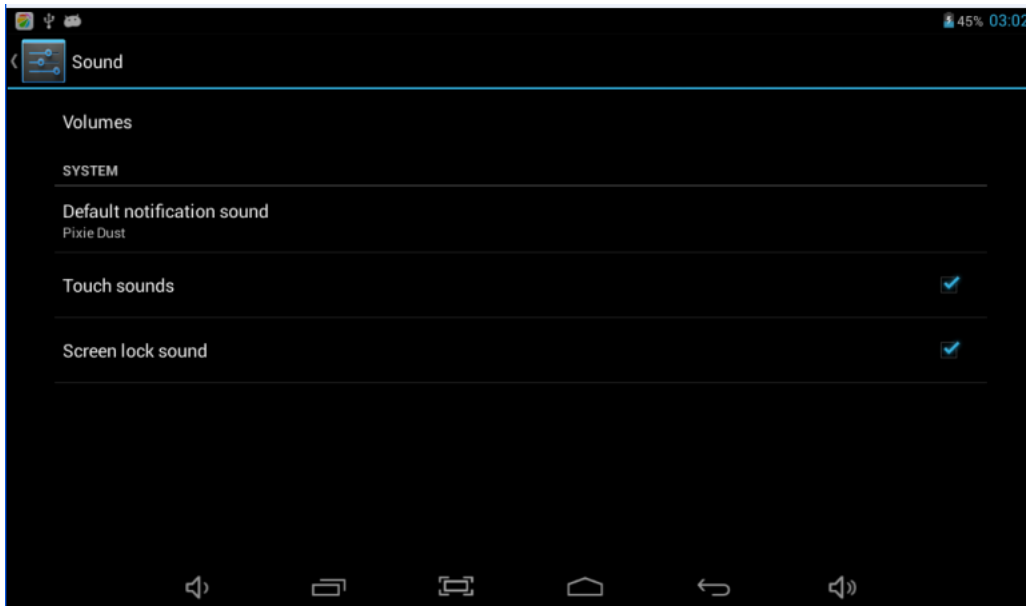


2.5.3. Display

 Set up each setting as you like.

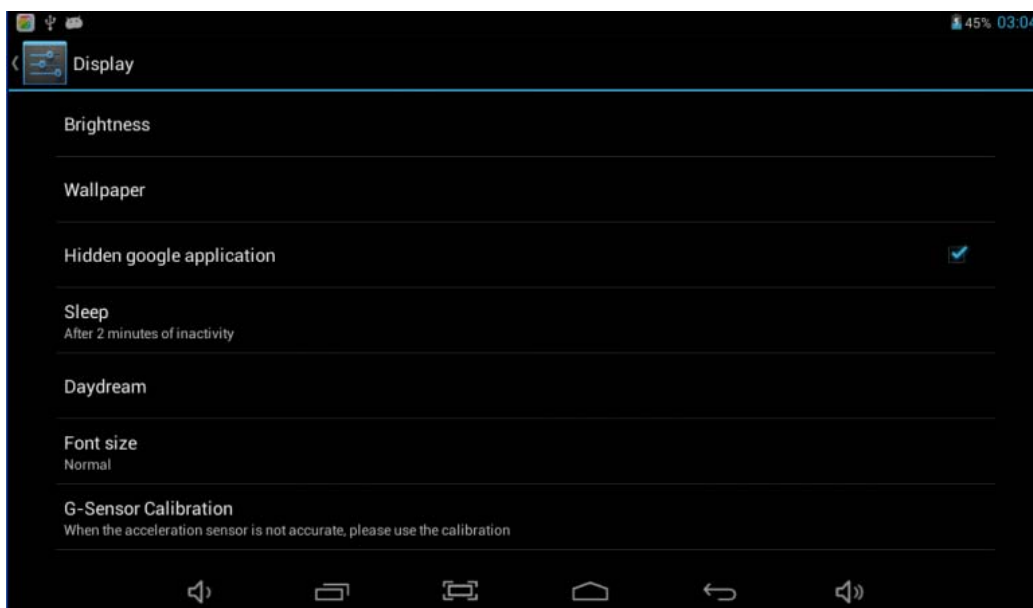

 
2.5.4. Storage

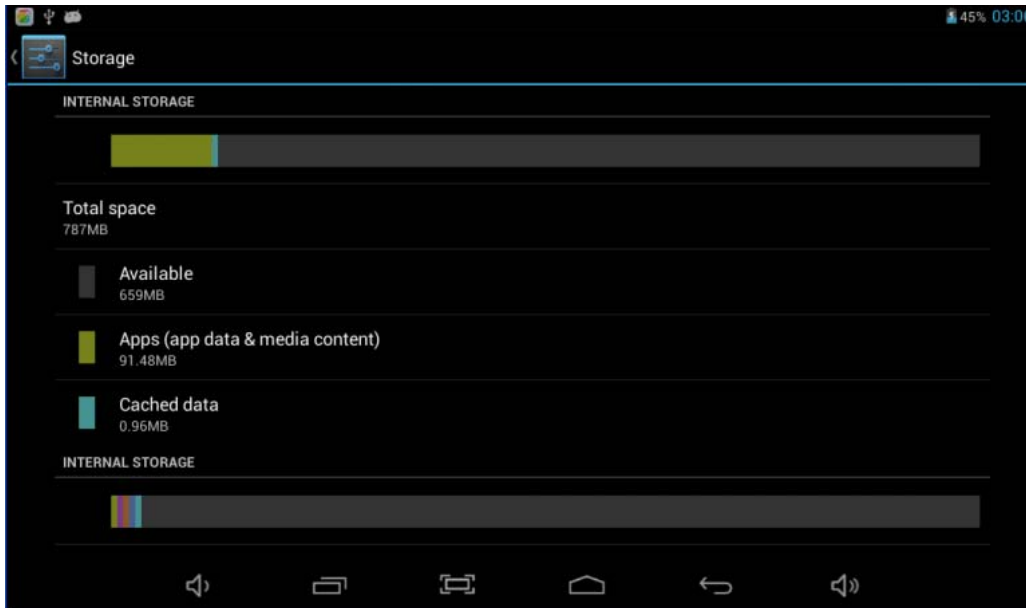

Check device memory and TF card status.

Unmount TF card: Unmount the TF card for safe removal.

 
2.5.5. Battery

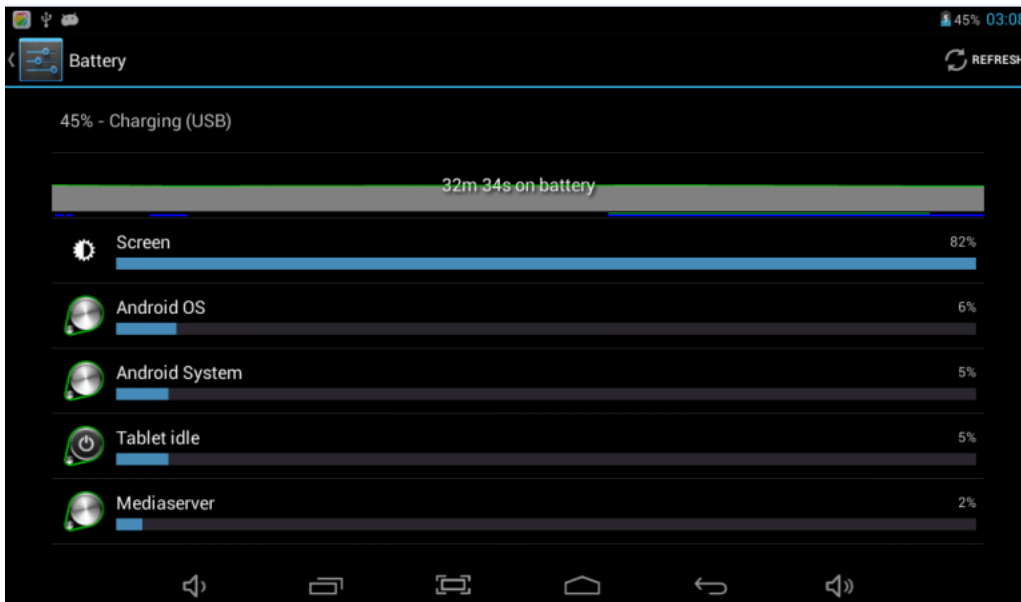

Check the battery usage status.


2.5.6. Apps

 Manage downloaded or running applications.

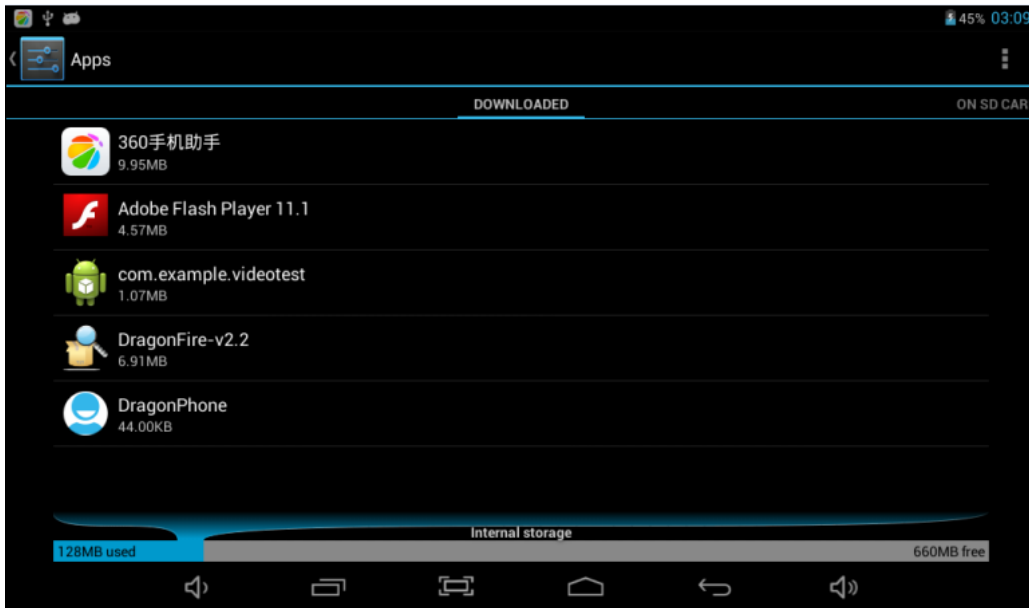

换图片

 Press Uninstall to uninstall the selected application.

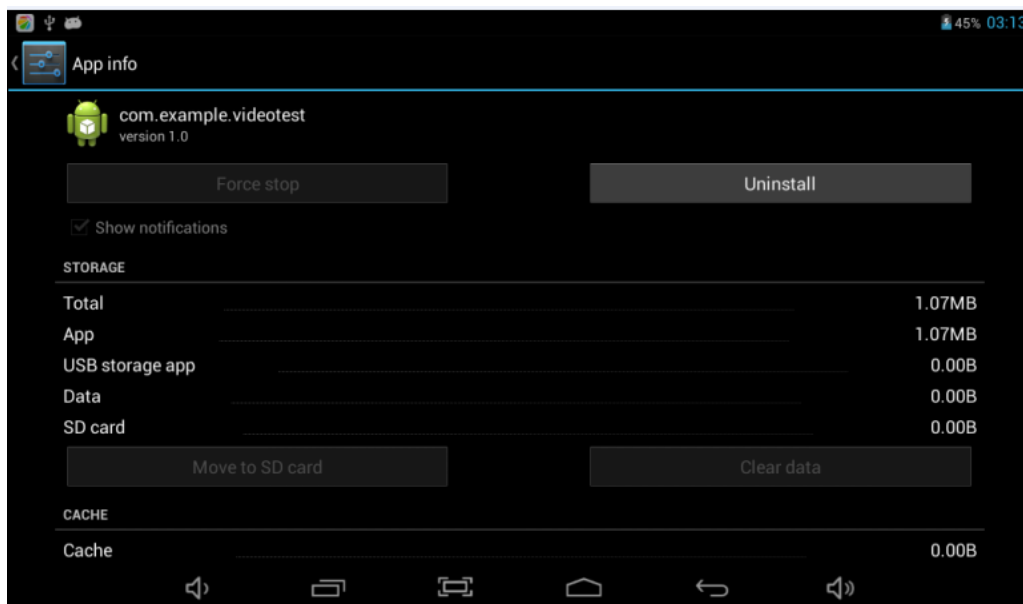

2.6. Account & Sync

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

2.7. Location Service

 
Google's location service: Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

2.8. Security

Screen lock: Protect your device from unauthorized use by creating a personal screen unlock pattern.

Make passwords visible: Show password as you type.

Unknown sources: If you want to allow installation of non-Market Applications, press Unknown sources and press OK.

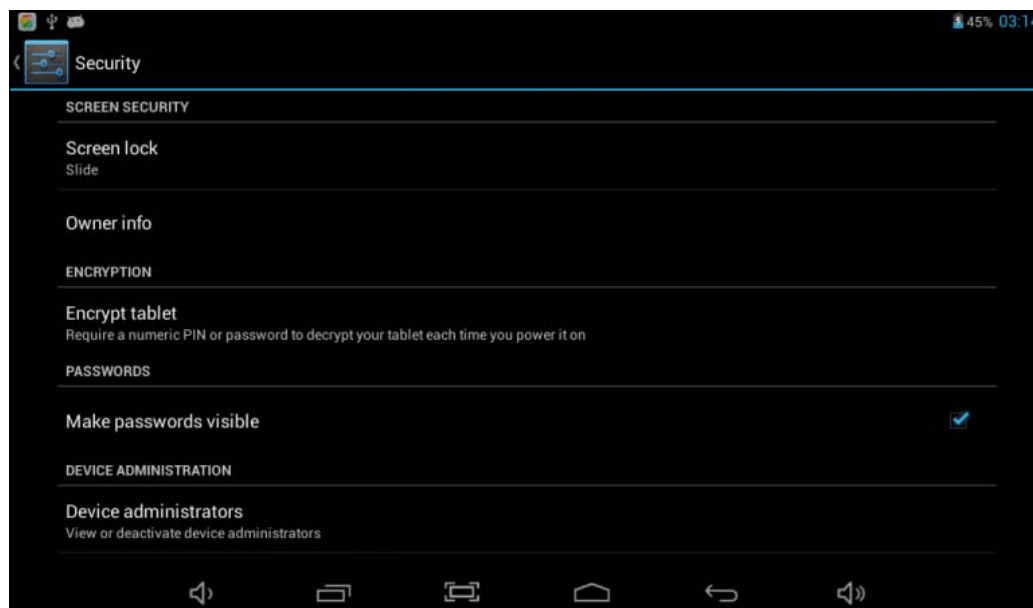


Install from TF card: Install encrypted certificates from TF card

2.9. Language & Input

Language: Choose your preferable language.

Keyboard & input method: Change keyboard & keyboard settings.

 On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard, enter the chosen Keyboard settings, select Keyboards and press the language you need.

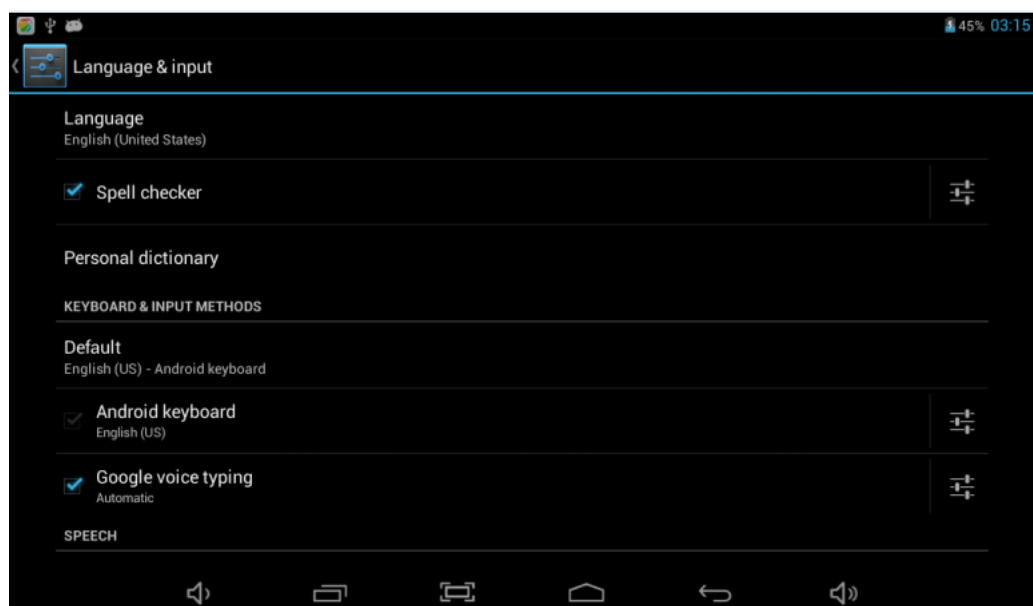

2.10. Date & Time

Set date & time and format.

2.11. Accessibility

Click to enter using some auxiliary functions on the machine

2.12. Developer Options

Set options for application development.

2.13. About Tablet

See status, legal information, etc.

 
3. Installation

3.1. How to Connect/Disconnect the Device with/from the Computer


On the main desktop, connect the device with the PC, touch left side of the status bar on the TOP of desktop.



Press “USB connected”, select “Turn on USB storage”. Now you can use it as an external storage.

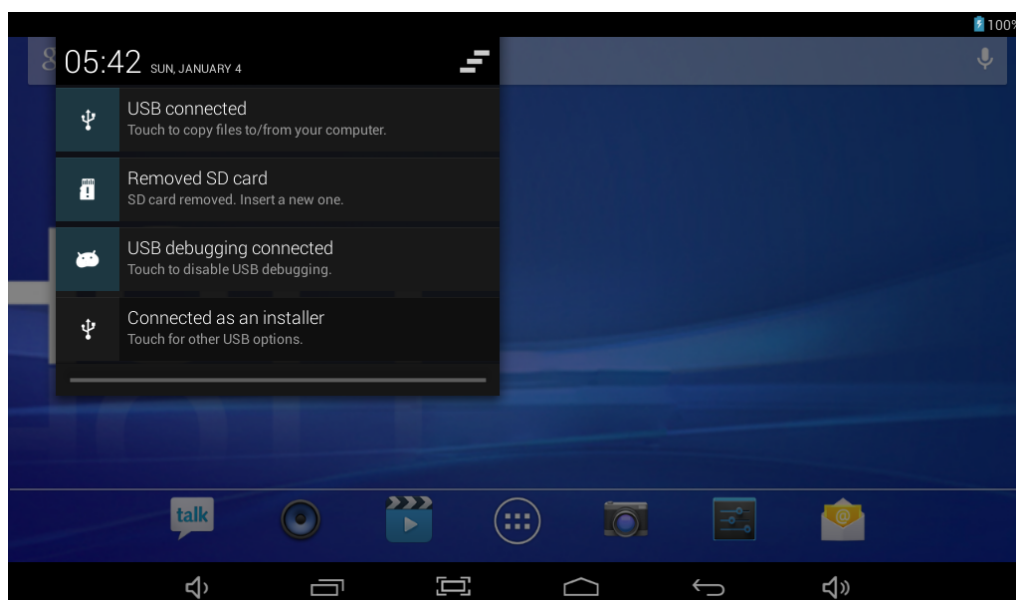

 After finishing your work, Press “Turn off USB storage” to unmount it.

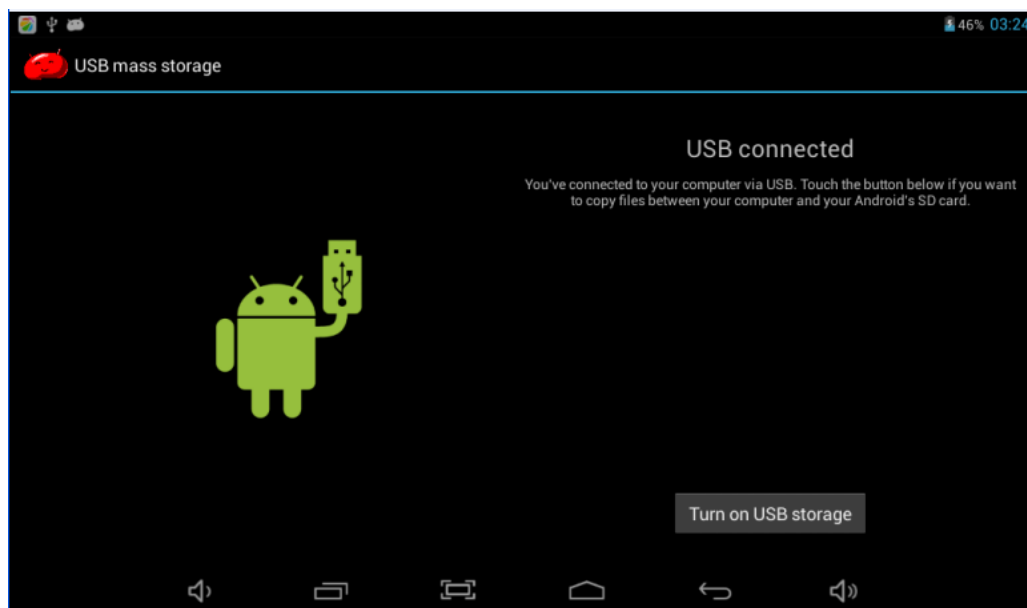

3.2. How to Install Applications (.apk file) into the Device

Method 1:

Connect the device with internet. See above (2.5.1 Wireless & Networks) to connect the Internet. Run “Market” and search the applications you want to install. Follow the instruction on the screen for installation.

Method 2:


1. With your computer, search application file (.apk) that you want to install into the device.
2. Download the file (.apk) into your computer.
3. Connect the device with your computer.
4. See above [How to connect/disconnect the device with/from the computer.]
5. Copy and paste .apk file into the device and disconnect it from your computer.

Run “File Manager” and .apk file that was copied into the device.

6. Press the file to install and follow the instruction on the screen.


3.3. Desktop Icons

Press the upper right side icon of desktop, the pop-up displays.

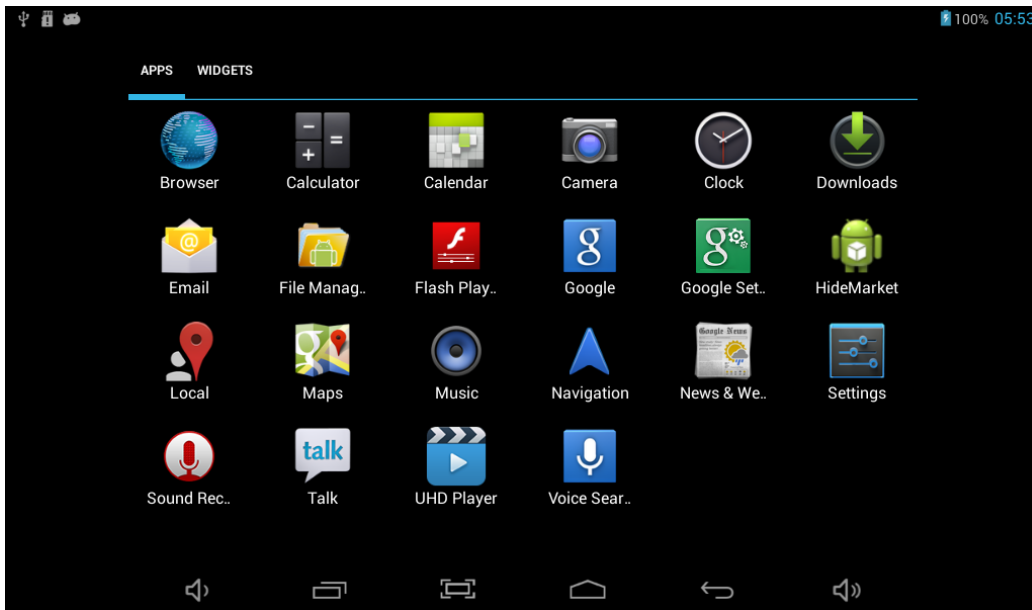 

Shortcuts

 Long press your desired APK icon and put it on the desktop.

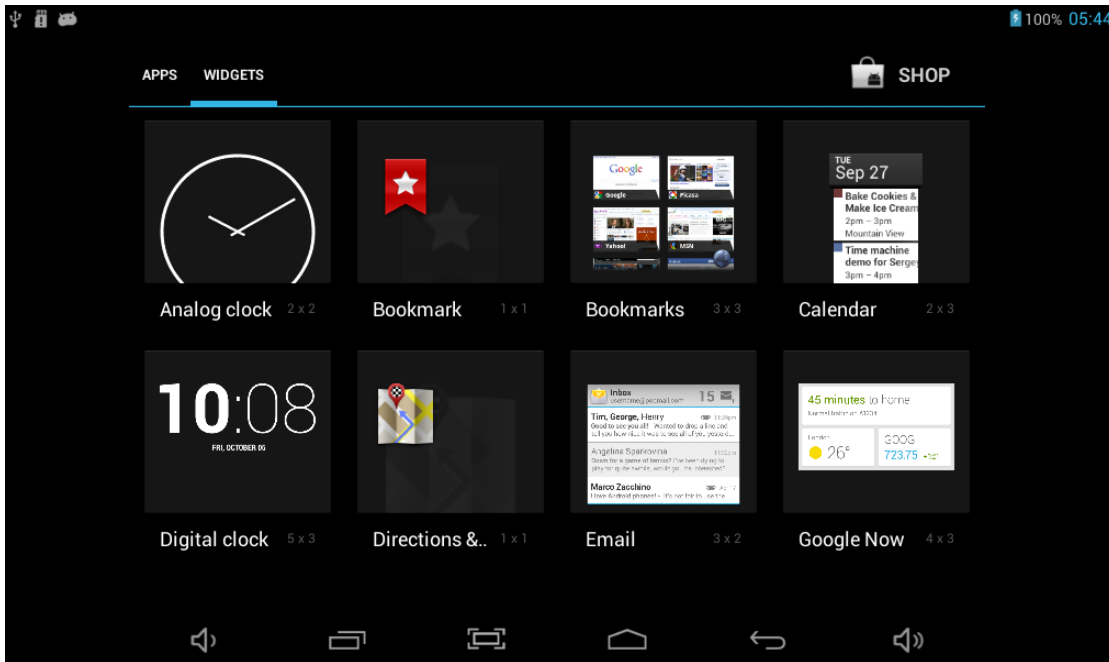

Widgets

Press Widgets and press your desired icon to put it on the desktop.

 
Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper.

Select one you desired and press Set wall paper.

3.4. Keyboard Input

Tap the text input area to open the on-screen keyboard

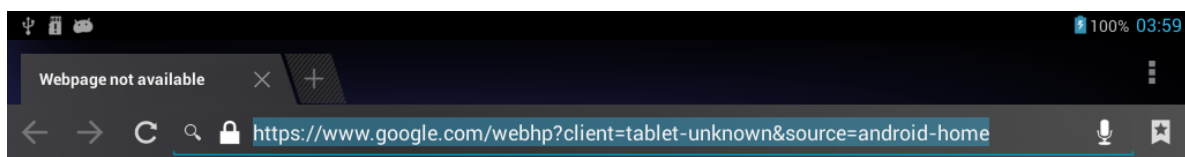

Webpage not available

The webpage at <https://www.google.com/webhp?client=tablet-unknown&source=android-home> might be temporarily down or it may have moved permanently to a new web address.

Suggestions:



Select the installed keyboard, then the keyboard will appear with your desired language you installed.

4. Technical Specifications

OS	Android 4.2.2	
CPU	A23	
RAM	1GB DDR3	
Display	9." 1024x600pixels Capacitive touch panel	
Muti-touch Screen	Yes : 5 point multi-touch	
Built-in Flash Memory	4 GB / 8 GB / 16GB	
IO Ports	Audio Port	3.5ø earphone
	USB Port	Micro 5PIN support OTG function
	TF Card	Support TF Card
	OTG Port	Same as USB Port
	Button	Power, home, reset
Speaker	Frequency response:20 Hz - 20 k Hz,	
G-sensor	Yes	
Camera	0.3M pixel(front); 2.0M pixel(rear)	
Wi-Fi	802.11b/g/n(HT20)	
Power Adaptor	DC5V/2A	
Battery	3.7V 3800mA Li-Polymer	
Charging Time	By Charger	Approx. 5-6 hours

Note: All pictures of product interface in this manual are for reference only; please refer to the actual interface of product!

5. Aftermarket

Hott has designed this appliance in order to guarantee the maximum reliability. However, if a problem occurs, by following the procedures suggested in this section you may be able to determine its cause. Do not attempt to open the appliance – there is a risk of electrical shock.

If you are not able to solve the problem, please contact your seller or manufacturer.

All users must be familiarized with this section. Knowing what could go wrong can help you avoid the occurrence of problems.

WARNING: any attempt of fixing the appliance without contacting the manufacturer will nullify the warranty.

In case the problem persists, take your appliance to an aftermarket section of any Worten, Modelo or Continente store in order to solve the problem.

Worten Equipamentos para o Lar ensures for a period of 2 years, counting from the date of purchase of this appliance, a warranty against any found manufacturing defect. The warranty supposes a correct use and maintenance of the appliance, namely according to the instructions expressed in this manual. In case otherwise identified, the malfunctions will not be under the warranty.

The repairing of electrical appliances must only be made by qualified technicians, as otherwise there may occur future complications on the appliances.

To avoid unnecessary risks, in case there are any malfunctions on the wires or on another type of components, repairing must be made on the specialized locations of technical assistance, as appropriate tools are needed.

6. Environment Conservation

Aiming to protect the environment, we try to reduce to a maximum the volume of the packages which are confined to three easy separation materials: cardboard, paper and plastic.

The appliance is made of recyclable material, once disassembled by a specialized company. Follow the local legislation concerning recycling of all materials.



7. FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.