



Instruction Manual

PRIMEPAD SERIES

Instruction Manual

Dear Client,

Thank you for purchasing this product.



This electronic Tablet PC was submitted to several testing laboratories to certify its quality. This Instruction Manual is provided to simplify the use of this Tablet PC and to ensure convenience and safety.

Please read the instructions carefully and make sure that all safety measures provided in this Manual are followed.

Your satisfaction is our utmost interest. Enjoy your new **HOTT Tablet PC**.

Index	
1. Safety Instructions.....	4
1.1. Power Energy.....	4
1.2. Power Cord and Other Cables.....	4
1.3. Humidity and Water.....	4
1.4. Cleaning.....	5
1.5. General Precautions.....	5
2. Utilization and Functioning.....	5
2.1. Product Description.....	5
2.2. Power On/Off.....	6
2.3. Desktop.....	6
2.4. Standby Mode (Screen Off Mode)/Unlock the Screen.....	6
2.5. System Settings.....	7
2.5.1. Wireless & Network.....	7
2.5.2. Sound.....	8
2.5.3 Display.....	8
2.5.4. Storage	9
2.5.5 Battery	9
2.5.6. Apps.....	10
2.5.7 Location access	11
2.5.8 Security	11
2.5.9 Language & Input.....	12
2.5.10 Backup&Input.....	12
2.5.11 Date & Time.....	12
2.5.12 Accessibility.....	12
2.5.13Print.....	12
2.5.14 Developer Options	12
2.5.15 About Tablet.....	12
3. Installation.....	13
3.1. How to Connect/Disconnect the Device with/from the Computer.....	13
3.2. How to Install Applications (.apk file) into the Device.....	14
3.3. Desktop Icons.....	14
3.4. Keyboard Input	15
4. Technical Specifications.....	16
5. Aftermarket.....	16
6. Environment Conservation.....	17
7. FCC Notice.....	18

1. Safety Instructions

	ATTENTION	
	Risk of Electric Shock DO NOT OPEN	
<p>Attention: To avoid the risk of electric shock, do not remove the cover. The interior does not contain any parts that may be repaired by the user. Ask for assistance from qualified personnel.</p>		

Important Warnings

Before using your Tablet PC, read this instruction manual carefully and keep it in a safe place, as you may need it for future reference.

Before you start your device and to ensure a correct use, do not use it if:

- It has fallen on the ground;
- You notice any evidence of damage;
- Any anomaly occurs during its operation;

To avoid hazards and deterioration of your device due to incorrect use, it is advisable to read the instructions carefully and attentively.

Your device must not be used other than what is stated in the instruction manual. Your safety is only guaranteed for personal use and not for commercial use. Incorrect use will not be covered by the company and automatically cancels the right to warranty.

Assistance

In case of malfunction, bring your device to a qualified technician for assistance or call **HOTT Customer Service**.

- **This device can be used by children from 8 years old and above. Individuals with reduced physical sensory or mental capabilities, lack of experience and knowledge, should be given proper instructions concerning the use of this device in a safe way and the hazards involved.**
- **Children 8 years below must not play with the device.**
- **Cleaning and maintenance must not be done by children without adult supervision.**

1.1. Power Energy

Make sure the voltage of the electric network is compatible with the one of the device. If it does not match, consult the vendor or Customer Support Service.

1.2. Power Cord and Other Cables

Do not roll up or pull the cord to disconnect the device, and do not use to twine the device. Keep the cord far from warm surfaces.

Never use the device if it has a damaged cable or socket, or if it's not working properly.

In case of damaged power cord, do not use your device. Call **HOTT Customer Service** for technical assistance.

1.3. Humidity and Water

Do not use your device in humid places. Do not let your device catch water under any circumstance, as it is dangerous. **TO AVOID FIRE HAZARD OR ELECTRIC SHOCK DO NOT EXPOSE YOUR DEVICE TO HUMID WEATHER OR WATER.** Do not place your device under water (for example: while washing).

1.4. Cleaning

 
Turn off your device before cleaning it. Clean the device with a soft and dry cloth. Do not use cleaning products.

1.5. General Precautions

- Please follow the instructions stated in the user manual. Please follow proper installations and operation to make sure advanced features are enjoyed. Please keep the instructions for future reference.
- Read all instructions before using the device.
- Do not expose this device to fire.
- Do not expose this device to extreme temperatures, humidity or direct sunlight.
- Do not attempt to disassemble this device or any parts of it.
- Never allow liquid or small particles to enter the device.
- Do not place the device in hot, wet or dusty environment, especially when it's summer.
- Do not leave the device inside a car with all windows closed.
- Avoid dropping, impacting or shaking the product violently; otherwise it may cause damages or malfunctions.
- Select a proper volume to avoid hearing problems when using earphones.
- Be sure to use the provided chargers and accessories in the package.

2. Utilization and Functioning

2.1. Product Description

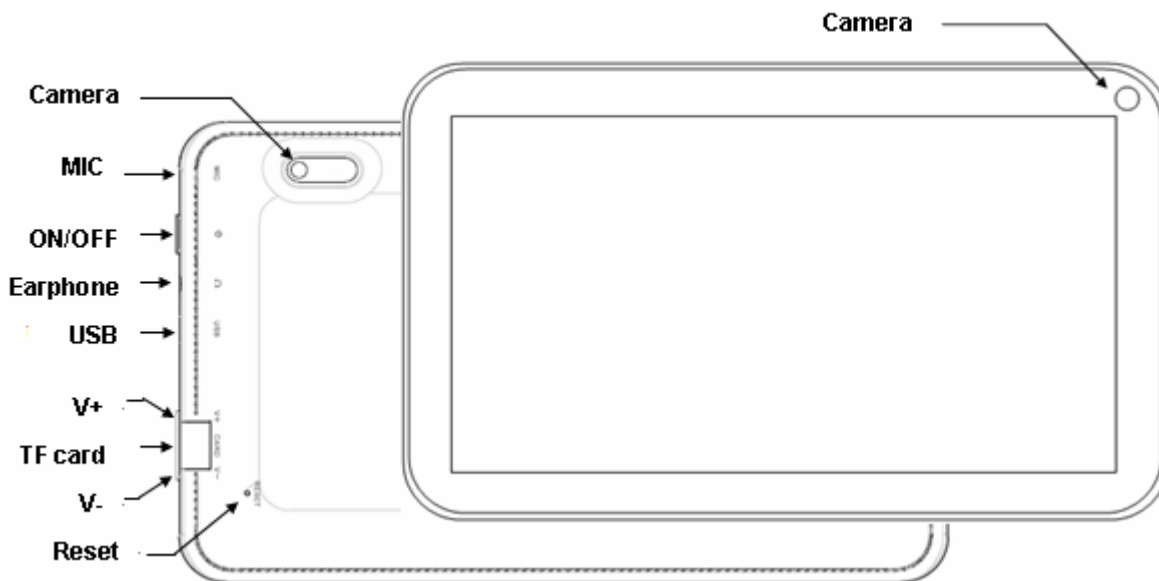

Important Notice

- If the device stops or gets stuck, press power button for 10 seconds, or connect with adapter to activate device.
- When the performance is slow after using some applications, it is recommended to close all running applications in setting the menu

Caution

 
- For charging, be sure to use the power adapter (DC5V) that is provided in the package, otherwise you may damage the device and may not work properly.

2.2. Power On/Off

Long press power button to power on/off the device. It may take one minute to boot the device. Short press power button to turn on/off the screen (Standby mode, refer to 2.4. below).

2.3. Desktop


After turning on the device, desktop displays with shortcut icons and arrow panel at the right side.

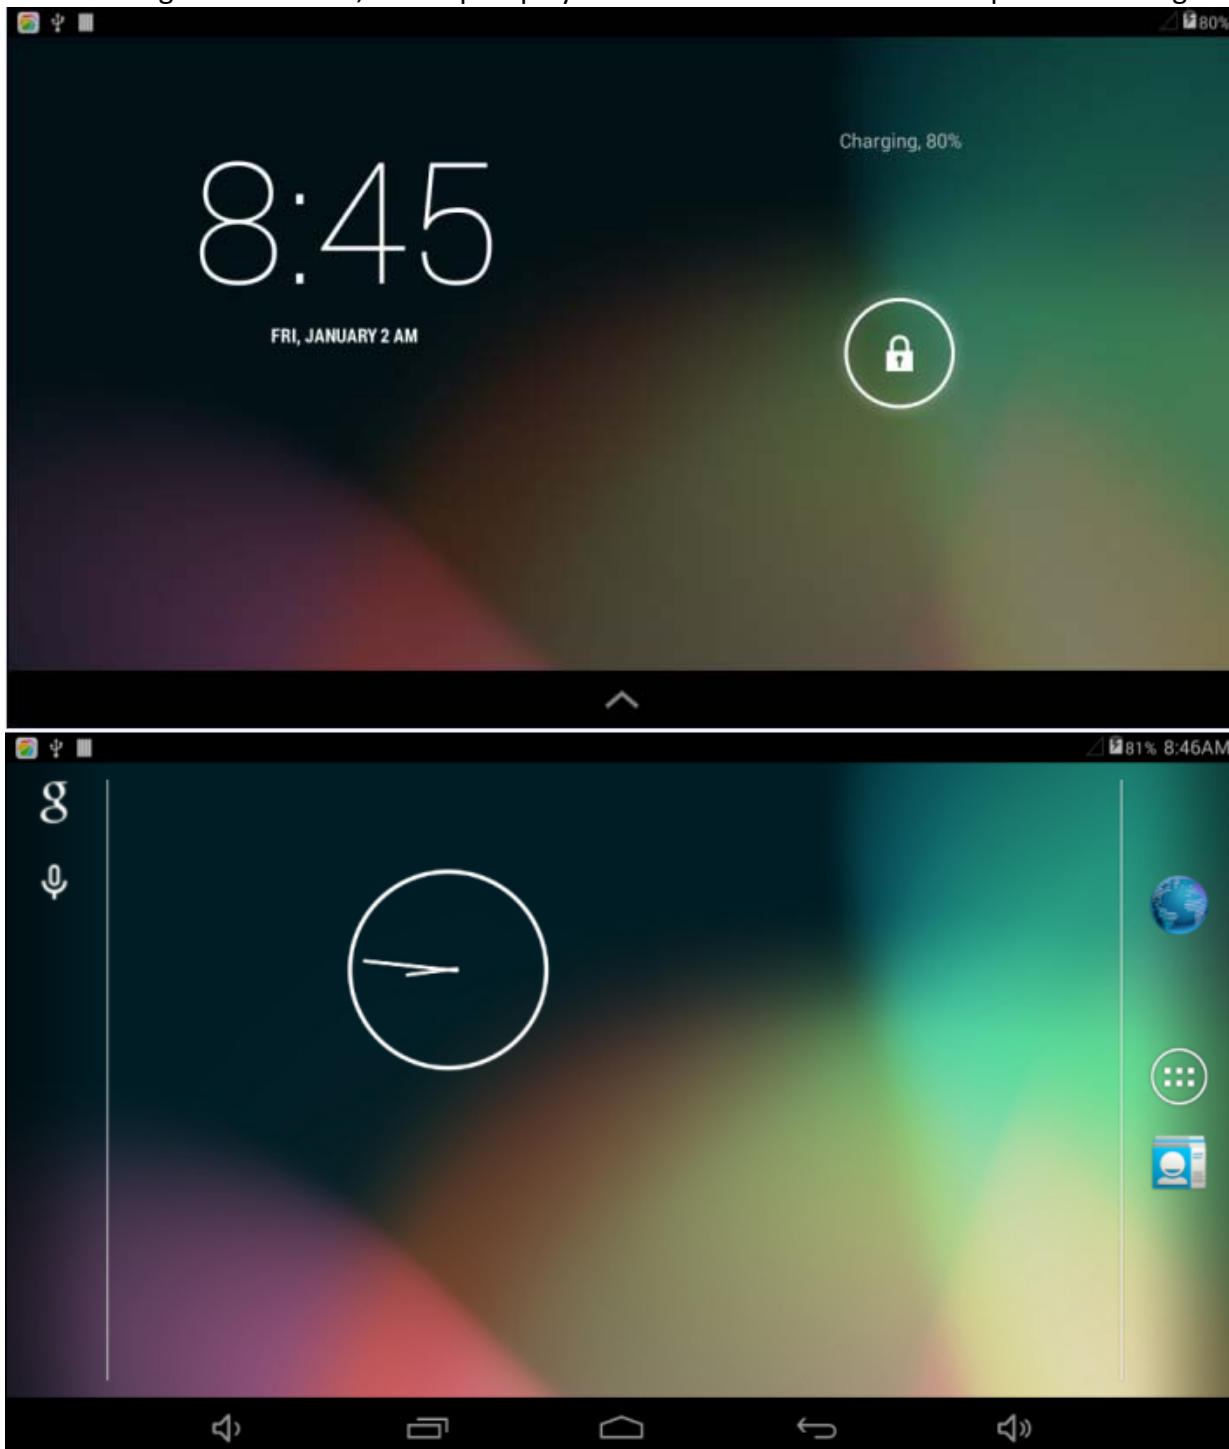

2.4. Standby Mode (Screen Off Mode)/Unlock the Screen


Short press the power button to turn on/off the screen (Standby mode On/Off).

 After standby mode off, slide the lock icon in order to unlock the screen.

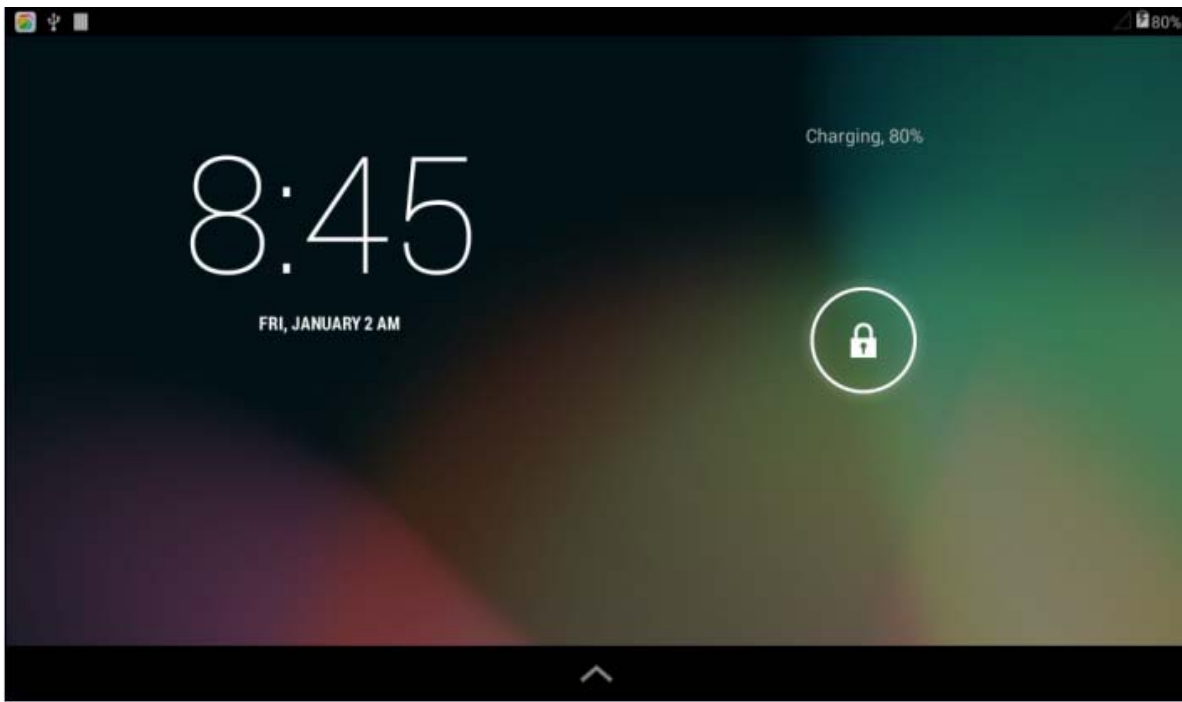


2.5. System Settings

 On the desktop, press menu button and select system settings.

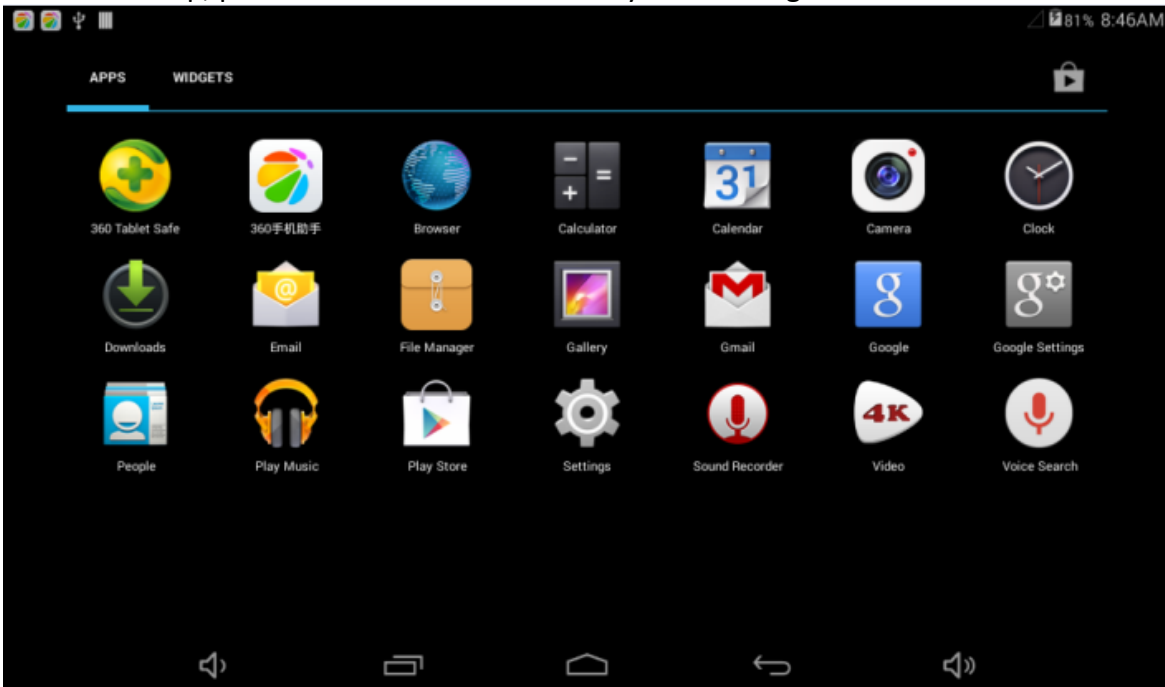

 2.5.1. Wireless & Network

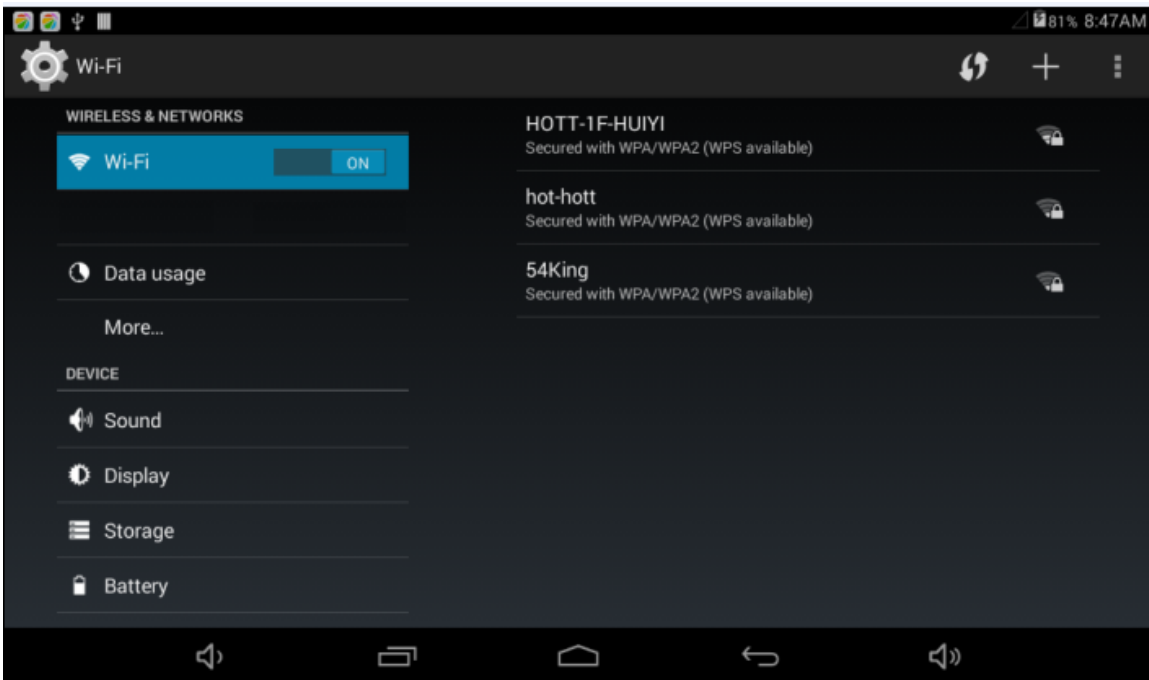


Wi-Fi: Off/On.

Wi-Fi settings: Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.


2.5.2 Sound

 Set up each setting as you like.

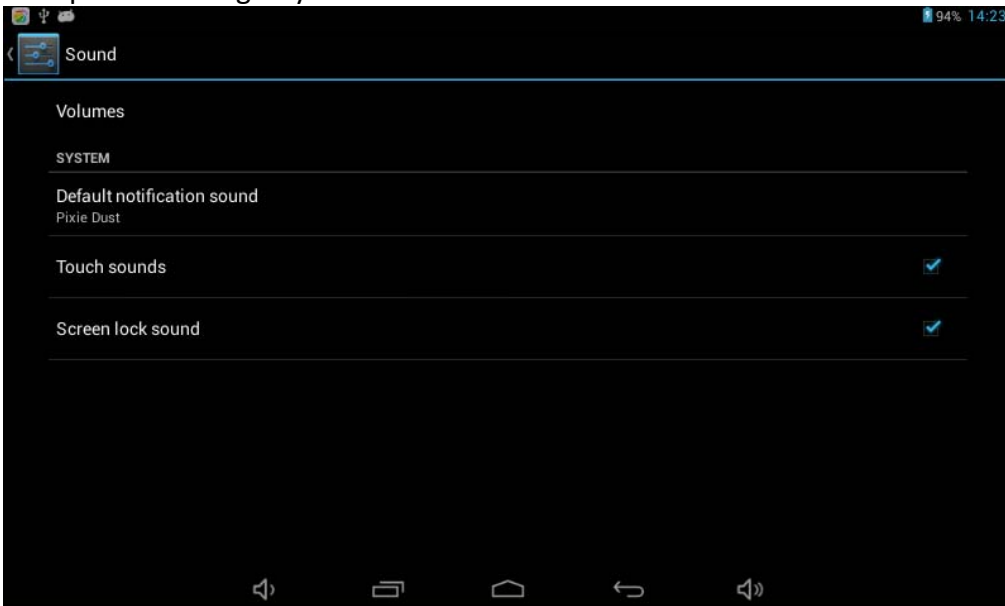

2.5.3. Display

 
Set up each setting as you like.

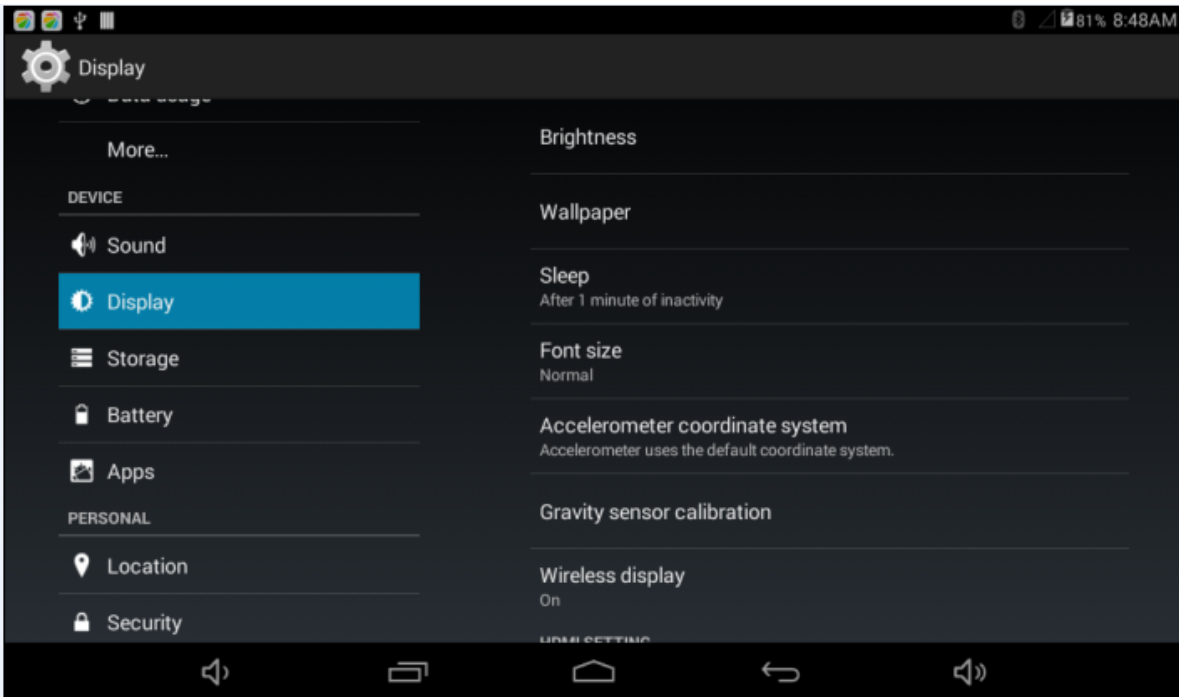

2.5.4. Storage


Check device memory and TF card status.

 Unmount TF card: Unmount the TF card for safe removal.

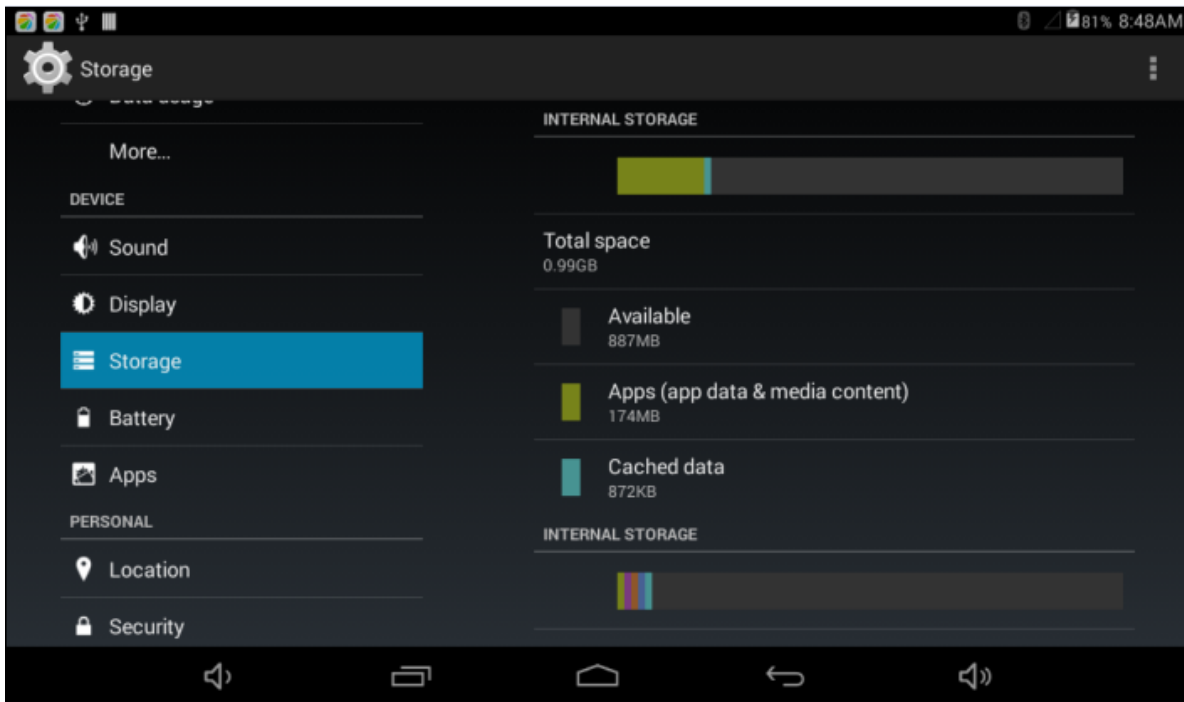

2.5.5. Battery

 Check the battery usage status.

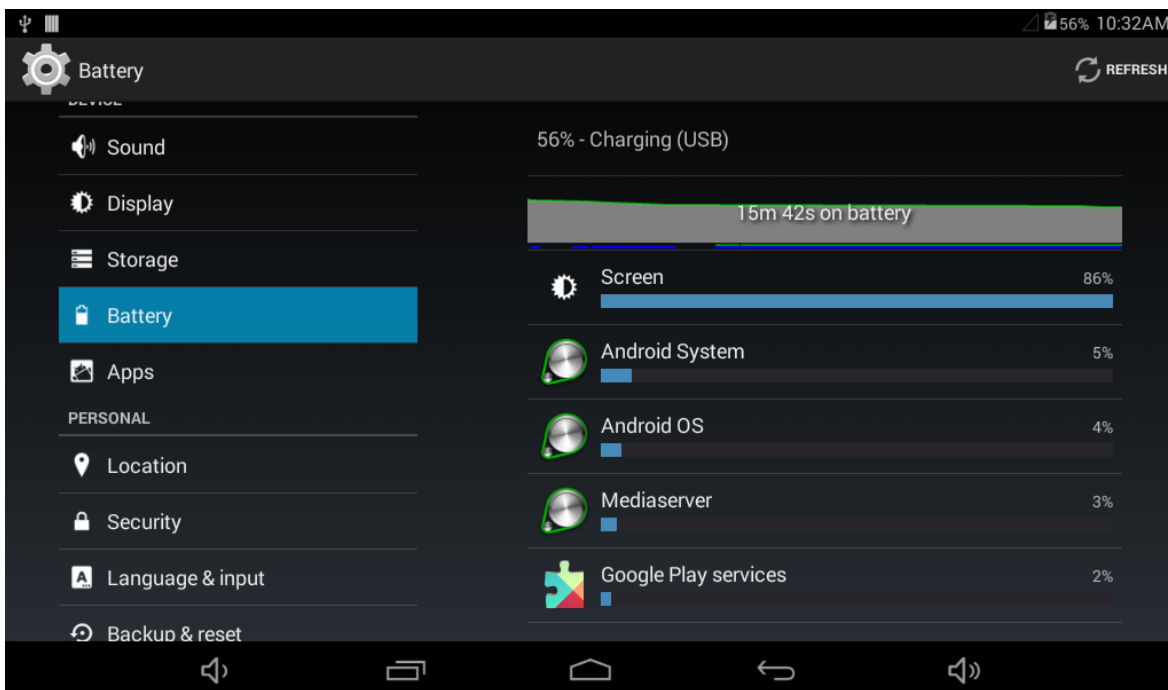

2.5.6. Apps

 
Manage downloaded or running applications.



Under Downloaded: All installed applications are listed.

Keep pressing an application to manage.

Press Uninstall to uninstall the selected application.

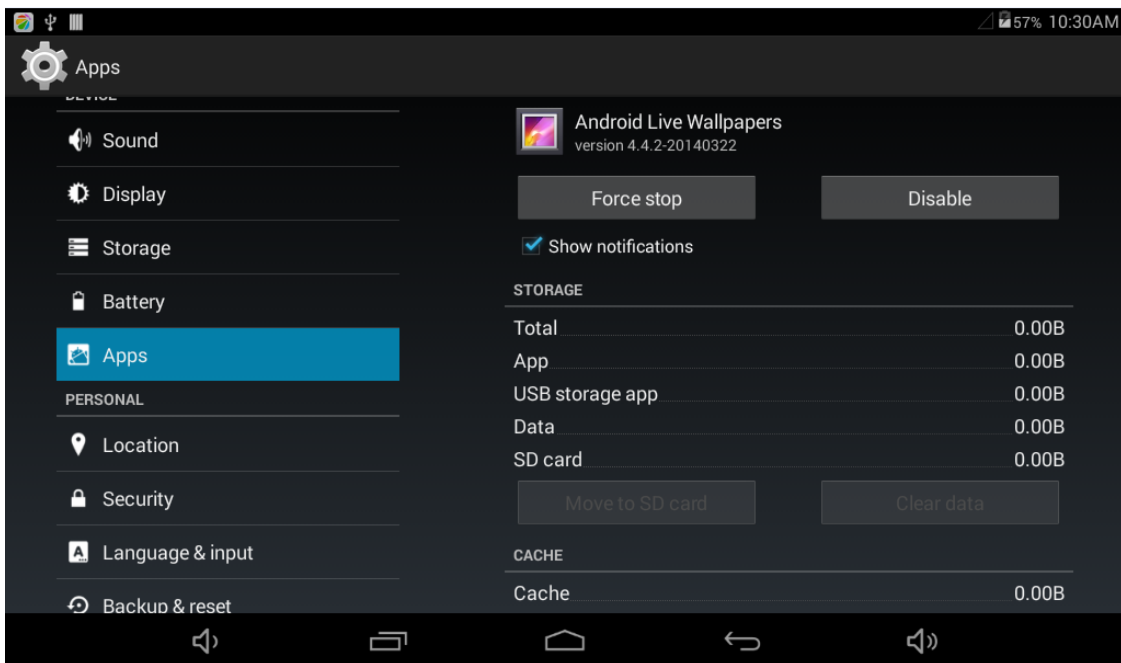

2.5.7 Location Service

Google's location service: Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

 
2.5.8 Security

Screen lock: Protect your device from unauthorized use by creating a personal screen unlock pattern.

Make passwords visible: Show password as you type.

Unknown sources: If you want to allow installation of non-Market Applications, press Unknown sources and press OK.

Install from TF card: Install encrypted certificates from TF card

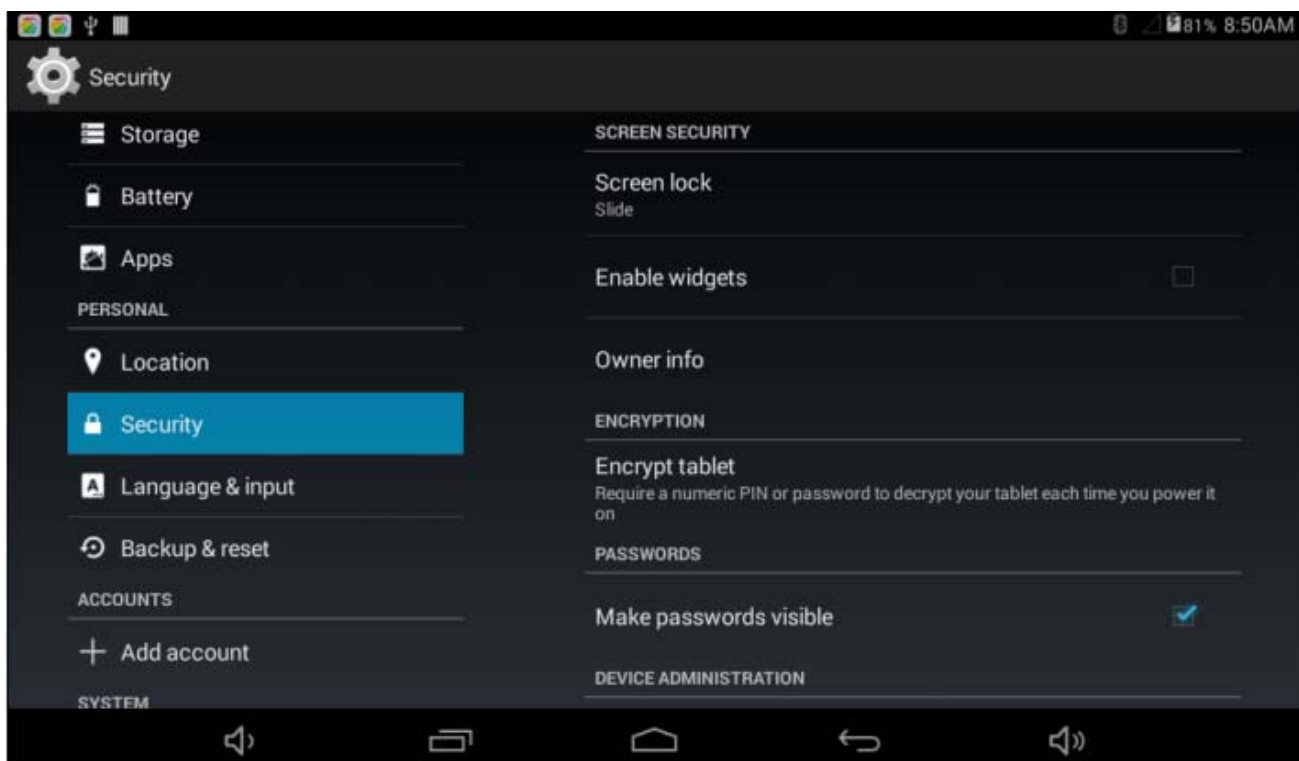


2.5.9 Language & Input

Language: Choose your preferable language.

Keyboard & input method: Change keyboard & keyboard settings.

 On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard, enter the chosen Keyboard settings, select Keyboards and press the language you need.

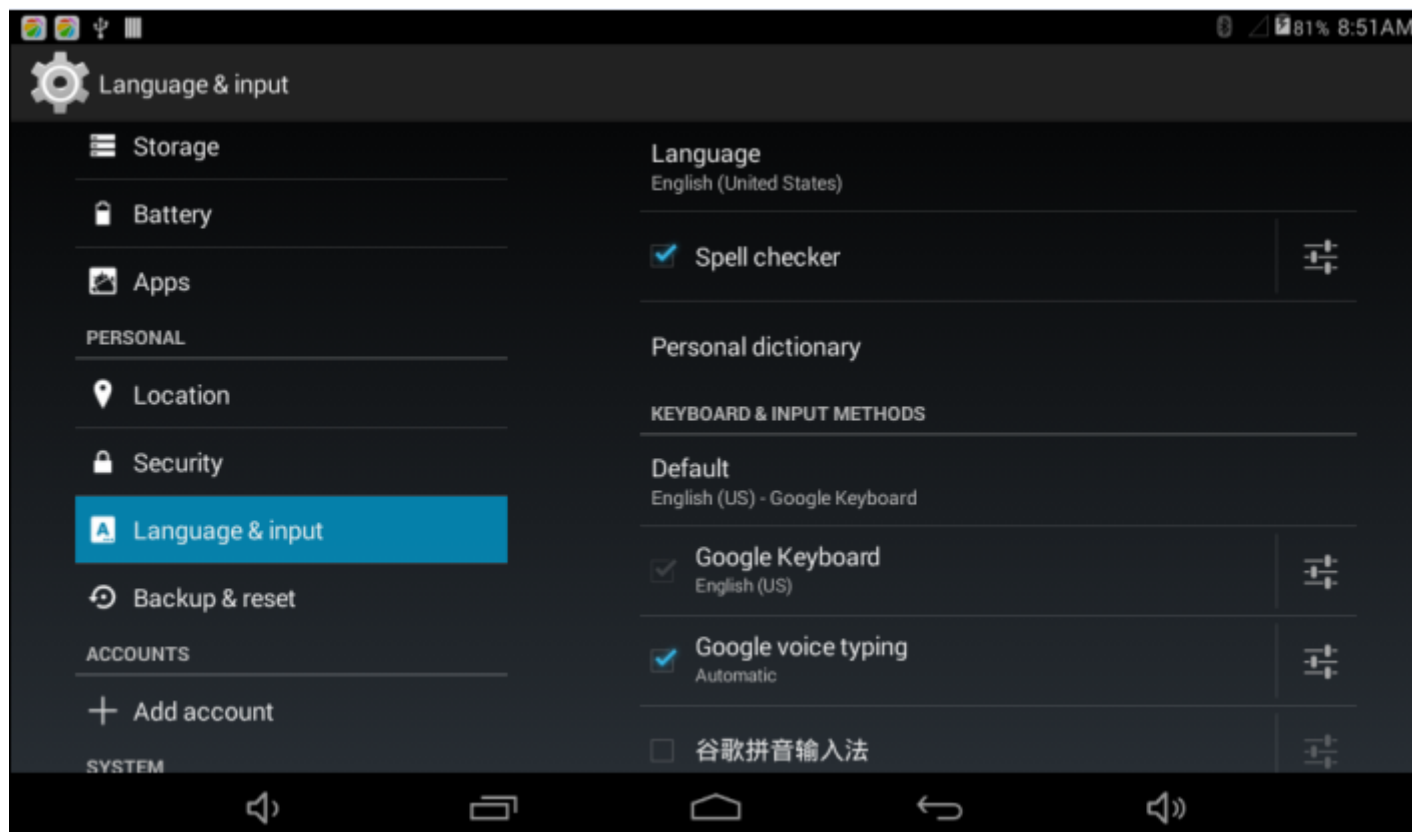

2.5.10 Backup and Reset

Data backup and restore factory setting

2.5.11 Date & Time

Set date & time and format.

2.5.12 Accessibility

Click to enter using some auxiliary functions on the machine

2.5.13 Print

Print service setting

2.5.14 Developer Options

Set options for application development.

 
2.5.15 About Tablet

See status, legal information, etc.


3 Installation

3.1. How to Connect/Disconnect the Device with/from the Computer


On the main desktop, connect the device with the PC, touch left side of the status bar on the TOP of desktop.

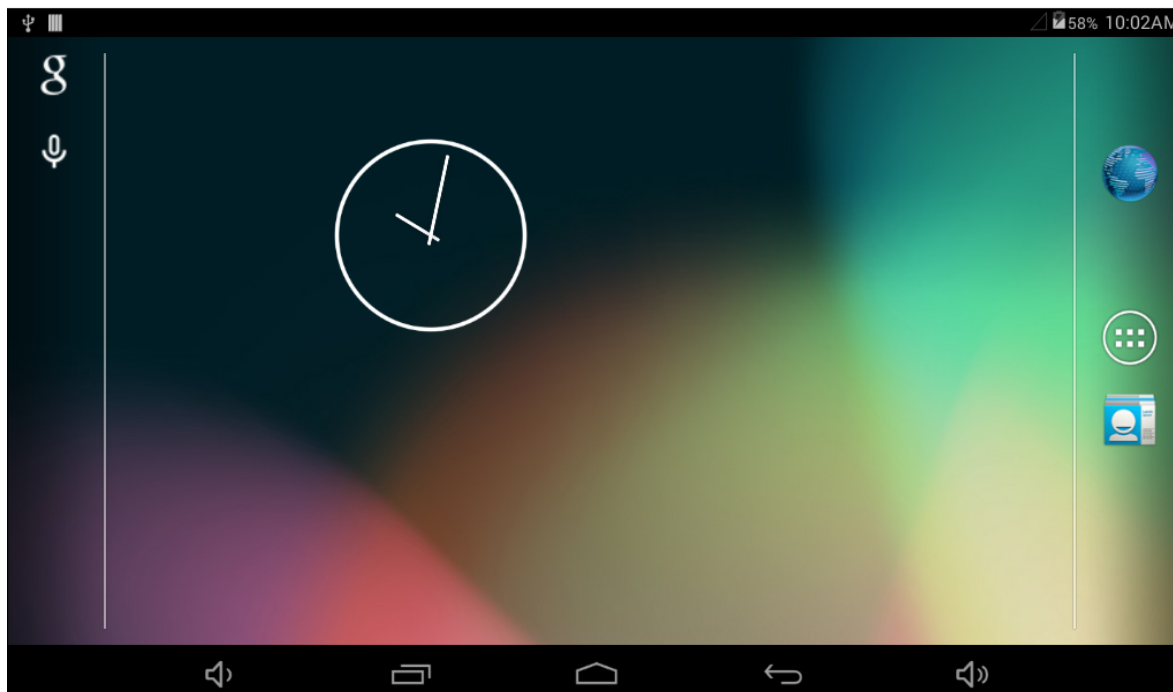

 Press “USB connected”, select “Turn on USB storage”. Now you can use it as an external storage.

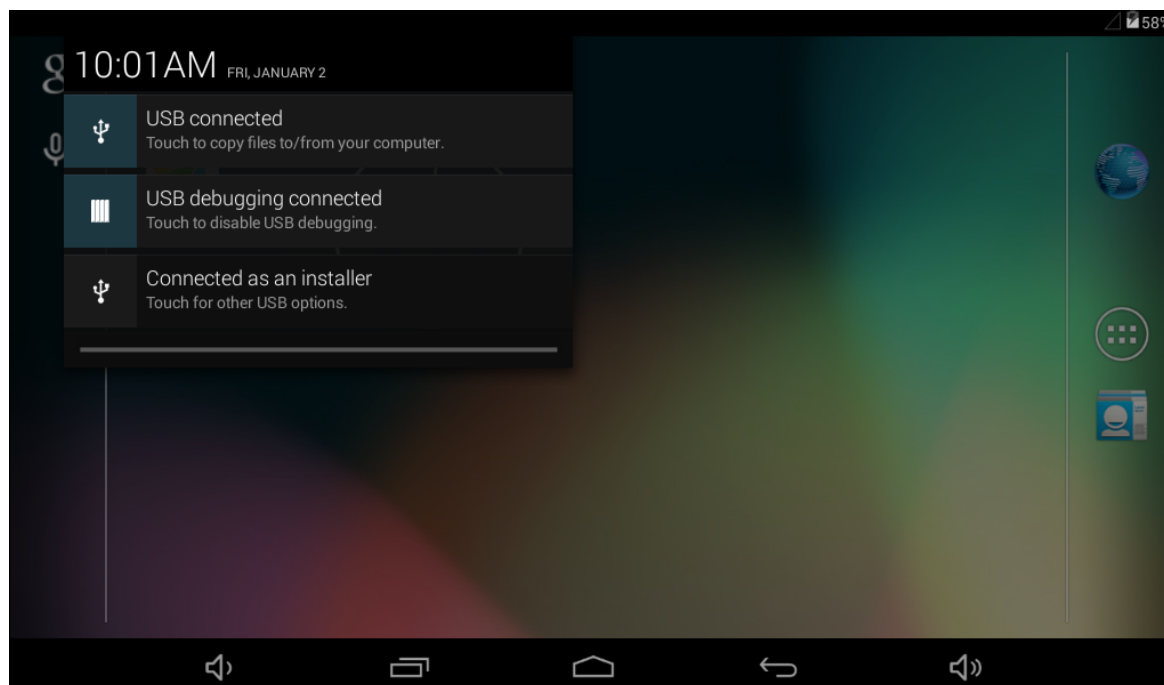

 After finishing your work, Press “Turn off USB storage” to disable it.

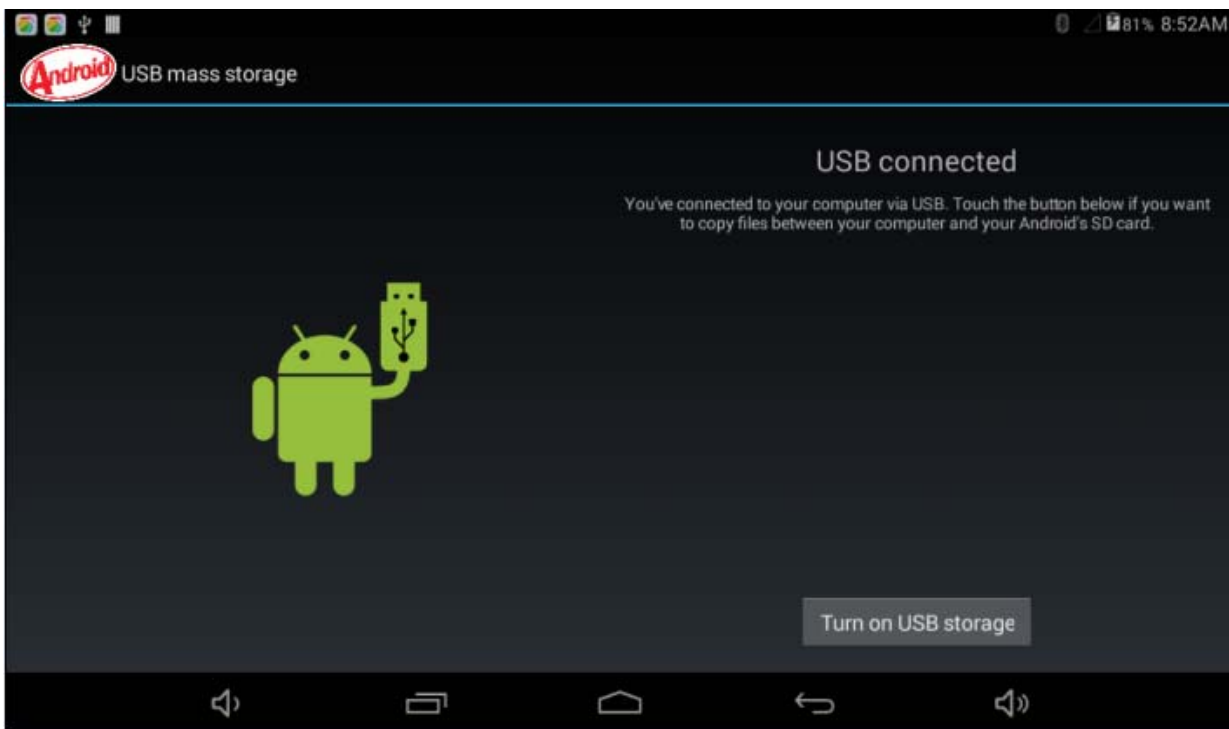

3.2. How to Install Applications (.apk file) into the Device

Method 1:


Connect the device with internet. See above (2.5.1 Wireless & Networks) to connect the Internet. Run "Market" and search the applications you want to install. Follow the instruction on the screen for installation.


Method 2:

1. With your computer, search application file (.apk) that you want to install into the device.
2. Connect the device with your computer.
3. See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
Run "File Manager" and .apk file that was copied into the device.
5. Press the file to install and follow the instruction on the screen.

3.3. Desktop Icons

Press the upper right side icon of desktop, the pop-up displays.

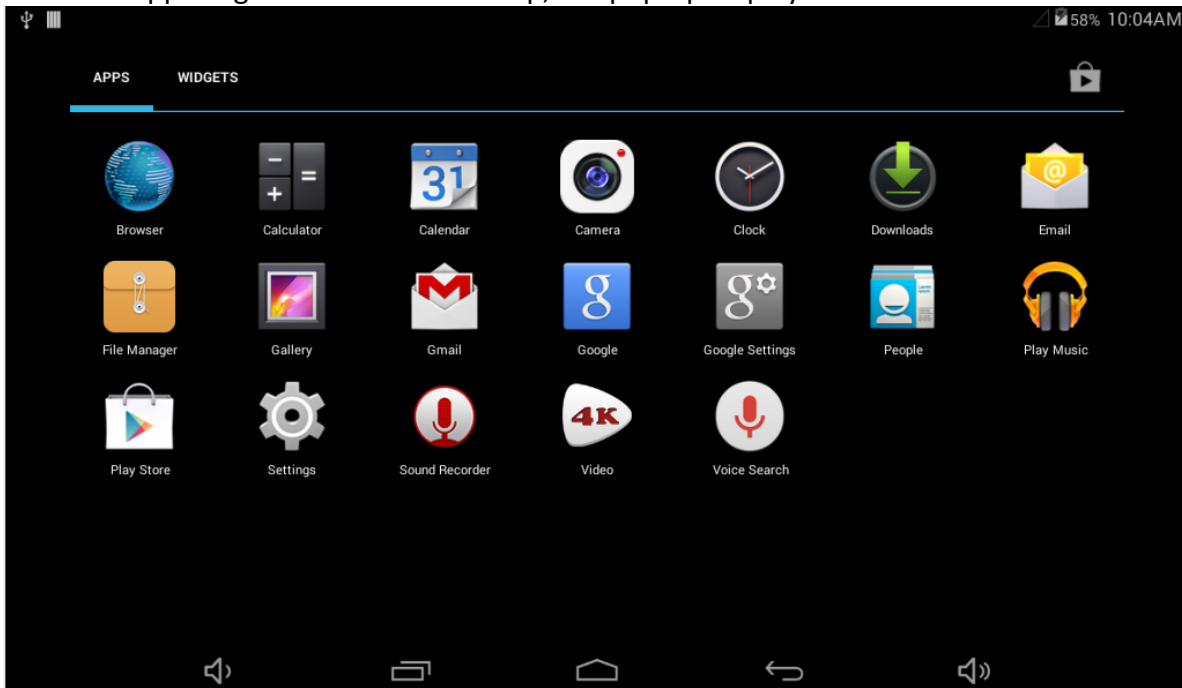 

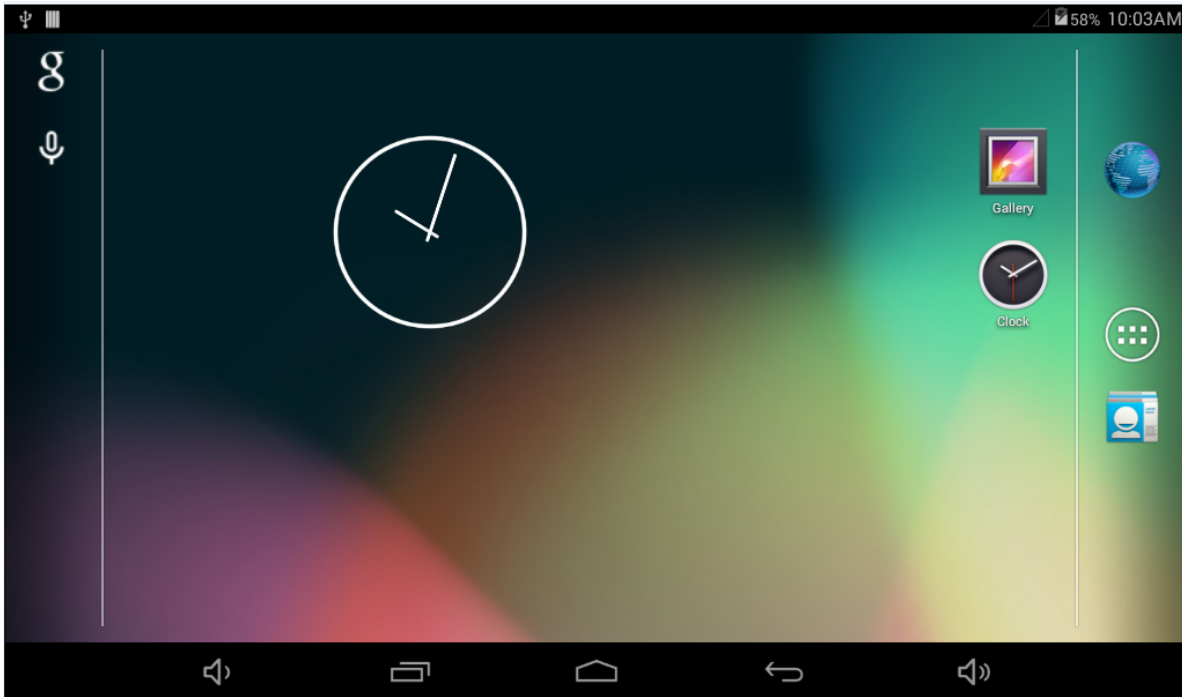 


Shortcuts

Long press your desired APK icon and put it on the desktop.

Widgets

 Press Widgets and press your desired icon to put it on the desktop.

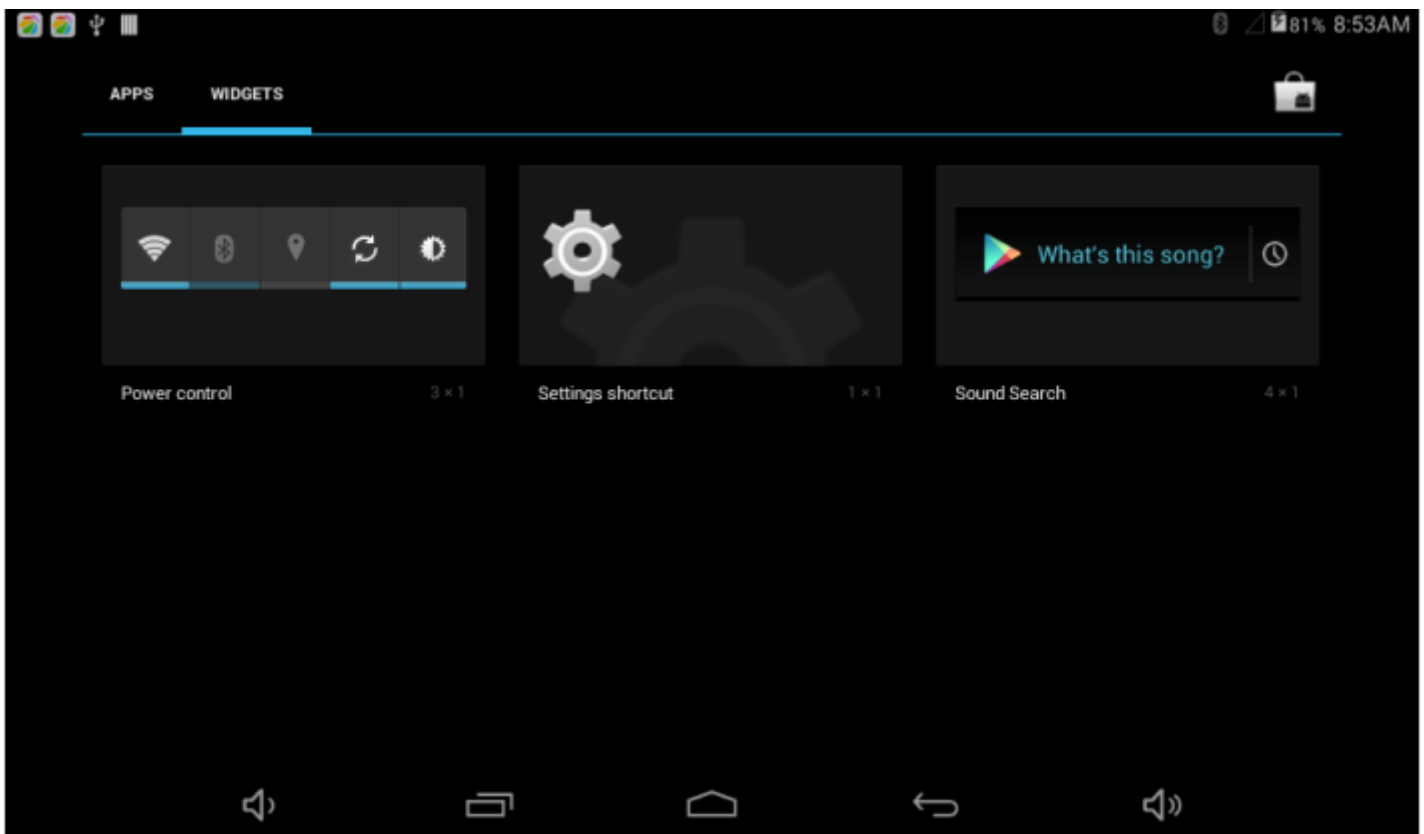


Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper. Select one you desired and press Set Wallpaper.

3.4. Keyboard Input

Tap the text input area to open the on-screen keyboard

 Select the installed keyboard, then the keyboard will appear with your desired language you installed.

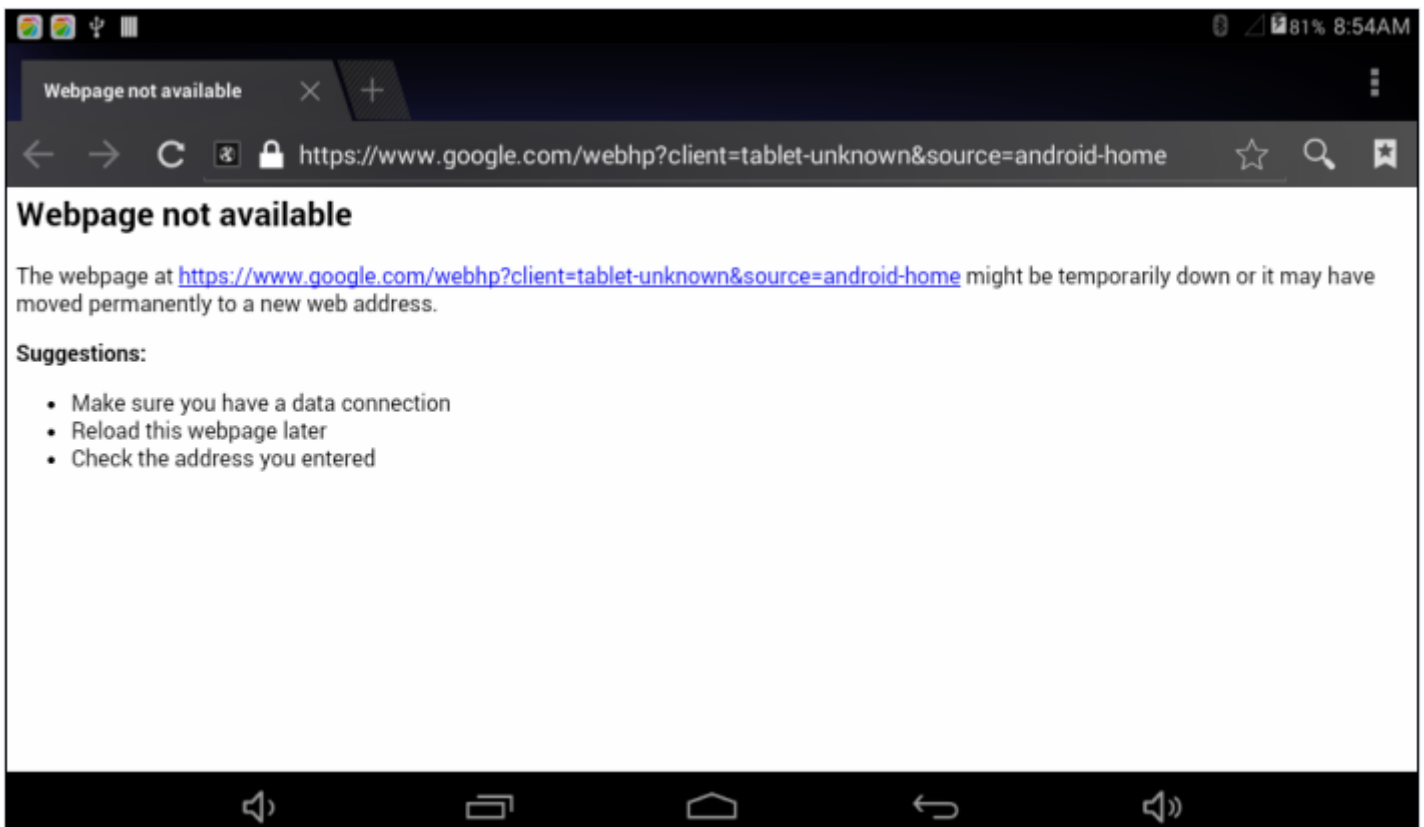

4. Technical Specifications

OS		Android 4.4
CPU		A23 Cortex A7 Dual core 1.5GHz
RAM		1GB DDR3
Display		7 " 800×480 pixels Capacitive touch panel
Multi-touch screen		5 point multi-touch
Built-in Flash Memory		4GB/8GB/16GB
IO Ports	Audio Port	3.5ø earphone
	USB Port	Micro 5PIN support OTG function
	TF Card	Support TF card
	OTG Port	Same as USB Port
	Button	Power, home, reset
Speaker		Frequency response: 20 Hz-20kHz,
G-sensor		Yes
Camera		0.3M pixel (front); 2.0M pixel(rear)
Wi-Fi		802.11b/g/n
Power Adapter		DC5V/2A
Battery		3.7V 3000mAh Li-Polymer
Charging time	By Charger	Approx. 3-4 hours

Note: All pictures of product interface in this manual are for reference only; please refer to the actual interface of product!

5. Play Store

Method: To start the Google Play, please click the “Hide market” icon and then log in the Google Play, click the “Hide market” again to hide.

Play Store

Click the “Play” icon to enter from the application list.

You can conveniently download lots of applications from the “Play Store” to your device. (For first time to sign in the “Play Store”, you need to set up a Google Account to proceed.)

After setting up the Google Account, please enter the main interface of the “Play Store”.

- Search the needed applications and click to enter;
- Click “Install”;
- Read the permission carefully;
- After confirming, select “Accept and download” to start. The application will be installed automatically after download has finished;

WARNING:

- All supports of the applications from the “Google Store” are provided by third-party developer. You can get the developer information from the detailed data page of every application.
- Our company will not take any responsibility for any problem caused by third-party applications.

6. Aftermarket

HOTT has designed this device in order to guarantee the maximum reliability. However, if problems occurs, by following the procedures suggested in this section you may be able to determine its cause. Do not attempt to open the device – there is a risk of electrical shock.

If you are unable to solve the problem, please contact your seller or manufacturer.

All users must be familiarized with this section. Knowing what could go wrong can help you avoid the occurrence of problems.

WARNING: any attempt of fixing this device without contacting the manufacturer will nullify the warranty.

In case the problem persists, call **HOTT** Technical Support or Customer Service. **HOTT Corp.** ensures for a period of 1 year, starting from the date of purchase of this device, a warranty against any found manufacturing defect. The warranty coverage must be according to the proper use and maintenance of the device which is through the instructions stated in this manual. In case otherwise identified, the malfunctions will not be under the warranty.

The repair of electronic device must only be done by qualified technicians, otherwise future complications may occur in the device.

To avoid unnecessary risks, in case there are any malfunctions on the wires or any type of components on the device, all repairs must be rendered by **HOTT** Authorized Service Centers.

7. Environment Conservation

Aiming to protect the environment, we try to reduce to a maximum the volume of the packages which are confined to three easy separation materials: cardboard, paper and plastic.

The device is made of recyclable material, once disassembled by a specialized company. Follow the local legislation concerning recycling of all materials.



8. FCC Notice:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** This device may not cause harmful interference. **(2)** This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

HOTT Corp. 717 Brea Canyon Road, Unit 4, Walnut 91789, USA

Tel: +1 (909) 598-7500

Fax: +1 (909) 598-7508