

LevyDaL

Arte en Tecnología

Instruction Manual



PRIMEPAD SERIES

Instruction Manual

Dear client,

Thank you for purchasing this product.



This electronic Tablet PC was submitted to several testing laboratories to certify its quality. This manual is provided to simplify the use of this Tablet PC and to ensure convenience and safety. Please read the instructions carefully and make sure that all safety measures provided in this manual are followed.

Your satisfaction is our utmost interest. Enjoy your new HOTT Tablet PC.

Index

1. Safety Instructions.....	3
1.1. Power Energy.....	3
1.2. Power Cord and Other Cables.....	3
1.3. Humidity and Water.....	3
1.4. Cleaning.....	3
1.5. General Precautions.....	4
2. Utilization and Functioning.....	4
2.1. Product Description.....	4
2.2. Power On/Off.....	4
2.3. Desktop.....	5
2.4. Standby Mode (Screen Off Mode)/Unlock the Screen.....	6
2.5. System Settings.....	6
2.5.1. Wireless & Network.....	7
2.5.2. Bluetooth.....	7
2.5.3. Sound.....	8
2.5.4. Display.....	8
2.5.5. Storage.....	9
2.5.6. Battery.....	9
2.5.7. Apps.....	10
2.5.8. Location access.....	10
2.5.9. Security.....	10
2.5.10. Language & Input.....	11
2.5.11. Back up & Reset.....	11
2.5.12. Date & Time.....	11
2.5.13. Accessibility.....	11
2.5.14. Print.....	12
2.5.15. Developer Options.....	12
2.5.16. About Tablet.....	12
3. Installation.....	12
3.1. How to Connect/Disconnect the Device with/from the Computer.....	12
3.2. How to Install Applications (.apk file) into the Device.....	13
3.3. Desktop Icons.....	14
3.4. Keyboard Input.....	15
4. Technical Specifications.....	16
5. After Sale Service.....	16
6. Environment Conservation.....	17
7. FCC Notice.....	17

1. Safety Instructions

	ATTENTION	
	Risk of Electric Shock Do Not Open	
Attention: to avoid the risk of electric shock, do not remove the cover. The interior does not contain any parts that may be repaired by the user. Ask for assistance to qualified personnel.		

Important Warnings

Before using your Tablet PC, read this instruction manual carefully and keep it in a safe place, as you may need it for future consultations.

Before you start your device and to ensure a correct use, do not use it if:

It has fallen on the ground;

You notice any evidence of damage;

Any anomaly occurs during its operation;

To avoid hazards and deterioration of your device due to incorrect use, it is advisable to read the instructions carefully and attentively.

Your device must not be used other than what is stated in the instructions manual. Your safety is only guaranteed in a household use and not for commercial use. Misuse will not be covered and automatically cancels the right to warranty.

Assistance

In case of malfunction, bring your device to a qualified technician for assistance or call HOTT Customer Service

This device can be used by children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given proper instruction concerning use of the device in a safe way and understand the hazards involved. Children must not play with the device. Cleaning and maintenance must not be done by children without supervision.

1.1. Power Energy

Make sure the voltage of the electric network is compatible with the one of the device. If it does not match, consult the vendor or Customer Support Service.

1.2. Power Cord and Other Cables

Do not roll up or pull the cord to disconnect the device, and do not use to twine the device. Keep the cord far from warm surfaces.

Never use the device if it has a damaged cable or socket, or if it is not working properly.

In case of damage of the power cord, do not use your device. Call HOTT Customer Service for technical assistance.

1.3. Humidity and Water

Do not use your device in humid places. Do not let your device to catch water under any circumstance, as it may be dangerous. **TO AVOID FIRE HAZARD OR ELECTRIC SHOCK DO NOT EXPOSE YOUR DEVICE TO HUMIDITY OR WATER.** Do not place your device under water (for example for washing).

1.4. Cleaning

Turn off your device before cleaning it; some time after clean it with a soft and dry cloth. Do not use cleaning products.

1.5. General Precautions

Please follow the instructions stated in the user manual. Please follow proper installations and operation to make sure advanced features are enjoyed. Please keep the instructions for future reference.

Read all instructions before using the device.

Do not expose this product to fire.

Do not expose this product to extreme temperatures, humidity or direct sunlight.

Do not attempt to disassemble this product or any parts of it.

Never allow liquid or small particles to enter the device.

Do not place the product in hot, wet or dusty environment, especially in summer.

Do not leave the product inside a car with all windows closed.

 
Avoid dropping, impacting or shaking the product violently; otherwise it may cause damages or malfunctions.

Select a proper volume to avoid hearing problem when using earphones.

Be sure to use the provided chargers and accessories in the package.

2.Utilization and Functioning

2.1. Product Description

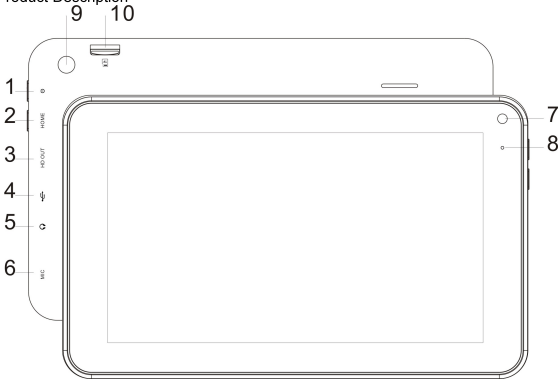

1. Power Lock/Restart 2.Home 3. HDMI Connect 4. Micro USB interface 5. Earphone jack
6. Microphone hole 7. Before the camera 8. Power indicator 9. After the camera
10. Memory card slot

Important Notice

If the device stops or gets stuck, press power button for 10 seconds, or connect with adapter to activate device.

When the performance is slow after using some applications, it is recommended to close all running applications in setting the menu.

Caution

- For charging, be sure to use the power adapter (DC5V) that is provided in the package, otherwise you may damage the device and may not work properly.

2.2. Power On/Off

Long press power button to power on/off the device. It may take one minute to boot the device.

Short press power button to turn on/off the screen (Standby mode, refer to 2.4. below).

2.3. Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side.



 
2.4 Standby Mode (Screen Off Mode)/Unlock the Screen

Short press the power button to turn on/off the screen (Standby mode On/Off).
After standby mode off, slide the lock icon in order to unlock the screen.




2.5 System Settings

On the desktop, press menu button and select system settings.

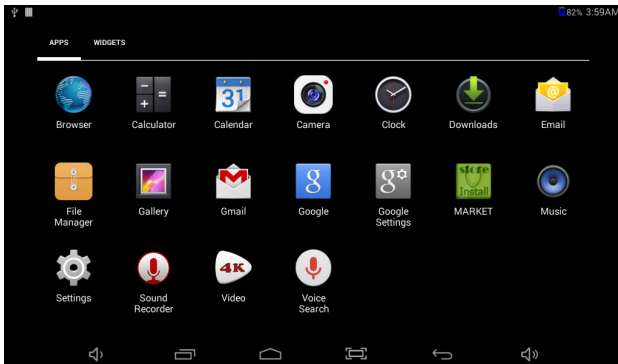

 
2.5.1. Wireless & Network

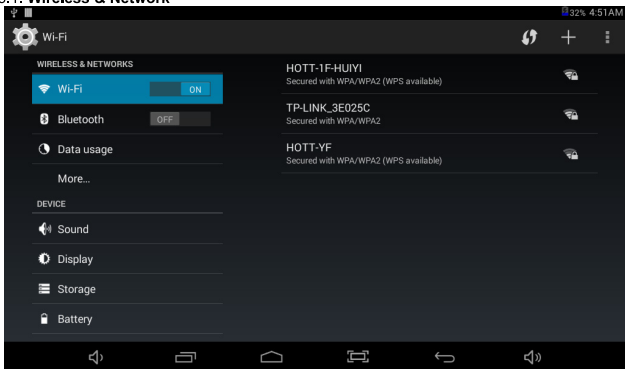

Wi-Fi: Off/On.

Wi-Fi settings: Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

 
2.5.2 Bluetooth

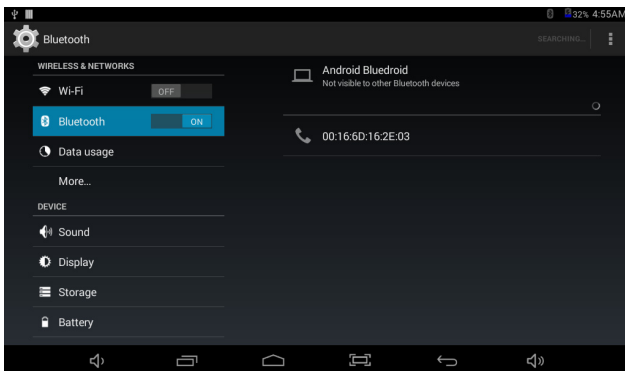

Using Bluetooth connection can be between 10 meters away in the farthest electronic devices create a free wireless connection. After Bluetooth connection is successful, you can perform the following purposes: use Bluetooth stereo headphones to listen to music, performed by connecting a Bluetooth stereo music playback, using Bluetooth to send data, receive data using Bluetooth


2.5.3 Sound

 Set up each setting as you like

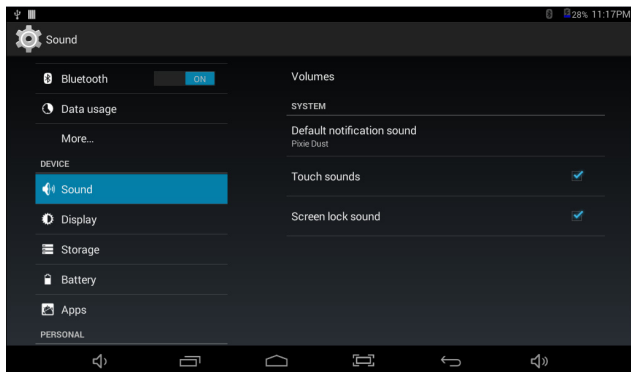


2.5.4 Display

 Set up each setting as you like.

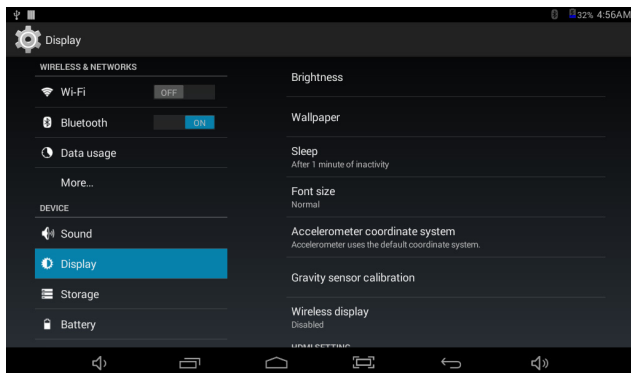


2.5.5 Storage

 Check device memory and TF card status. Un mount TF card: Un mount the TF card for safe removal.

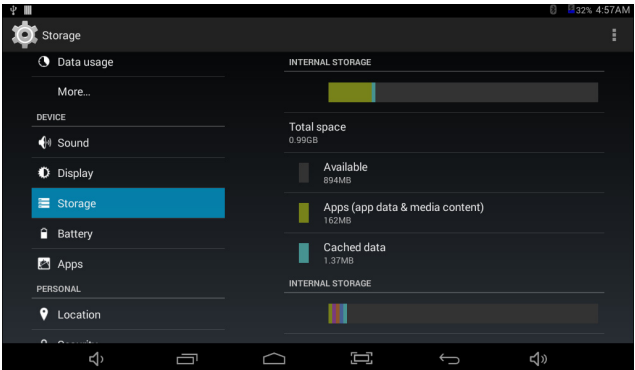

2.5.6 Battery

 Check the battery usage status.

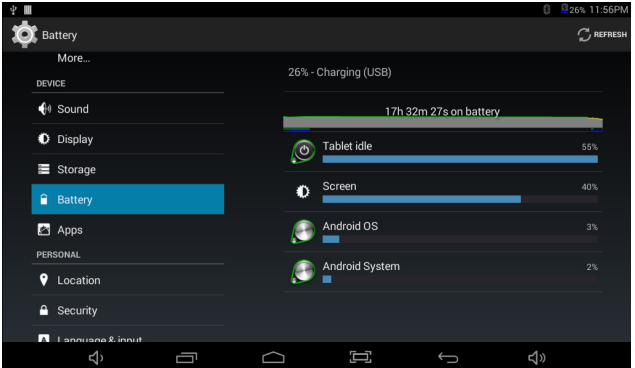


2.5.7 Apps

Download Manager or running the application, downloaded : All installed applications are listed.



 Manage downloaded or running applications.

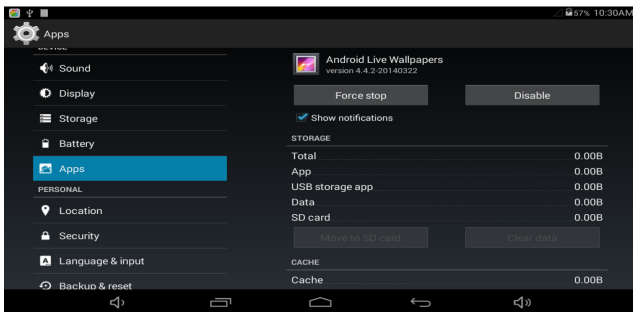

2.5.8 Location information

Google's location service: Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

 
2.5.9 Security

Screen lock:

Protect your device from unauthorized use by creating a personal screen unlock pattern.

Make passwords visible: Show password as you type.

Unknown sources: If you want to allow installation of non-Market Applications, press Unknown sources and press OK.

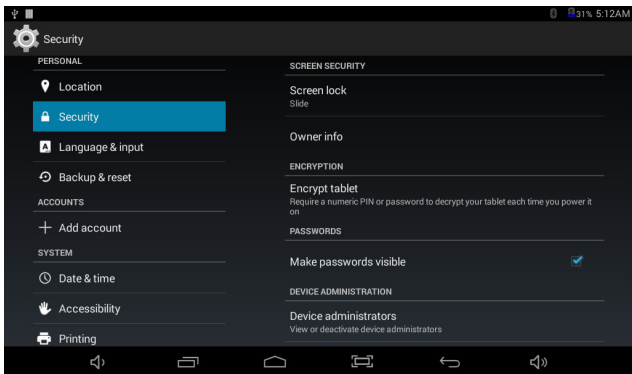


2.5.10 Language & Input

Language: Choose your preferable language.

Keyboard & input method: Change keyboard & keyboard settings.

 On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard, enter the chosen Keyboard settings, select Keyboards and press the language you need.

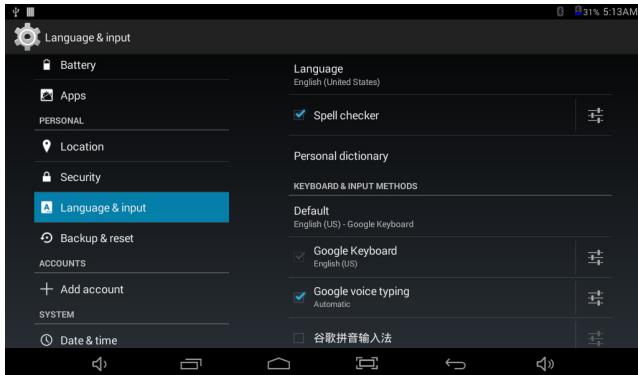

2.5.11 Backup&Reset

Data Backup and Restore Factory Setting.

2.5.12 Date & Time

Set date & time and format.

2.5.13 Accessibility

Click to enter using some auxiliary functions on the machine

2.5.14 Print

Setting Print Service

2.5.15 Developer Options

Set options for application development.

2.5.16 About Tablet

See status, legal information, etc.

3 Installation

 
3.1 How to Connect/Disconnect the Device with/from the Computer

On the main desktop, connect the device with the PC, touch left side of the status bar on the TOP of desktop.




Press "USB connected", select "Turn on USB storage". Now you can use it as an external storage.



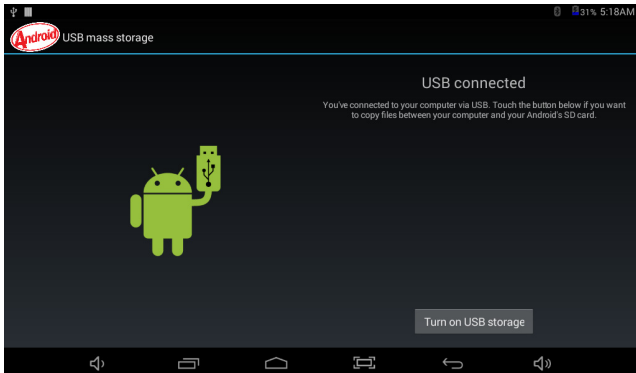

 After finishing your work, Press “Turn off USB storage” to disable it.

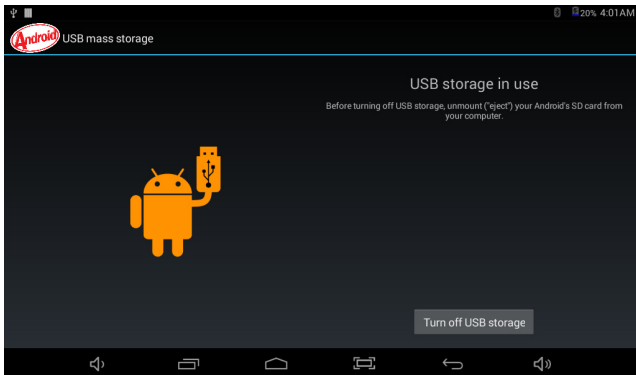

3.2 How to Install Applications (.apk file) into the Device


Method 1:

Connect the device with internet. See above (2.5.1 Wireless & Networks) to connect the Internet. Run “Market” and search the applications you want to install. Follow the instruction on the screen for installation.

Method 2:


1. With your computer, search application file (.apk) that you want to install into the device.
2. Connect the device with your computer. (**See above how to Connect/Disconnect the Device with/from the Computer**)
3. Copy and stick apk files to the device, and remove the device from the computer.
4. Open "file manager," running the copied apk file to the device.
5. Follow the instruction on the screen for installation.

 3.3 **Desktop Icons(Shortcuts):** Long press your desired APK icon and put it on the desktop.
Press the upper right side icon of desktop, the pop-up displays.

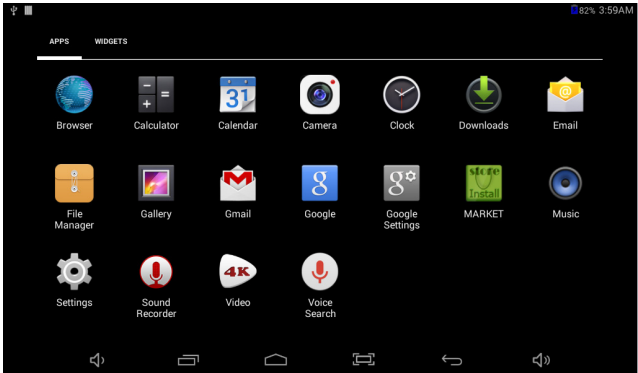

Widgets

 Press Widgets and press your desired icon to put it on the desktop.

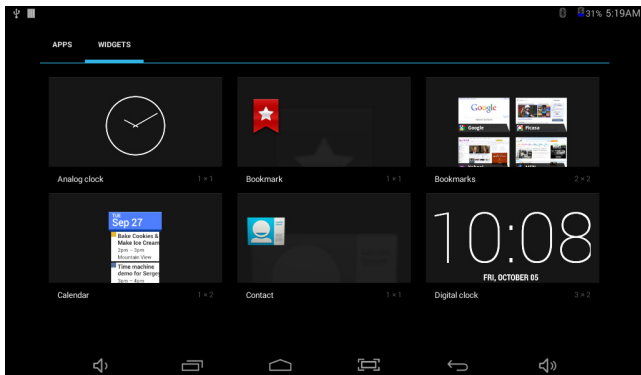


Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper. Select one you desired and press Set Wallpaper.

3.4 Keyboard Input

 Tap the text input area to open the on-screen keyboard

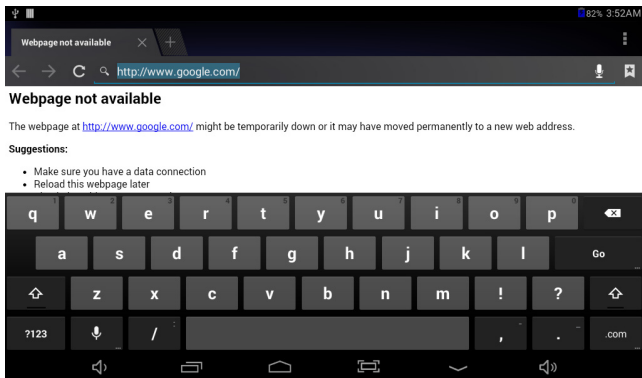

4. Technical Specifications

OS	4.4.2	Android 4.4.2
CPU	A31S Cortex A7 Duar core 1.5GHz	
RAM	1GB DDR3	
Display	7 " 1024×600 pixels Capacitive touch panel.	
Multi-touch Screen	Yes: 5 point multi-touch	
Built-in Flash Memory	8 GB	
IO Ports	Audio Port	3.5ø earphone
	USB Port	Micro 5PIN support OTG function
	TF Card	Support TF card
	OTG Port	Same as USB Port
	Button	Power, Home
frequency response	Frequency response: 20Hz-20kHz	
G-sensor	Yes	
Camera	30M pixel(front) ; 200M pixel (rear)	
Wi-Fi	802.11b/g/n	
Power Adapter	DC5V/2A	
Battery	3.7V 2800mA Li-Polymer	
Charging Time	By Charger	Appox: 3-4 hours

Note:

All pictures of product interface in this manual are for reference only; please refer to the actual interface of product!

5. Aftermarket

HOTT has designed this device in order to guarantee the maximum reliability. However, if a problem occurs, by following the procedures suggested in this section you may be able to determine its cause.

Do not attempt to open the device – there is a risk of electrical shock.

If you are not able to solve the problem, please contact your seller or manufacturer.

All users must be familiarized with this section. Knowing what could go wrong can help you avoid the occurrence of problems.

WARNING:

any attempt of fixing the devuce without contacting the manufacturer will nullify the warranty.

In case the problem persists, call HOTT Technical Support or Customer Service

HOTT Corp ensures for a period of 1 year, starting from the date of purchase of this device, a warranty against any found manufacturing defect. The warranty coverage must be according to the proper use and maintenance of the device which is through the instructions stated in this manual. In case otherwise identified, the malfunctions will not be under the warranty.

The repair of electronic device must only be done by qualified technicians, otherwise future complications may occur n the device

To avoid unnecessary risks, in case there are any malfunctions on the wires or any type of components on the device, all repairs must be rendered by HOTT Authorized Service Centers.

6. Environment Conservation

Aiming to protect the environment, we try to reduce to a maximum the volume of the packages which are confined to three easy separation materials: cardboard, paper and plastic.

The device is made of recyclable material, once disassembled by a specialized company. Follow the local legislation concerning recycling of all materials.



7. FCC Notice:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

Play Store

Method:

To start the Google Play, please click the "Hide market" icon and then log in the Google Play, click the "Hide market" again to hide.

Play Store

Click the "Play" icon to enter from the application list.

You can conveniently download lots of applications from the "Play Store" to your device. (For first time to sign in the "Play Store", you need to set up a Google Account to proceed.)

After setting up the Google Account, please enter the main interface of the "Play Store".

Search the needed applications and click to enter

Click "Install"

Read the permission carefully

After confirming, select "Accept and download" to start. The application will be installed automatically after download has finished;

WARNING

All supports of the applications from the "Google Store" are provided by third-party developer. You can get the developer information from the detailed data page of every application.

Our company will not take any responsibility for any problem caused by third-party applications.