

# NCS-001(U)

 
EN

977-415

## Instruction Manual



Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Caution**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to clean it.

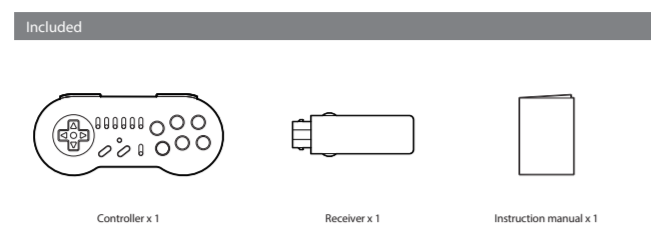


Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

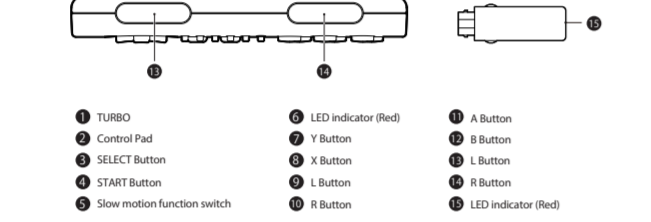
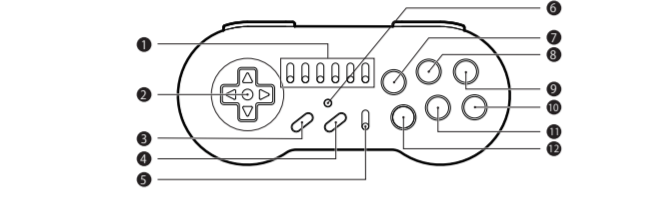


 - TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED Indicator (Rojo)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED Indicator (Rojo)

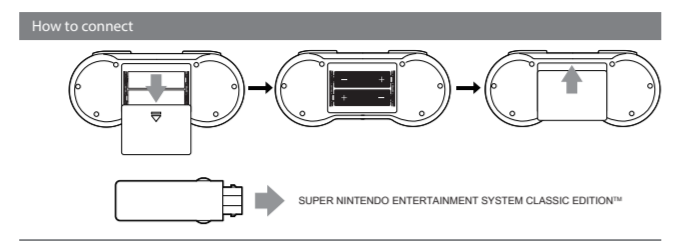

How to connect  
Sleep mode  
Controller does not respond

  How to use TURBO / TURBO Hold Mode

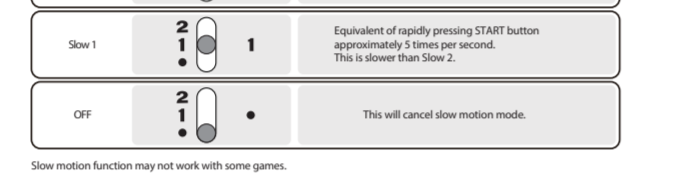
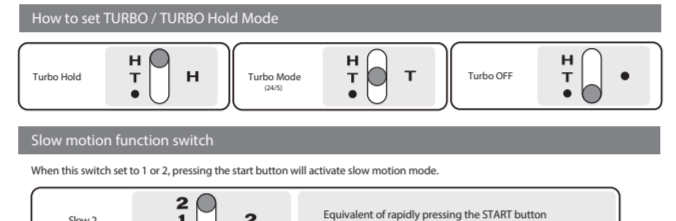


- Slow 2
- Slow 1
- OFF

Main Specifications  
Transmission method: 2.4GHz Frequency with auto-switching wireless transmission system  
Transmission range: Within approximately 32.8 ft (10 meters)  
Power Source: 2 AA batteries (sold separately)  
Battery life: Approximately 6.3 hours (180 games) (including batteries)  
Continuous usage time: 200 hours  
Up to 2 controllers may be used at the same time

How to connect  
Sleep mode  
Controller does not respond

  How to use TURBO / TURBO Hold Mode

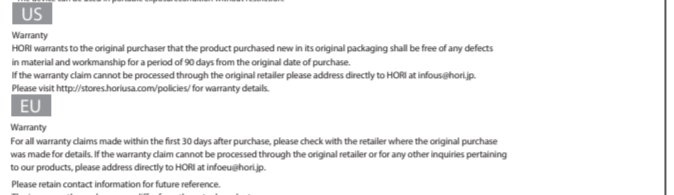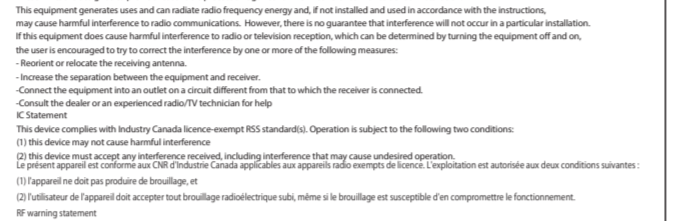


- Slow 2
- Slow 1
- OFF

FR

## Mode d'emploi


 
Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Attention**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to clean it.

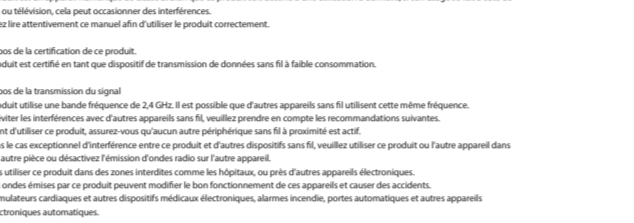

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

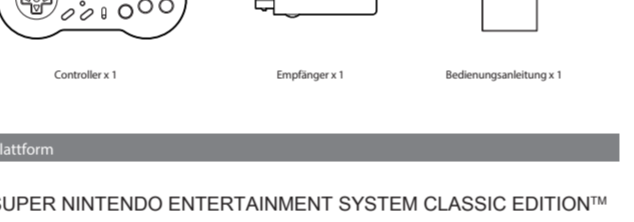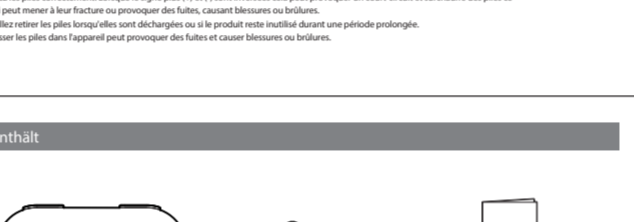

- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)



How to connect  
Sleep mode  
Controller does not respond

How to use TURBO / TURBO Hold Mode




- Slow 2
- Slow 1
- OFF

US

## Mode d'emploi


 
Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Attention**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to clean it.

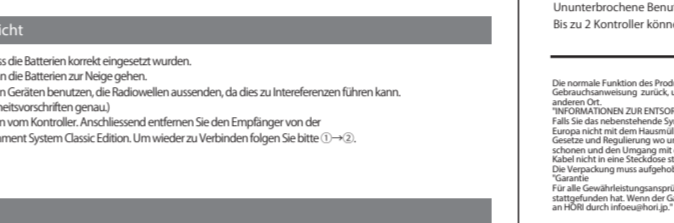

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

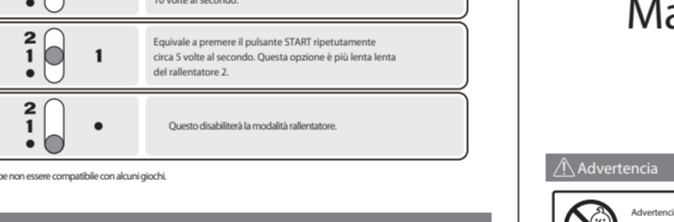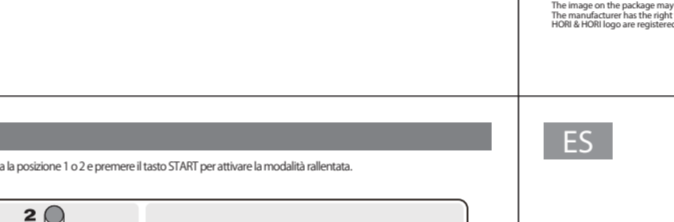


- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

ES

## Mode d'emploi


 
Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Atención**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to cámara

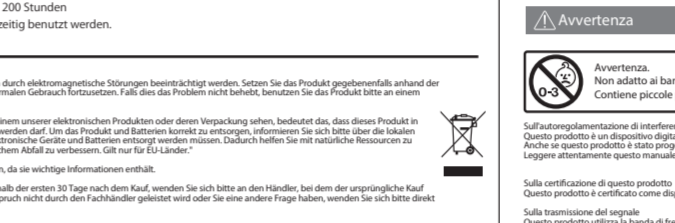

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

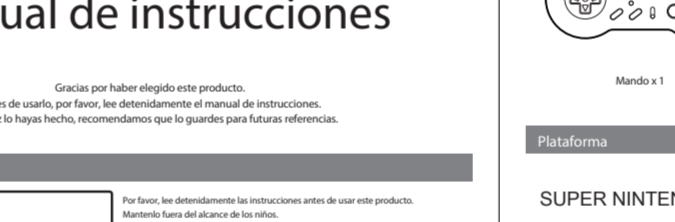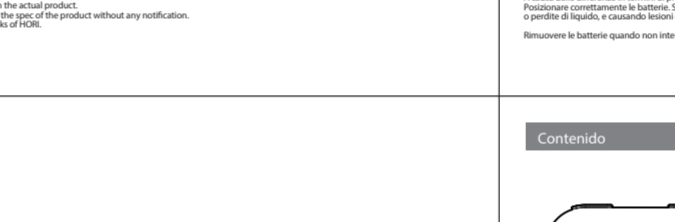


- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

IT

## Manuale di istruzioni

 
Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Avvertenza**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to clean it.

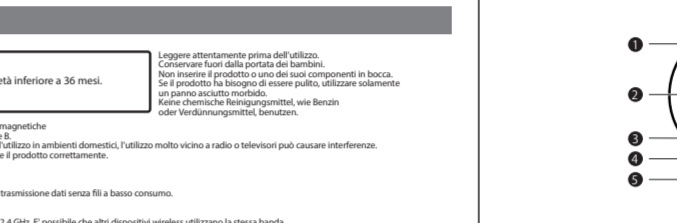

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

 Layout

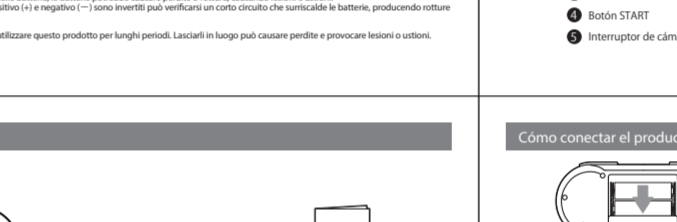


- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

ES

## Manuale di istruzioni


 
Read your packaging first. Before using this product, please read the instructions carefully. After reading the instruction sheet, please keep it for your reference.

**Atención**  
Warning: Not suitable for children under 10 years old. Do not use this product or any of its components near water. Do not use any chemical agents like bleach to clean it. Do not use any chemical agents like bleach to clean it.

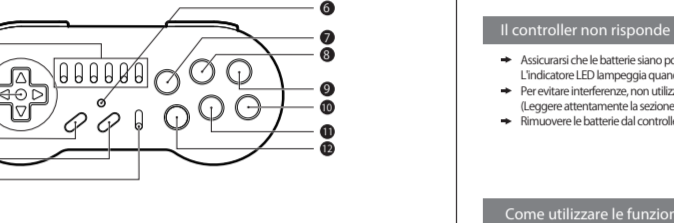

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

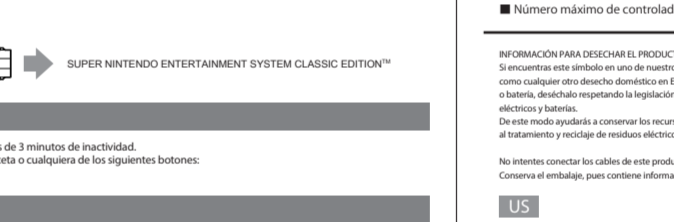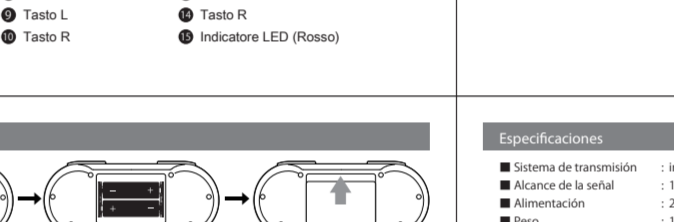



- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

FR

Mode d'emploi

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

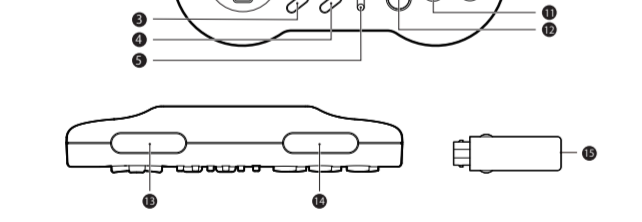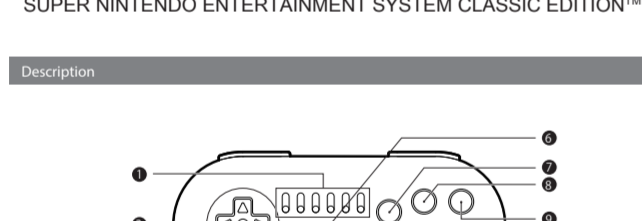



- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

ES

Manuale di istruzioni

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

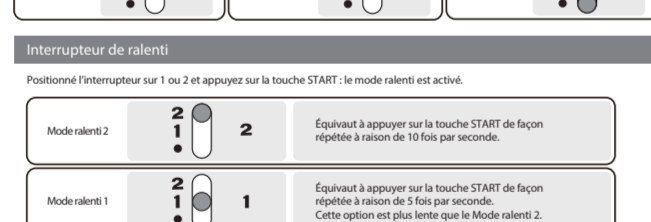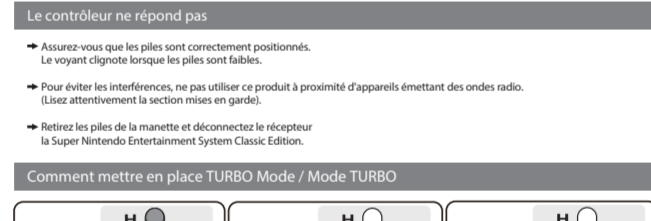



- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

DE

Bedienungsanleitung

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

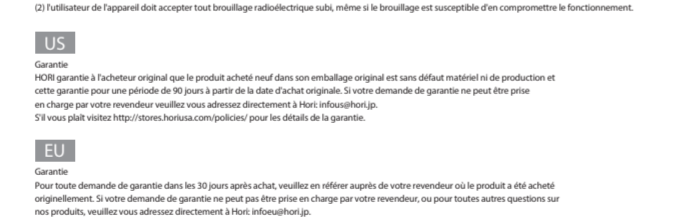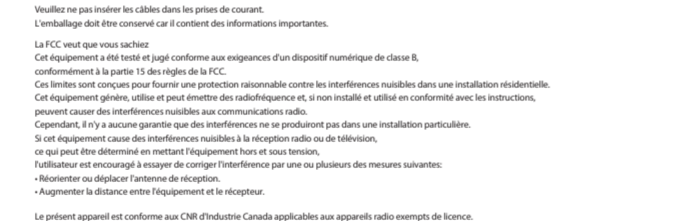



- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

FR

Mode d'emploi

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

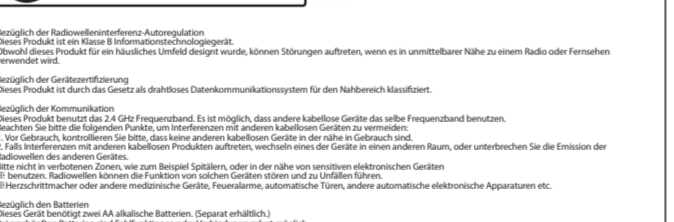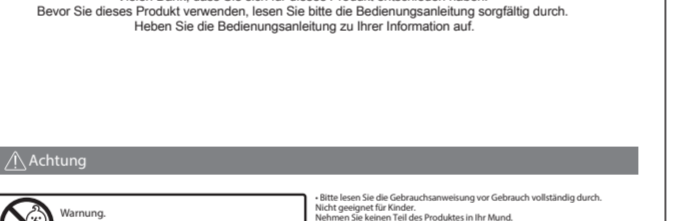



- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

ES

Manuale di istruzioni

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

  Layout

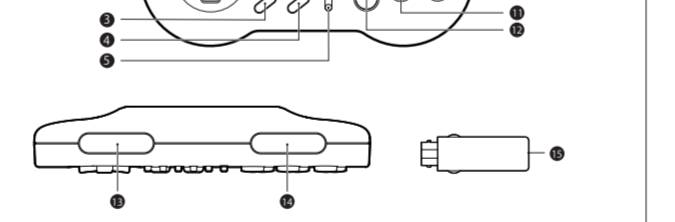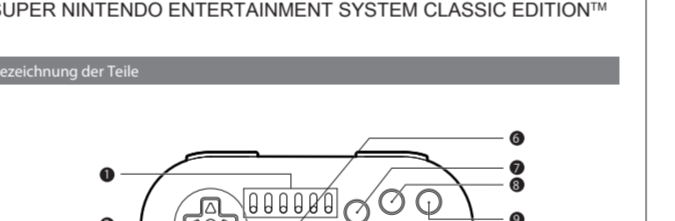


- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

IT

Manuale di istruzioni

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

 Layout

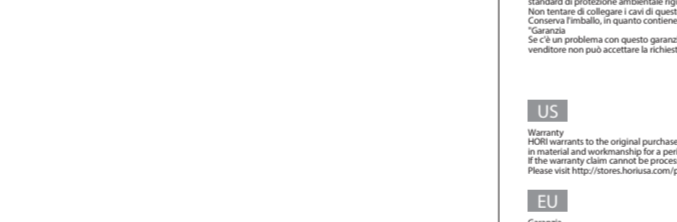

- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

表面

株式会社ヨリ  
機種名: 197710US ファイティングコマンダー for クラシックミニスーパーファミコン  
部品名: Instruction Sheet(WHC)US  
部品図番: 1977-41US  
印刷: 19CK  
材質: 書紙80g  
作成: 矢野 2017/8/3

裏面

 
 
株式会社ヨリ  
機種名: 197710US ファイティングコマンダー for クラシックミニスーパーファミコン  
部品名: Instruction Sheet(WHC)US  
部品図番: 1977-41US  
印刷: 19CK  
材質: 書紙80g  
作成: 矢野 2017/8/3

FR

Manuale di istruzioni

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

Layout

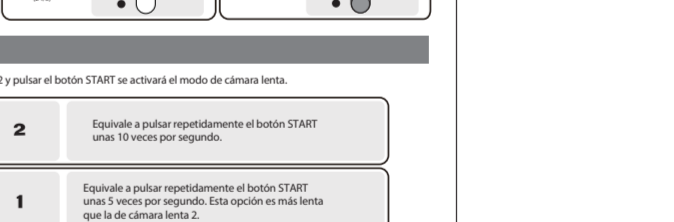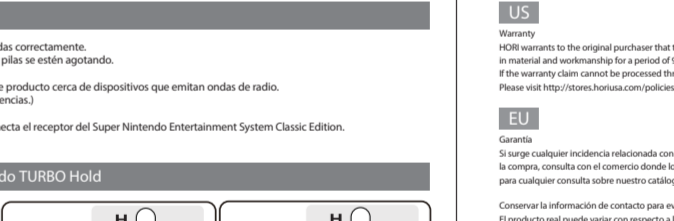


- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rot)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rot)

ES

Manuale di istruzioni

Platform  
SUPER NINTENDO ENTERTAINMENT SYSTEM CLASSIC EDITION™

 Layout

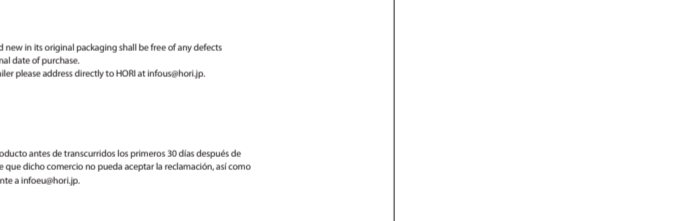

- TURBO
- Control Pad
- SELECT Button
- START Button
- Interuptor de cámara
- LED-Indikator (Rosso)
- Button Y
- Button X
- Button B
- Button A
- Button L
- Button R
- LED-Indikator (Rosso)

Super Nintendo Entertainment System and Super NES are trademarks of Nintendo. © 2017 Nintendo. Designed by HCFR in Japan