

Table of Contents

Chapter 1 - Introduction	1
Chapter 2 - Getting Started	3
Camera Parts	3
Setting Up Your Camera	5
Attaching the Wrist Strap and Lens Cover Leash	5
Installing the Batteries	7
Installing the Main Batteries	7
Installing a New Coin Battery	8
Checking the Battery Level	9
Charging the Batteries	11
Installing the Memory Card	11
Checking the Memory Card Status	13
Formatting a Memory Card	14
Camera Basics	15
Turning the Camera On and Off	15
Sleep Mode	16
Using the Camera Modes	17
Understanding the Viewfinder Indicator Light	18

Using the Color LCD	19
Overlay Bars	21
Soft Keys	23
Using the Camera Menus	23
Setting the Date and Time	24
Changing the Language	27
Changing the Camera's Name	28
Using an AC Power Adapter (recommended)	29
Chapter 3 - Taking Photos	30
Overview	30
Taking a Photo	30
Checking the Camera Status	32
Using the Status LCD	32
Using the Color LCD	33
Taking Still, Burst and Timelapse Photos	35
Taking Still Photos	35
Taking Burst Photos	36
Taking Timelapse Photos	38

Adjusting the Camera Settings	42
Taking Black and White Photos	42
Changing the Flash Setting	43
Adjusting the Photo Quality	45
Using the Zoom	50
Using Macro Mode	52
Using the Self-Timer	53
Setting the Exposure	56
Setting the White Balance	58
Using Instant Review	60
Setting the Eye Start	62
Setting Hand Held	62
Setting the Counter Reset	63
Setting Auto Shutoff	64
Setting the Beep	65

Chapter 4 - Viewing Photos	67
Overview	67
Using Review Mode	69
Selecting Photos	69
Marking Photos	70
Deleting Photos	71
Protecting Photos	72
Categorizing Photos	73
Grouping Photos	75
Creating and Removing Groups	76
Adding Photos to a Group	78
Opening and Closing Groups	79
Expanding Burst and Timelapse Photos	80
Searching for Photos	81
Using Play Mode	84
Viewing Single Photos	84
Zooming In on Your Photos	85
Viewing Burst, Timelapse, and Grouped Photos	86
Creating a Slideshow	87
Deleting Photos	89

Using Your Television	90
Selecting the Video Output Format	90
Connecting the Camera to a Television	91
Viewing Photos on a Television	92
Chapter 5 - Sharing and Printing Photos	93
Connecting the Camera to Your PC	93
System Requirements	94
Installing the Software	95
Connecting the Camera	95
Downloading Photos	96
Printing Photos	98
Connecting the Camera to Your Macintosh	101
System Requirements	101
Installing the Software	101
Connecting the Camera	102
Downloading Photos	103
Printing Photos	105

Printing Photos Without a Computer	106
Using a Card Reader	106
Using a Digital Print Order Format (DPOF) File	107
JetSending Photos	109
Transmitting Photos Between Two Cameras	112
Using Digita Scripts	114
Chapter 6 - Troubleshooting and Maintenance	115
Problems and Solutions	115
Getting Assistance	116
HP PhotoSmart on the Internet	116
Help	117
Contacting HP Customer Care	117
HP Customer Care Online	117
HP Customer Care by Phone	118
Maintenance	118

Appendix A - Safety, Regulatory, and Warranty Information	119
Safety Information	119
Regulatory Notices	120
U.S.A.	120
Canada	120
Hewlett-Packard Limited Warranty Statement	121
Hewlett-Packard Year 2000 Warranty for Consumer Products Distributed Through Authorized Resellers	123
Appendix B - Reference	124
Menu Structure	124
Record (Rec) Mode	124
Review (Rev) Mode	127
Play Mode	128
Icons	129
Color LCD	129
Categories	132
Status LCD	133
Error Messages	134
Color LCD	134
Status LCD	134
Camera Specifications	135

Glossary	136
Index	142