



Audio/Video Stand Warranty
One (1) Year Limited Warranty

THIS PRODUCT IS DESIGNED AND INTENDED ONLY FOR USE WITH THE SPECIFIED HP MODEL TELEVISION ONLY. USE WITH TELEVISIONS OTHER THAN THE SPECIFIED HP MODEL WILL VOID THIS WARRANTY.

This product is warranted, with the exception of glass, to the original purchaser at the time of purchase and for a period of one (1) year thereafter. Glass is warranted to the original purchaser at the time of purchase and for a period of thirty (30) days thereafter. Warranty is only valid in the United States of America.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton. To receive replacement or missing part(s) under this warranty, go to our website at www.hp.com or call our Customer Service Department at (888) 779-2858. Please have the model number of the stand and part number(s) for reference. You will also need your sales receipt or other proof of purchase. Replacement part(s) will be shipped to you at no charge with HP assuming all shipping and handling expense.

We warrant to you, the original purchaser, that our furniture and all of its parts and components are free of defects in material or workmanship. "Defects", as used in this warranty, is defined as any imperfections that impair the use of the furniture or product.

Our warranty is expressly limited to the replacement of furniture parts and components. For one (1) year after the date of purchase, HP will replace any part described on the enclosed furniture parts list that is defective in material or workmanship.

This warranty applies under conditions of normal use. Our furniture products are not intended for outdoor use. The warranty does not cover: 1) defects caused by improper assembly or disassembly; 2) defects caused by shipping, claims for damage during transit to you should be placed immediately by you to the transportation company; 3) defects occurring after purchase due to product modification, intentional damage, accident, misuse, abuse, negligence or exposure to the elements; 4) cosmetic damage and 5) labor or assembly costs.

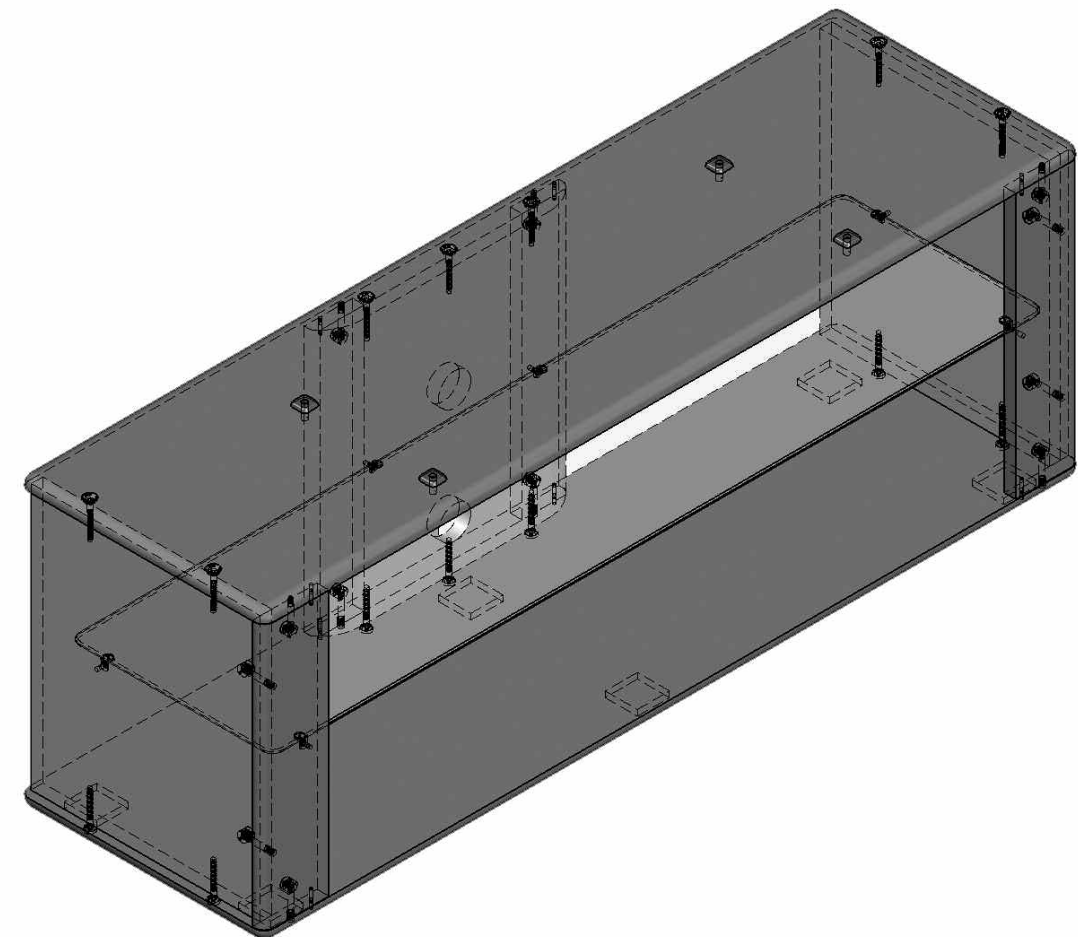
There are no warranties, express or implied, including without limitation merchantability or fitness for particular use, except as (i) contained herein or (ii) required by applicable law in the state whose law governs (which shall be New Jersey absent controlling law imposing the law of another state in lieu thereof as governing law). All warranties of whatsoever derivation shall be limited to the term set forth above, unless otherwise required by applicable law.

Manufacturer's employees or representatives' ... ORAL OR OTHER WRITTEN STATEMENTS DO NOT CONSTITUTE WARRANTIES, shall not be relied upon by Buyer, and are not a part of the contract for sale or this limited warranty.

Except as provided herein, HP shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use of the product, including, but not limited to, any incidental or consequential damages. Some states do not allow limitation on how long an implied warranty can last or the exclusion of limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

www.hp.com






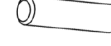


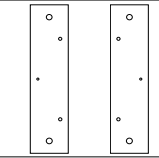
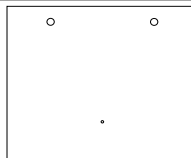
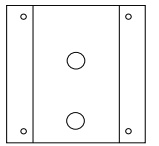


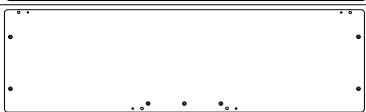


Assembly Instructions

For Model TS5226 Black Audio Video Stand

FOR USE WITH HP MODEL ID5226N AND ID5286N TELEVISIONS

Parts List

PART #	PART DESCRIPTION		QUANTITY
REQUIRED TOOLS	 Allen Wrench	 Philips Screwdriver	
6		34mm Cam Lock Connector Bolt	12
10		50mm Screw	14
12		30mm Screw	4
7		Wood Dowel	8
8		Cam Lock	12
11		Glass Shelf Support Pins	6
3		Left & Right Front Panels	2
9		Side Support Panels	2
2		Rear Support Panel with Cable Management	1
5		Top Shelf	1
4		Glass Shelf	1
1		Bottom Shelf	1

FOR YOUR SAFETY, PLEASE FOLLOW THESE PRECAUTIONS:

- ! ALWAYS REMOVE THE TV AND OTHER EQUIPMENT FROM THE FURNITURE PRIOR TO MOVING THE ASSEMBLED UNIT.
- ! BE CAREFUL WHEN MOVING THE ASSEMBLED FURNITURE AFTER THE GLASS SHELF HAS BEEN INSTALLED, AND/OR WHEN THERE IS EQUIPMENT LOCATED ON THE FURNITURE AS THIS MAY CAUSE THE SHELF TO BECOME UNSECURED AND FALL.
- ! WHEN IN USE, THIS FURNITURE MUST BE PLACED ON A FLAT, SOLID AND LEVEL SURFACE.
- ! DO NOT LEAN ON THE TV WHEN IT IS ON THE TV STAND. ! DO NOT CLIMB OR STEP ON THE STAND.
- ! DO NOT BANG OR PLACE YOUR OWN WEIGHT ON THE GLASS SHELF.
- ! DO NOT PLACE ITEMS ON THE SHELVES WHICH EXCEED THE MAXIMUM WEIGHT LIMITS OF 200 LBS. FOR TOP SHELF AND 50 LBS. FOR GLASS SHELF

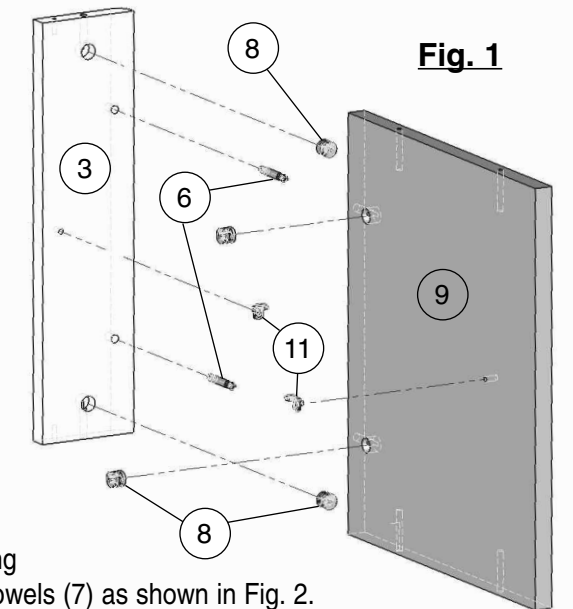


Assembly Instructions

NOTE: TWO PEOPLE ARE RECOMMENDED TO ASSEMBLE THIS TABLE.

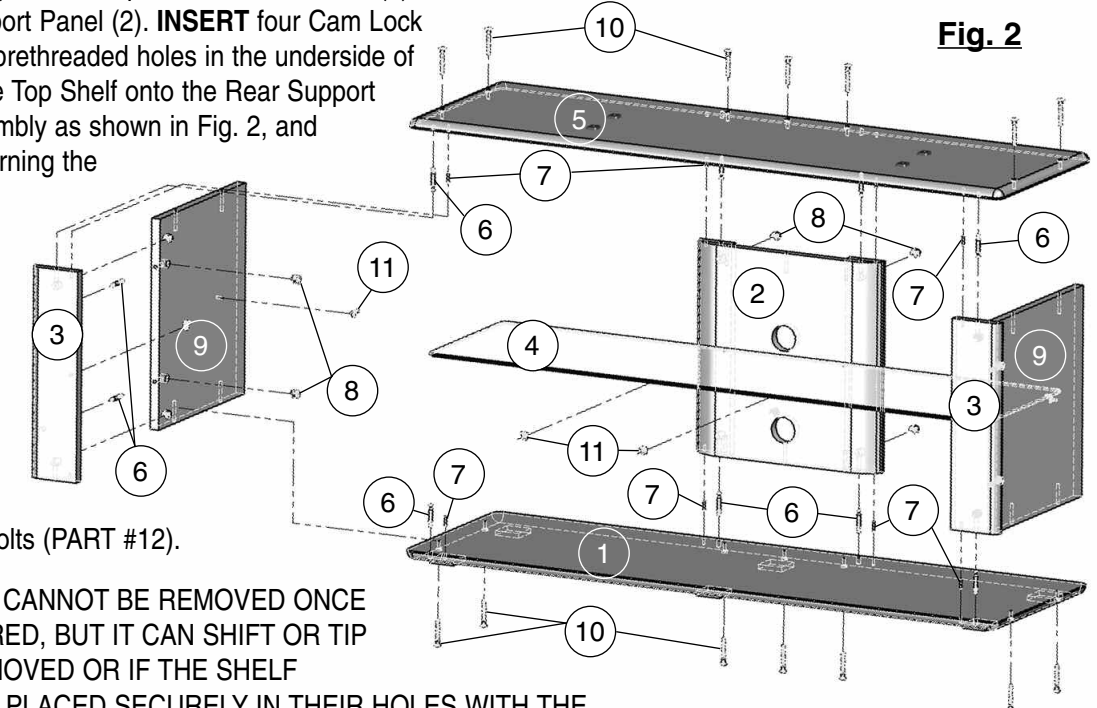
1. Side Assembly

- A. **INSERT** two Cam Locks (8) into each of the Side Support Panels (9) as shown in Fig. 1. **INSERT** two additional Cam Locks into each of the the Left and Right Front Panels (3).
- B. **INSERT** 2 Cam Lock Connector Bolts (6) into each of the Left and Right Front Panels (3) as shown.
- C. **ATTACH** each Front Panel (3) to each Side Support Panel (9) as shown in Fig. 1. **TIGHTEN** cam locks (8) 1/4 turn with a philips screwdriver, **DO NOT OVERTIGHTEN**.



2. Table Assembly

- A. **PLACE** the Bottom Shelf (1) on a soft flat surface with the square feet facing down. **INSERT** four Cam Lock Connector Bolts (6) and insert four Wood Dowels (7) as shown in Fig. 2.
- B. **INSERT** four Cam Locks (8) into the back of the Rear Support Panel (2). **PLACE** the Rear Support Panel over the Cam Lock Connector Bolts (6) and Wood Dowels (7) located in the rear of the Bottom Shelf (1) as shown in Fig. 2 and **LOCK** the Rear Support Panel in place by turning the Cam Locks. **TIP** the Bottom Shelf (1) on edge so that the underside is facing you. **INSERT** three 50 mm Screws (10) through the bottom of the shelf and into the bottom of the Rear Support Panel and tighten to **SECURE**.
- C. **CAREFULLY TIP** the Bottom Shelf/Rear Support Panel assembly into an upright position. **ATTACH** the Side/Front Panel assemblies to the Bottom Shelf (1) as shown in Fig. 2 and **SECURE** by turning the Cam Locks (8) located in the Side Panels (9).
- D. **CAREFULLY TIP** the partially assembled table onto its back and **INSERT** two 50 mm Screws (10) from the underside of the Bottom Shelf (1) into the bottoms of the Side/Front Panel assemblies. Tighten to **SECURE**.
- E. **CAREFULLY TIP** the table upright again. **INSERT** two Glass Shelf Support Pins (11) into the front of the Rear Support Panel (2). **INSERT** one Glass Shelf Support Pins into the predrilled holes in each Side Support Panel (9), and one Glass Shelf Support Pin into each of the Front Panels (3) as shown in Fig. 1. Make sure the rubber pads on the Support Pins are facing up.
- F. **CAREFULLY PLACE** the Glass Shelf (4) into the partially assembled table so that it is resting on the Glass Shelf Support Pins (11).
- G. **INSERT** one Wood Dowel (7) into the top of each Front Panel (3) and two Dowels into the top of the Rear Support Panel (2). **INSERT** four Cam Lock Connector Bolts (6) into the prethreaded holes in the underside of the Top Shelf (5). **PLACE** the Top Shelf onto the Rear Support Panel and Side Panels assembly as shown in Fig. 2, and **SECURE** the Top Shelf by turning the Cam Locks. **INSERT** seven Screws (10) through the Top Shelf and into the tops of the Rear Support Panel and Side Panels and tighten to **SECURE**.



NOTE: For your safety, **SECURE** the TV to the table from beneath the the top shelf using 4 of the supplied 30mm bolts (PART #12).

NOTE: THE GLASS SHELF (4) CANNOT BE REMOVED ONCE THE TOP SHELF (5) IS SECURED, BUT IT CAN SHIFT OR TIP FORWARD IF THE TABLE IS MOVED OR IF THE SHELF SUPPORT PINS (11) ARE NOT PLACED SECURELY IN THEIR HOLES WITH THE RUBBER PADS FACING UP. ALWAYS PLACE HEAVIEST COMPONENTS ON THE BOTTOM SHELF.