 


Your PM35110

User guide

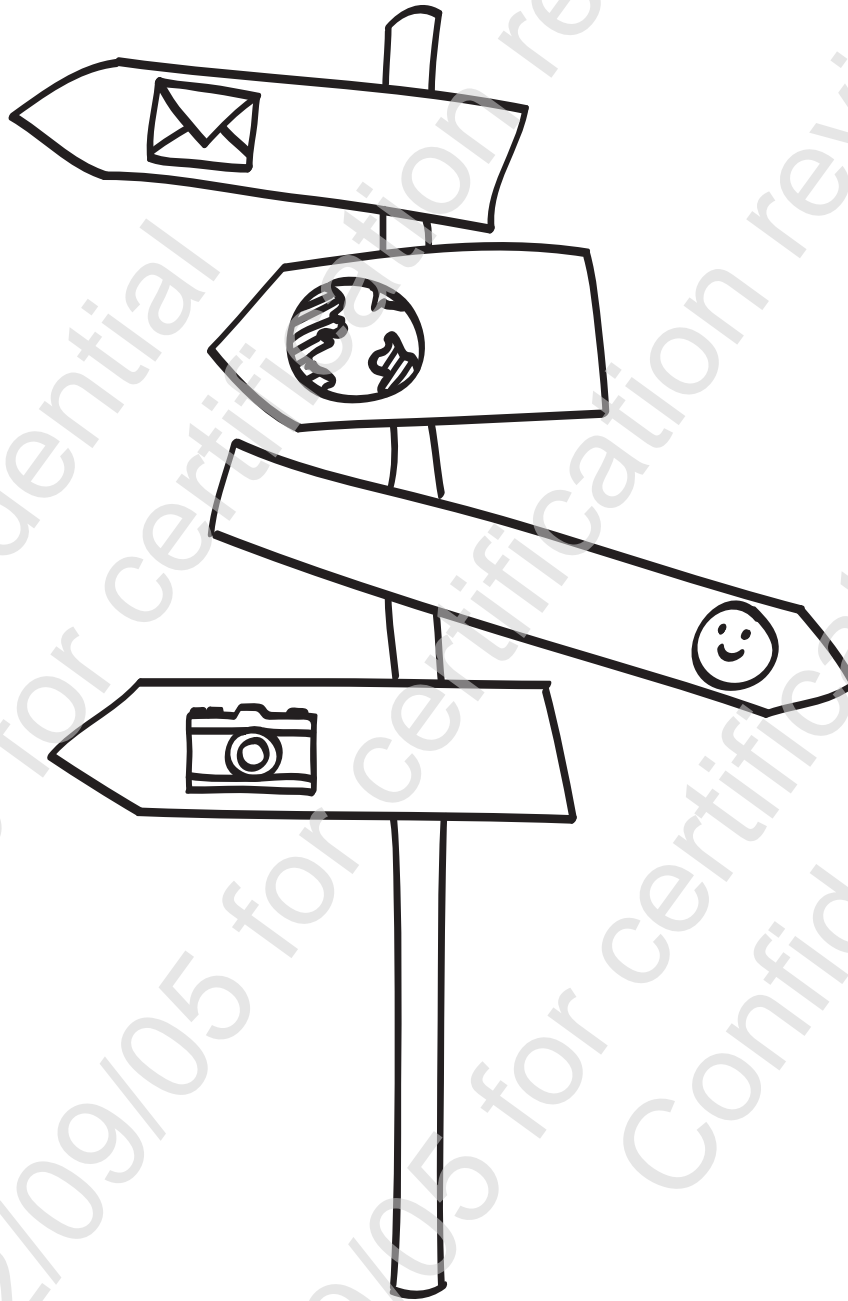

Conventions used in this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Confidential
2012/09/05 for certification review only
Confidential

 
Unboxing

SIM card


PM35110 uses a microSIM card. The microSIM card contains your phone number, service details, and memory for storing phonebook contacts and/or text messages.

Inserting the SIM card

1. To eject the SIM card tray, insert the SIM eject tool (or a small bent paperclip) into the small hole next to the tray. You should insert it at an angle.

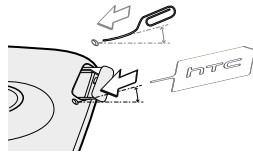

 2. Pull the SIM card tray out, and place the SIM card into the tray.

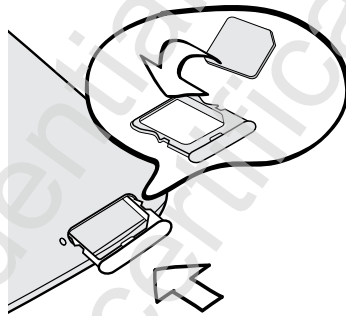


3. Insert the SIM card tray into its slot.

Removing the SIM card



Make sure to switch off PM35110 before removing your SIM card.

 1. To eject the SIM card tray, insert the SIM eject tool (or a small bent paperclip) into the small hole next to the tray. You should insert it at an angle.

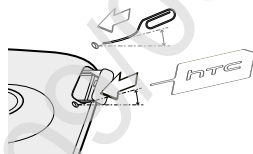

2. Pull the SIM card tray out.
3. Take the SIM card from the SIM card tray.

 
Charging the battery

Before you turn on and start using PM35110, it is recommended that you charge the battery.



Only the power adapter and USB cable provided in the box must be used to charge the battery.

1. Insert the small end of the USB cable into the USB connector.

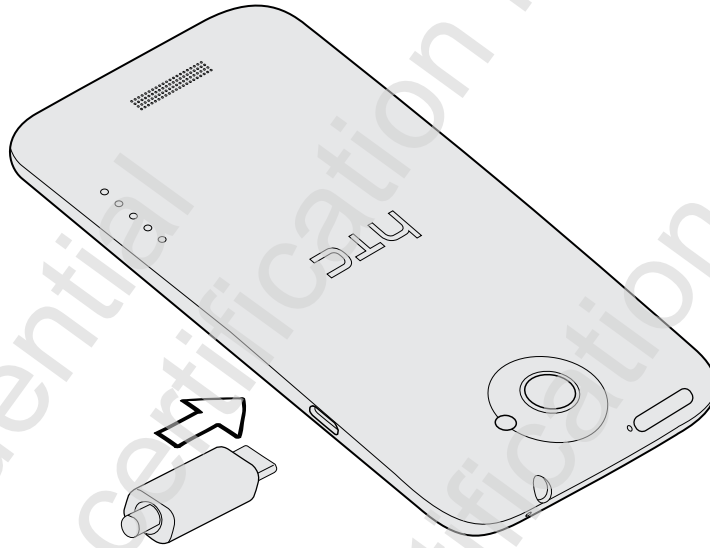

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



As a safety precaution, the battery stops charging if it overheats.

Switching the power on or off

Switching the power on

Press the POWER button.



When you turn on PM35110 for the first time, you'll need to set it up.


Switching the power off

1. If the display is off, press the POWER button to turn it back on, then unlock the screen.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

Want some quick guidance on your phone?

Learning the basics with Quick Tips

After your phone starts, you'll see a transparent overlay of Quick Tips on some screens (such as the Home screen) that will guide you in using PM35110. The tips for a screen won't display again after you've closed them.

To view the Quick Tips again, slide the Notifications panel open, and then tap  > **About** > **Help** > **Show all quick tips**.

Exploring PM35110


Tips & Help lets you get the most out of PM35110 in seconds.

- Need to know how to do something right away? Just type in some keywords and get clear, up-to-date answers right on PM35110.
- Ever have the feeling that you're not getting the most out of your phone? Browse through the friendly walkthroughs on Tips & Help to learn how. The topics range from intro to advanced and the Tips & Help widget even recommends topics that you might like.


To open Tips & Help from the Home screen, tap  > **Tips & Help**.

If you haven't downloaded Tips & Help content yet, or if there's updated content available, just tap the download link to get it.



To change the sync settings of Tips & Help, tap  > **Update settings**.


Searching Tips & Help

1. In Tips & Help, tap , and then enter the words you want to search for.
2. Tap a search result to jump straight to that item.

Setting up your phone

Setting up

Using Leap view

- To jump straight to the screen that you want, press  or pinch the screen to show the Leap view. It reveals all Home screens as thumbnails. Just tap the one you want and you'll leap right there.
- In Leap view, if there's space to add a new screen, you can tap **Add Panel** to do so. An empty Home screen appears and you can start customizing from there.



Getting contacts into

Getting photos, videos, and music on or off

Updating the