

# **SILVER MAX**

## **USER'S MANUAL**

Before using the PC, please read the following information and put the document at hand for reference

# Contents:

<b>Attention</b> .....	2
<b>1. Guide</b> .....	3
<b>2. First use</b> .....	3
2.1 Battery management and charge.....	3
2.2 Connection with PC .....	4
<b>3. Equipment operation interface</b> .....	4
3.1 Main interface describe .....	4
3.2 status bar describe .....	6
3.3 Use touch panel .....	6
<b>4. Equipment basic set</b> .....	7
4.1 Basic setting .....	8
4.2 Application .....	9
4.3 Privacy .....	10
4.4 Storage .....	10
4.5 Language & keyboard.....	11
4.6 Date & time setting .....	12
4.7 USB Mode Select .....	12
4.8 About device .....	12
<b>5. Apps Install and manage</b> .....	13
<b>6. Operation</b> .....	13
6.1 Network.....	13
6.2 Music .....	13
6.3 Video .....	14
6.4 Picture.....	15
6.5 Recording .....	16
6.6 Camera .....	17
6.7 Call function(Optional).....	18
6.8 Messaging(Optional) .....	19
<b>7. Problem solution</b> .....	21

Thanks:

Dear User

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

# Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
  - A、 The battery power ICONS shows have no power
  - B、 The system automatically shut off, startup after power off soon
  - C、 Operation buttons no response
  - D、 The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please do n't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、 Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

## 1. Guide

### 1.1 Touch panel

Capacitive touch panel: In The Operation, to click, dragging on the touch panel

### 1.2 POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click "ok". you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

### 1.2HOME

Press Home button return home page

### 1.3VOL+

Turn up volume.

### 1.4VOL-

Turn down volume

### 1.5 earphone jack

3.5 mm standard earphone jack

### 1.6 Video output interface

HDMI output interface(Optional)

### 1.7 TF card

TF-CARD slot: external T-FLASH card

### 1.8 USB(Micro/Mini)

Charging and external connection USB flash drive; And you can use it to connect the computer for data transmission

## 2. First use

### 2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 10 hours, after that you just need 8 hours to charge.

**【Remark】** : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor, this device without supply DC charging,.

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

**【Remark】** : 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge/play the battery once a month.

2. After low battery shut down, connect DC adaptor, device will remind low battery,

 
charging, need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption, it may cause longer charging time.

## 2.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

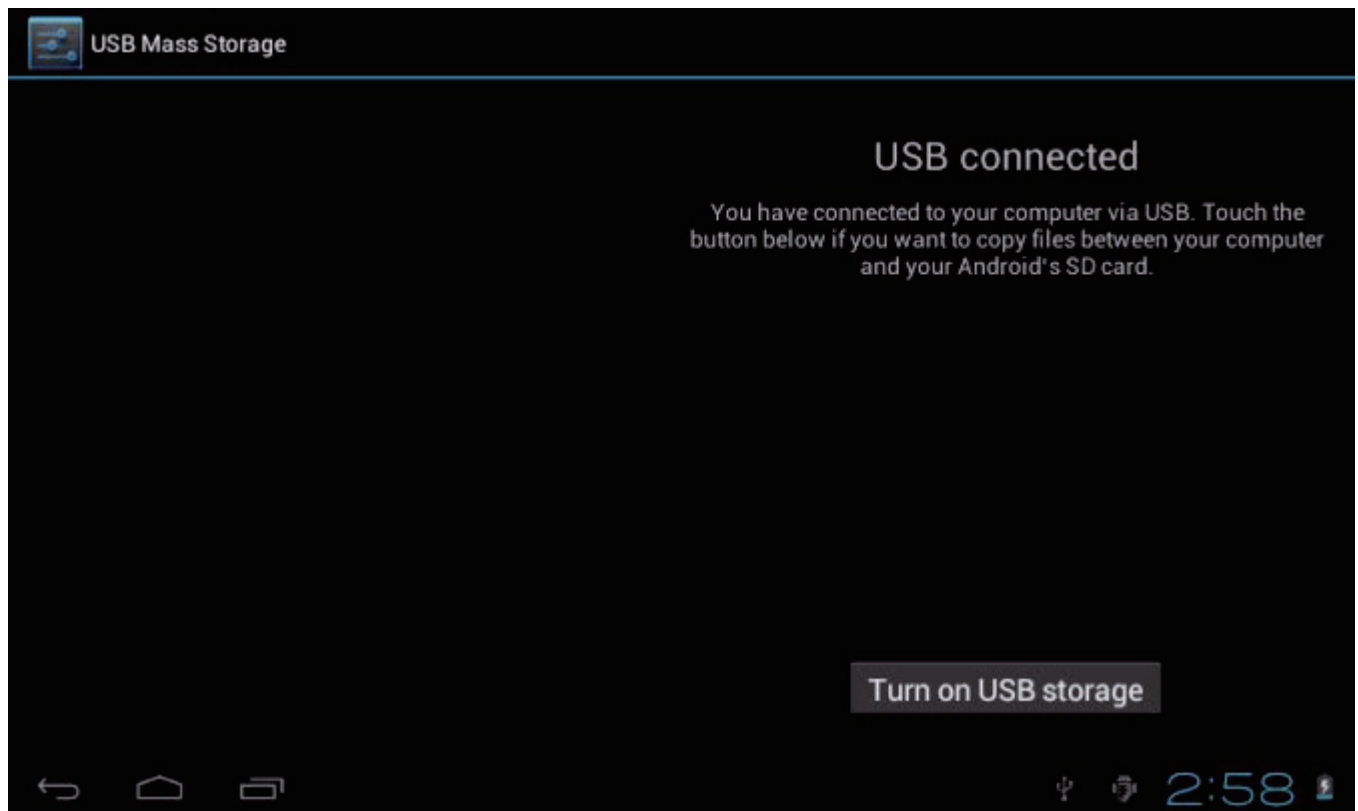


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

## 3. Equipment operation interface

 
### 3.1 Main interface describe

After startup will enter the main interface

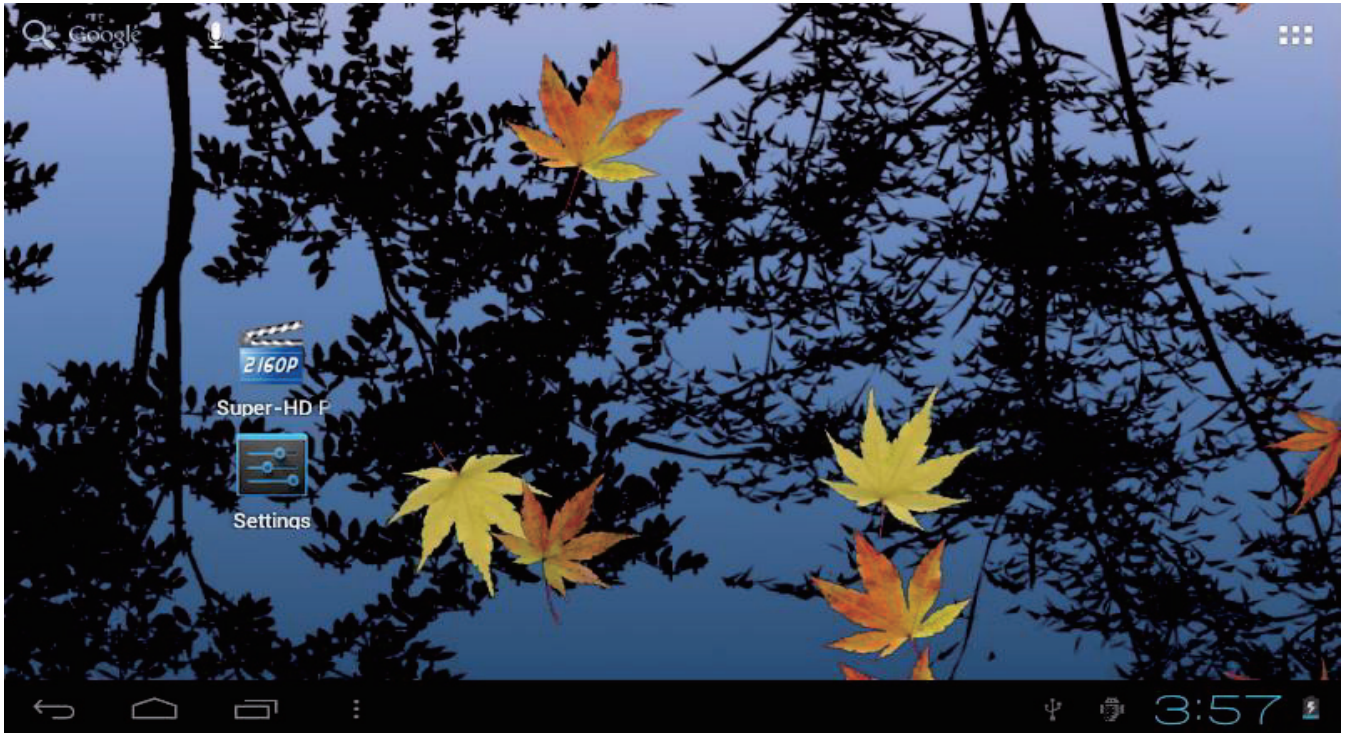


In the main interface, you can :

 Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

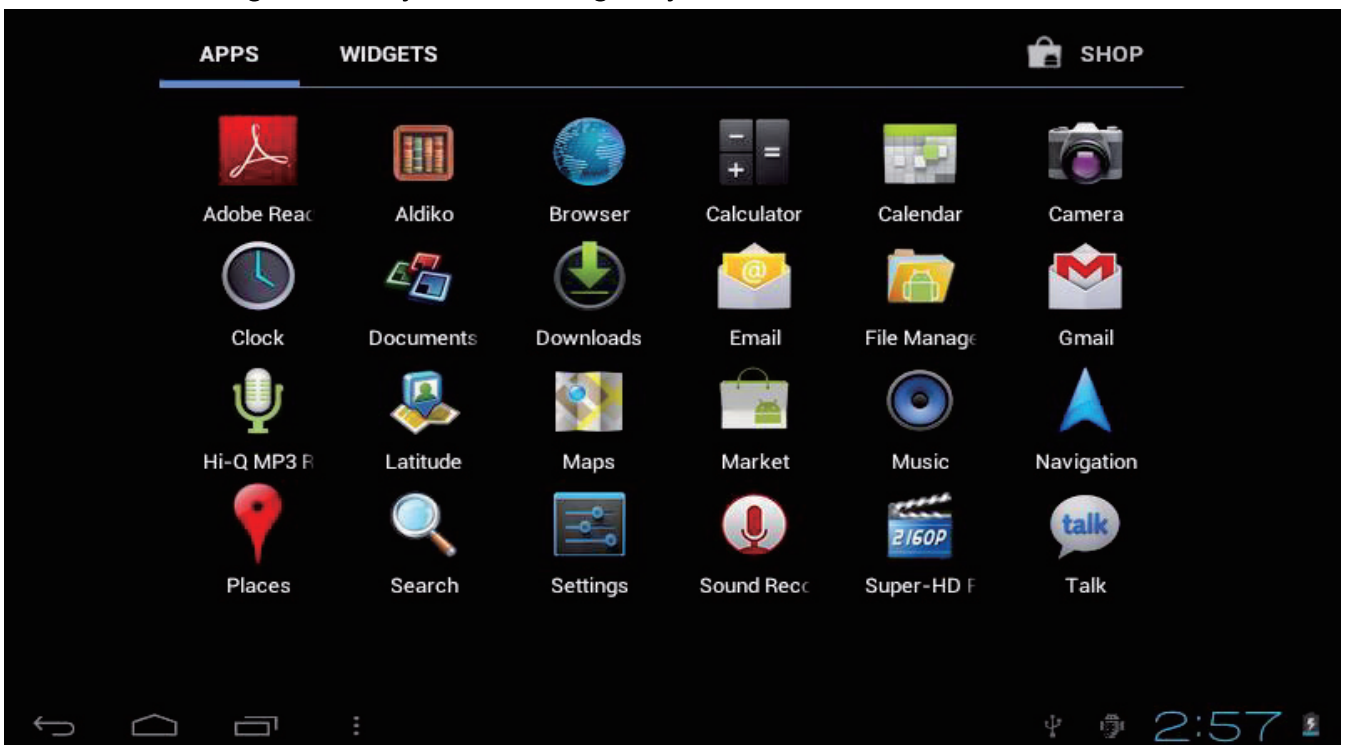

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

 You touch the screen keep a time, appear the dialog box “Add you Home screen” as shown below:

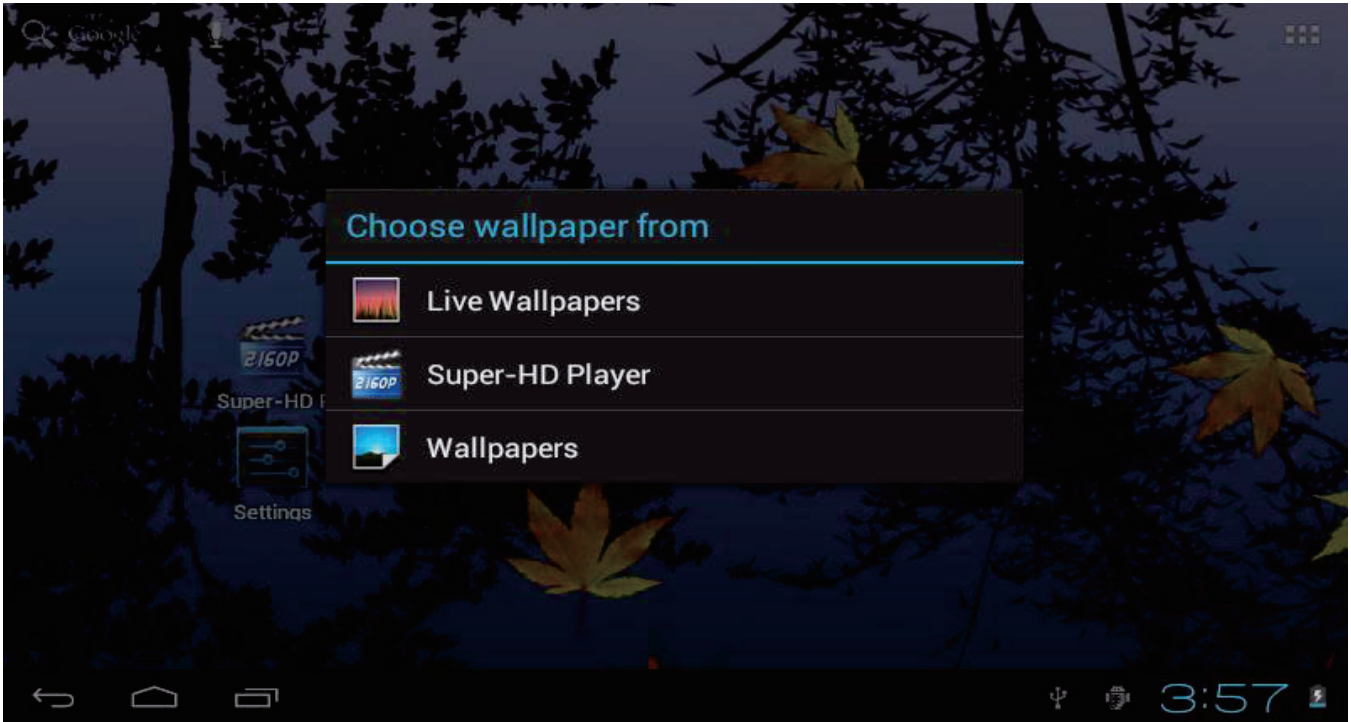


### 3.2 status bar describe




- The status bar above of the screen  
 Top left display main interface software, T-Flash card, USB connection status and so on  
 Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.


### 3.3 Use touch panel

Device equipped with touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

 
No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

**【Attention】** The main screen soft key  functions as the machine back key 

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the up floor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

**【Remark】** : The main screen soft key  functions as the machine manu 

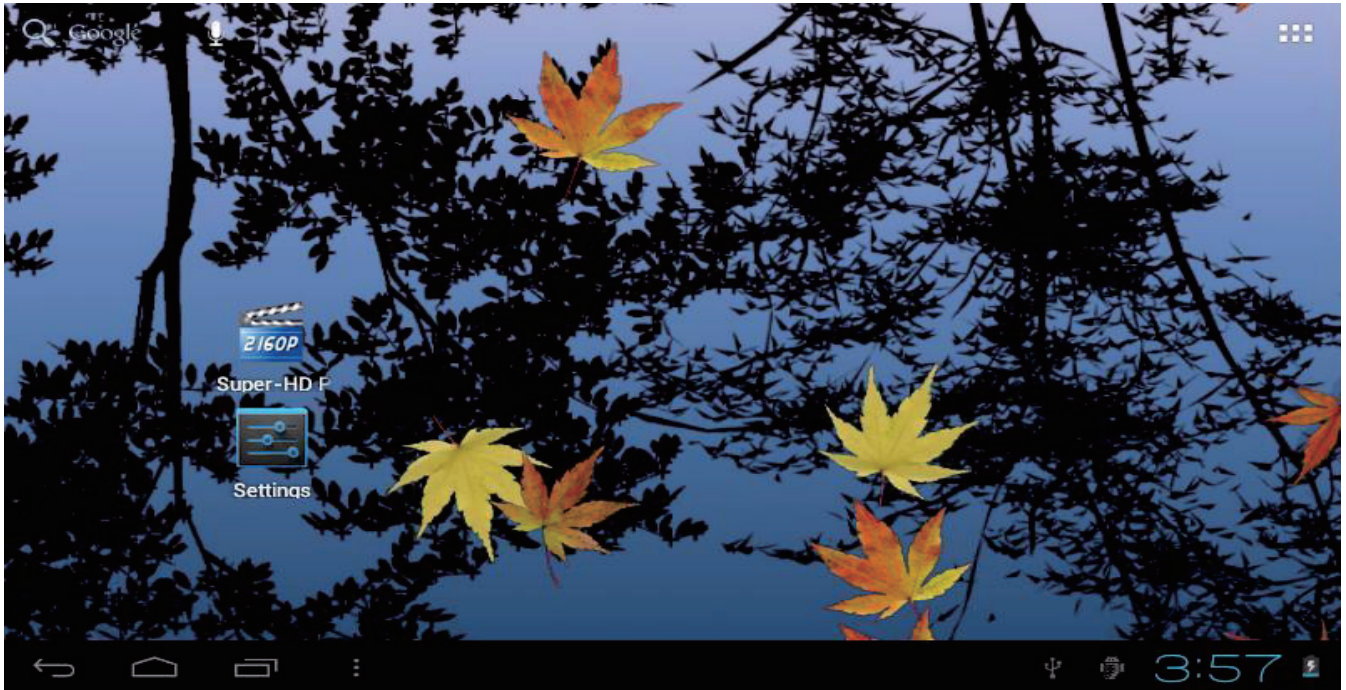


In the main interface, you can touch the icon to open the APPs


In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

#### 4. Equipment basic set

  
Setting: Click setting icons , enter setting interface

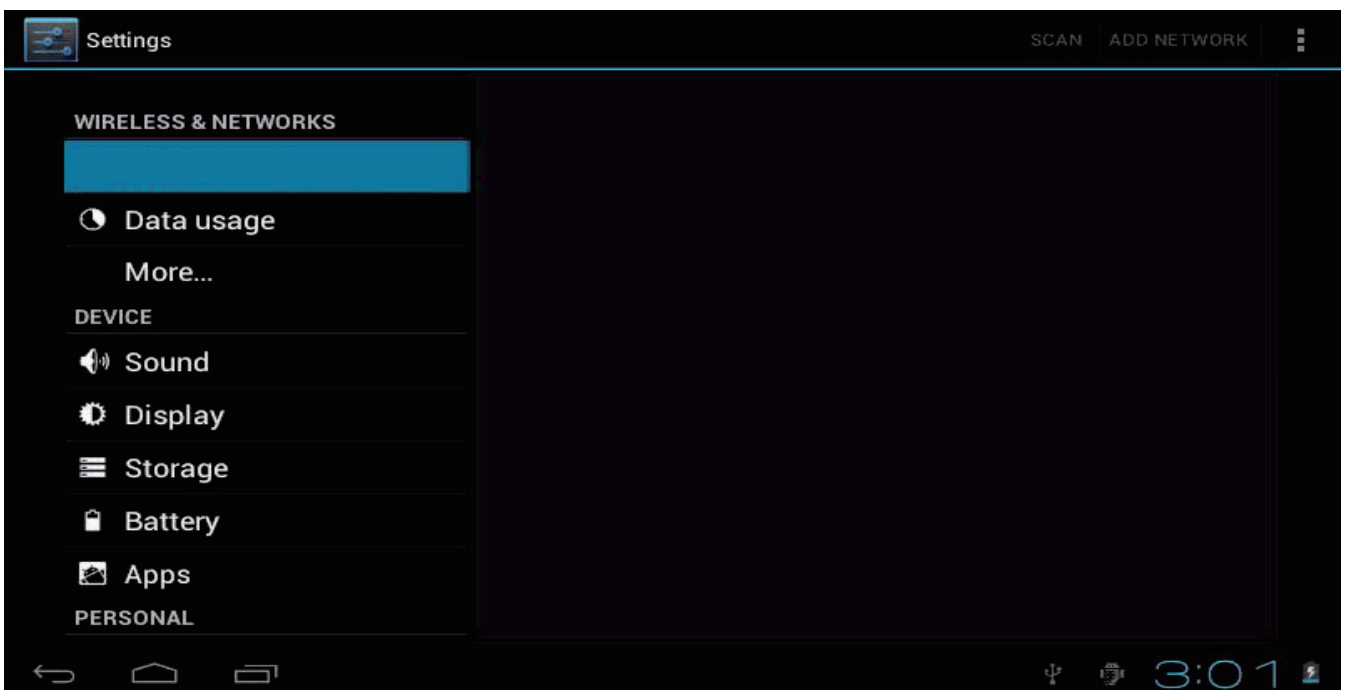




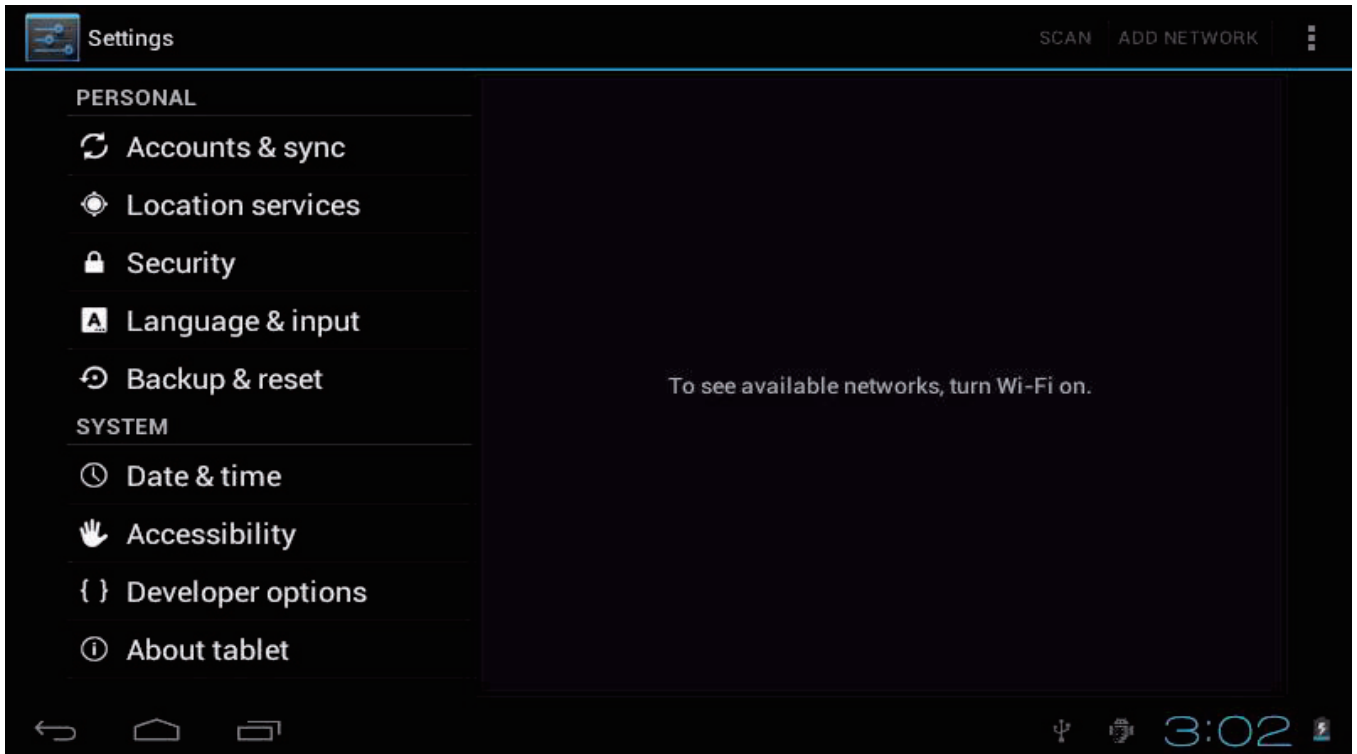

  
4.1 Basic setting: Silent mode, Volume, Audible selection, Screen lock sounds,

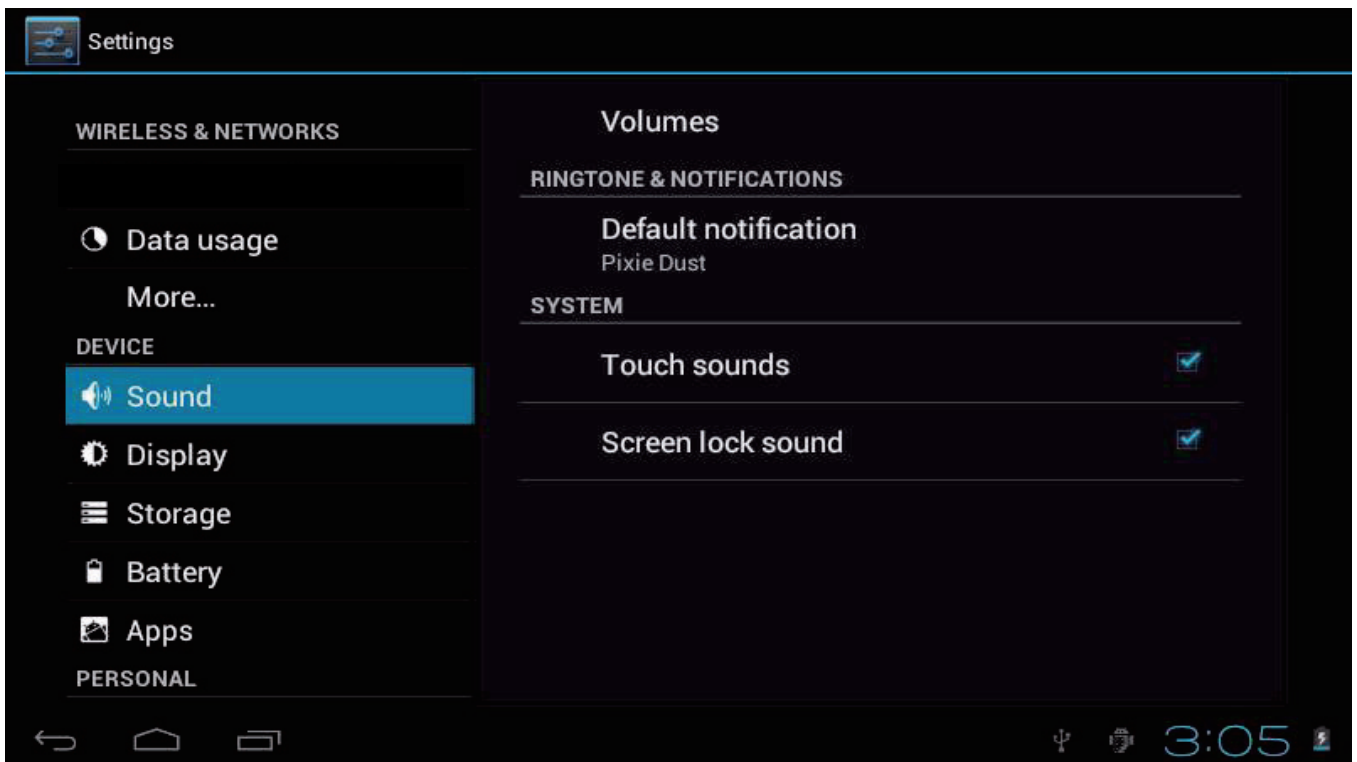

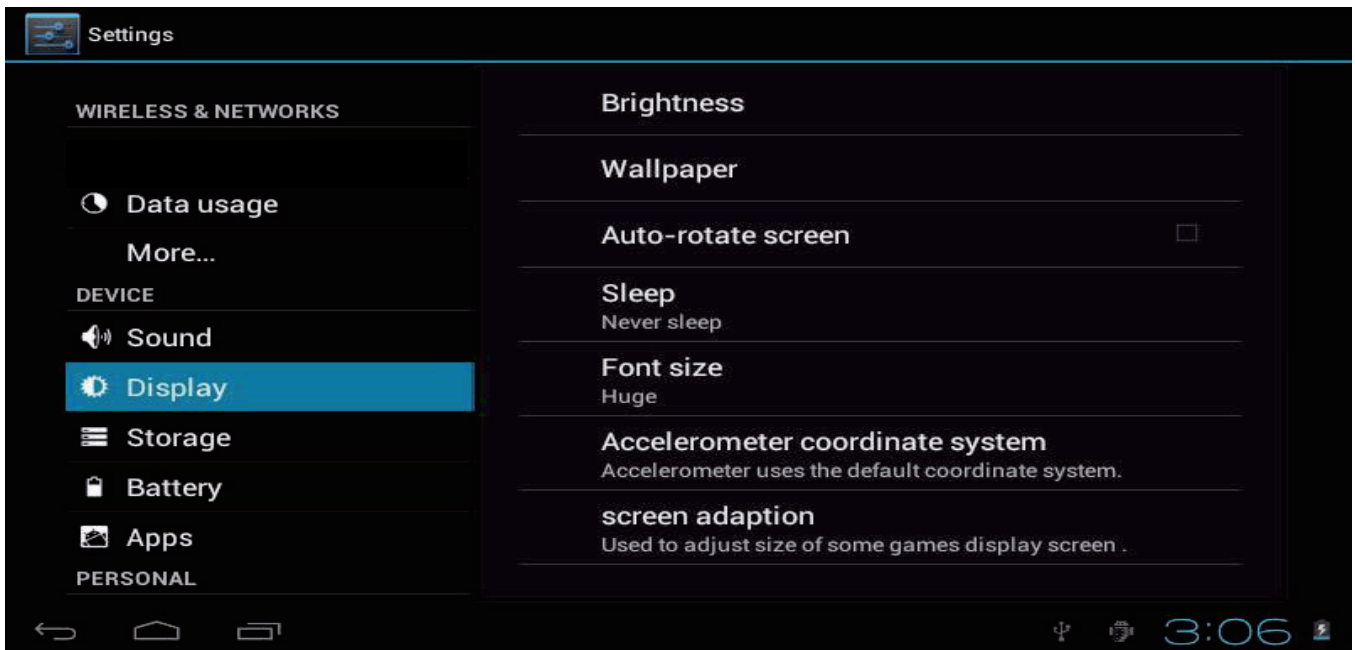

## 4.2 Application
 
### Manage applications

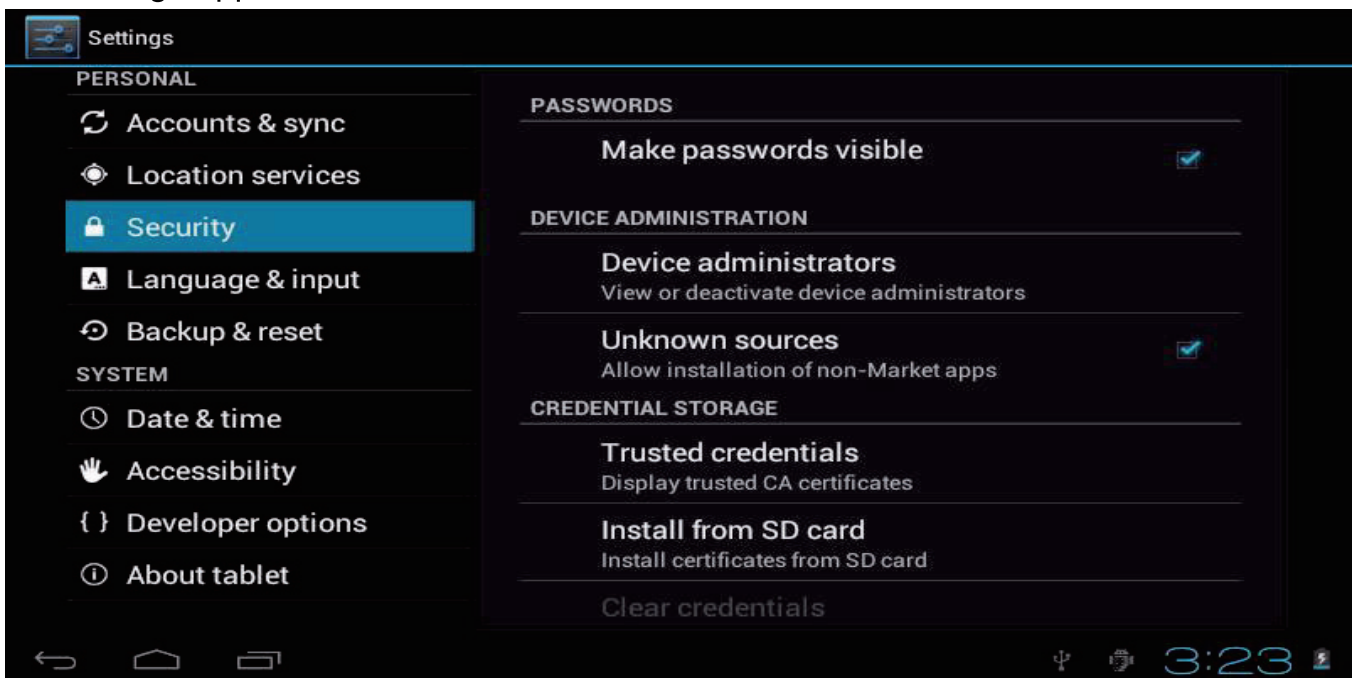


Unknown sources: Click “Unknown Sources”, then click “OK”


Manage application: manager and uninstall Application

【Remark】 : when you Firmware Upgrade, pls close the USB connect

 How to uninstall?


1. enter  “setting”>”Application”>”Manage application” And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface

 3. Click Uninstall, then you can felete the application

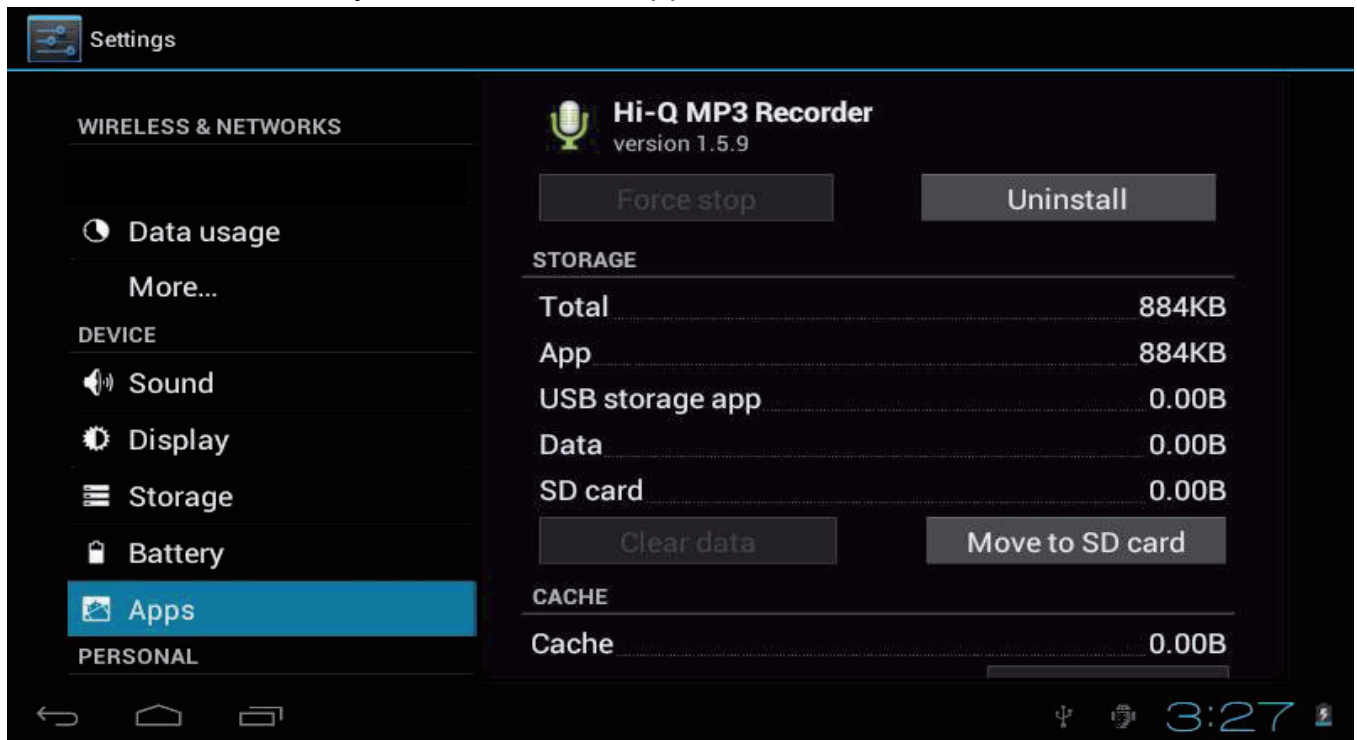


4.3 Privacy

 Factory data reset

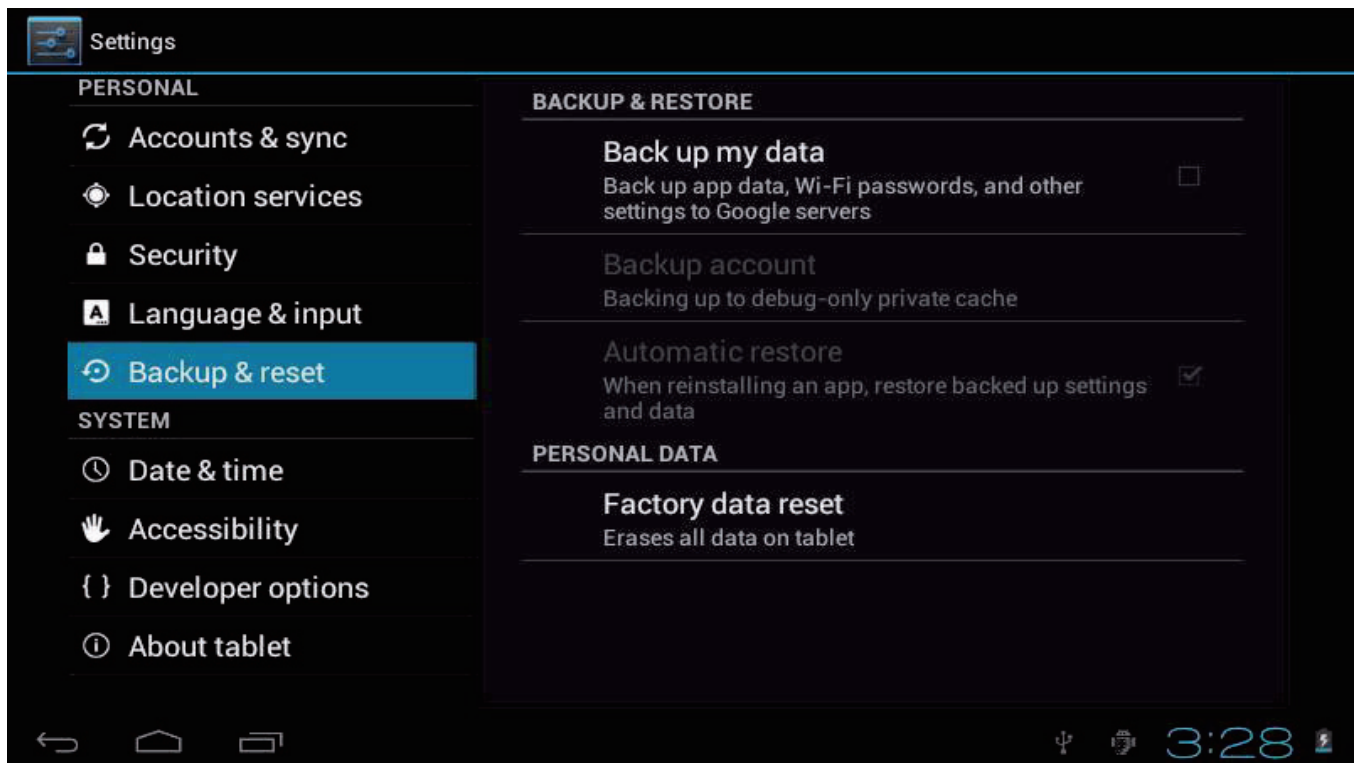

4.4 Storage

 Remove TF card, view of the available storage space

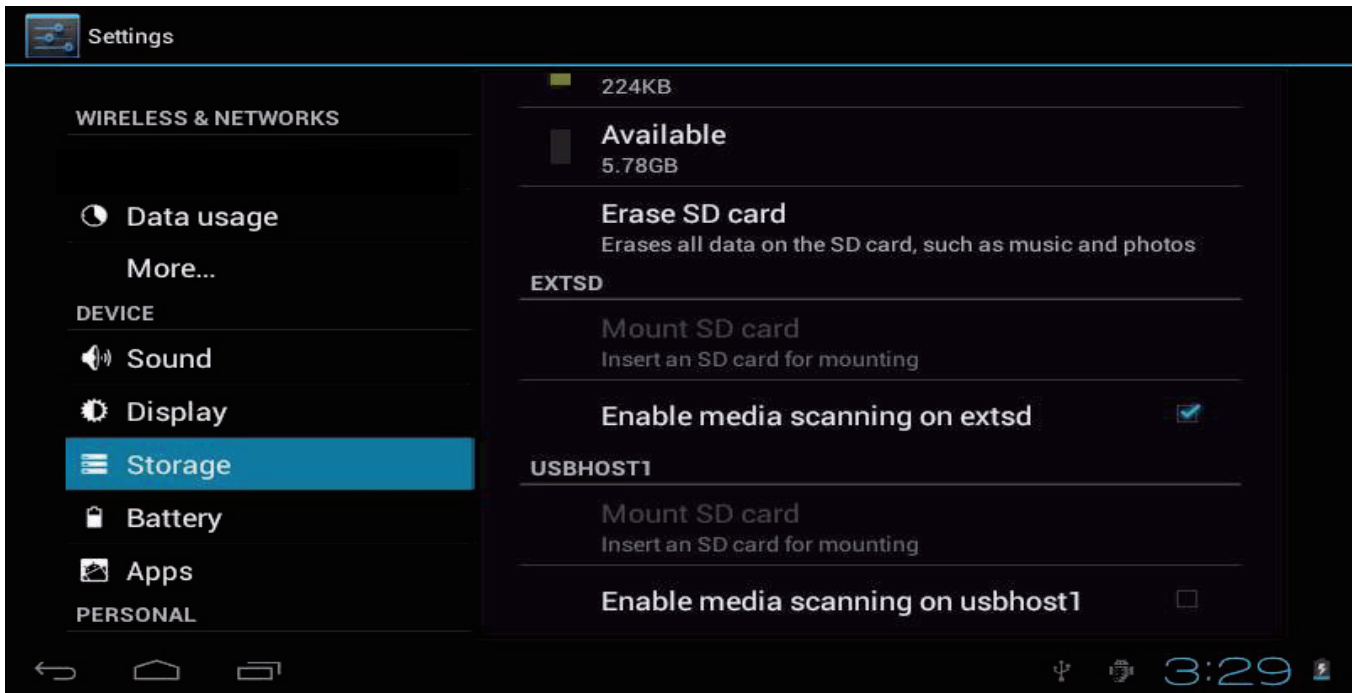

【Remark】 : please touch option "delete SD card", so that can safety to remove SD card

#### 4.5. Language & keyboard

Setting: (Language), text input and automatic error correction options;



Select Language: 54 kind of national languages are available

Remark: Android system can support lots of kind of language,

Android keyboard: Android keyboard setting

Sound on Key-press