



FCC ID: PIN25896369 / IC: 4018A-25896369

ATTACHMENT E.

- User Manual -

HCT CO., LTD.

SAN 136-1, AMI-RI, BUBAL-EUP, ICHEON-SI, KYOUNGKI-DO, 467-701, KOREA
TEL:+82 31 639 8517 FAX:+82 31 639 8525 www.hct.co.kr

Report No. : HCT-RF09-0516

1/1

■ An outline of Transmitter (25896369)

1. How to use 25896369

- 25896369 is Tire Pressure Monitoring Sensor(wireless)
- This unit consist of Transmitter (25896369) and Receiver

2. Introduction of Transmitter (25896369)

- 25896369 is periodically measure and transfer to ECU the pressure and temperature inside of tire.
- It also monitors and transfers the condition of Battery and Sensor.
- Following is the major functionalities.
 - ▶ Measure and transfer the tire pressure
 - ▶ Measure and transfer inside temperature of tire.
 - ▶ Measure and transfer tire rotating condition by acceleration value.
 - ▶ Measure and transfer voltage of mounted battery
 - ▶ Measure and transfer abnormal condition of sensor (pressure and accelerometer)
 - ▶ Decide existence and nonexistence of abnormal pressure change occurs inside of tire.

■ Transmitter (25896369) LF Trigger MANUAL

1. LF Trigger MANUAL

- ⦿ Button 1 : Entering OFF
- ⦿ Button 2 : LF Activation
- ⦿ Button 3 : Modulated/Non Modulated CW in OFF state
- ⦿ Button 4 : –

※Power supply voltage : DC 12V

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

IC Warning

Operation of this device is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.