

 
Switching the call

1. Switching the call between handsfree and handset device

When you receive an incoming call, you have the option of using the handsfree or talking privately by using the handset device.

2. Transferring the handsfree call to your Handset device

1. After pressing the **Accept** button for an incoming call, the following screen will be displayed.

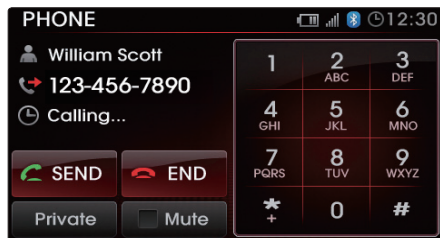

2. Press the **Private** button. The call will be transferred to the handset device.

Note

- Accepting a call with the handset device will automatically connect the call in Private mode.

3. Transferring a call on your Handset device to handsfree

 
1. If an incoming call is accepted with the handset device, the call will be connected with the handset device while the UVO system will display the following screen.
2. Press the **Use handsfree** button to transfer the call to the handsfree.



Phone settings

Setting Phone Volume

1. Press the **PHONE** key.

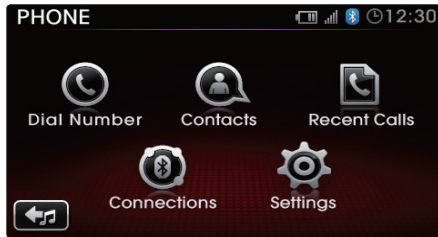

2. Press the **Settings** button.



 
3. Use the **◀**, **▶** buttons to control the volume to the desired level.

Note

- Press the **Default** button to restore the default setting.
- Although the call volume can be changed during a call, the volume will return to its initial level as saved in Setup.
- Call volume can be operated separately from the audio volume, allowing you to change the call volume without changing the audio volume.
- When call volume is changed, ring volume is also changed.

Turn Streaming Audio On and Off

Streaming Audio is a feature which turns On/Off BT Audio Mode. For more information on BT Audio, refer to the 'BT AUDIO MODE' section in the Audio Features chapter of the user's manual.

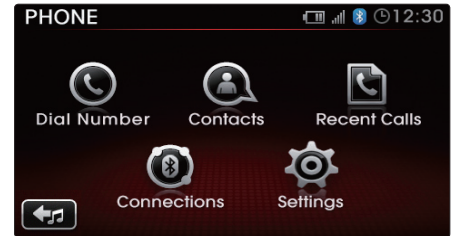

1. While in Phone Settings, press the **Settings** button.



 
2. Press the **On** or **Off** button next to the Streaming Audio menu.

Note

- Press the **Default** button to restore the default setting.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

Contacts Sync

Contacts Sync is a feature which automatically downloads contacts when pairing a new phone.

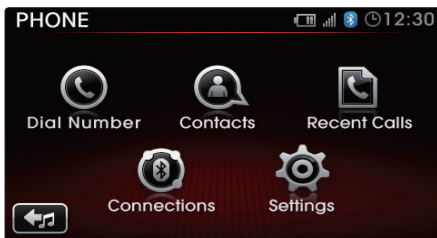

1. While in Phone Settings, press the **Settings** button.



 
2. Press the **On** or **Off** button next to the Contacts Sync menu.

Note

- Press the **Default** button to restore the default setting.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

SMS

This feature allows you turn the SMS feature on or off within the system. When turned on, the SMS feature will download unread incoming messages to provide a read back of new messages.

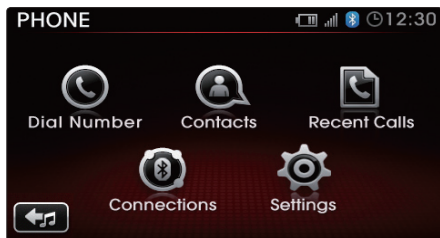

1. While in Phone Settings, press the **Settings** button.



 
2. Press the **On** or **Off** button next to the SMS menu.

Note


- Press the **Default** button to restore the default setting.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

Changing passkey


The passkey is the authentication code needed whenever you pair a new handset device.

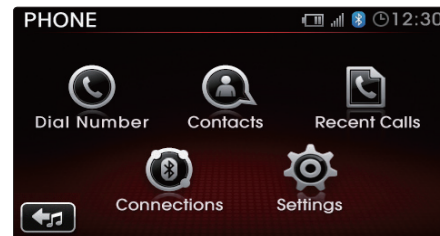

 1. While in Phone Settings, press the **Settings** button.

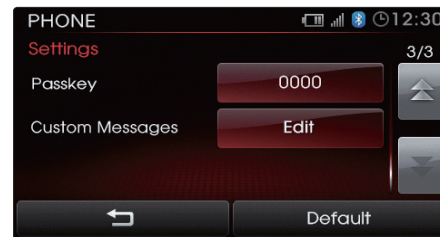

 2. Press the **0000** button next to the passkey menu.

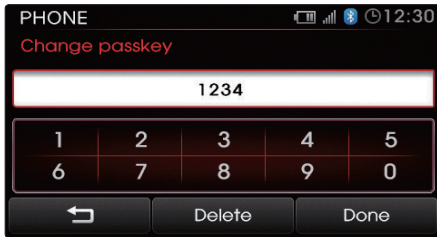

3. Input the new passkey and press the **Done** button to save.

Note

- The default passkey is “0000” .
- The passkey can be set only when the vehicle is parked.

! Caution

Mobile Phone Compatibility

Depending on the manufacturer, product and product specification, some mobile phones functions may not be supported or may not operate to specification. Carefully read the cautions listed below.

- The occurrence of problems upon using mobile phones may be caused by the mobile phone and not by the Audio unit.
- Even mobile phones which support *Bluetooth*[®] wireless technology function may not operate properly if the mobile phone connection has been locked. Release the connection lock and try connecting the mobile phone with the system again.
- The Mobile phone battery icon and signal strength icon may not be properly displayed depending on the type of mobile phone.
- Call waiting is supported only when connected mobile phones support this feature. The call waiting pop-up may not be displayed in some mobile phones.
- Audio streaming mode will operate only when a *Bluetooth*[®] wireless technology enabled phone has been connected. Connecting or disconnecting a *Bluetooth*[®] wireless technology enabled phone while audio streaming is operating will stop music play.
- The audio streaming function may not be supported in some mobile phones.
- The phonebook may take a prolonged period of time to download or may not operate in some mobile phones. The quality of *Bluetooth*[®] wireless technology handsfree calls may differ depending on the mobile phone.
- The SMS function may not be supported in some handset devices.

PART 4 VOICE COMMANDS

Conditions for voice command system
..... 92

Operating Voice Command

- Using Voice Command 93
- Voice Command Help 93
- Turning Command Feedback On and Off 94
- Adjusting Voice Command Volume 95

Speaker Adaptation

- Creating a Voice Profile 96
- Selecting a Previous Voice Profile 97
- Deleting a Voice Profile 98

Voice Command List

- Command List - General Commands 99
- Command List - Audio Commands 100
 - 1. FM/AM Radio 100
 - 2. SIRIUS 100
 - 3. MEDIA 101
 - 4. JUKEBOX 102
- Command List - Phone Commands 103

Conditions for voice command system

The voice control system includes a special handsfree microphone mounted above the driver's seat of your car which blocks out (filters out) ambient noise and allows you to operate system features through voice commands while maintaining proper posture. There are still a few points you should observe to make sure that you are properly understood.

- Keep doors, windows and the sunroof closed to avoid noise interference from outside the car. Voice command performance can be improved if the cabin environment is quiet.
- Press the voice recognition button and say the voice command after the sound of the beep.
- Speak continuously and at normal volume, avoiding unnatural emphasis and pauses between words
- Avoid causing background noise in the car




while you are speaking, and ask your passengers not to speak while you are giving voice commands.

- As the handsfree microphone is positioned to pick up the driver's voice, commands by other occupants may be understood with less accuracy, and passengers are advised to use the handset when making calls.



Operating Voice Command

Using Voice Command



1. Press the  key on the steering wheel controller. A  display will be shown at the top of the screen followed by a “Please say a command” system comment.
2. Once the  Listening... icon becomes displayed, say the desired voice command (ex: “What’s Playing”)

Note

- Press the  key shortly to interrupt the system command feedback and enter a voice command.
- To terminate the voice control system, either say “Exit” or press the  key for over 0.8 second.
- The system voice comment “Please say a command” will not be stated when the Command Feedback option is turned off.
- For more information on the various voice commands supported by the system, refer to the “Command Help” or the “Voice Command List” section.

Voice Command Help

 
The Voice Command Help section provides you with lists of commands that can be used in each mode, adding ease and convenience using voice commands.



1. Press the  button.



2. Press the  button.

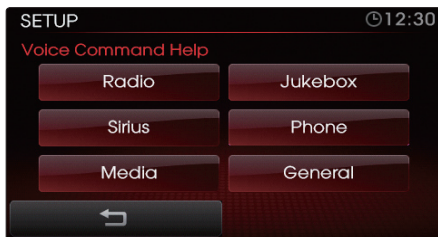


3. Press the mode to view a list of related Voice Commands.

Note

- The “help” command can be used even while voice recognition dialogue is operating. At such time, help instructions appropriate to the state of the dialogue will be provided.

 Turning Command Feedback On and Off

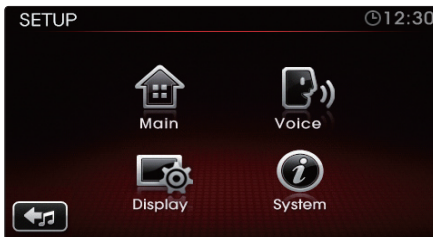

1. Press the **Voice** button.

 


2. Press the **On** or **Off** button next to the Command Feedback menu.

Note

- Press the **Default** button to restore the default setting.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

Adjusting Voice Command Volume

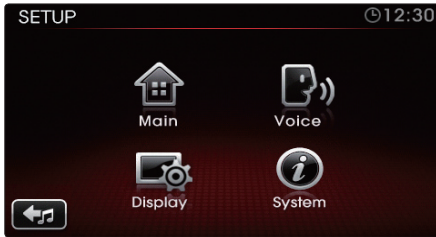

1. Press the **Voice** button.



2. Use the **◀**, **▶** buttons to adjust the voice command volume.
3. Press the **↶** button to return to the Setup screen.

Note

 
- Press the **Default** button to restore the default setting.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

Speaker Adaptation


Creating a Voice Profile

The Voice Command feature in the UVO system allows you to create speaker profiles in order to maximize recognition accuracy.


You will be asked to read a number of sentences to the system so that it can adapt to your voice. Creating a profile takes approximately several minutes and must be done while the vehicle is parked. You can quit/resume a reading session, but the system cannot be interrupted while it is creating the profile.

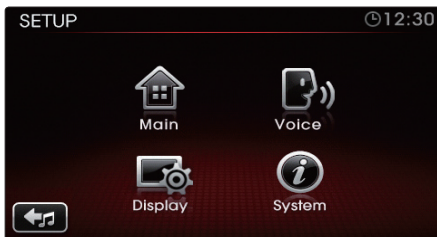

 1. Press the **Voice** button.

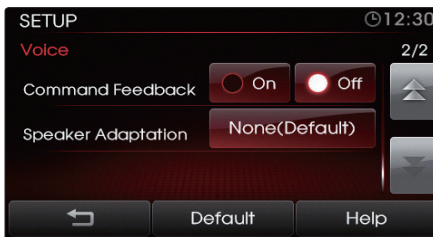

 2. Press the **Default** button next to the Speaker Adaptation menu.

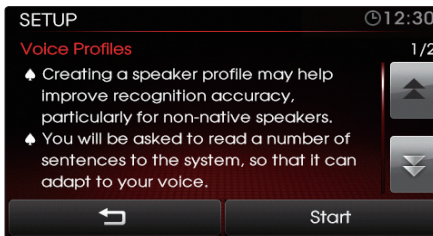

3. After reading the instructions, press the **Start** button.




4. Input the name of the profile you wish to use and press the **Done** button.



5. Follow the training set as shown on the screen.

 


6. As each of the 10 commands become displayed on the screen, press the  key then read the displayed sentence in your natural tone.

Note

- There are 10 commands in the training set. For each one, press the speak button and read the command on the screen.


Selecting a Previous Voice Profile

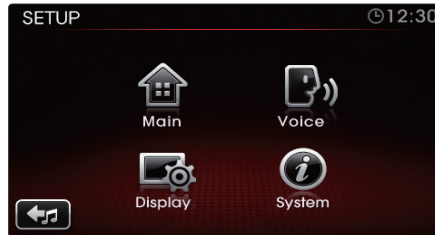

1. Press the **Voice** button.



 2. Press the profile name button next to the Speaker Adaptation menu.

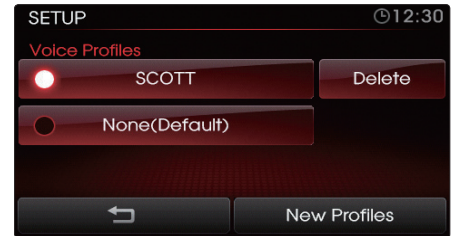


3. Press the name of the profile.

Note

- Press the **None(Default)** button to restore the default profile.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

 
Deleting a Voice Profile

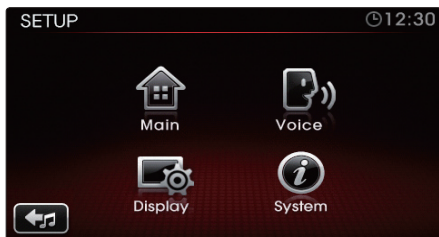


1. Press the **Voice** button.



 2. Press the profile name button next to the Speaker Adaptation menu.

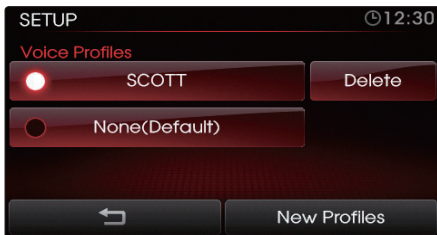

 3. Press the **Delete** button next to the name of the profile.

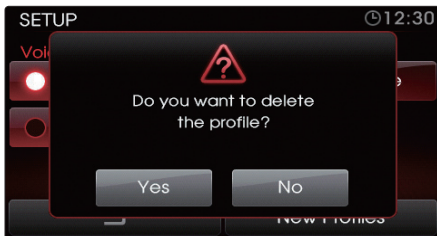

4. Press the **Yes** button.

Note

- Press the **None(Default)** button to restore the default profile.
- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

Voice Command List

The voice commands for this system are divided into Global commands and Local commands.

- Global commands (●) : Commands that operate in all modes.
- Local commands (○) : Commands that operate only in corresponding modes or when screens of corresponding modes are displayed.

Command List - General Commands

Command		Operation
●	Exit / Quit / Cancel	Terminate the voice control system
○	Go back	Returns to the previous step.
●	Repeat	Repeats the system prompt.
●	Help	Provides instruction on the voice command necessary for the current situation.
●	Voice command feedback {on, off}	Turns command feedback on/off.

Command List - Audio Commands

1. FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recent band
●	Radio {FM, AM}	Plays the most recent frequency for the corresponding Band.
●	Radio {87.5 - 107.9} FM	Plays the selected FM band frequency.
●	Radio {530 - 1710} AM	Plays the selected AM band frequency.
●	Radio FM preset {1 - 12}	Plays the selected FM preset.
●	Radio AM preset {1 - 6}	Plays the selected AM preset.
○	What's playing?	Reads back Radio station information.

2. SIRIUS

Command		Operation
●	Sirius	Plays the most recent SIRIUS channel.
●	Sirius preset {1 - 18}	Plays the selected Sirius preset.
●	Sirius channel {0 - 223}	Plays the selected Sirius channel.
○	What's playing?	Reads back SIRIUS channel information.

3. MEDIA

	Command	Operation
●	Play {zune, iPod, USB, CD}	Plays the selected media mode.
●	Play {Bluetooth® audio, AUX}	Plays the selected media mode.
●	Play artist {artist name}	Plays songs of the selected artist.
●	Play album {album name}	Plays songs of the selected album.
●	Play track {track name}	Plays the selected track.
●	Play playlist {playlist name}	Plays songs of the selected playlist.
●	Play genre {genre}	Plays songs of the selected genre
●	Play audiobook {title}	(iPod only) Plays the selected audiobook.
●	Play podcast {podcast}	(iPod only) Plays the selected iPod podcast.
●	Play composer {composer}	Plays songs for the selected composer.
○	What's playing?	Reads back the current song information.
○	Repeat {on, off}	Turns the repeat feature on or off.
○	Shuffle {on, off}	Turns the shuffle feature on or off.
●	Play {CD, zune, iPod, USB} artist {name}	Plays songs for the selected artist in the selected media mode.
●	Play {CD, zune, iPod, USB} album {name}	Plays songs for the selected album in the selected media mode.
●	Play {CD, zune, iPod, USB} track {name}	Plays the selected track in the selected media mode.
●	Play {CD, zune, iPod, USB} playlist {name}	Plays the selected playlist in the selected media mode.
●	Play {CD, zune, iPod, USB} genre {genre}	Plays songs for the selected genre in the selected media mode.
●	Play {CD, zune, iPod, USB} composer {name}	Plays songs for the selected composer in the selected media mode.
●	Play iPod audiobook {title}	(iPod only) Plays the selected iPod audiobook.
●	Play iPod podcast {podcast}	(iPod only) Plays the selected iPod podcast.

4. JUKEBOX

Command		Operation
●	Play JUKEBOX	Plays the JUKEBOX mode.
●	Play JUKEBOX Favorites	Plays songs of JUKEBOX Favorites
●	Play artist {artist name}	Plays songs of the selected artist
●	Play album {album name}	Plays songs of the selected album.
●	Play track {track name}	Plays the selected track.
●	Play playlist {playlist name}	Plays songs of the selected playlist.
●	Play genre {genre}	Plays songs of the selected genre
●	Play composer {composer}	Plays songs of the selected composer.
○	What's playing?	Reads back the current song information.
○	Add to favorites	Adds the current song to favorites.
○	Remove from favorites	Removes the current song from favorites.
○	Repeat {on, off}	Turns the repeat feature on or off.
○	Shuffle {on, off}	Turns the shuffle feature on or off.
●	Play JUKEBOX artist {artist name}	Plays songs of the selected JUKEBOX artist.
●	Play JUKEBOX album {album name}	Plays songs of the selected JUKEBOX album.
●	Play JUKEBOX track {track name}	Plays the selected JUKEBOX track.
●	Play JUKEBOX playlist {name}	Plays the selected JUKEBOX playlist.
●	Play JUKEBOX genre {genre}	Plays songs of the selected JUKEBOX genre.
●	Play JUKEBOX composer {name}	Plays songs of the selected JUKEBOX composer.

Command List - Phone Commands

Command		Operation
●	Call {name}	Calls the desired name.
●	Dial {number}	Dials the desired number.
●	Call {name} at home	Calls the desired person at the home number.
●	Call {name} at office	Calls the desired person at the office number.
●	Call {name} on mobile	Calls the desired person on the mobile number.
●	Dial by number	Starts dial by number operation.
●	Call a contact	Starts call by name operation.
●	Phone	Turns on Phone mode screen.
●	Dial international	Starts international call operation.
●	Phone connections	Turns on Phone connections screen.
●	Phone settings	Turns on Phone settings screen.
●	SMS	Reads back new SMS message for <i>Bluetooth</i> [®] wireless technology SMS capable phones.
●	Read SMS	Reads back new SMS message for <i>Bluetooth</i> [®] wireless technology SMS capable phones.
●	Recent calls	Turns on Recent Calls list screen.

 
PART 5 REAR VIEW CAMERA

About Rear View Camera..... 106

About Rear View Camera

- The UVO system is connected with a rear view camera.
- The Rear View Camera System uses an exterior camera integrated to the rear of the vehicle that sends video feedback to the UVO system.
- Regardless of the mode you are in, placing the transmission in “R” will automatically display the rear view camera screen.

1. Place the transmission in Reverse “ R ”.

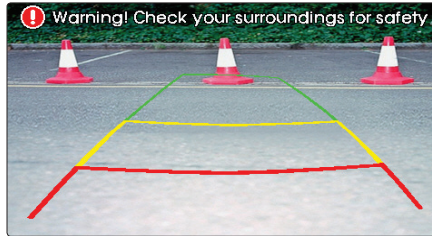

2. The rear view camera will activate.

Warning

Check your surroundings for safety.

- The rear view camera is equipped with an optical lens necessary to acquire a wider field of vision and may result in a display which differs from the actual distance.
Always check the rear and left/right directions when driving in reverse.

PART 6 TROUBLESHOOTING GUIDE

Before thinking the product has malfunctioned	108
Troubleshooting	109

Troubleshooting guide

Before thinking the product has malfunctioned

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your point of purchase or the nearest service center.

Problem	Function
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel deficiency or lighting may occur within 0.01% of total pixels.
The sound or image is not working	<ul style="list-style-type: none"> • Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The sound is not working	<ul style="list-style-type: none"> • Has the volume been set to a low level? • Has the volume been set on mute?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none"> • The display looking somewhat darker after prolonged periods of use is a normal phenomenon with LCD panels. It is not a malfunction. • If the screen is very dark, contact your point of purchase or the nearest service center.
Sound is working from only one speaker	<ul style="list-style-type: none"> • Is the position of FAL/BAL sound controls or volume adjusted to only one side?
Sound does not work in AUX mode	Is the audio connector jacks fully inserted into the AUX terminal?

Troubleshooting

Problem	Possible Cause	Solution
The power does not turn on.	The fuse is disconnected.	Replace with a suitable fuse. If the fuse is disconnected again, please contact your point of purchase or service center.
	Device is not properly connected.	Check to see that the device has been properly connected.
The sound does not work.	<ul style="list-style-type: none"> • The volume level is set the lowest level. • The connector is not properly connected. • The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode. 	<ul style="list-style-type: none"> • Adjust the volume level. • Check the connection state. • The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.
The sound quality is low.	<ul style="list-style-type: none"> • The DISC is dirty or scratched. • Vibration is occurring from the position in which the conversion switch has been installed. 	<ul style="list-style-type: none"> • Wipe off water or dirt from the DISC. Do not use a disc which has been scratched. • The sound may be short-circuited and the image distorted if the device begins to vibrate. The device will return to normal operation once the vibration has stopped.

Problem	Possible Cause	Solution
The USB does not work.	<ul style="list-style-type: none"> • USB memory is damaged. • USB memory has been contaminated. • A separately purchased USB HUB is being used. • A USB extension cable is being used. • A USB which is not a Metal Cover Type USB Memory is being used. • A HDD type, CF, SD Memory is being used. • There are no music files which can be played. 	<ul style="list-style-type: none"> • Please use after formatting the USB into FAT 12/16/32 format. • Remove any foreign substances on the contact surface of the USB memory and multimedia terminal. • Directly connect the USB memory with the multimedia terminal on the vehicle. • Directly connect the USB memory with the multimedia terminal on the vehicle. • Use a standard USB Memory. • Use a standard USB Memory. • Only MP3,WMA file formats are supported. Please use only the supported music file formats.
The iPod is not recognized even though it has been connected.	<ul style="list-style-type: none"> • There are no titles which can be played. • The iPod firmware version has not been properly updated. • The iPod device does not recognize downloads. 	<ul style="list-style-type: none"> • Use iTunes to download and save MP3 files into the iPod. • Use iTunes to update the firmware version and reconnect the iPod with the device. • Reset the iPod and reconnect with the device.

PART 7 INDEX

INDEX..... 112

INDEX

A

About iPod	52
About Rear View Camera	106
About zune	56
Adding Favorites	64
Adjusting Voice Command Volume	95
Answering an incoming call	78
AUDIO CD MODE	36
AUDIO CD Mode Screen and Features	38
Automatic Brightness Control	20
AUX MODE	59
AUX Mode Screen	59

B

Basic Features	14
Before thinking the product has malfunctioned	108
BT AUDIO MODE	60
BT Mode Screen and Features	60
by Artists, Albums, Genres, Songs	
Composers	42, 64
By Artists, Albums, Genres, Songs, Podcasts,	
Composers, Audiobooks	54

By contact list	79
By dialing a number	79
by Folders, Artists, Albums, Genres Songs,	
Composers	49
By name	82
By number	83
By recent calls	80
By Songs, Genres, Albums, Artists,	
Playlists	58

C

Call waiting	78
Cautions upon handling Audio CDs	36
Cautions upon handling MP3 CD	40
Cautions upon handling USB MP3	45
Changing passkey	89
Checking an SMS message	85
Checking missed calls	84
Checking System Information	66
Command List - Audio Commands	100
Command List - General Commands	99
Command List - Phone Commands	103
Common Features	34
Conditions for voice command system	92
Connecting a handset device	74

Connecting an AUX media device	59
Connecting your iPod device	52
Connecting your USB device	47
Connecting your zune device	56
Contact list	81
Contacts Sync	88
Control Panel	10
Controls and Features	10
Copying songs into JUKEBOX	43, 50
Copying songs from list	44, 51
Copying the current song	43, 50
Creating a Voice Profile	96

D

Deleting a paired handset device	73
Deleting a Voice Profile	98
Deleting all files	67
Deleting JUKEBOX	66
Display Settings	20
Downloading contact list (from mobile phone)	81, 85
Downloading SMS messages (from mobile phone)	85

E			
Editing Custom Messages	85	JUKEBOX Mode Screen and Features	62
Ejecting a Disc	38	Jump	35
Explore CD	43	L	
Explore USB	49	Listening to an Audio CD	39
F		Listening to an MP3 CD	41
FADER/BALANCE	17	Listening to AUX media	59
FCC Information	7	Listening to JUKEBOX	63
first time	72	Listening to music from your <i>Bluetooth</i> [®]	
FM/AM MODE	26	wireless technology enabled device	61
FM/AM Mode Screens and Features	26	Listening to the FM/AM radio	27
FM/AM Radio	100	Listening to the SIRIUS radio	30
I		Listening to USB music	48
INDEX	112	Listening to your iPod	53
Initializing the system	16	Listening to your zune	57
Inserting a Disc	38	M	
Inserting/Ejecting a Disc	38	Manual Brightness Control	20
iPod MODE	52	MEDIA	101
iPod Mode Screen and Features	53	MEDIA MODE	34
J		Memory Management	66
JUKEBOX	102	MP3 CD MODE	40
JUKEBOX MODE	62	MP3 CD Mode Screen and Features	41
		O	
		Operating Voice Command	93
		P	
		Pairing a <i>Bluetooth</i> [®] wireless technology	
		enabled device for the first time	72
		Pairing your handset device to the handsfree	
		system	72
		Phone Mode Screens and Features	76
		Phone settings	87
		Placing a call	79
		Play/Pause	34
		Playing Favorites	65
		Power Bass (Optional)	19
		Precautions upon handling USB	46
		Preset Scan	29
		R	
		Rejecting an incoming call	78
		Resetting and Initializing UVO system	15
		Resetting the system	15
		REW/FF	34
		REW/FF a song	61

S			
Safety Precautions	8	Selecting through Track Up/Down	39
Safety Symbols	7	Selecting USB music	48
Scanning FM/AM broadcast frequencies	29	Selecting zune music	57
Searching your contacts	82	Sending an SMS message (Custom Messages)	85
Select Display Language	15	Setting Brightness	20
Selecting a broadcast frequency	27	Setting Phone Volume	87
Selecting a CD track	39	Setting Priority	74
Selecting a JUKEBOX song	63	SIRIUS	100
Selecting a Previous Voice Profile	97	SIRIUS MODE	30
Selecting a SIRIUS channel	30	SIRIUS Mode Screen and Features	30
Selecting a song	61	Smart driving practices	71
Selecting an MP3 CD song	42	SMS	85, 59
Selecting from MP3 list	42	Sound and Display Settings	17
Selecting from the playlist	49, 54, 57, 63	Sound Settings	17
Selecting iPod music	54	Speaker Adaptation	96
Selecting through channel search	31	Speed Dependent Volume Control	18
Selecting through manual search	28, 31, 39, 42, 48, 54, 57, 63	Steering Wheel	12
Selecting through preset	28, 31	Storing preset	33
Selecting through SEEK	27, 30	Storing presets	28
Selecting through SIRIUS category list	32	Switching the call between handsfree and handset device	86
Selecting through song Up/Down	42, 48, 54, 57, 63	System Power	14
		T	
		TONE	18
		Touch Screen Beep	18
		Trademark	52, 56
		Transferring a call on your Handset device to handsfree	86
		Transferring the handsfree call to your Handset device	86
		Troubleshooting	109
		Turn Streaming Audio On and Off	87
		Turn Text Scroll On and Off	22, 93
		Turning Command Feedback On and Off	94
		Turning Display On and Off	21
		Turning System Power Off	14
		Turning System Power On	14
		U	
		USB MODE	45
		USB Mode Screen and Features	47
		Using Repeat	35
		Using Shuffle	35
		Using Skip	32
		Using the phone features	76
		Using your <i>Bluetooth</i> [®] wireless technology Handsfree system	70

V

- Viewing SIRIUS channel information 33
- Viewing song information
.....43, 50, 55, 58
- Voice Command Help 93
- Voice Command List 99

W

- When a mobile phone is connected 76
- When making a call 76
- When on a call 77
- When receiving an incoming call 77

Z

- zune MODE 56
- zune Mode Screen and Features 56

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body.

This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions : (1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et

3RMS7B0001

3REND03

