 


## Multimedia System MODEL : AC111C1EE, AC210C1EE

AUDIO SYSTEM .....	4-2	USB MODE .....	4-58
HOW VEHICLE AUDIO WORKS .....	4-2	iPod® MODE .....	4-61
CARING FOR DISC .....	4-4	AUX MODE .....	4-64
SYSTEM CONTROLLERS AND FUNCTIONS		MY MUSIC MODE .....	4-65
- 3.8 INCH MONO TFT .....	4-16	Bluetooth® Wireless Technology AUDIO MODE .....	4-68
Audio Head Unit (For RDS model) .....	4-16	USING Bluetooth® Wireless Technology .....	4-75
Audio Head Unit (For Bluetooth equipped model) .....	4-18	USING Bluetooth® Wireless Technology .....	4-83
Audio Head Unit .....	4-20	VOICE RECOGNITION .....	4-87
SETUP(for RDS model) .....	4-21	ENDING VOICE RECOGNITION .....	4-88
System Settings .....	4-23	SETUP (FOR RDS, BLUETOOTH® WIRELESS	
SETUP .....	4-24	TECHNOLOGY EQUIPPED MODEL) .....	4-95
RADIO (FOR RDS MODEL) :FM, AM .....	4-31	SETUP (for Bluetooth® Wireless	
RADIO : FM, AM .....	4-33	Technology equipped model) .....	4-102
Making a call using the Steering wheel remote		REAR VIEW CAMERA (if equipped) .....	4-108
controller .....	4-38		
SYSTEM CONTROLLERS AND FUNCTIONS			
- 4.3 INCH COLOR TFT LCD .....	4-42		
Audio Head Unit (For RDS model) .....	4-42		
Audio Head Unit .....	4-43		
Steering-wheel mounted controls .....	4-44		
RADIO MODE (FOR RDS MODEL) .....	4-46		
RADIO MODE .....	4-49		
MEDIA MODE .....	4-51		
AUDIO CD MODE .....	4-52		
MP3 CD MODE .....	4-55		

## Multimedia System

 
### How vehicle audio works

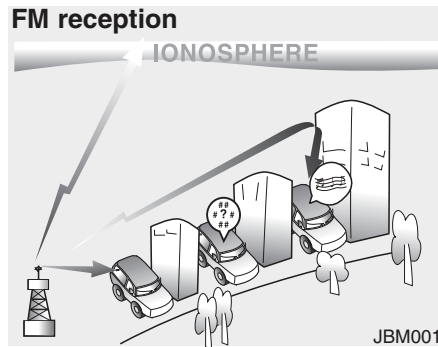


AM and FM radio signals are broadcast from transmitter towers located around your city. They are intercepted by the radio antenna on your vehicle. This signal is then processed by the radio and sent to your vehicle speakers.

When a strong radio signal has reached your vehicle, the precise engineering of your audio system ensures the best possible quality reproduction. However, in some cases the signal coming to your vehicle may not be strong and clear.


This can be due to factors, such as the distance from the radio station, closeness of other strong radio stations or the presence of buildings, bridges or other large obstructions in the area.

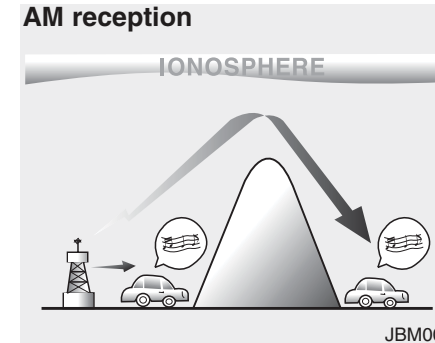

 
AM broadcasts can be received at greater distances than FM broadcasts. This is because AM radio waves are transmitted at low frequencies. These long distance, low frequency radio waves can follow the curvature of the earth rather than travelling straight. In addition, they curve around obstructions resulting in better signal coverage.

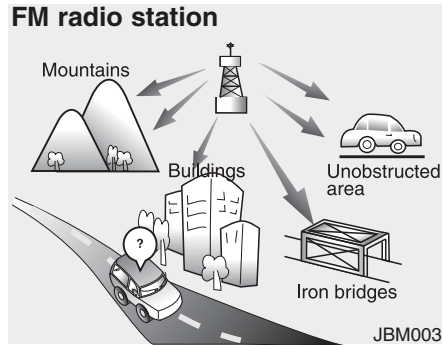

FM broadcasts are transmitted at high frequencies and do not bend to follow the earth's surface. Because of this, FM broadcasts generally begin to fade within short distances from the station. Also, FM signals are easily affected by buildings, mountains, and obstructions. This can lead to undesirable or unpleasant listening conditions which might lead you to believe a problem exists with your radio. The following conditions are normal and do not indicate radio trouble:

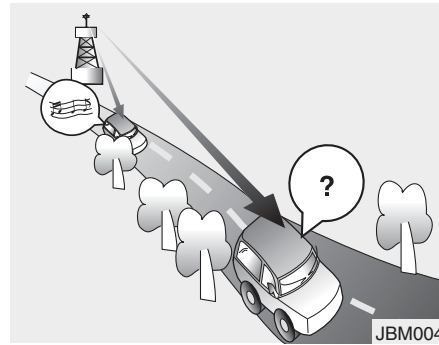 

- **Fading** - As your vehicle moves away from the radio station, the signal will weaken and sound will begin to fade. When this occurs, we suggest that you select another stronger station.
- **Flutter/Static** - Weak FM signals or large obstructions between the transmitter and your radio can disturb the signal causing static or fluttering noises to occur. Reducing the treble level may lessen this effect until the disturbance clears.

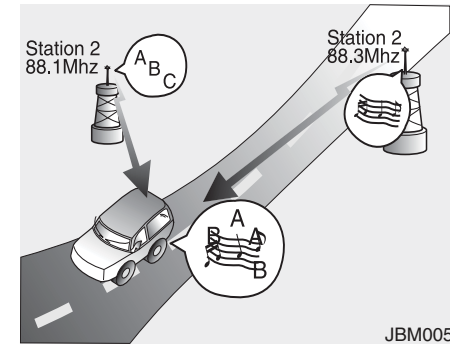 

- **Station Swapping** - As an FM signal weakens, another more powerful signal near the same frequency may begin to play. This is because your radio is designed to lock onto the clearest signal. If this occurs, select another station with a stronger signal.
- **Multi-Path Cancellation** - Radio signals being received from several directions can cause distortion or fluttering. This can be caused by a direct and reflected signal from the same station, or by signals from two stations with close frequencies. If this occurs, select another station until the condition has passed.

## Multimedia System

### Caring for disc

- If the temperature inside the car is too high, open the car windows to ventilate before using the system.
- It is illegal to copy and use MP3/WMA files without permission. Use CDs that are created only by lawful means.
- Do not apply volatile agents, such as benzene and thinner, normal cleaners and magnetic sprays made for analogue disc onto CDs.
- To prevent the disc surface from getting damaged, hold CDs by the edges or the center hole only.
- Clean the disc surface with a piece of soft cloth before playback (wipe it from the center to the outside edge).
- Do not damage the disc surface or attach pieces of sticky tape or paper.
- Make certain only CDs are inserted into the CD player (Do not insert more than one CD at a time).
- Keep CDs in their cases after use to protect them from scratches or dirt.

- Depending on the type of CD-R/CD-RW CDs, certain CDs may not operate normally according to the manufacturing companies. In such circumstances, continued use may cause malfunctions to your audio system.

### \* NOTICE - Playing an Incompatible Copy Protected Audio CD

**Some copy protected CDs, which do not comply with international audio CD standards (Red Book), may not play on your car audio. Please note that inability to properly play a copy protected CD may indicate that the CD is defective, not the CD player.**

### MP3 File Information

#### • Supported Audio Formats

File System	ISO 9660 Level 1
	ISO 9660 Level 2
	Romeo / Juliet (128 characters)
Audio Compression	MPEG1 Audio Layer3
	MPEG2 Audio Layer3
	MPEG2.5 Audio Layer3
	Windows Media Audio Ver 7.X & 8.X

\*File formats that do not comply with the above formats may not be properly recognized or play without properly displaying file names or other information.

## Multimedia System

### SYSTEM CONTROLLERS AND FUNCTIONS

\* Display and settings may differ depending on the selected audio

#### Audio Head Unit (For RDS model)



Name	Description
①	Ejects the disc.
② <b>RADIO</b>	<ul style="list-style-type: none"> <li>• Convert to Radio mode.</li> <li>• Each time the key is pressed, the mode is changed in order of FM1, FM2, FMA, AM, AMA</li> </ul>

Name	Description
③ <b>MEDIA</b>	<ul style="list-style-type: none"> <li>• Each time the key is pressed, the mode is changed in order of CD, USB, iPod®, AUX, My Music, BT Audio modes.</li> </ul>
④ <b>PHONE</b>	<p>(for <i>Bluetooth</i>® Wireless Technology equipped model)</p> <ul style="list-style-type: none"> <li>• Converts to Phone mode</li> <li>* When a phone is not connected, the connection screen is displayed.</li> </ul>
⑤  POWER/VOL knob	<ul style="list-style-type: none"> <li>•  Power : Turns power On/Off by pressing the knob</li> <li>•  Volume : Sets volume by turning the knob left/right</li> </ul>
⑥  SEEK TRACK	<ul style="list-style-type: none"> <li>• When pressed shortly                             <ul style="list-style-type: none"> <li>- Radio mode : plays previous/next frequency.</li> <li>- Media (CD/USB/iPod®/My Music) modes : changes the track, Song(file)</li> </ul> </li> <li>• When pressed and held                             <ul style="list-style-type: none"> <li>- Radio mode : continuously changes the frequency. Upon release, plays the current frequency.</li> <li>- Media(CD/USB/iPod®/My Music) modes : rewinds or fast forwards the track or file</li> <li>- During a Handsfree call, controls the call volume.</li> </ul> </li> </ul>



Name	Description
⑦ <b>DISP</b>	<ul style="list-style-type: none"> <li>Each time the button is shortly pressed, it sets the screen Off → Screen On → Screen Off</li> <li>* Audio operation is maintained and only the screen will be turned Off. In the screen Off state, press any key to turn the screen On again.</li> </ul>
⑧ <b>TA</b>	Set TA(Traffic Announcement) feature On/Off.
⑨ <b>SCAN</b>	<ul style="list-style-type: none"> <li>Radio Mode                             <ul style="list-style-type: none"> <li>Shortly press the key : Previews each broadcast for 5 seconds each</li> <li>Press and hold the key : Previews the broadcasts saved in Preset for 5 seconds each.</li> <li>* Press the <b>SCAN</b> key again to continue listening to the current frequency.</li> </ul> </li> <li>CD, USB mode                             <ul style="list-style-type: none"> <li>Shortly press the key : Previews each song (file) for 10 seconds each</li> <li>* Press the <b>SCAN</b> key again to continue listening to the current song (file).</li> </ul> </li> </ul>
⑩ <b>SETUP</b>	Converts to Setup mode.
⑪ <b>TUNE knob</b>	<ul style="list-style-type: none"> <li>Radio mode : turn to change broadcast frequencies.</li> <li>Media (CD/USB/iPod®/My Music) modes : turn to search tracks/ channels/files.</li> </ul>
⑫ <b>∨FOLDER∧</b>	<ul style="list-style-type: none"> <li>MP3, CD, USB mode : Folder Search</li> <li>* May differ depending on the selected audio</li> </ul>

## Multimedia System



### Steering-wheel mounted controls



\* The actual feature in the vehicle may differ from the illustration.

Name	Description
① MODE	<ul style="list-style-type: none"> <li>Each time this key is pressed, the mode is changed in order of FM1 → FM2 → FMA → AM → AMA → CD → USB or iPod® → AUX → My Music → BT Audio.</li> <li>If the media is not connected or a disc is not inserted, corresponding modes will be disabled.</li> </ul>
② VOL+, VOL-	Used to control volume.
③ ^, v	<ul style="list-style-type: none"> <li>Mute the microphone during a call.</li> <li>When pressed shortly (under 0.8 seconds)                             <ul style="list-style-type: none"> <li>Radio mode : searches broadcast frequencies saved to presets.</li> <li>Media(CD / USB / iPod® / My Music / BT Audio) modes : changes the track, file or chapter.</li> </ul> </li> <li>When pressed and held (over 0.8 seconds)                             <ul style="list-style-type: none"> <li>Radio mode, automatically searches broadcast frequencies and channels</li> <li>Media(CD / USB / iPod® / My Music) modes, rewinds or fast forwards the track or song(file)</li> <li>BT Audio mode may not be supported in some mobile phones.</li> </ul> </li> </ul>



Name	Description
④ 	<ul style="list-style-type: none"> <li>• When pressed shortly</li> <li>- When pressed in the phone screen, displays call history screen</li> <li>- When pressed in the dial screen, makes a call</li> <li>- When pressed in the incoming call screen, answers the call</li> <li>- When pressed during call waiting, switches to waiting call (Call Waiting)</li> <li>• When pressed and held (over 0.8 seconds)</li> <li>- When pressed in the Bluetooth® Wireless Technology Handsfree wait mode, redials the last call</li> <li>- When pressed during a Bluetooth® Wireless Technology Handsfree call, switches call back to mobile phone (Private)</li> <li>- When pressed while calling on the mobile phone, switches call back to Bluetooth® Wireless Technology Handsfree (Operates only when Bluetooth® Wireless Technology Handsfree is connected)</li> </ul>
⑤ 	Ends phone call



## Multimedia System

### RADIO MODE (FOR RDS MODEL)

#### Basic Mode Screen



1. Mode Display  
Displays currently operating mode

2. Frequency  
Displays the current frequency

3. Preset  
Displays current preset number 1 ~ 6

4. Preset Display  
Displays preset buttons

 
5. Autostore  
Automatically saves frequencies with superior reception to Preset buttons

6. RDS Info  
Displays RDS broadcast information

### Switching to Radio Mode

Pressing the **RADIO** key will change the operating mode in order of FM1 → FM2 → FMA → AM → AMA

If [Pop up Mode] is turned on within **SETUP** ▶ [Display], then pressing the **RADIO** key will display the Radio Pop-up Mode screen.

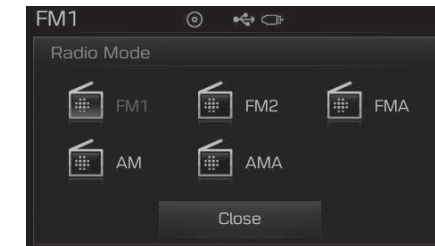


Turn the **TUNE** knob to move the focus. Press the knob to select.

## Searching Radio Frequencies

### Using Seek

Press the  key to play the previous/next frequency.


### Using TUNE

 
Turn the  TUNE knob to select the desired frequency.


- FM : Increases/decreased by 100kHz
- AM : Increases/decreased by 9kHz


## Using Radio Mode

### Selecting /Saving Presets

Press the  ~  buttons to play the desired preset.

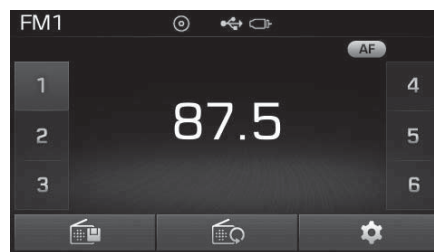

 
Press the  button to display the broadcast information for the frequency saved to each button.

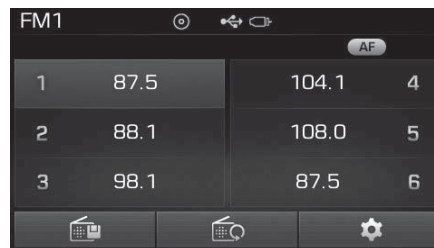

### \* NOTICE

While listening to a frequency you want to save as a preset, press and hold one of the [1] ~ [6] preset buttons (over 0.8 seconds) to save the current frequency to the selected preset.

### Auto Store


Press the  button to automatically save receivable frequencies to Preset buttons.

 
### \* NOTICE

While Auto Store is operating, pressing the [Cancel] button again will cancel Auto Store and restore the previous frequency.

## Multimedia System

### RDS Menu


Press the  button to set the AF (Alternative Frequency), Region and News features.

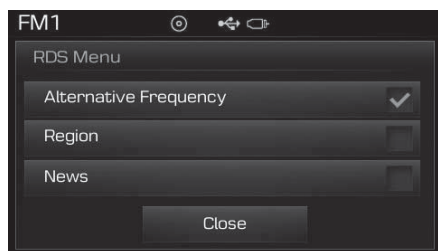


#### \* NOTICE


The RDS Menu is not supported within AM or AMA mode.

### Scan

Press the  key to preview frequencies with superior reception for 5 seconds each.

 
Press and hold the  key (over 0.8 seconds) to preview presets for 5 seconds each.

#### \* NOTICE

Once scan is complete, the previous frequency will be restored. While Scan is operating, pressing and holding the  key (over 0.8 seconds) will cancel the scan operation.

### TA (Traffic Announcement)

Press the  key to turn the TA (Traffic Announcement) feature On/Off.

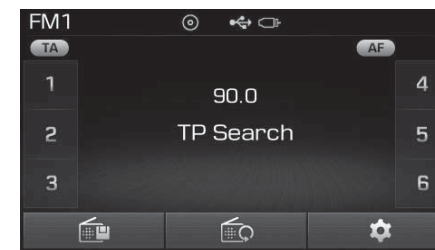

## RADIO MODE

### Basic Mode Screen



1. Mode Display  
Displays currently operating mode.

2. Frequency  
Displays the current frequency.

3. Preset  
Displays current preset number **P1** ~ **P6**.

 
4. Preset Display  
Displays preset buttons.

5. Auto store  
Automatically saves frequencies with superior reception to Preset buttons.

### Switching to Radio Mode

Pressing the **RADIO** key will change the operating mode in order of FM1 → FM2 → AM

If [Mode Pop up] is turned on within **SETUP** ▶ [Display], then pressing the **RADIO** key will display the Radio Pop-up Mode screen.

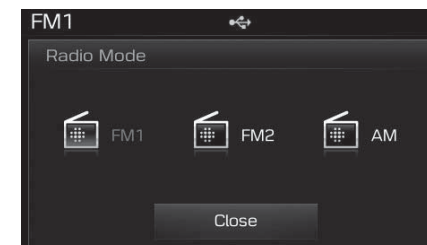

Turn the **TUNE** knob to move the focus. Press the knob to select.


## Multimedia System

### Searching Radio Frequencies

#### Using Seek

Press the  key to play the previous/next frequency.


#### Using TUNE

Turn the  TUNE knob to select the desired frequency.

- FM : Increases/decreased by 200kHz
- AM : Increases/decreased by 10kHz

### Using Radio Mode



#### Selecting Presets/Saving Presets

Press the  button to display the broadcast information for the frequency saved to each button.



Press the  ~  buttons to play the desired preset.

#### \* NOTICE

While listening to a frequency you want to save as a preset, press and hold one of the  ~  preset buttons (over 0.8 seconds) to save the current frequency to the selected preset.


#### Auto Store


Press the  button to automatically save receivable frequencies to Preset buttons.

#### \* NOTICE


While Auto Store is operating, pressing the [Cancel] button again will cancel Auto Store and restore the previous frequency.

#### Scan

Press the  key to preview frequencies with superior reception for 5 seconds each.

 
Press and hold the  key (over 0.8 seconds) to preview presets for 5 seconds each.

Once scan is complete, the previous frequency will be restored.

While Scan is operating, pressing the  key will cancel the scan operation.

## MEDIA MODE

Pressing the **MEDIA** key will change the operating mode in order of CD → USB(iPod®) → AUX → My Music → BT Audio.

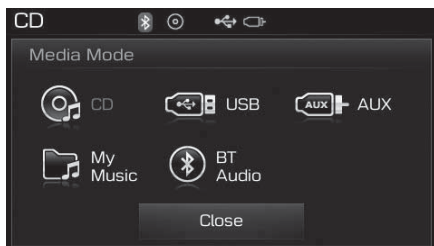

If [Mode Pop up] is turned on within **SETUP** ▶ [Display], then pressing the **MEDIA** key will display the Media Pop-up Mode screen.

Turn the **TUNE** knob to move the focus. Press the knob to select.

### \* NOTICE

The media mode pop up screen can be displayed only when there are two or more media modes turned on.

## Title Icon

When a *Bluetooth*® Wireless Technology, iPod®, USB, or AUX device is connected or a CD is inserted, the corresponding mode icon will be displayed.



Icon	Title
	<i>Bluetooth</i> ® Wireless Technology
	CD
	iPod®
	USB
	AUX

 
## Multimedia System

### AUDIO CD MODE


#### Using Audio CD Mode

##### Playing/Pausing CD Tracks

Once an audio CD is inserted, the mode will automatically start and begin playing.

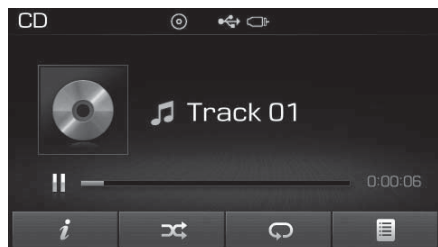

<For RDS model>

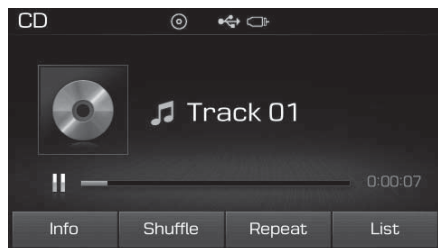 

While playing, press the **||** button to pause and press **▶** button to play.

#### \* NOTICE

- Only genuine audio CDs are supported. Other discs may result in recognition failure (e.g. copy CD-R, CDs with labels)
- The artist and title information are displayed on the screen if track information is included within the audio CD.

#### Changing Tracks

 
Press the **SEEK TRACK** key to move to the previous or next track.

#### \* NOTICE

- Pressing the **SEEK TRACK** key after the track has been playing for 2 seconds will start the current track from the beginning.
- Pressing the **SEEK TRACK** key before the track has been playing for 1 seconds will start the previous track.

### Selecting from the List

Turn the **TUNE** knob left/right to search for the desired track.

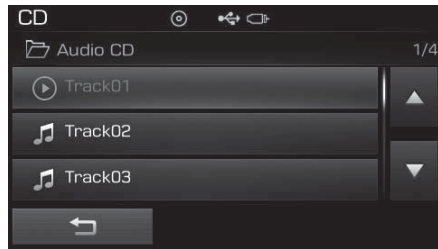

Once you find the desired track, press the **TUNE** knob to start playing.

### Rewinding / Fast-forwarding Tracks

 
While playing, press and hold the **SEEK TRACK** key to rewind or fast-forward the current track.

### Scan


Press the **SCAN** key to play the first 10 seconds of each file.

### Audio CD Mode Menu

Within this mode, you will have access to the Info, Random(Shuffle), Repeat and List features.

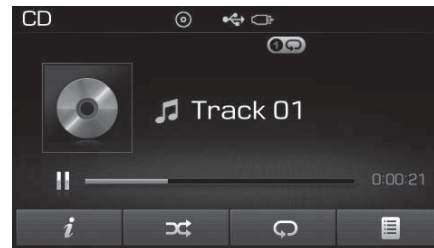

<For RDS model>

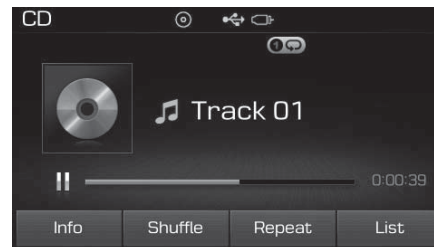 

### Info

Press the **Info** button to display details about the current disc.

### Random(Shuffle)

Press the **Shuffle** button to play tracks in random(Shuffle) order.

Press the **Shuffle** button again to turn the Random(Shuffle) feature off.

- Random(Shuffle): Plays all tracks in random(Shuffle) order.

### Repeat

Press the **Repeat** button to repeat the current track. Press the button again to turn the repeat feature off.

 
- Repeat : Repeats the current track.




## Multimedia System

### List

Press the  (List) button to display the track list screen.

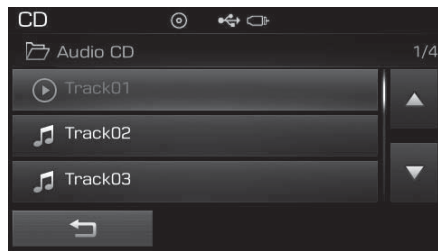


Turn the  TUNE knob left/right to search for tracks. Once the desired track is displayed, press the knob to select and play.

## MP3 CD MODE

 
### Using MP3 CD Mode

#### Playing/Pausing MP3 Files

Once an MP3 disc is inserted the mode will automatically start and be playing.

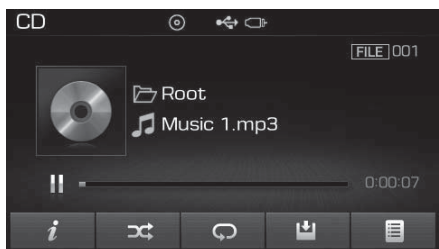

<For RDS model>

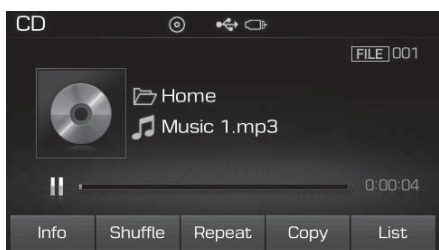 

While playing, press the **||** button to pause and press **▶** button to play.

#### \* NOTICE

If there are numerous files and folders within the disc, reading time could take more than 10 seconds and the list may not be displayed or song searches may not operate. Once loading is complete, try again.

#### Changing Files

 
Press the **SEEK TRACK** key to move to the previous or next file.

#### \* NOTICE

- Pressing the **SEEK TRACK** key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the **SEEK TRACK** key before the file has been playing for 1 seconds will start the previous file.

#### Selecting from the List


Turn the **TUNE** knob left/right to search for the desired file.

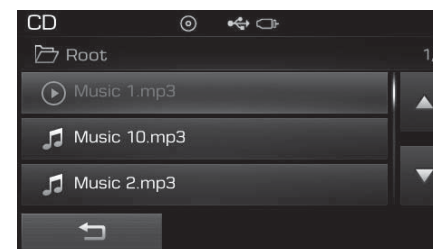


Once you find the desired file, press the **TUNE** knob to start playing.

## Multimedia System

### Rewinding / Fast-forwarding Files

While playing, press and hold the  key (over 0.8 seconds) to rewind or fast-forward the current file.

 
### Scan

Press the  key to play the first 10 seconds of each file.

### Searching Folders

Press the  key to select and search folders.



Once the desired folder is displayed, press the  to select.

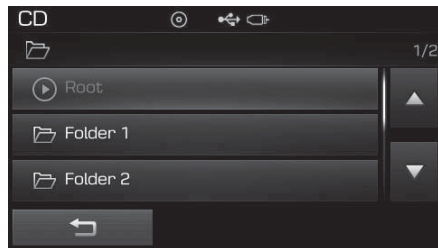

The first file within the selected folder will begin playing.

### MP3 CD Mode Menu

  Within this mode, you will have access to the Info, Random(Shuffle), Repeat, Copy and List features.

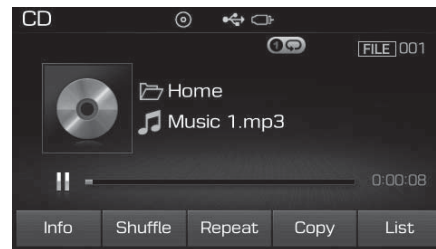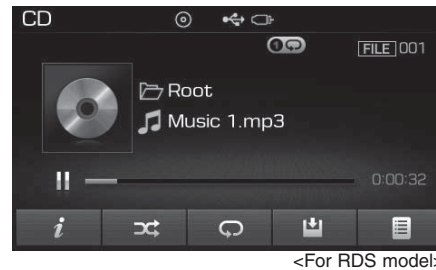


### Info

Press the  (Info) button to display details about the current file.

### \* NOTICE

- When the 'Folder File' option is set as the default display within Display setup, the album/artist/file information are displayed as detailed file information.
- When the 'Album Artist Song' option is set as the default display, the folder name/file name are displayed as detailed file information.
- The title, artist and album info are displayed only when such information are recorded within the MP3 file ID3 tag.

### Random(Shuffle)

Press the  (Shuffle) button to play files in random(Shuffle) order.

Each time the button is pressed, the feature changes in order of Random (Shuffle) Folder → Random (Shuffle) All → Off.

- Random(Shuffle) Folder : Plays all files within the current folder in Random (Shuffle) order.
- Random(Shuffle) All : Plays all files in Random(Shuffle) order.

### **Repeat**

Press the  (Repeat) button to repeat the current file or folder.

Each time the button is pressed, the feature changes in order of Repeat → Repeat Folder → Off.

- Repeat: Repeats the current file.
- Repeat Folder: Repeats all files within the current Folder.

### **Copying Files**

 
Press the  (Copy) button to copy the current file into My Music.


### **\* NOTICE**

Selecting another feature during copying will display a pop-up asking whether you wish to cancel copying. To cancel, select 'Yes'.

### **List**

Press the  (List) button to display the file list screen.

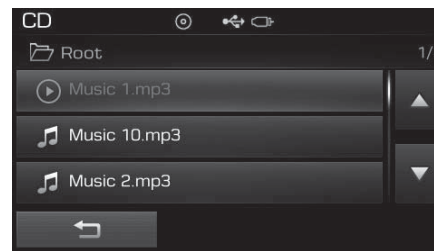

Turn the  TUNE knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.


## Multimedia System
 
### USB MODE


#### Using USB Mode

##### *Playing/Pausing USB Files*

Once a USB is connected, the mode will automatically start and begin playing a USB file.

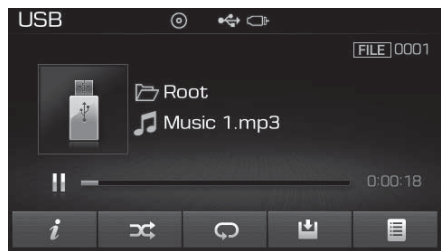

<For RDS model>

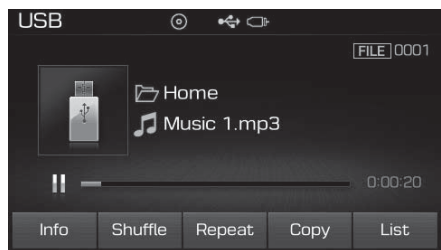 

While playing, press the **||** button to pause and press **▶** button to play.

#### \* NOTICE

- Loading may require additional time if there are many files and folders within the USB and result in faulty list display or file searching. Normal operations will resume once loading is complete.
- The device may not support normal operation when using a USB memory type besides (Metal Cover Type) USB Memory.

#### *Changing Files*

 
Press the **SEEK TRACK** keys to move to the previous or next file.

#### \* NOTICE

- Pressing the **SEEK TRACK** key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the **SEEK TRACK** key before the file has been playing for 1 seconds will start the previous file.

#### *Selecting from the List*

Turn the **TUNE** knob left/right to search for the desired file.

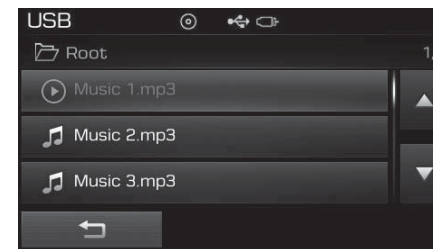

Once you find the desired file, press the **TUNE** knob to start playing.

#### *Rewinding / Fast-forwarding Files*

 
While playing, press and hold the **SEEK TRACK** key (over 0.8 seconds) to rewind or fast-forward the current file.

#### *Scan*

Press the **SCAN** key to play the first 10 seconds of each file.

### Searching Folders


Press the **√FOLDER^** key to select and search folders.

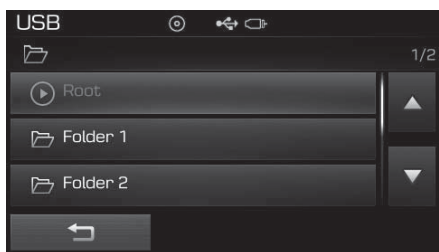


Once the desired folder is displayed, press the **⊙TUNE** knob to select. The first file within the selected folder will begin playing.

### USB Mode Menu

 Within this mode, you will have access to the Info, Random(Shuffle), Repeat, Copy and List features.

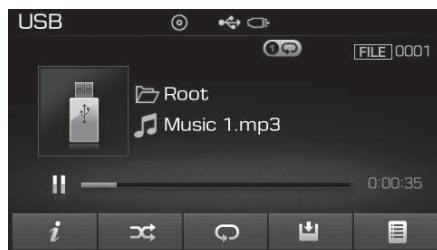

<For RDS model>

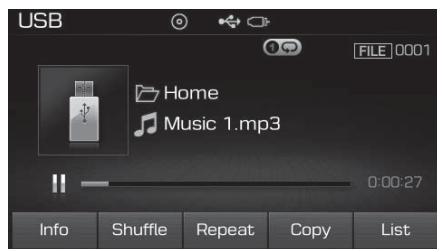 

#### Info

Press the **i (Info)** button to display details about the current file.

### \* NOTICE

- When the 'Folder File' option is set as the default display within Display setup, the album/artist/file information are displayed as detailed file information.
- When the 'Album Artist Song' option is set as the default display, the folder name/file name are displayed as detailed file information.
- The title, artist and album info are displayed only when such information are recorded within the MP3 file ID3 tag.


### Random (Shuffle)

Press the **↻ (Shuffle)** button to play files in random(Shuffle) order. Each time the button is pressed, the feature changes in order of Random(Shuffle) Folder→Random(Shuffle) All→Off.

- Random(Shuffle) Folder : Plays the files in the current folder in random(Shuffle) order.
- Random(Shuffle) All : Plays all files in random(Shuffle) order.

## Multimedia System

### **Repeat**

Press the  (Repeat) button to repeat the current file or folder.

Each time the button is pressed, the feature changes in order of Repeat → Repeat Folder → Off.

- Repeat : Repeats the current file.
- Repeat Folder : Repeats all files within the current folder.

### **Copying Files**

 
Press the  (Copy) button to copy the current file into My Music.


### **\* NOTICE**

Selecting another feature during copying will display a pop-up asking whether you wish to cancel copying. To cancel, select 'Yes'.

### **List**

Press the  (List) button to display the file list screen.

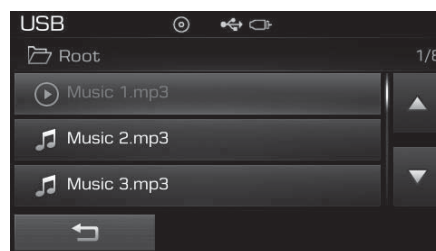



Turn the  TUNE knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.

## iPod® MODE
  
### Using iPod® Mode

#### Playing/Pausing iPod® Songs

Once an iPod® is connected, the mode will automatically start and begin playing an iPod® song.

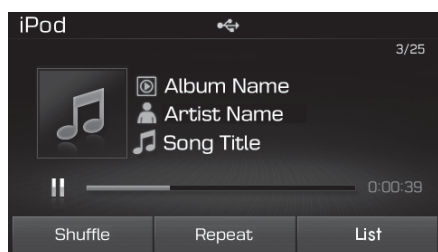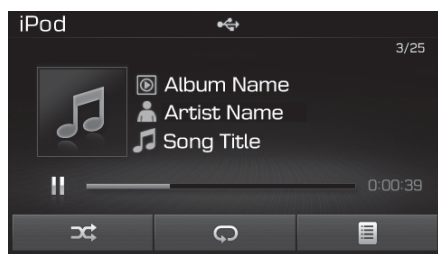

While playing, press the button to pause and press button to play.

#### \* NOTICE

iPod®s with unsupported communication protocols may not properly operate in the audio system.

#### Changing Songs

Press the key to move to the previous or next song.

#### \* NOTICE

 
 
- Pressing the key after the song has been playing for 2 seconds will start the current song from the beginning.
- Pressing the key before the song has been playing for 1 second will start the previous song.
- Slight time differences may exist depending your iPod® product.

#### Rewinding / Fast-forwarding Songs

While playing, press and hold the key (over 0.8 seconds) to rewind or fast-forward the current song.

#### Searching Categories

Turn the TUNE knob left/right to search for the desired category.

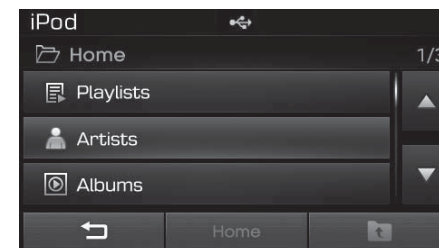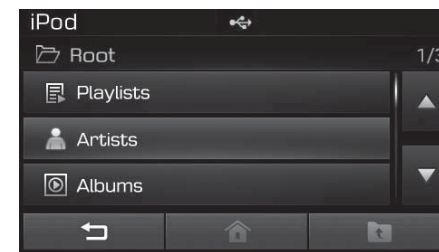



## Multimedia System

 
Once you find the desired category, press the **TUNE** knob to select and play.

### \* NOTICE


There are eight categories that can be searched, including Playlists, Artists, Albums, Genres, Songs, Composers, Audiobooks and Podcasts.

### Category Menu

Within the iPod® Category menu, you will have access to the **Back**, **Home**, and **Previous** features.

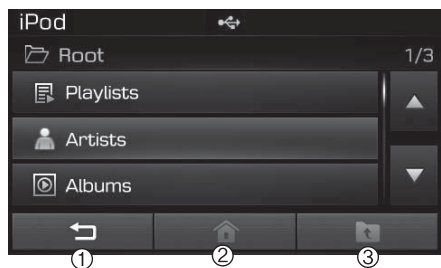

<For RDS model>

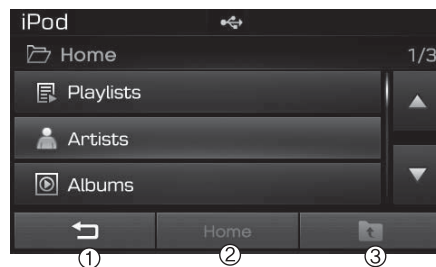 


1. **Back**: Displays the play screen
2. **Home**: Moves to the iPod® root category screen
3. **Previous**: Moves to the previous category

### \* NOTICE

 
- If the search mode is accessed while playing a song, the most recently searched category is displayed.
- Search steps upon initial connection may differ depending on the type of iPod® device.

### iPod® Mode Menu

Within this mode, you will have access to the Random(Shuffle), Repeat and List features.

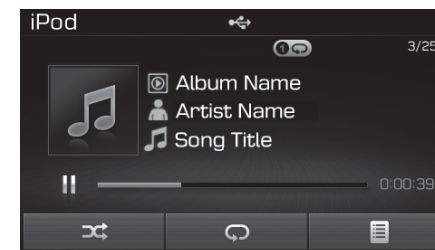

<For RDS model>

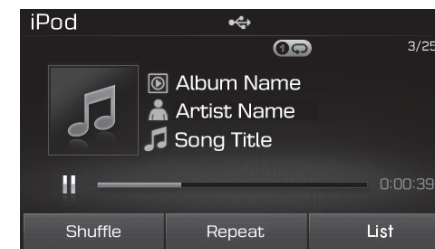 


### Random(Shuffle)

Press the **Shuffle** button to play songs in random(Shuffle) order.

- Random(Shuffle) All : Plays all songs in Random(Shuffle) order.

 
### Repeat

Press the  (Repeat) button to repeat the current song. Press the button again to turn the repeat feature off.


- Repeat : Repeats the current song


### List


Press the  (List) button to display the Category Menu.

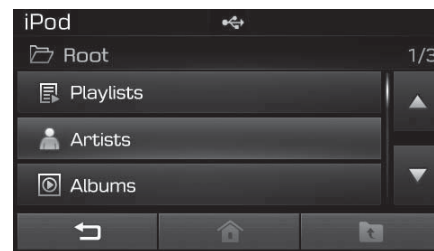

<For RDS model>

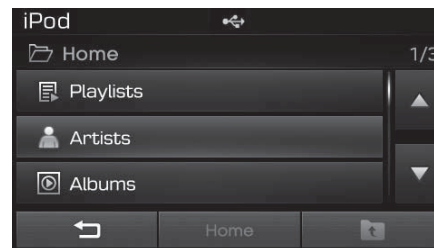 

Turn the  TUNE knob left/right to search for the desired category.

Once you find the desired category, press the  TUNE knob to select and play.


## Multimedia System

 ---

### AUX MODE

#### Using AUX Mode

Press the **MEDIA** key ▶ Select [AUX]

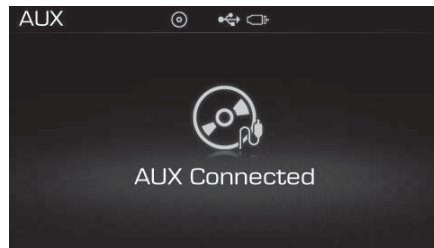

An external device can be connected to play music.



### Connecting an External Device



  External audio players (Camcorders, car VCR, etc.) can be played through a dedicated cable.

## MY MUSIC MODE


### Using My Music Mode
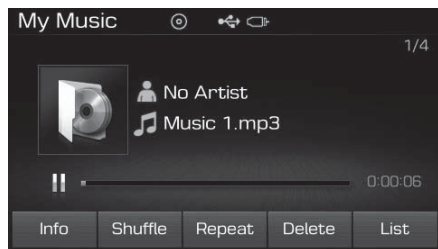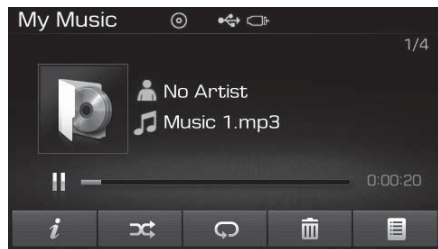
#### Playing/Pausing My Music Files



While playing, press the  button to pause and press  button to play.



#### \* NOTICE

 If there are no files saved within My Music, the  button will be disabled.

#### Changing Files



Press the  key to move to the previous or next file.


#### \* NOTICE

- Pressing the  key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the  key before the file has been playing for 1 second will start the previous file.

#### Selecting from the List

  
Turn the  knob left/right to search for the desired file.

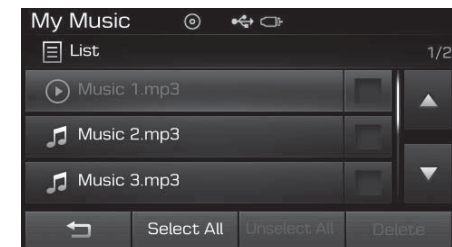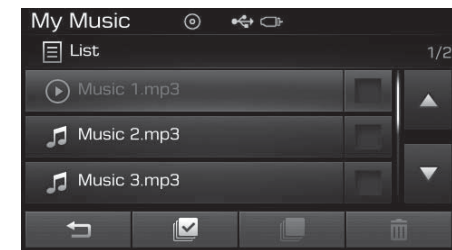

Once you find the desired file, press the  knob to start playing.

## Multimedia System

### Rewinding / Fast-forwarding Files

 
While playing, press and hold the  key to rewind or fast-forward the current file.

### Scan


Press the  key to play the first 10 seconds of each file.

### My Music Mode Menu

Within this mode, you will have access to the Info, Random(Shuffle), Repeat, Delete and List features.

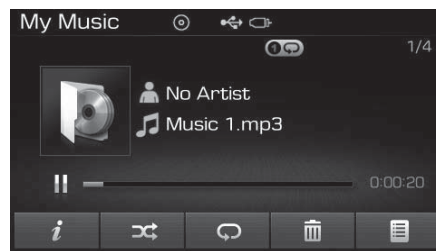

<For RDS model>

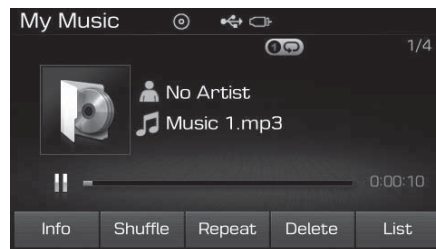 



### Info

Press the  () button to display details about the current file.


 
### \* NOTICE

The title, artist and album info are displayed only when such information is recorded within the MP3 file ID3 tag.

### Random

Press the  () button to play files in random order. Press the button again to turn the Random feature off.

### Repeat

 
Press the  () button to repeat the current song. Press the button again to turn the repeat feature off.

### Deleting Files


Press the  () button to delete the current file.

### List

Press the **List** button to display the file list screen.

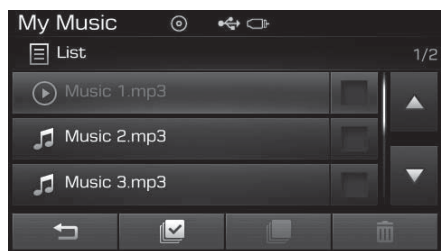


<For RDS model>

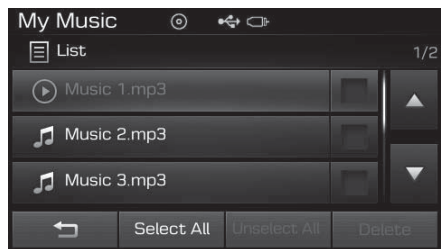 


Turn the **TUNE** knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.

### List Menu

 From the List screen, it is possible to delete files you previously saved into My Music.

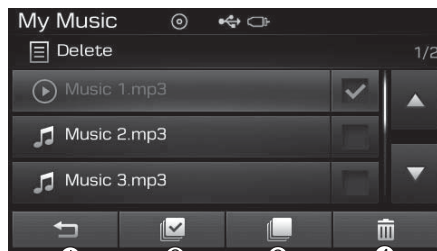

<For RDS model>

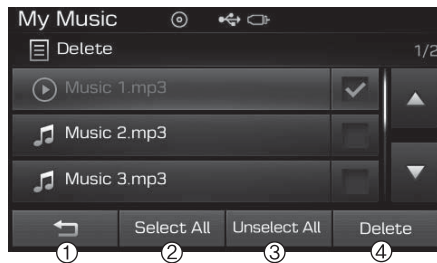 

Press the **Select All** button or individually select the files you want to delete. Once files are selected, the **Unselect All** button and **Delete** buttons will be enabled.

- 1) **←** : Moves to the previous screen
- 2) **☑** (Selects all) : Selects all files
- 3) **☐** (Unselect All) : Deselects all selected files
- 4) **🗑** (Delete) : Deletes selected files

After selecting the files you want to delete, press the **Delete** button to delete the selected files.

### \* NOTICE

- If there is memory available, up to 6,000 files can be saved.
- Identical files cannot be copied more than 1,000 times.
- To check memory information, go to **SETUP** ▶ [System] ▶ [Memory Information]

 
## Multimedia System



### Bluetooth® Wireless Technology AUDIO MODE (for Bluetooth® Wireless Technology equipped model)

#### Using Bluetooth® Wireless Technology Audio Mode

##### Playing/Pausing Bluetooth® Wireless Technology Audio

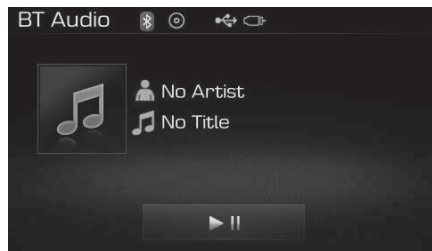Once a Bluetooth® Wireless Technology device is connected, the mode will automatically start.



While playing, press the  button to pause and press  button to play.


##### \* NOTICE

The play/pause feature may operate differently depending on the mobile phone.

##### Changing Files

Press the  key to move to the previous or next file.

##### Setting Connection

If a Bluetooth® Wireless Technology device has not been connected, press the  key ▶ [Phone] button to display the Bluetooth® Wireless Technology connection screen.

It is possible to use the pair phone, connect/disconnect and delete features from your Bluetooth® Wireless Technology phone.

##### \* NOTICE

- If the Bluetooth® Wireless Technology audio is not operating properly, check whether the feature is turned off at  ▶ [Phone] ▶ [Audio streaming] (Streaming Audio). If the feature is off, turn back on and try again.
- If music is not yet playing from your mobile device after converting to Bluetooth® Wireless Technology Audio mode, pressing the play button once may start playing the mode. Check to see that music is playing from the Bluetooth® Wireless Technology device after converting to Bluetooth® Wireless Technology Audio Mode.

## **Bluetooth® Wireless Technology (for RDS, Bluetooth® Wireless Technology equipped model)**

### **Using Bluetooth® Wireless Technology Handsfree**

- *Bluetooth®* Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, *Bluetooth®* Wireless Technology phones, PDAs, various electronic devices, and automotive environments, *Bluetooth®* Wireless Technology allows data to be transmitted at high speeds without having to use a connector cable.

- *Bluetooth®* Wireless Technology Handsfree refers to a device which allows the user to conveniently make phone calls with *Bluetooth®* Wireless Technology mobile phones through the audio system.

#### **⚠ CAUTION**

- *Bluetooth® Wireless Technology Handsfree is a feature that enables drivers to practice safe driving. Connecting the car audio system with a Bluetooth® Wireless Technology phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using the Bluetooth® Wireless Technology, carefully read the contents of this user's manual.*
- *Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents.*
- *Do not operate the device excessively while driving.*
- *Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.*



## Multimedia System

### \* NOTICE - USING UPON CONNECTING *Bluetooth*<sup>®</sup> Wireless Technology PHONE

- Before connecting the car audio system with the mobile phone, check to see that the mobile phone supports *Bluetooth*<sup>®</sup> Wireless Technology features.
- Even if the phone supports *Bluetooth*<sup>®</sup> Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the *Bluetooth*<sup>®</sup> Wireless Technology power is turned off. Disable the hidden state or turn on the *Bluetooth*<sup>®</sup> Wireless Technology power prior to searching/connecting with the car audio system.
- If you do not want to automatically connect your *Bluetooth*<sup>®</sup> Wireless Technology phone, try the following.
  1. Turn off the *Bluetooth*<sup>®</sup> Wireless Technology feature in your mobile phone.
    - For more information on *Bluetooth*<sup>®</sup> Wireless Technology features within your mobile, refer to your mobile phone user's manual.
  2. Turn off the *Bluetooth*<sup>®</sup> Wireless Technology feature in your car audio system.

(Continued)

(Continued)

- To turn off the *Bluetooth*<sup>®</sup> Wireless Technology feature in your car audio system, go to **SETUP** ▶ [Phone] and [turn off] the *Bluetooth*<sup>®</sup> Wireless Technology feature.
- Park the vehicle when connecting the car audio system with your mobile phone.
- *Bluetooth*<sup>®</sup> Wireless Technology connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
  1. Turn the *Bluetooth*<sup>®</sup> Wireless Technology function within the mobile phone off/on and try again.
  2. Turn the mobile phone power Off/On and try again.
  3. Completely remove the mobile phone battery, reboot, and then again.
  4. Reboot the audio system and try again.
  5. Delete all paired devices, pair and try again.
- The Handsfree call volume and quality may differ depending on the mobile phone.

(Continued)

(Continued)

- *Bluetooth*<sup>®</sup> Wireless Technology features supported within the vehicle are as follows. Some features may not be supported depending on your *Bluetooth*<sup>®</sup> Wireless Technology device.
  - Answering and placing *Bluetooth*<sup>®</sup> Wireless Technology Handsfree calls
  - Menu operation during call (Switch to Private, Switch to call waiting, Outgoing volume)
  - Download Call History
  - Download Mobile Phone book
  - Phone book/Call History Auto Download
  - *Bluetooth*<sup>®</sup> Wireless Technology device auto connection - *Bluetooth*<sup>®</sup> Wireless Technology Audio
- It is possible to pair up to five *Bluetooth*<sup>®</sup> Wireless Technology devices to the car system.
- Only one *Bluetooth*<sup>®</sup> Wireless Technology device can be connected at a time.
- Other devices cannot be paired while a *Bluetooth*<sup>®</sup> Wireless Technology device is already connected.
- When a *Bluetooth*<sup>®</sup> Wireless Technology device is being connected, the connection process cannot be canceled.

(Continued)

(Continued)

- Only *Bluetooth*® Wireless Technology Handsfree and *Bluetooth*® Wireless Technology audio related features will operate within this system.
- Normal operation is possible only for devices that support Handsfree or audio features, such as a *Bluetooth*® Wireless Technology mobile phone or a *Bluetooth*® Wireless Technology audio device.
- Only one function can be used at a time between the *Bluetooth*® Wireless Technology Handsfree and *Bluetooth*® Wireless Technology audio. (While playing *Bluetooth*® Wireless Technology audio, streaming will end upon entering the *Bluetooth*® Wireless Technology phone screen.)
- If a connected *Bluetooth*® Wireless Technology device becomes disconnected for various reasons, such as being out of range, turning the device OFF, or a *Bluetooth*® Wireless Technology communication error, *Bluetooth*® Wireless Technology devices are automatically searched and connected.
- Placing the audio system within an electromagnetic environment may result in noise interference.


### Pairing a *Bluetooth*® Wireless Technology wireless technology Device

 
#### What is *Bluetooth*® Wireless Technology Pairing?

Pairing refers to the process of synchronizing your *Bluetooth*® Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the *Bluetooth*® Wireless Technology feature.

### Pairing **PHONE** Key / Key on the Steering Remote Controller

#### When No Devices have been Paired


1. Press the **PHONE** key or the  key on the steering remote controller. The following screen is displayed.
2. Press the **OK** button to enter the Pair Phone screen.

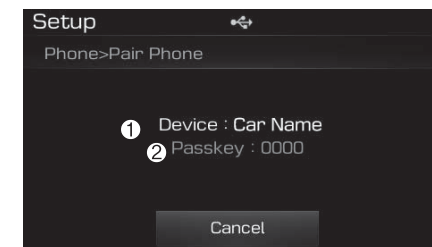


## Multimedia System

- 1) Device : Name of device as shown when searching from your *Bluetooth®* Wireless Technology device
- 2) Passkey : Passkey used to pair the device
3. From your *Bluetooth®* Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered.  
Here, enter the passkey "0000" to pair your *Bluetooth®* Wireless Technology device with the car audio system.
5. Once pairing is complete, the following screen is displayed.

 
### \* NOTICE

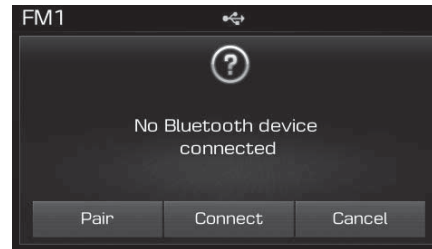

- If *Bluetooth®* Wireless Technology devices are paired but none are currently connected, pressing the **PHONE** key or the  key on the steering remote controller displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously pair device.

### Pairing through [PHONE] Setup

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone] ▶ Select  TUNE knob

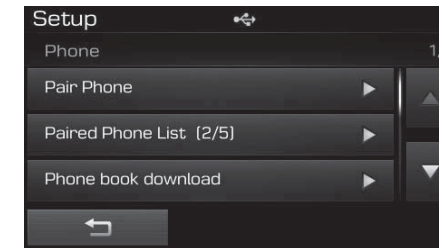


1. The following steps are the same as the steps described in the "When No Devices have been Paired" section.

### \* NOTICE

 - The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.
- Generally, most *Bluetooth*<sup>®</sup> Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth*<sup>®</sup> Wireless Technology has been properly connected within your mobile phone.
- List of paired *Bluetooth*<sup>®</sup> Wireless Technology devices can be viewed at **SETUP** ▶ [Phone] ▶ [Paired Phone List].


### Connecting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

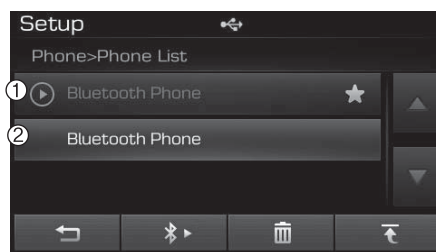

- 1) Connected Phone : Device that is currently connected
- 2) Paired Phone : Device that is paired but not connected

 From the paired phone list, select the device you want to connect and press the **Bluetooth** button.

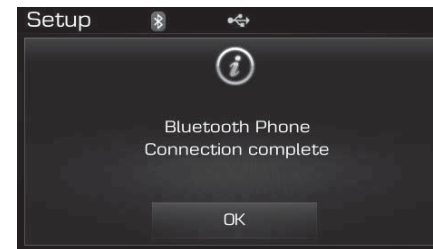


## Multimedia System

### Changing Priority


#### What is Priority?

It is possible to pair up to five *Bluetooth*<sup>®</sup> Wireless Technology devices with the car audio system. As a result, the “Change Priority” feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

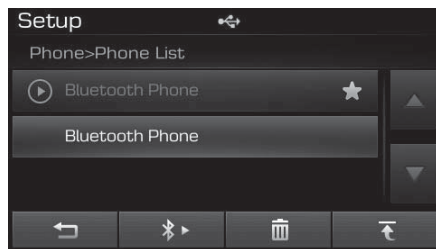


 From the paired phone list, select the phone you want to change to the highest priority, then press the **ENTER** button from the Menu. The selected device will be changed to the highest priority.

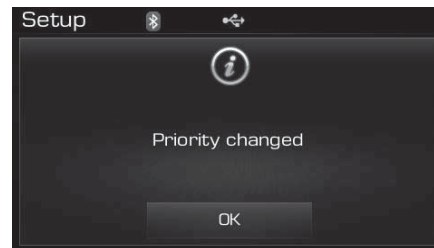

### Disconnecting a Device

 
Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

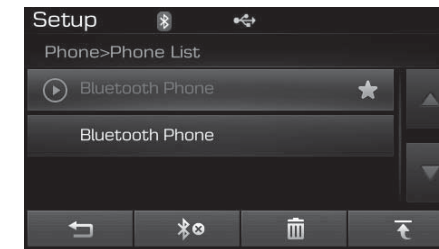

From the paired phone list, select the currently connected device and press the **Bluetooth** button.

## Deleting a Device

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

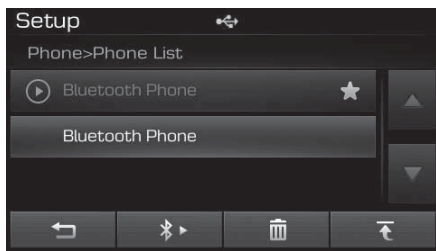

From the paired phone list, select the device you want to delete and press the **DELETE** button.

### \* NOTICE

 
- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth*® Wireless Technology device is deleted, the device's call history and phone book data will also be deleted.
- To re-use a deleted device, you must pair the device again.

## USING *Bluetooth*® Wireless Technology

### Phone Menu Screen

#### Phone Menus

With a *Bluetooth*® Wireless Technology device connected, press the **PHONE** key to display the Phone menu screen.

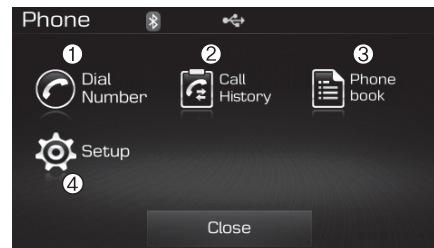

- 1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
- 2) Call History : Displays the call history list screen
- 3) Phone book : Displays the Phone book list screen
- 4) Setup : Displays Phone related settings


### \* NOTICE

 - If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [Phone book] button but there is no phone book data, a prompt is displayed which asks whether to download phone book data. .
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

## Multimedia System

### Calling by Dialing a Number

Press the **PHONE** key ▶ Select [Dial Number]

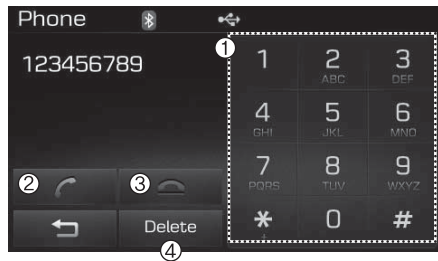


- 1) Dial Pad : Used to enter phone number
- 2) Call : If a number has been entered, calls the number. If no number has been entered, switches to call history screen.
- 3) End : Deletes the entered phone number.
- 4) Delete : Deletes entered numbers one digit at a time.

### Answering Calls
 
#### Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

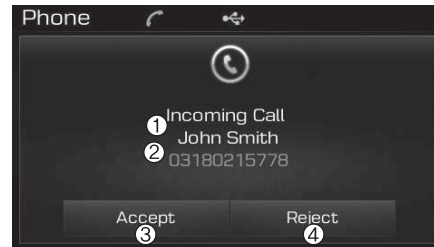

- 1) Caller : Displays the other party's name when the incoming caller is saved within your phone book.
- 2) Incoming Number : Displays the incoming number.
- 3) Accept : Accept the incoming call.
- 4) Reject : Reject the incoming call.

#### \* NOTICE

- When the incoming call pop-up is displayed, most Audio and SETUP mode features will not operate. Only the call volume can be operated.
- The telephone number may not be properly displayed in some mobile phones.
- When a call is answered with the mobile phone, the call mode will automatically convert to Private mode.

### During a Handsfree Call



- 1) Caller : Displays the other party's name if the incoming caller is saved within your phone book
- 2) Incoming Number : Displays the incoming number
- 3) Call time : Displays the call time
- 4) End : Ends call
- 5) Private : Converts to Private mode
- 6) Out Vol. : Sets call volume as heard by the other party
- 7) Mute : Turns Mic Mute On/Off

#### \* NOTICE

If the mic is muted, the other party will not be able to hear your voice.

### Call History

Press the **PHONE** key ▶ Select [Call History]



A list of incoming, outgoing and missed calls is displayed.

Press the [Download] button to download the call history.

- 1) Call History :
  - Displays recent calls (call history)
  - Connects call upon selection
- 2) Download : Download Recent Call History

#### \* NOTICE

- The call history list will display up to 30 outgoing, incoming, and missed calls.
- Upon downloading call histories, previously saved histories are deleted.
- Incoming calls with hidden caller IDs will not be saved in the call history list.
- Previously saved phone book entries are stored even if a device is disconnected and re-connected.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth*® Wireless Technology device supports the download feature.



## Multimedia System

### Phone Book

Press the **PHONE** key ▶ Select [Phone book]



The list of saved phone book entries is displayed. Press the [Download] button to download the call history.

#### 1) Phone book List :

- Displays downloaded phone book entries
- Connects call upon selection

#### 2) Download : Download phone book entries

### \* NOTICE

- Up to 1,000 phone book entries can be copied into car phone book.
- Upon downloading phone book data, previously saved phone book data will be deleted.
- Downloading is not possible if the phone book download feature is turned off within the *Bluetooth*® Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth*® Wireless Technology device setting or the screen state.
- Caller ID information will not be displayed for unsaved callers.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth*® Wireless Technology device supports the download feature.

## Bluetooth® Wireless Technology (for Bluetooth® Wireless Technology equipped model)

### Pairing a Bluetooth® Wireless Technology wireless technology Device

 
 
#### What is Bluetooth® Wireless Technology Pairing?

Pairing refers to the process of synchronizing your Bluetooth® Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the Bluetooth® Wireless Technology feature.

### Pairing **PHONE** Key / **☎** Key on the Steering Remote Controller

#### When No Devices have been Paired

1. Press the **PHONE** key or the **☎** key on the steering remote controller. The following screen is displayed.
2. Press the **OK** button to enter the Pair Phone screen.

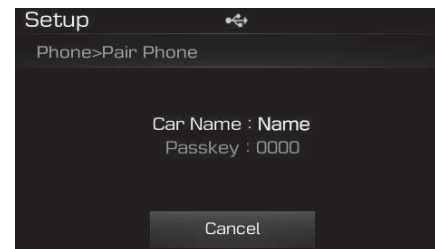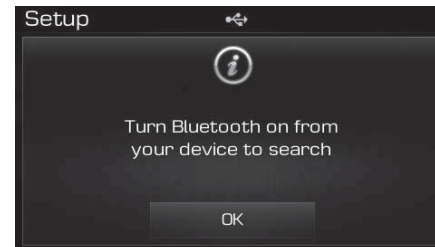


- 1) Device : Name of device as shown when searching from your Bluetooth® Wireless Technology device
- 2) Passkey : Passkey used to pair the device
3. From your Bluetooth® Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered. Here, enter the passkey "0000" to pair your Bluetooth® Wireless Technology device with the car audio system.
5. Once pairing is complete, the following screen is displayed.

## Multimedia System

 
### \* NOTICE



- If *Bluetooth*® Wireless Technology devices are paired but none are currently connected, pressing the **PHONE** key or the  key on the steering remote controller displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously pair device.

### Pairing through [PHONE] Setup

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone] ▶ Select 

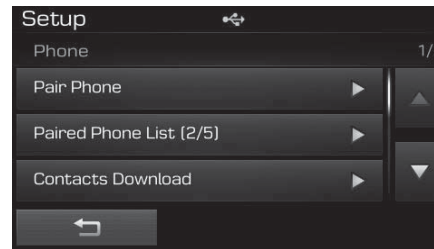


1. The following steps are the same as the steps described in the “When No Devices have been Paired” section.

### \* NOTICE

 - The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.
- Generally, most *Bluetooth*® Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth*® Wireless Technology has been properly connected within your mobile phone.
- List of paired *Bluetooth*® Wireless Technology devices can be viewed at **SETUP** ▶ [Phone] ▶ [Paired Phone List].


## Connecting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

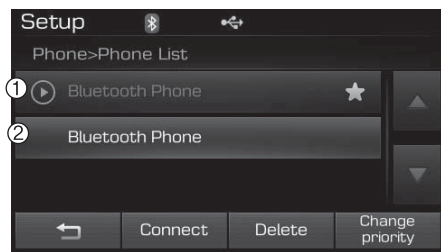

- 1) Connected Phone : Device that is currently connected
- 2) Paired Phone : Device that is paired but not connected

 From the paired phone list, select the device you want to connect and press the **Connect** button.

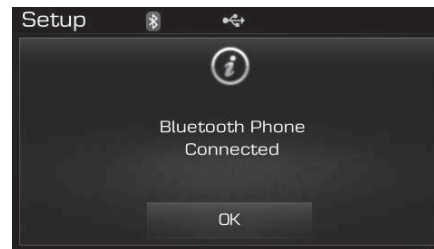


## Changing Priority

### What is Priority?


It is possible to pair up to five *Bluetooth*® Wireless Technology devices with the car audio system. As a result, the “Change Priority” feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

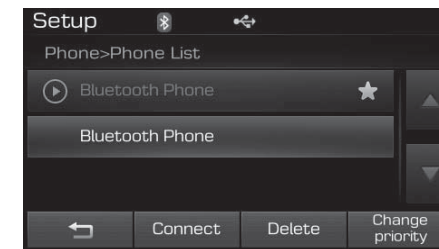

## Multimedia System

 From the paired phone list, select the phone you want to change to the highest priority, then press the **Change priority** button from the Menu. The selected device will be changed to the highest priority.

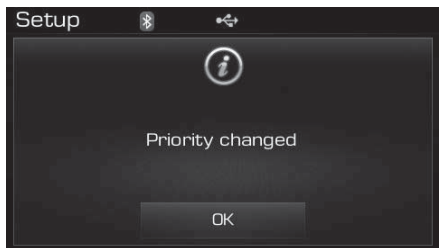

### Disconnecting a Device

 
Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]



From the paired phone list, select the currently connected device and press the **Disconnect** button.

### Deleting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

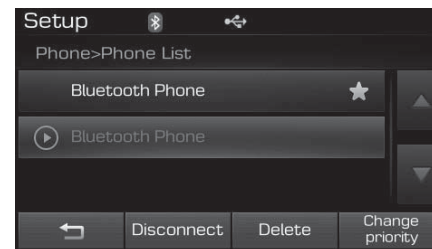

From the paired phone list, select the device you want to delete and press the **Delete** button.

### \* NOTICE

 
- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth*® Wireless Technology device is deleted, the device's call history and contacts data will also be deleted.
- To re-use a deleted device, you must pair the device again.

## USING *Bluetooth*® Wireless Technology

### Phone Menu Screen

#### Phone Menus

With a *Bluetooth*® Wireless Technology device connected, press the **PHONE** key to display the Phone menu screen.

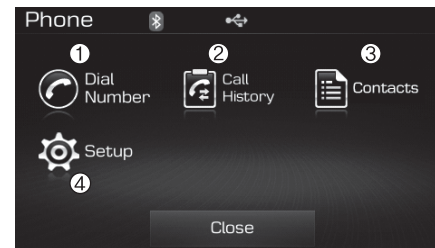

- 1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
- 2) Call History : Displays the call history list screen
- 3) Contacts : Displays the Contacts list screen

- 4) Setup : Displays Phone related settings


### \* NOTICE

 - If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [contacts] button but there is no contacts data, a prompt is displayed which asks whether to download contacts data.
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

## Multimedia System

### Calling by Dialing a Number

Press the **PHONE** key ▶ Select [Dial Number]

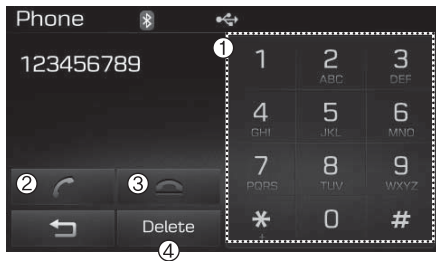


- 1) Dial Pad : Used to enter phone number
- 2) Call : If a number has been entered, calls the number. If no number has been entered, switches to call history screen
- 3) End : Deletes the entered phone number
- 4) Delete : Deletes entered numbers one digit at a time

### Answering Calls
 
#### Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

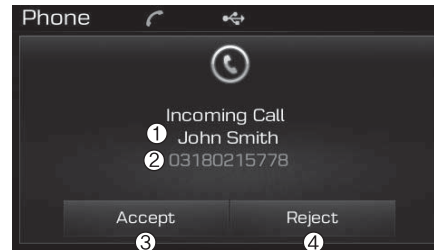


- 1) Caller : Displays the other part's name when the incoming caller is saved within your contacts
- 2) Incoming Number : Displays the incoming number
- 3) Accept : Accept the incoming call
- 4) Reject : Reject the incoming call

#### \* NOTICE

 - When the incoming call pop-up is displayed, most Audio and SETUP mode features will not operate. Only the call volume can be operated.
- The telephone number may not be properly displayed in some mobile phones.
- When a call is answered with the mobile phone, the call mode will automatically convert to Private mode.

### During a Handsfree Call

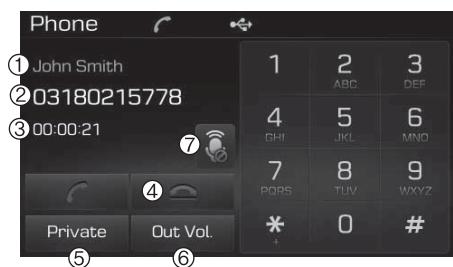

- 1) Caller : Displays the other party's name if the incoming caller is saved within your contacts
- 2) Incoming Number : Displays the incoming number
- 3) Call time : Displays the call time
- 4) End : Ends call
- 5) Private : Converts to Private mode
- 6) Out Vol. : Sets call volume as heard by the other party
- 7) Mute : Turns Mic Mute On/Off

#### \* NOTICE

If the mic is muted, the other party will not be able to hear your voice.

### Call History

Press the **PHONE** key ▶ Select [Call History]



A list of incoming, outgoing and missed calls is displayed.

Press the **Download** button to download the call history.

- 1) Call History :
  - Displays recent calls (call history)
  - Connects call upon selection
- 2) Download : Download Recent Call History

### Contacts

Press the **PHONE** key ▶ Select [Contacts]



The list of saved phone book entries is displayed. Press the **Download** button to download the call history.

- 1) Contacts List :
  - Displays downloaded contacts entries
  - Connects call upon selection
- 2) Download : Download contacts entries




## Multimedia System

### \* NOTICE

- Up to 1,000 contacts entries can be copied into car contacts.
- Upon downloading contacts data, previously saved contacts data will be deleted.
- Downloading is not possible if the contacts download feature is turned off within the *Bluetooth*<sup>®</sup> Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth*<sup>®</sup> Wireless Technology device setting or the screen state.
- Caller ID information will not be displayed for unsaved callers.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth*<sup>®</sup> Wireless Technology device supports the download feature.

### \* NOTICE - USING THE Voice Recognition


- When using the voice recognition feature, only commands listed within the user's manual are supported.
- Be aware that during the operation of the voice recognition system, pressing any key other than the  key or touching the screen will terminate voice recognition mode.
- For superior voice recognition performance, position the microphone used for voice recognition above the head of the driver's seat and maintain a proper position when saying commands.
- Within the following situations, voice recognition may not function properly due to external sound.
  - When the windows and sunroof are open
  - When the wind of the cooling / heating device is strong
  - When entering and passing through tunnels
  - When driving on rugged and uneven roads
  - During severe rain (heavy rains, windstorms)

- Phone related voice commands can be used only when a *Bluetooth*<sup>®</sup> Wireless Technology device is connected.
- When making calls by stating a name, the corresponding contact must be downloaded and stored within the audio system.
- After downloading the *Bluetooth*<sup>®</sup> Wireless Technology phone book, it takes some times to convert the phone book data into voice information. During this time, voice recognition may not properly operate.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.

## VOICE RECOGNITION (if equipped)

### Using Voice Recognition

#### Starting Voice Recognition

Shortly press the  key on the steering remote controller. Say a command.



<For RDS model>




If voice recognition is in [Normal Mode], then the system will say "Please say a command. Beep~"

- If voice recognition is in [Expert Mode], then the system will only say a "Beep~"
- To change the Normal Mode/Expert Mode setting, go to **SETUP** ▶ [System] ▶ [Prompt Feedback].

#### \* NOTICE


For proper recognition, say the command after the voice instruction and beep tone.

#### Skipping Prompt Messages

While prompt message is being stated ▶ Shortly press the  key on the steering remote controller (under 0.8 seconds)

The prompt message is immediately ended and the beep tone will sound. After the "beep", say the voice command.

#### Re-starting Voice Recognition


While system waits for a command ▶ Shortly press the  key on the steering remote controller (under 0.8 seconds)

The command wait state is immediately ended and the beep tone will sound. After the "beep", say the voice command.


## Multimedia System

---

### ENDING VOICE RECOGNITION

While Voice Recognition is operating  
▶ Press and hold the  key on the steering remote controller (over 0.8 seconds)

 
#### \* NOTICE

- While using voice command, pressing a steering wheel remote control or a different key will end voice command.
- In a state where the system is waiting for a voice command, say “cancel” or “end” to end voice command.
- In a state where the system is waiting for a voice command, press and hold the  key on the steering remote controller to end voice command.


※ Illustration on using voice commands


• **Starting voice command.**

Shortly pressing the  key (under 0.8 seconds):

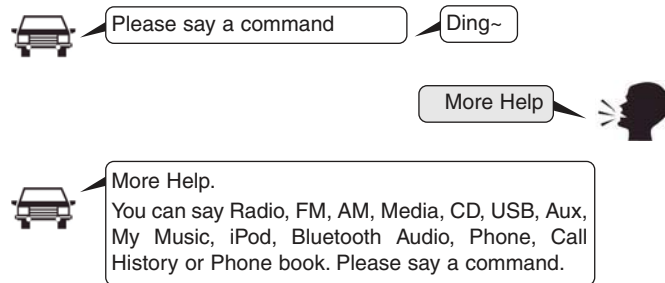


• **Skipping Voice Recognition**

 Shortly pressing the  key (under 0.8 seconds):

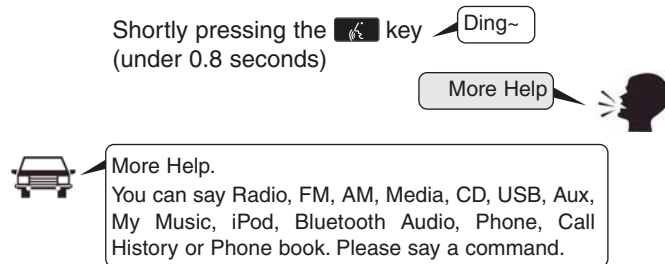

• **End voice command.**

 Shortly pressing the  key (under 0.8 seconds):

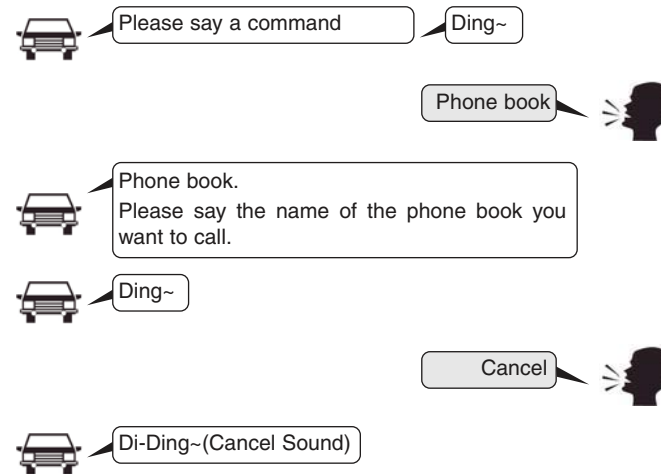

## Multimedia System

### Voice Command List

- **Common Commands:** These are commands that can be used in all situations. (However, some commands may not be supported in special circumstances.)

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Call<Name>	Calls <Name> saved in phone book Ex) Call "John"
Phone	Provides guidance on Phone related commands. After saying this command, say "Call History", "Phone book", "Dial Number" to execute corresponding functions.
Call History	Displays the Call History screen.
Phone book	Displays the phone book screen. After saying this command, say the name of a phone book saved in the phone book to automatically connect the call.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.
Redial	Connects the most recently called number.
Radio	<ul style="list-style-type: none"> <li>• When listening to the radio, displays the next radio screen. (FM1 → FM2 → FMA → AM → AMA)</li> <li>• When listening to a different mode, displays the most recently played radio screen.</li> </ul>

Command	Function
FM	<ul style="list-style-type: none"> <li>• When currently listening to the FM radio, maintains the current state.</li> <li>• When listening to a different mode, displays the most recently played FM screen.</li> </ul>
FM1(FM One)	Displays the FM1 screen.
FM2(FM Two)	Displays the FM2 screen.
FMA	Displays the FMA screen.
AM	Displays the AM screen.
AMA	Displays the AMA screen.
FM Preset 1~6	Plays the most recently played broadcast saved in FM Preset 1~6.
AM Preset 1~6	Plays the broadcast saved in AM Preset 1~6.
FM 87.5~107.9	Plays the FM broadcast of the corresponding frequency.
AM 530~1710	Plays the AM broadcast of the corresponding frequency.
TA on	Enable Traffic Announcement
TA off	Disable Traffic Announcement
News on	Enable RDS News feature
News off	Disable RDS News feature

Command	Function
Media	Moves to the most recently played media screen.
Play Track 1~30	If a music CD has been inserted, plays the corresponding track.
CD	Plays the music saved in the CD.
Search CD	Moves to the CD track or file selection screen. <ul style="list-style-type: none"> <li>• For audio CDs, move to the screen and say the track number to play the corresponding track.</li> <li>• Moves to MP3 CD file selection screen. After manually operate the device to select and play music.</li> </ul>
USB	Plays USB music.
Search USB	Moves to USB file selection screen. After manually operate the device to select and play music.
iPod	Plays iPod music.
Search iPod	Moves to the iPod file selection screen. After, manually operate the device to select and play music.
My Music	Plays the music saved in My Music.
Search My Music	Moves to My Music file selection screen. After manually operate the device to select and play music.

Command	Function
AUX (Auxiliary)	Plays the connected external device.
Bluetooth Audio	Plays the music saved in connected <i>Bluetooth®</i> Wireless Technology device.
Mute	Mutes the radio or music volume.
Pardon?	Repeats the most recent comment.
Cancel (Exit)	Ends voice command.

## Multimedia System

- FM/AM radio commands: Commands that can be used while listening to FM, AM radio.

Command	Function
Preset 1~6	Plays the broadcast saved in Preset 1~6.
Auto Store	Automatically selects radio broadcast frequencies with superior reception and saves in Presets 1~6.
Preset Save 1~6	Saves the current broadcast frequency to Preset 1~6.
Seek up	Plays the next receivable broadcast.
Seek down	Plays the previous receivable broadcast.
Next Preset	Selects the preset number next to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 4 will be selected.)
Previous Preset	Selects the preset number previous to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 2 will be selected.)
Scan	Scans receivable frequencies from the current broadcast and plays for 10 seconds each.
Preset Scan	Moves to the next preset from the current present and plays for 10 seconds each.
AF on	Enable Alternative Frequency feature
AF off	Disable Alternative Frequency feature
Region	Enable Region feature

- Audio CD commands: Commands that can be used while listening to Audio CD.

Command	Function
Region off	Disable Region feature
Program Type	Moves to the RDS Program type selection screen. After, manually operate the device to select a desired program type.
Random	Randomly plays the tracks within the CD.
Random Off	Cancels random play to play tracks in sequential order.
Repeat	Repeats the current track.
Repeat Off	Cancels repeat play to play tracks in sequential order.
Next Track	Plays the next track.
Previous Track	Plays the previous track.
Scan	Scans the tracks from the next track for 10 seconds each.
Track 1~30	Plays the desired track number.
Search Track	Moves to the track selection screen. After, say the track name to play the corresponding track.
Information	Displays the information screen of the current track.

- **MP3 CD / USB commands:** Commands that can be used while listening to music files saved in CD and USB.

Command	Function
Random	Randomly plays the files within the current folder.
All Random	Randomly plays all saved files.
Random Off	Cancels random play to play files in sequential order.
Repeat	Repeats the current file.
Folder Repeat	Repeats all files in the current folder.
Repeat Off	Cancels repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Search File	Moves to the file selection screen.
Search Folder	Moves to the folder selection screen.
Information	Displays the information screen of the current file.
Copy	Copies the current file into My Music.

- **iPod Commands:** Commands that can be used while playing iPod.

Command	Function
All Random	Randomly plays all saved songs.
Random	Randomly plays the songs within the current category.
Random Off	Cancels random play to play songs in sequential order.
Repeat	Repeats the current song.
Repeat Off	Cancels repeat play to play songs in sequential order.
Next Song	Plays the next song.
Previous Song	Plays the previous song.
Search Song	Moves to the song selection screen.
Information	Displays the information screen of the current song.



## Multimedia System

- **My Music Commands:** Commands that can be used while playing My Music.

Command	Function
Random	Randomly plays all saved files.
Random Off	Cancel random play to play files in sequential order.
Repeat	Repeats the current file.
Repeat Off	Cancel repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Search File	Moves to the file selection screen.
Information	Displays the information screen of the current file.
Delete	Deletes the current file. You will bypass an additional confirmation process.
Delete All	Deletes all files saved in My Music. You will bypass an additional confirmation process.

 
- **Bluetooth® Wireless Technology Audio Commands:** Commands that can be used while playing Phone Music.

Command	Function
Play	Plays the currently paused song.
Pause	Pauses the current song.

## SETUP (FOR RDS, BLUETOOTH® WIRELESS TECHNOLOGY EQUIPPED MODEL)

### Starting Mode

Press the **SETUP** key ▶ Select the Setup screen.

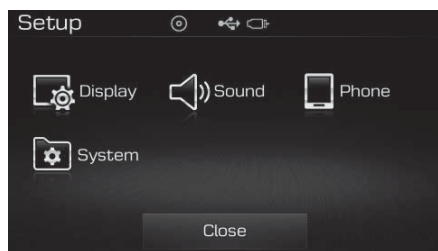


You can select and control options related to [Display], [Sound], [Phone] and [System].

### Display Settings
 
#### Adjusting the Brightness

Press the **SETUP** key ▶ Select [Display] ▶ Select [Brightness]

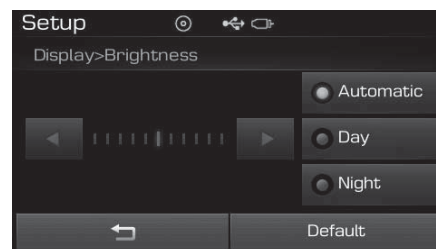


Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Day, or Night mode.

Press the **Default** button to reset.

- 1) Automatic : Adjusts the brightness automatically
- 2) Day : Always maintains the brightness on high
- 3) Night: Always maintains the brightness on low

### Pop-up Mode

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Pop-up Mode]

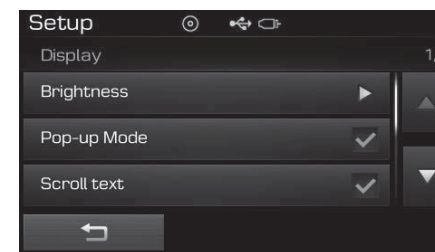

This feature is used to display the Pop-up Mode screen when entering radio and media modes.

When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Pop-up Mode screen.


#### \* NOTICE

 The media Pop-up Mode screen can be displayed only when two or more media modes have been connected.

## Multimedia System

### Scroll Text

Press the **SETUP** key ▶ Select [Display] ▶ Select [Scroll text]

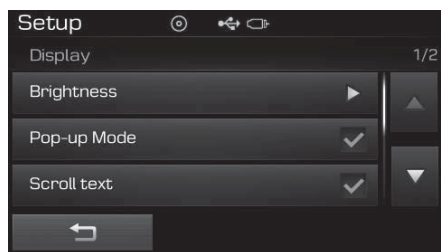


This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

### MP3 Information Display

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Song Info]

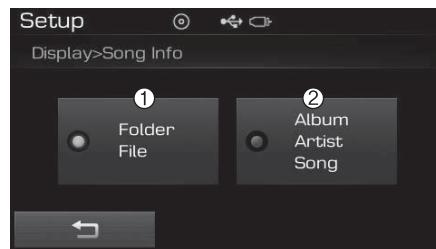


This feature is used to change the information displayed within USB and MP3 CD modes.

- 1) Folder File : Displays file name and folder name
- 2) Album Artist Song : Displays album name/artist name/song

### Sound Settings
 
#### Audio Settings

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Audio Setting]

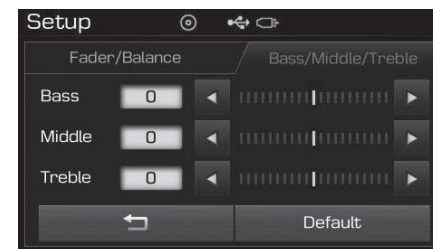


Use the **◀**, **▶**, **▲**, **▼** buttons to adjust the Fader/Balance settings.

Use the **◀**, **▶** buttons to adjust the Bass/Middle/Treble settings.

Press the **Default** button to reset.

### ***SDVC (Speed Dependent Volume Control)***

 
Press the **SETUP** key ▶ Select [Sound] ▶ Select [Speed Dependent Vol.]

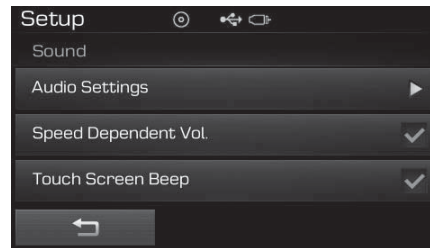

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On / Off.

### ***Touch Screen Beep***

 Press the **SETUP** key ▶ Select [Sound] ▶ Select [Touch Screen Beep]

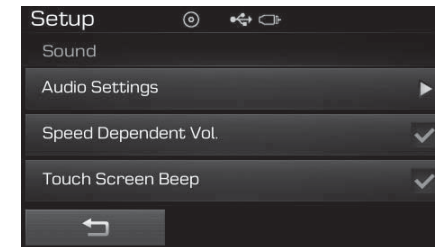


This feature is used to turn the touch screen beep on/off.

## Multimedia System
 
### Bluetooth® Wireless Technology Setting

#### Pairing a New Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

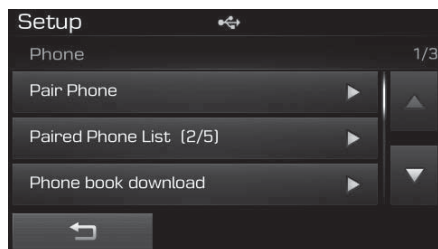


Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the “Pairing through Phone Setup” section within *Bluetooth® Wireless Technology*.

#### Viewing Paired Phone List

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

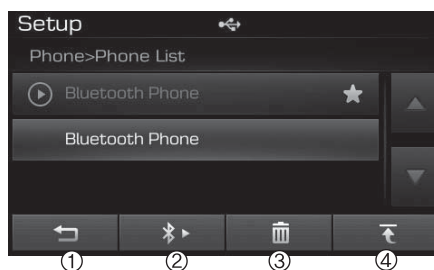

This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the “Setting *Bluetooth® Wireless Technology Connection*” section within *Bluetooth® Wireless Technology*.


- 1) : Moves to the previous screen
- 2) : Connect/ disconnects currently selected phone
- 3) : Deletes the currently selected phone
- 4) : Sets currently selected phone to highest connection priority

#### \* NOTICE BEFORE DOWNLOADING PHONE BOOKS

 - Only phone books within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports phone book downloads, refer to your mobile phone user’s manual.
- The Phone book for only the connected phone can be downloaded. Before downloading, check to see whether your phone supports the download feature.

### Downloading Phone books

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Phone book Download]

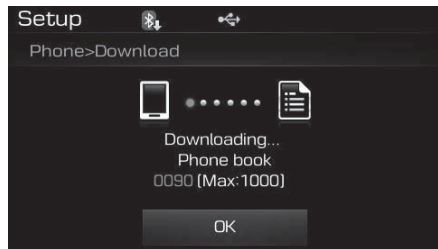


The Phone book is downloaded from the mobile phone and the download progress is displayed.

#### \* NOTICE

 - Up to 1,000 phone book entries can be copied into car phone book.
- Up to 1,000 phone book entries can be saved for each paired device.
- Upon downloading phone book data, previously saved phone book data will be deleted. However, Phone book entries saved to other paired phones are not deleted.

### Auto Download (Phone Book)

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Auto Download]

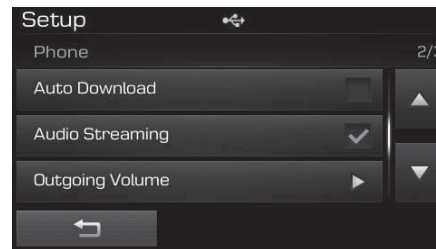


This feature is used to automatically download mobile phone book entries once a *Bluetooth*® Wireless Technology phone is connected.

#### \* NOTICE

 - The Auto Download feature will download mobile phone book entries every time the phone is connected. The download time may differ depending on the number of saved phone book entries and the communication state.
- When downloading a phone book, first check to see that your mobile phone supports the phone book download feature.

### Audio Streaming

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Audio Streaming]

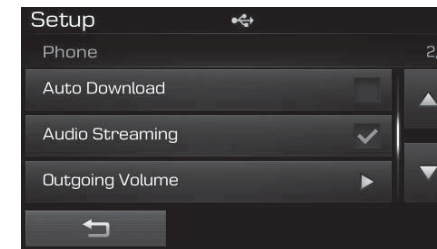


When Audio Streaming is turned on, you can play music files saved in your *Bluetooth*® Wireless Technology device from the car.

## Multimedia System
 
### Outgoing Volume

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Outgoing Volume]


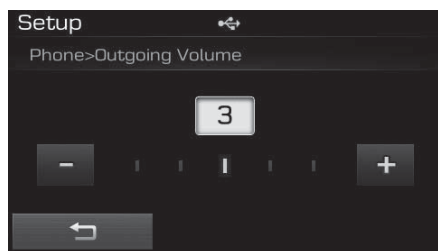


Use the **-**, **+** buttons to adjust the outgoing volume level.

### Turning Bluetooth System Off

  Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]

Once *Bluetooth*<sup>®</sup> Wireless Technology is turned off, *Bluetooth*<sup>®</sup> Wireless Technology related features will not be supported within the audio system.

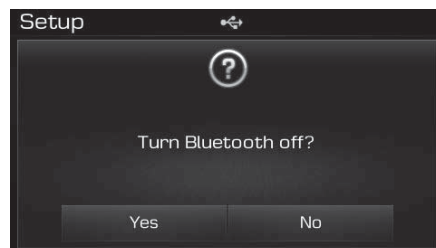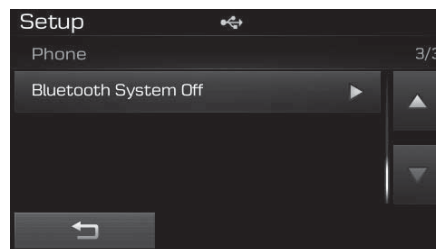


### \* NOTICE

To turn *Bluetooth*<sup>®</sup> Wireless Technology back on, go to **SETUP** ▶ [Phone] and press “Yes”.

## System Setting

### Memory Information

 Press the **SETUP** key ▶ Select [System] ▶ Select [Memory Information]

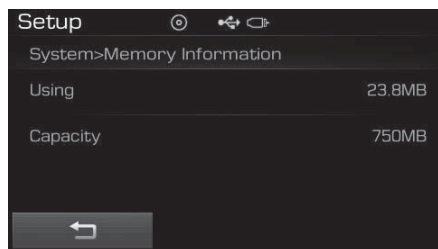


This feature displays information related to system memory.

- 1) Using : Displays capacity currently in use
- 2) Capacity : Displays total capacity

### Language

 Press the **SETUP** key ▶ Select [System] ▶ Select [Language]

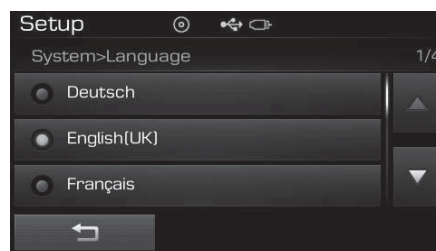

This feature is used to change the system and voice recognition language.

If the language is changed, the system will restart and apply the selected language.




## Multimedia System
 
### SETUP

(for Bluetooth® Wireless Technology equipped model)

#### Starting Mode

Press the **SETUP** key ▶ display the Setup screen.

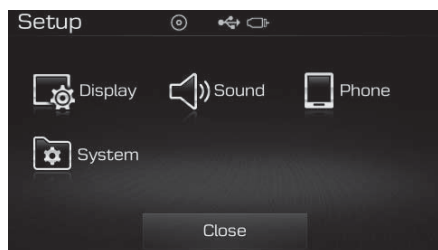


You can select and control options related to [Display], [Sound], [Phone] and [System].

### Display Settings
 
#### Adjusting the Brightness

Press the **SETUP** key ▶ Select [Display] ▶ Select [Brightness]

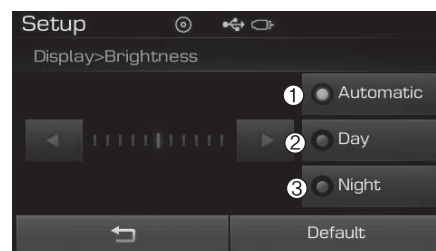

Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Daylight, or Night mode.

Press the **Default** button to reset.

- 1) Automatic : Adjusts the brightness automatically
- 2) Day : Always maintains the brightness on high
- 3) Night: Always maintains the brightness on low

### Mode Pop up

Press the **SETUP** key ▶ Select [Display] ▶ Select [Mode Pop up]



This feature is used to display the Mode Pop up screen when entering radio and media modes.

 
When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Mode Pop up screen.

#### \* NOTICE

The media Mode Pop up screen can be displayed only when two or more media modes have been connected.

### Text Scroll


Press the **SETUP** key ▶ Select [Display] ▶ Select [Text Scroll]

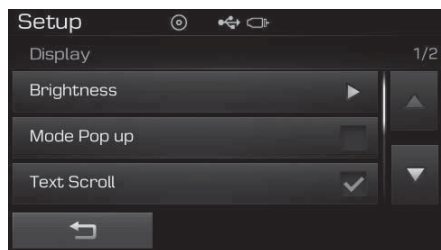

This feature is used to scroll text displayed on the screen when it is too long to be displayed at once. When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

### MP3 Information Display

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Media Display]

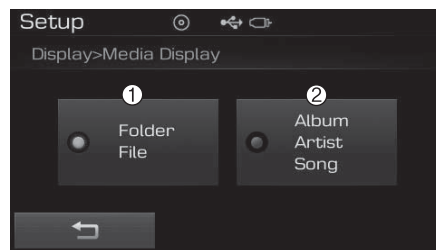


This feature is used to change the information displayed within USB and MP3 CD modes.

- 1) Folder File : Displays file name and folder name
- 2) Album Artist Song : Displays album name/artist name/song

### Sound Settings
 
#### Sound Settings

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Sound Setting]

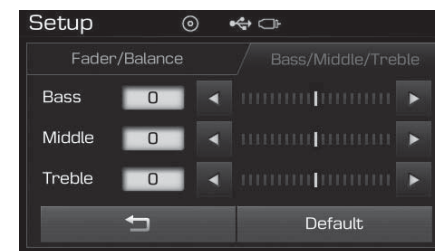

## Multimedia System

 
Use the **◀**, **▶**, **▲**, **▼** buttons to adjust the Fader/Balance settings.

Use the **◀**, **▶** buttons to adjust the Bass/Middle/Treble settings.

Press the **Default** button to reset.

### ***SDVC (Speed Dependent Volume Control)***

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Speed Dependent Vol.]

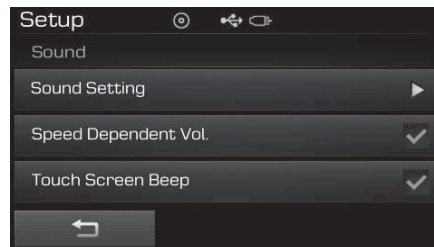

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On/Off.


### ***Touch Screen Beep***

 Press the **SETUP** key ▶ Select [Sound] ▶ Select [Touch Screen Beep]

## Bluetooth® Wireless Technology Setting

### Pairing a New Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

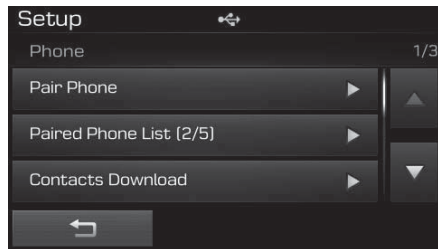


Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the “Pairing through Phone Setup” section within Bluetooth® Wireless Technology.

### Viewing Paired Phone List

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

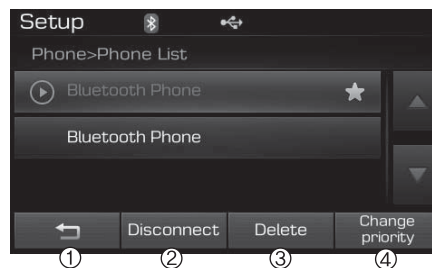

This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the “Setting Bluetooth® Wireless Technology Connection” section within Bluetooth® Wireless Technology.

- 1) : Moves to the previous screen
- 2) Connect/Disconnect Phone : Connect/ disconnects currently selected phone
- 3) Delete : Deletes the currently selected phone
- 4) Change Priority : Sets currently selected phone to highest connection priority


### \* NOTICE BEFORE DOWNLOADING CONTACTS

 - Only contacts within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports contacts downloads, refer to your mobile phone user’s manual.
- The contacts for only the connected phone can be downloaded. Before downloading, check to see whether your phone supports the download feature.

## Multimedia System

### Downloading Contacts

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Contacts Download]

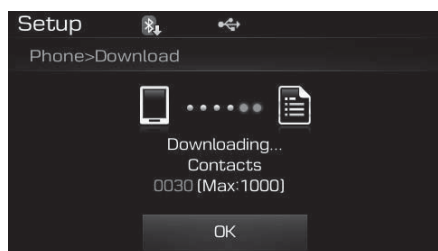


The contacts is downloaded from the mobile phone and the download progress is displayed.

#### \* NOTICE

 - Up to 1,000 contacts entries can be copied into car contacts.
- Up to 1,000 contacts entries can be saved for each paired device.
- Upon downloading contacts data, previously saved contacts data will be deleted. However, contacts entries saved to other paired phones are not deleted.

### Auto Download (Contacts)

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Auto Download]

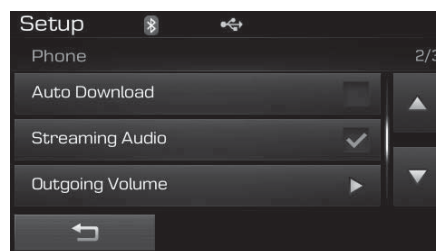


This feature is used to automatically download mobile contacts entries once a *Bluetooth*® Wireless Technology phone is connected.

#### \* NOTICE

 - The Auto Download feature will download mobile contacts entries every time the phone is connected. The download time may differ depending on the number of saved contacts entries and the communication state.
- When downloading a contacts, first check to see that your mobile phone supports the contacts download feature.

### Streaming Audio


Press the **SETUP** key ▶ Select [Phone] ▶ Select [Streaming Audio]

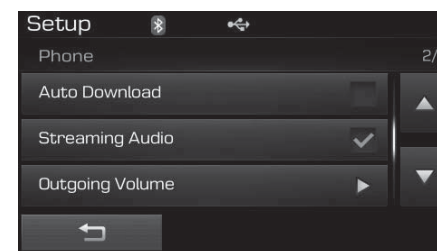

When Streaming Audio is turned on, you can play music files saved in your *Bluetooth*® Wireless Technology device from the car.

### Outgoing Volume

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Outgoing Volume]


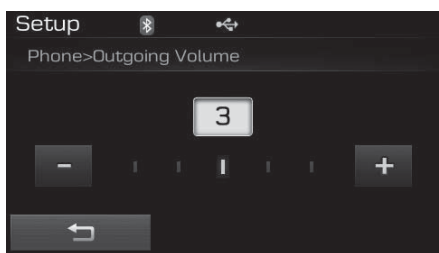


Use the **-**, **+** buttons to adjust the outgoing volume level.

### Turning Bluetooth System Off

  Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]

Once *Bluetooth*<sup>®</sup> Wireless Technology is turned off, *Bluetooth*<sup>®</sup> Wireless Technology related features will not be supported within the audio system.

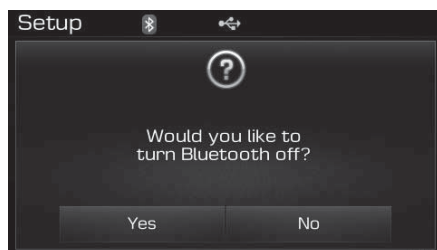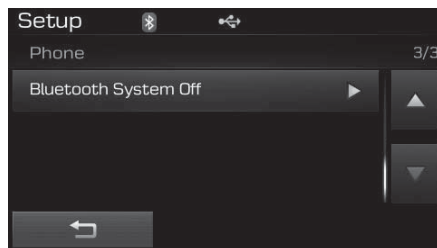


#### \* NOTICE

To turn *Bluetooth*<sup>®</sup> Wireless Technology back on, go to **SETUP** ▶ [Phone] and press “Yes”.

### System Setting

#### Memory Information

 Press the **SETUP** key ▶ Select [System] ▶ Select [Memory Information]

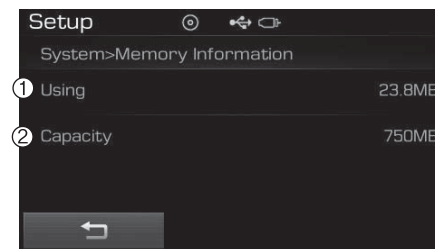

This feature displays information related to system memory.

- 1) Using : Displays capacity currently in use
- 2) Capacity : Displays total capacity

## Multimedia System

### REAR VIEW CAMERA (if equipped)

- The system has been equipped with a rear view camera for user safety by allowing a wider rear range of vision.
- The rear view camera will automatically operate when the ignition key is turned ON and the transmission lever is set to R.
- The rear view camera will automatically stop operating when set to a different lever.

 **CAUTION**

**The rear view camera has been equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. For safety, directly check the rear and left/right sides.**

## Features of your vehicle

### APPENDIX

Name	Description
Monday	Monday
Tuesday	Tuesday
Wednesday	Wednesday
Thursday	Thursday
Friday	Friday
Saturday	Saturday
Sunday	Sunday
Use tune knob	Use tune knob
Volume	Volume
Max	Volume maximum
Min	Volume minimum
AST (Auto store)	Automatically selects and saves channels
No Media	Empty media file in CD or USB
No File	Empty media file in CD or USB
Empty File	Empty media file in MY MUSIC
Info (Information)	Information of playing files
Artist	Artist name, MP3/CD file currently being played
Title	Song name, MP3/CD file currently being played
Album	Album name, MP3/CD file currently being played
Genres	"Genres" is keyword for searching mode of playlists for iPod
Composers	"Composers" is filtering keyword for searching mode of playlists for iPod

Name	Description
Playlists	"Playlists" is filtering keyword for searching mode of playlists for iPod
Songs	"Songs" is filtering keyword for searching mode of playlists for iPod
Audiobooks	"Audiobooks" is filtering keyword for searching mode of playlists for iPod
Podcasts	"Podcasts" is filtering keyword for searching mode of playlists for iPod
RPT (Repeat)	Audio play mode of Repeat
FLD.RPT (Folder Repeat)	Audio play mode of Folder Repeat
RDM (Random)	Audio play mode of Random
FLD.RDM (Folder Random)	Audio play mode of Folder Random
ALL RDM (All Random)	Audio play mode of All Random
COPY	Copy MP3 file to flash memory for MY MUSIC
Cancel copy	Cancel copy mode
File copied	Completed File copy
Free	Free size of memory
Copy failed	Copy failed
Search	Search files
Loading CD	Loading CD
Reading CD	Reading CD
Reading Error	Reading Error
Mechanism Error	Mechanism Error



## Features of your vehicle

Name	Description
Ejecting CD	Ejecting CD
Audio CD	Audio CD
Track	Audio CD song order
Reading Media	Reading Media
Not supported	Not supported file format
Empty iPod	Empty iPod, iPod don't have playable data
Communication Error	Communication error between audio and iPod or usb
Delete	Delete the paired phone or files in MY MUSIC
Del.All	Delete all files
Del.Sel	Select files to delete
Return	Return menu
List	List files or paired phones
Select Files	Select Files
Memory is full, Delete files	Memory is full, Delete files
Over 6000 files. can copied not be copied	Over 6000 files. can not be
Over 1000 same files can not be copied	Over 1000 same files can not be copied
System will automatically switchoff after 1 hour with ignition off	System will automatically switchoff after 1 hour with ignition off
Battery discharge Start the engine	Battery discharge Start the engine

Name	Description
Setup	Setup
Display	Setup display mode
Mode Pop up	This function is used to select popup menu on or off
Scroll text	This function is used to display characters longer than the LCD text displays
Song Info	Setup display information being played
Folder/File	Display Folder/file name, file currently being played
Album/Artist/Song	Display Album/Artist/Song name, file currently being played
Sound	Setup sound mode
Audio Settings	Setup Audio settings that consist BASS,Middle,Treble,Fader and Balance
PowerBass	This function is used to improve bass sound quality
Speed Dependent Vol.	Automatically adjust the volume according to the car speed
Volume Dialogue	Adjust volume level of Dialogue
Bass	Bass is sound of low frequency. It can be adjusted sound by user
Middle	Middle is sound of middle frequency. It can be adjusted sound by user

## Features of your vehicle

Name	Description
Treble	Treble is sound of high frequency. It can be adjusted sound by user
Fader	Fader is sound position between FRONT and REAR. It can be adjusted sound by user
Balance	Balance is sound position between Right and Left. It can be adjusted sound by user
Default	This function is used to initialize setting value
Clock	Setup time
Clock Settings	Enters time advanced settings
Day Settings	Enters day advanced settings
Time Format	Refer to the time display The time can be displayed in 12 hours or 24 hours
Clock Disp.(Pwr Off)	This function is used to select clock display mode in power off
Automatic RDS Time time automatically.	This function is used to set the RDS
System	Setup system or system information
Memory Information	Display used memory size
VRS Mode	Setup Voice command mode
Normal	Normal mode. This function is used to set default value of voice recognition factor

Name	Description
Expert	Expert mode. This function is used to set exercised value of voice recognition factor
Language	This function is used to select user language
Deutsch	Deutsch
English(UK)	English(UK)
Français	French
Italiano	Italian
Español	Spanish
Nederlands	dutch
Svenska	swedish
Dansk	Danish
Русский	Russian
Polski	Polish
Türkçe	Turkish
The system will be rebooted	The system will be rebooted
Please change language when ignition ON	Please change language when ignition ON
Bluetooth not ready Please wait	You can use BT System for a moment Because BT system is being initialized
Add a new Bluetooth device from your phone	Add a new <i>Bluetooth</i> ® Wireless Technology device from your phone
Processing Bluetooth Please try later	You can use BT System for a moment Because BT system is being initialized or processing other command

## Features of your vehicle

Name	Description
Incoming Call	Receiving phone
Call Ended	Call Ended
Call Rejected	When there is unwanted call, You push the button on the steering remote controller
Unknown	"Unknown" mean Headunit or phone don't have any information about phone number
Call is not possible	Call is not possible
MIC Mute	Microphone mute
Activate Bluetooth System?	Activate <i>Bluetooth</i> <sup>®</sup> Wireless Technology System
Bluetooth System activated	<i>Bluetooth</i> <sup>®</sup> Wireless Technology system activated
No phone paired. Pair a phone?	Empty phone paired. Pair a phone?
No connected phone. Connect a phone?	No connected phone. Connect a phone?
Phone book is empty. Download?	Phone book is empty
Available only when	This is a warning, Do not enter the MENU about BT Setup. When vehicle is moving
Listening...	Listen to instruction of audio
Phone book Download vehicle is stationary	Downloading phone book from phone paired to audio
Auto Download	After pairing phone, audio system automatically download phone book

Name	Description
Audio Streaming	After pairing phone, audio system can support <i>Bluetooth</i> <sup>®</sup> Wireless Technology streaming mode
Outgoing Volume	Set outgoing volume "0 ~ 5"
Bluetooth System Off	Turn off <i>Bluetooth</i> <sup>®</sup> Wireless Technology System
Bluetooth System ON	Turn on <i>Bluetooth</i> <sup>®</sup> Wireless Technology System
Device :	<i>Bluetooth</i> <sup>®</sup> Wireless Technology device name
Passkey	Passkey for pairing a phone
Pairing complete	Pair a <i>Bluetooth</i> <sup>®</sup> Wireless Technology phone to the audio
Pairing failed	Audio & Phone connection have failed
Already 5 devices paired. Delete a paired phone?	All 5 phones have already been paired. Delete a previously paired phone to pair new phone
Connection complete	Audio & Phone connection have succeed
Connection failed. Retry?	Audio & Phone connection have failed
Priority changed	Changed priority about the registered phones
Overwrite previous phone book?	Overwrite previous phone book information

## Features of your vehicle

Name		Description
Phone does not support Phone book download		Phone does not support Phone book download
No connected Bluetooth device		There are phone in the connec- tion list
Phone does not support Bluetooth audio		But it was actually not connected BT pairing
Downloading stopped		Downloading stopped

## WARNING & SAFETY INFORMATION

### Safety Symbols



- When encountering this symbol in the manual, you must follow these recommendations to avoid irreparable damage to your car, system or connected devices or to avoid accidents with injuries or death.

### IC Information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:  
(1) this device may not cause interference, and  
(2) this device must accept any interference, including interference

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

### FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### FCC notification to users

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by consulting with a dealer or an experienced technician for technical assistance.

**Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.**