

Table of contents

WARNING & SAFETY INFORMATION

Safety Symbols	8
FCC Information	8
Warning	9
Caution	9

PART 1 GETTING STARTED

Controls and Features

Control Panel	1-2
Steering Wheel	1-4

Basic Features

System Power	1-6
1. Turning System Power On	1-6
2. Turning System Power Off	1-6
Select Display Language	1-7
Resetting and Initializing UVO system ...	1-7
1. Resetting the system	1-7
2. Initializing the system	1-8

Sound and Display Settings

Sound Settings	1-9
1. FADER/BALANCE	1-9
2. TONE	1-10
3. Touch Screen Beep	1-10
4. Speed Dependent Volume Control ...	1-10
Display Settings	1-11
1. Setting Brightness	1-11
• Automatic Brightness Control	1-11
• Manual Brightness Control	1-11
Turning Display On and Off	1-12
Turn Text Scroll On and Off	1-13

PART 2 AUDIO FEATURES

FM/AM MODE

FM/AM Mode Screens and Features	2-2
Listening to the FM/AM radio	2-3
1. Selecting a broadcast frequency	2-3
• Selecting through SEEK	2-3
• Selecting through manual search ...	2-4
• Selecting through preset	2-4
2. Storing presets	2-4
3. Scanning FM/AM broadcast frequencies	2-5
4. Preset Scan	2-5
5. Listening to HD Radio™ Stations (Optional)	2-5
6. Viewing FM/AM Station information	2-5

SIRIUS™ MODE

SIRIUS™ Mode Screen and Features	2-6
Listening to the SIRIUS™ radio	2-6
1. Selecting a SIRIUS™ channel	2-6
• Selecting through SEEK	2-6
• Selecting through manual search ...	2-7
• Selecting through preset	2-7
• Selecting through channel search ...	2-7
• Selecting through SIRIUS™ category list ...	2-8
2. Using Skip	2-8

Table of contents

3. Storing preset	2-9	1. Selecting through song Up/Down	2-18	Copying songs into JUKEBOX	2-26
4. Viewing SIRIUS™ channel information	2-9	2. Selecting through manual search	2-18	1. Copying the current song	2-26
MEDIA MODE		3. Selecting from MP3 list	2-18	2. Copying songs from list	2-27
Common Features	2-10	4. By Artists, Albums, Genres, Songs		iPod® MODE	
• Play/Pause	2-10	Composers	2-18	About iPod®	2-28
• REW/FF	2-10	Explore CD	2-19	1. Trademark	2-28
• Jump	2-11	Viewing song information	2-19	2. Connecting your iPod® device	2-28
• Using Repeat	2-11	Copying songs into JUKEBOX	2-19	iPod® Mode Screen and Features	2-29
• Using Shuffle	2-11	1. Copying the current song	2-19	Listening to your iPod®	2-29
AUDIO CD MODE		2. Copying songs from list	2-20	Selecting iPod® music	2-30
Cautions upon handling Audio CDs	2-12	USB MODE		1. Selecting through song Up/Down	2-30
AUDIO CD Mode Screen and Features	2-14	Cautions upon handling USB MP3	2-21	2. Selecting through manual search	2-30
Inserting/Ejecting a Disc	2-14	Precautions upon handling USB	2-22	3. Selecting from the list	2-30
1. Inserting a Disc	2-14	Connecting your USB device	2-23	4. By Artists, Albums, Genres, Songs,	
2. Ejecting a Disc	2-14	USB Mode Screen and Features	2-23	Podcasts, Composers, Audiobooks	2-30
Listening to an Audio CD	2-15	Listening to USB music	2-24	Viewing song information	2-31
Selecting a CD track	2-15	Selecting USB music	2-24	zune® MODE	
1. Selecting through Track Up/Down	2-15	1. Selecting through song Up/Down	2-24	About zune®	2-32
2. Selecting through manual search	2-15	2. Selecting through manual search	2-24	1. Trademark	2-32
MP3 CD MODE		3. Selecting from the list	2-25	2. Connecting your zune® device	2-32
Cautions upon handling MP3 CD	2-16	4. By Folders, Artists, Albums, Genres		zune® Mode Screen and Features	2-32
MP3 CD Mode Screen and Features	2-17	Songs, Composers	2-25	Listening to your zune®	2-33
Listening to an MP3 CD	2-17	Explore USB	2-25	Selecting zune® music	2-33
Selecting an MP3 CD song	2-18	Viewing song information	2-26	1. Selecting through song Up/Down	2-33

2. Selecting through manual search	2-33
3. Selecting from the list	2-33
4. By Songs, Genres, Albums, Artists, Playlists	2-34
Viewing song information	2-34

AUX MODE

AUX Mode Screen	2-35
Connecting an AUX media device	2-35
Listening to AUX media	2-35

BT AUDIO MODE

BT Mode Screen and Features	2-36
Listening to music from your <i>Bluetooth</i> [®] wireless technology enabled device	2-37
Selecting a song	2-37
REW/FF a song	2-37

JUKEBOX MODE

JUKEBOX Mode Screen and Features...	2-38
Listening to JUKEBOX	2-39
Selecting a JUKEBOX song	2-39
1. Selecting through song Up/Down	2-39
2. Selecting through manual search	2-39
3. Selecting from the list	2-39

4. By Artists, Albums, Genres, Song, Composers	2-40
Adding Favorites	2-40
Playing Favorites	2-41

Memory Management

Checking System Information	2-42
Deleting JUKEBOX	2-42
1. Deleting JUKEBOX	2-42
2. Deleting all files	2-43

PART 3 PHONE FEATURES

Using your *Bluetooth*[®] wireless technology

Handsfree system

.....	3-2
-------	-----

Smart driving practices

.....	3-3
-------	-----

Pairing your handset device to the handsfree system

Pairing a <i>Bluetooth</i> [®] wireless technology enabled device for the first time	3-4
Deleting a paired handset device	3-5
Connecting a handset device	3-6
Setting Priority	3-7

Using the phone features

Phone Mode Screens and Features	3-8
1. When a mobile phone is connected...	3-8
2. When making a call	3-8
3. When receiving an incoming call	3-9
4. When on a call	3-9
Answering an incoming call	3-10
Rejecting an incoming call	3-10
Call waiting	3-10
Placing a call	3-11
1. By dialing a number	3-11
2. By contact list	3-12
3. By recent calls	3-12
Contact list	3-13
1. Downloading contact list (from mobile phone)	3-13
Searching your contacts	3-14
1. By name	3-14
2. By number	3-15
Checking missed calls	3-16
Favorites	3-16
1. Placing a call by favorites	3-16
2. Adding favorites	3-17
3. Deleting favorites	3-17

WARNING & SAFETY INFORMATION

Safety Symbols

Warning

- When encountering this symbol in the manual, you must follow these recommendations to avoid irreparable damage to your car, system or connected devices or to avoid accidents with injuries or death.

IC Information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisee aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation.

FCC notification to users

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by consulting with a KIA dealer or an experienced technician for technical assistance.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

WARNING & SAFETY INFORMATION

Warning

Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and/or death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



- Read and understand all instructions before you use the system. If damage is caused by failure to follow instructions, the warranty will not apply.



- Do not operate the audio system in an unsafe manner while driving.



- Do not dismantle, assemble, or modify the audio system.



- Do not look at the screen for long periods of time while driving.



- To reduce the risk of traffic accidents, do not watch the screen when driving.
- Set the volume to a level which allows you to be aware of external conditions.



- Use only the supplied mounting hardware for safe operation.

Caution



- Do not operate the audio system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.



- Do not expose the device to water.
- Never insert foreign objects into the slots or other openings on the device.



- Do not cause severe shock to the device. Direct pressure to the front side of the monitor may cause damage to the LCD or touch panel.



- In case of product malfunction, contact your nearest, or preferred, Kia dealer or service center.



- Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

WARNING & SAFETY INFORMATION

 
- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call us at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes apply. All fees and programming are subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. Certain channels are not available on our Internet radio service or on mobile devices. SiriusXM Traffic available in select markets. See siriusxm.com/traffic for more information. © 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Infinity is a trademark of Harman International Industries, Inc.
- **UVO eServices is compatible with many popular smartphone devices. Please see MyUVO.com for phone compatibility.**
- **App Store and Google Play are service marks of Apple Inc. and Google Inc. respectively. No charge for the UVO eServices app. App runs on your smartphone cellular data service. Normal data rates will apply.**

- HD Radio™ and the HD Radio™ logo are proprietary trademarks of iBiquity Digital Corporation.
- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.
- Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
- 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
- The rear-camera display is not a substitute for proper and safe backing-up procedures. The rear-camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

PART 1 GETTING STARTED



Controls and Features

Control Panel



※No will be shown if the exterior Amplifier feature is not supported.

1 DISC EJECT

Ejects the inserted disc.

2 FM/AM

Turns on FM/AM mode. Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.

3 SAT

Turns on SIRIUS™ mode.

4 MEDIA

Turns on MEDIA mode. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → CD.

5 POWER/VOL

Push : Turns Power On/Off.

Dial : Turns Volume Up/Down.

6 SEEK/TRACK

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file.

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

7 V CATEGORY ^

In SIRIUS™ mode, moves to the previous or next SIRIUS™ category.

8 TUNE/ENTER

In FM/AM mode, turn the knob to manually search for frequencies.

In SIRIUS™ mode, turn the knob to manually search for channels. Press the knob to receive the selected channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®), turn the knob to manually search for the previous or next track, song, or file. Press the knob to receive the selected track, song, or file.

In JUKEBOX mode, turn the knob to manually search for the previous or next track. Press the knob to receive the selected track.

9 SETUP

Displays SETUP mode.

10 PHONE

Displays *Bluetooth*® wireless technology Phone mode.

11 eServices

Displays UVO eServices mode.

12 DISP

Turns off the screen.

13 RESET

Reset the system to be used if system is acting abnormally.

Steering Wheel



1 ▾ SEEK/TRACK ▲

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next preset frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next preset channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file.

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

2 + VOLUME -

Turns Volume Up/Down.

3 MODE

Short (under 0.8 seconds)

Changes the mode. Each press will change modes in the order of FM → AM → SIRIUS™ → CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → FM.

Long (over 0.8 seconds)

While the system is off, turn the system on.
While the system is on, turn off the system.

4 MUTE

Mutes the sound.

5 Voice Command

Short (under 0.8 seconds)

If Voice recognition is off, turns on Voice recognition.

If system is speaking, interrupts speaking and enters listening mode.

Long (over 0.8 seconds)

If Voice recognition is on, turns off Voice recognition.

6 SEND (Bluetooth® wireless technology Phone)

Pressing this key will receive an incoming call. If the Audio is on, the *Bluetooth*® wireless technology phone screen will be displayed.

When a SMS message is received, reads back message.

7 END (Bluetooth® wireless technology Phone)

Pressing this key will reject an incoming call. If pressed during a call, the current call will be ended.

When a SMS message is received, ignores message.


Basic Features

System Power

1. Turning System Power On



1. Turn on the ignition.

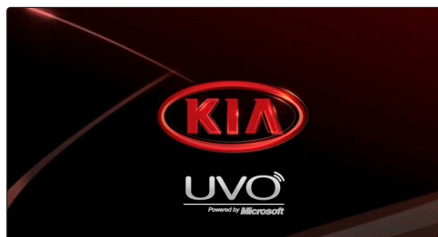

2. While the system is off, press the **POWER/VOL** knob to turn the system on.

3. The system will automatically restore the most recently played mode. For example, pressing the **POWER/VOL** knob will turn on the system and display FM radio mode if FM mode had been the last operated mode prior to turning off the system.
4. You can also turn the system on by pressing the **FM/AM**, **SAT** and **MEDIA** keys.

Note

- Pressing any one of the **FM/AM**, **SAT**, and **MEDIA** keys will turn on the system and display the last mode corresponding to each key. For example, pressing the **MEDIA** key while a CD or other media source is loaded, will turn on the system and display CD mode if the last operated MEDIA mode prior to turning off the system had been CD mode.

2. Turning System Power Off

1. While the system is on, press the **POWER/VOL** knob to turn off the system.

Note


- If the system power was on when the ignition was turned off, the system will turn back on automatically. Conversely, if the system power was off when the ignition was turned off, the system will remain off.
- If the battery voltage is low, the audio may take a prolonged time to boot upon turning on the vehicle.

Select Display Language


The UVO system allows you to select the preferred display language for maximum convenience and system usability. The system provides you with options of three languages - English, French (Canadian) and Spanish. The default language is English.




1. Press the **SETUP** key on the control panel.

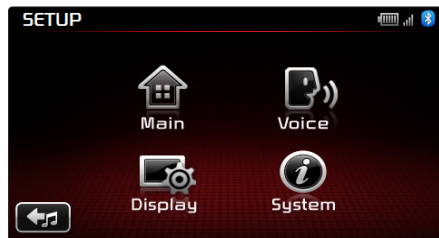

2. Press the **Main** button.

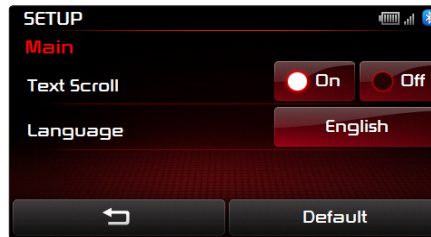

3. Press the **English** button next to the Language menu.

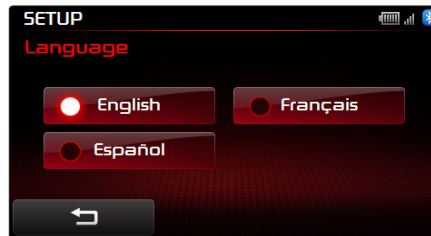


4. Select the desired language.
5. The system will reboot and automatically restore the most recent mode in the new language.

Resetting and Initializing UVO system

1. Resetting the system

If the system is behaving abnormally, press the reset button to reset the system.

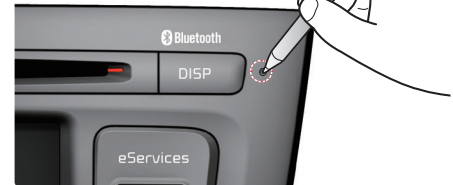

1. Use a ball-point pen or similar object to press the **RESET** key.
2. The system will reboot and automatically restore the most recent mode.

! Caution

- The reset button should only be used in case of system malfunction. Never use the reset key while the system is operating normally.
- If you wish to reset while the system is operating normally, turn the power off first then reset.



PART 1 | GETTING STARTED

2. Initializing the system



1. Press the **SETUP** key on the control panel.

2. Press the **System** button.

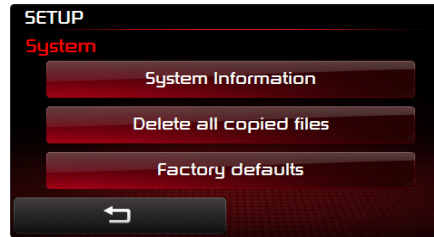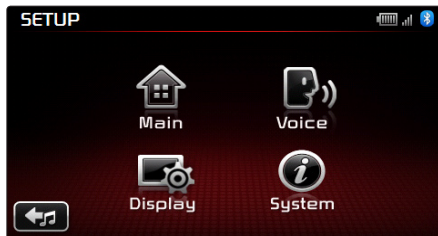

3. Press the **Factory defaults** button.


Note

- Initializing the system will erase all Phone settings, and other changes which you have made to the system.
- Some songs in the USB or CD may be misrecognized during the indexing process. If such problems persist, reset the device using the Factory Defaults button in SETUP>System.
- For updating the system, visit <http://www.kia.com>

Sound and Display Settings

Sound Settings

Sound settings can be adjusted from any audio mode. The system allows you to optimize various sound settings to add convenience when listening to the system.

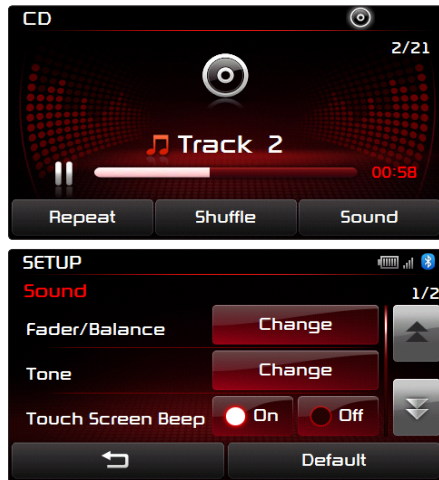

Press the **Sound** button on the main screen of each audio mode (FM/AM, SIRIUS™, MEDIA,


JUKEBOX) to enter Sound Setup.

Note

- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. FADER/BALANCE

Fader/Balance allows you to adjust the position of sound within the vehicle. For instance, adjusting the sound so that it is closer to the driver-side seat will proportionally lower the volume in the passenger-side and rear seats.

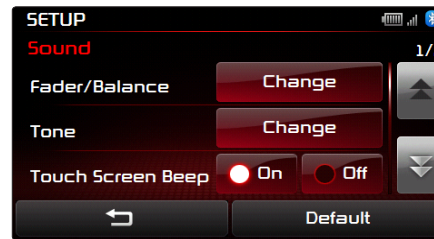

1. Press the Fader/Balance setting button.




2. Use the **▲**, **▼**, **◀**, **▶** buttons to make adjustments to the sound position.
3. Press the **↩** button to return to Sound Setup.

Note


- Press the **Default** button to restore the default setting.




2. TONE

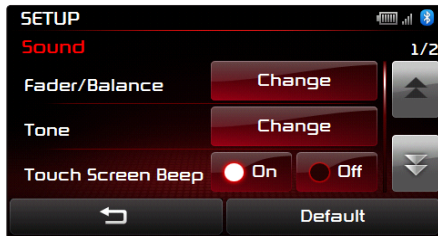Tone allows you to make changes to the Treble, Middle and Bass settings.

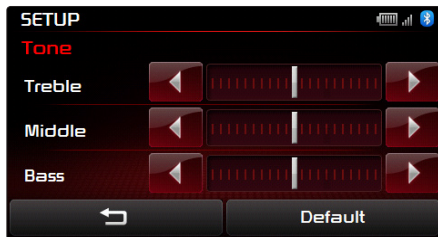

1. Press the Tone setting button.




2. Use the ,  buttons to make adjustments to the Treble, Middle and Bass. Press the  button to return to Sound Setup.



Note

- Press the **Default** button to restore the default setting.

3. Touch Screen Beep

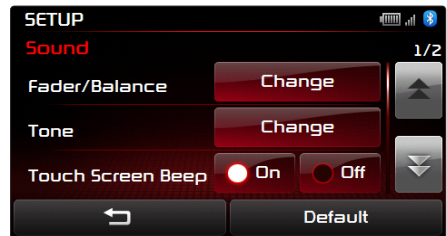
Touch Screen Beep allows you to turn on/off the beep that sounds when you touch the screen.





1. In Sound Setup, press the  or  button next to the Touch Screen Beep menu to turn the feature on or off.

4. Speed Dependent Volume Control

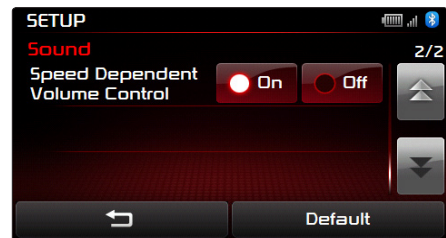Speed Dependent Volume Control allows you to automatically control the volume according to the speed of the vehicle. This feature will gradually increase the volume as speed increases to offset outside noise.




1. Press the  or  button next to the Speed Dependent Volume Control menu to turn the feature on or off.

Display Settings

The various Display setup options offered within the UVO system allow you to change display settings according to your personal preference.



1. Press the **SETUP** key on the control panel.

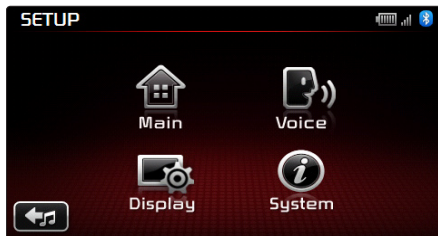

2. Press the **Display** button to enter Display Setup mode.

Note


- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. Setting Brightness


The UVO system allows you to control the screen brightness automatically and manually.

• Automatic Brightness Control

When the Display brightness is set to automatic, the brightness will be controlled automatically by assessing the amount of ambient light.

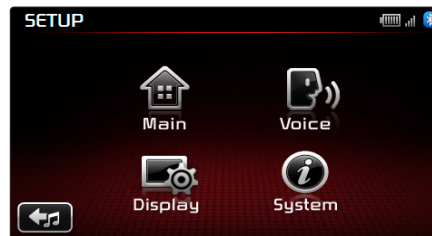


1. Press the **Display** button.

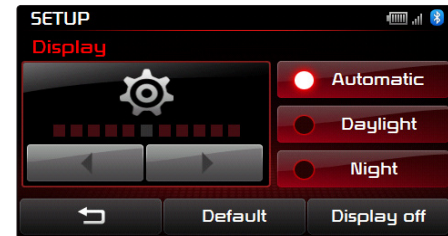

2. Press the **Automatic** button.

• Manual Brightness Control

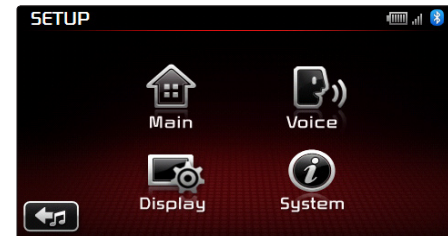

1. Press the **Display** button.



2. Press the **Daylight** or **Night** buttons.




3. Use the **◀**, **▶** buttons to make adjustments to the display brightness.

Note

- When Brightness control is set to **Automatic**, the manual **◀**, **▶** buttons are not active.
- Press the **Default** button to restore the default setting.

Turning Display On and Off

This feature turns off the display, allowing you to listen only to the audio. It is a useful feature when you are driving at night and wish to eliminate glare from the display. Even when the display is off, audio will still be played.

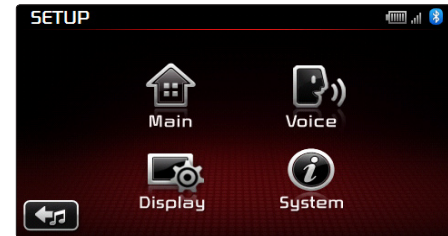

1. Press the **Display** button.



2. Press the **Display off** button.

3. Press any key on the control panel or steering wheel controller to turn the display back on.

Note


- Touching any place on the screen will also turn on the display.

Turn Text Scroll On and Off


Text shown on the screen can be scrolled. Turning on this feature is helpful when viewing long lines of text on the screen.



1. Press the **SETUP** key on the control panel.

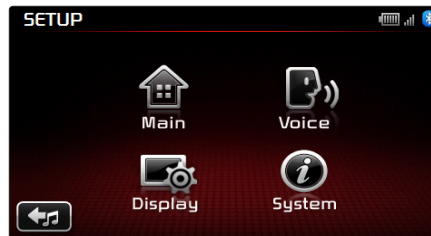


2. Press the **Main** button.

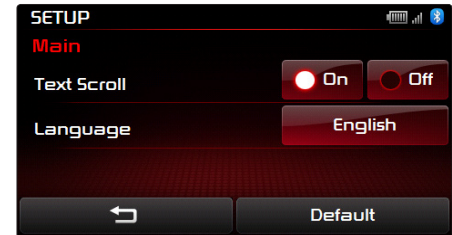

3. Press the **On** or **Off** button next to the Text Scroll menu to turn the feature on or off.

 PART 2 AUDIO FEATURES



FM/AM MODE

FM/AM Mode Screens and Features



1 Mode display

Displays the FM /AM mode.

2 PRESET indicator

If listening to a preset, displays the preset number.

3 Frequency

Displays the current frequency.

4 Program Type

If data is being transmitted, displays the program type.

5 Program Service Name

If data is being transmitted, displays the program service name.

6 Radio text

If data is being transmitted, displays radio text information.

7 HD Radio™ (Optional)

Changes HD Radio™ stations.

Becomes active when an HD Radio™

broadcast is being received.

8 Radio Icon

When pressed while listening to RDS or HD Radio(Optional) stations, displays information about the current station (frequency, station, artist, title).

9 Presets

Enters Preset list screen.

10 Scan

Scans all frequencies and plays only frequencies with high quality reception for 5 seconds each.

11 Sound

Enters Sound Setup.

12 HD Radio™ Station Channel Number (Optional)

Displays the channel number for the current HD Radio™ station.

13 HD Radio™ Station name (Optional)

Displays the name of the HD Radio™ Station.

14 Artist name (Optional)

Displays the artist name.

15 Song Title (Optional)

Displays the title name.

Listening to the FM/AM radio

1. Press the **FM/AM** key on the control panel. The most recently played FM/AM radio band will automatically begin playing.
2. Press the **FM/AM** key to switch to the desired radio band.


 
Note

- Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.
- Even when the system power is off, press the **FM/AM** key to turn on the most recently played FM/AM mode.
- The RDS (Radio Data System) operates in areas with FM stations broadcasting RDS signals.




1. Selecting a broadcast frequency

The UVO system provides you with various ways to search for radio broadcasts. There are 3 ways to select radio broadcasts- selecting through SEEK, selecting through manual search, and selecting through presets.

• Selecting through SEEK

Press the **SEEK TRACK**  or **SEEK TRACK**  keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next radio broadcasts with high quality reception will automatically be searched and played.

Note

- While SEEK is operating, pressing the same **SEEK TRACK**  key will terminate SEEK. Pressing the opposite key will operate SEEK in the reverse direction.
- Press and hold the **SEEK TRACK**  or **SEEK TRACK**  keys (over 0.8 seconds) to quickly move through the frequencies while the button is pressed and held. Once released, the system will automatically search and play the previous or next frequency.


PART 2 | AUDIO FEATURES

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will increase or decrease the frequency by 1 step (FM: 0.2MHz, AM: 10kHz).
2. When you find the desired radio broadcast, stop turning the **TUNE** knob to listen to the selected frequency.

• Selecting through preset

1. Press the **Presets** button.

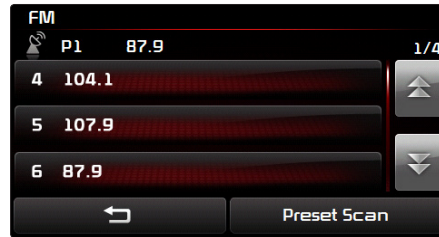

2. Select the desired preset and press the button to start listening.


Note

- Press the **^**, **v** keys (under 0.8 seconds) on the steering wheel controller to flip through the presets sequentially.
- Press and hold the **^**, **v** keys (over 0.8 seconds) on the steering wheel controller to operate SEEK.

2. Storing presets

Presets are a way for you to save your favorite radio broadcasts. Up to 12 presets can be saved in FM mode while up to 6 frequencies can be saved in AM mode.

1. Select the desired radio broadcast.
2. Press the **Presets** button.

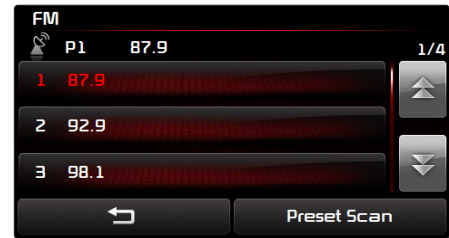

3. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.
4. The current radio broadcast will automatically be saved to the preset number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

3. Scanning FM/AM broadcast frequencies

Radio broadcasts can be scanned to conveniently find radio broadcasts with high quality reception. Each radio broadcast will be played for 5 seconds. This feature is particularly useful when traveling in new areas.



1. Press the **Scan** button.

Note

- When scanning has completed an entire revolution, the scan function will terminate automatically and the previously played frequency will be restored.

4. Preset Scan

Preset scan will scan presets in the current band (FM-12 presets, AM-6 presets) in sequential order. Each preset will be played for 5 seconds.

5. Listening to HD Radio™ Stations (Optional)

HD Radio™ Technology is a digital radio technology used by AM and FM radio stations to transmit audio and data via a digital signal in conjunction with their analog signals.




1. While listening to the radio, the HD Radio™ icon will become displayed if receiving an HD Radio™ broadcast.
2. Press the **HD** button to change to a different HD Radio™ station.

6. Viewing FM/AM Station information

When listening to an HD Radio™ station or RDS radio station, you will be able to view station information.




1. Press the Radio icon.

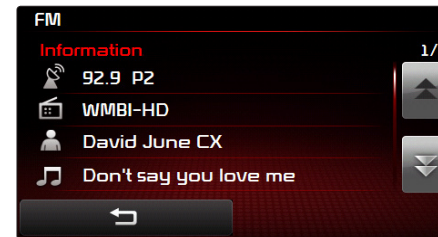

2. Information about the current station (frequency, station, artist, title) will be displayed.

SIRIUS™ MODE

SIRIUS™ Mode Screen and Features

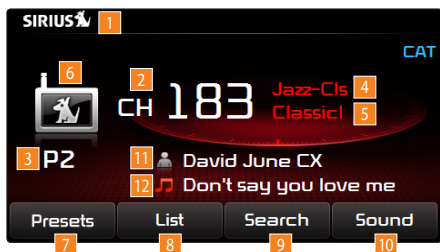

1 Mode display

Displays the current mode as SIRIUS™ mode.

2 Channel number

Displays the current channel number.

3 PRESET indicator

If listening to a preset, displays the preset number.

4 Category name

Displays the category name.

5 Channel name

Displays the channel name.

6 SIRIUS™ Icon

When pressed, displays information about the current channel (artist, title, composer and other information).

7 Presets

Enters Preset list screen.

8 List

Displays the channel or category list.

9 Search

Displays the channel search screen.

10 Sound

Enters Sound Setup.

11 Artist

Displays the artist name.

12 Title

Displays the title.

Listening to the SIRIUS™ radio

Press the **SAT** key on the control panel. The most recently played SIRIUS™ channel will automatically begin playing.

Note

- Even when the system power is off, pressing the **SAT** key will turn on the most recently played SIRIUS™ channel.

1. Selecting a SIRIUS™ channel

• Selecting through SEEK

Press the **SEEK TRACK** \wedge or **SEEK TRACK** \vee keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next SIRIUS™ channel will automatically be searched and played.

Note

- Press and hold the **SEEK TRACK** \wedge or **SEEK TRACK** \vee keys (over 0.8 seconds) to quickly move through the channels while the button is pressed and held. Once released, the system will automatically search and play the previous or next channel.

- **Selecting through manual search**

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display the corresponding channel information.
2. When you find the desired SIRIUS™ channel, press the **TUNE** knob to listen to the selected channel.



- **Selecting through preset**




1. Press the **Presets** button.
2. Select the desired preset and press the button to start listening.

Note

- Press the **^**, **v** keys (under 0.8 seconds) on the steering wheel controller to flip through the presets sequentially.

- **Selecting through channel search**

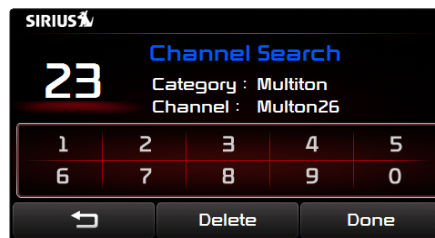

1. Press the **Search** button. The channel search screen will be displayed.
2. Input the desired channel number and press the **Done** button. To delete entries, press the **Delete** button.

Note


- If you input a number where there is no channel, the **Done** button will become inactive.

PART 2 | AUDIO FEATURES

• Selecting through SIRIUS™ category list



1. Press the **List** button.

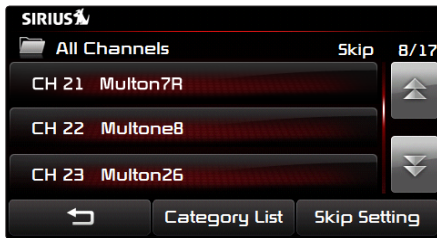


2. Select the desired channel to start listening or press the **Category List** button to display the channels in the selected category.


2. Using Skip



1. Press the **List** button.

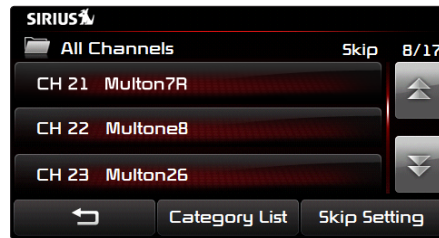

2. Press the **Skip Setting** button.

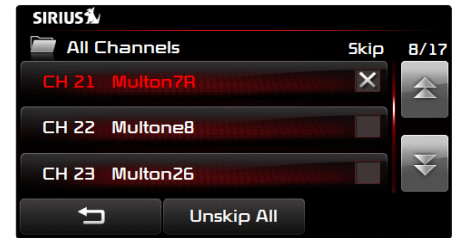

3. Select the channels you wish to skip. When selected, an **X** will be displayed next to the selected channel.



3. Storing presets



Presets are a way for you to save your favorite SIRIUS™ channels. Up to 18 presets can be saved in SIRIUS™ mode.

1. Select the desired SIRIUS™ channel.
2. Press the **Presets** button.




3. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.

4. The current radio broadcast will automatically be saved to the present number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

4. Viewing SIRIUS™ channel information



1. Press the SIRIUS™ icon.

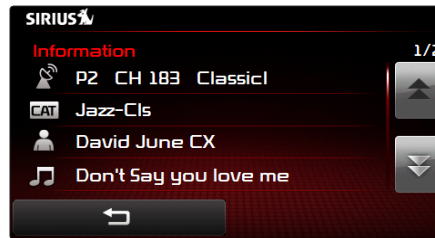

2. Information about the current channel (channel, category, artist, title) will be displayed.

MEDIA MODE

The MEDIA mode within your UVO system offers a variety of media modes which allow you convenience and ease in operating your system. Media mode includes a variety of modes, such as audio CD, MP3 CD, USB, iPod®, zune®, BT audio, Aux. The features listed below describe common features which you will encounter when operating Audio CD, MP3 CD, USB, iPod®, zune®, and JUKEBOX modes.

Common Features

• Play/Pause



1. Insert or connect the desired media (Audio CD, MP3 CD, USB, iPod®, zune®) or press the **MEDIA** key on the control panel if the desired media has already been inserted or connected.
2. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → CD.
3. When a desired media is playing and you wish to pause, press the **||** button next to the progress bar. Press the **▶** button to restart the song.

• REW/FF



1. Press and hold the **SEEK TRACK ^** or **SEEK TRACK v** keys (over 0.8 seconds) on the control panel or the **^**, **v** keys (over 0.8 seconds) on the steering wheel controller.
2. The song will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

Note

- If you rewind to the beginning of the current song, the current song will automatically begin playing.
- If you fast-forward to the end of the current song, the next song will automatically begin playing.

• Jump



1. You can jump to different points in a song by touching the position on the progress bar.

• Using Repeat

The repeat setting can be used to repeat the song that is currently playing.



1. Press the **Repeat** button. The 'Repeat' icon will be displayed.
2. Press once to turn on the Repeat setting and again to turn off.

• Using Shuffle

The Shuffle setting can be used to play all song in the current mode randomly.



1. Press the **Shuffle** button. The 'Shuffle' icon will be displayed.
2. Press once to turn on the Shuffle setting and again to turn off.

AUDIO CD MODE

Cautions upon handling Audio CDs

1. Precautions upon handling discs

- Store discs within their intended cases to prevent scratches.
- Never use heart-shaped, octagon-shaped or any other abnormally shaped discs.
- Never expose discs to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Never clean with solvents, such as anti-static sprays, cleaners, benzene, or thinners.
- Dust, scratches, and other foreign substances may cause popping sounds as well as sound deterioration.
- Never place paper on either side of the disc or write on disc surfaces.
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth.

- Copy-protected CDs, such as S-type CDs may not operate properly in the system.
- Data CDs are not supported by the system.

2. For safe and efficient operation

- Never disassemble the CD Player(CDP) for repair purposes. Contact your place of purchase in case of malfunction. (Full service assistance will not be provided if the user disassembles the device.)
- Never use water to clean the system.
- Use caution not to introduce foreign substances into the disc slot.
- The system may not operate in extremely hot or cold temperatures. (The operational temperature range is: 14°F ~ 149°F).
- Steam may condense on the fiber optic lens due to rain, wet conditions, or heat caused by system operation.
- Never clean the system with chemical solvents. Always use a clean and dry cloth.

3. Supported disc format

- The disc types supported by this device are as shown below.

Disc format	Disc media	Format
CD	CD CD-R CD-RW	CD-DA MP3 WMA CD-ROM CD-TEXT

Disc Size	5inch (12.7cm)
-----------	----------------

Disc Format	Audio Format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver. 9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation.

4. Disc/content format and compatibility

Ordinary disc compatibility

- This system has been designed to be compatible with software bearing the following logo marks.



- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not operate properly.

Special formats or special features regarding software

CD-R/RW Compatibility

- This system operates as a CD-ROM and supports CD-R and CD-RW discs in CD audio or MP3 CD format.

- CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device. However, some information, such as play time, may still be displayed.

PC-created DISC compatibility

- When burning a disc with a personal computer, even discs compatible with the formats described above may not operate properly due to software settings within the burning application. In such cases, contact the software developer.
- Additional information regarding compatibility can be found on the CD-R/RW software disc box.
- DVD-R/RW discs are not supported by the device.

Compressed audio compatibility


This system plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly

displayed.

- Physical formats of CD: Model 1, Model 2 XA format 1.
- This system only supports tracks with file extension of ".MP3" or ".WMA".
- This system does not support multisession discs.
- This system supports a maximum of 256 folders and maximum 512 files. Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto MP3 files. This system has been designed to be compatible with various bit rates. Audio which has been encoded at 128kbps will sound similar to CD audio sound quality. Although this device supports low bit rate MP3 files, such files may result in a low quality sound.
- For stable operation, the use of files in 95kbps~192kbps bit rate range and 44.1kHz sampling frequency is recommended.
- For Mixed CDs (MP3+CD-DA), only CD-DA files will be recognized and supported.

AUDIO CD Mode Screen and Features

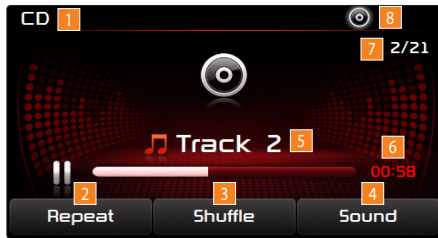

1 Mode Display

Displays that the current mode is CD mode.

2 Repeat

If Repeat is operating, the current track will be repeated and the corresponding icon will be displayed.

3 Shuffle

If Shuffle is operating, the tracks will be played in random order and the corresponding icon will be displayed.

4 Sound

Enters Sound Setup.

5 Track Number

Displays the track number

6 Play Time

Displays the play time.

7 Current/Total Track Number

Displays the current track number and total number of tracks on CD.


8 DISC indicator

Displays that a DISC has been inserted.

Inserting/Ejecting a Disc

1. Inserting a Disc

Insert the disc into the slot. The disc will begin playing automatically after it has been inserted.

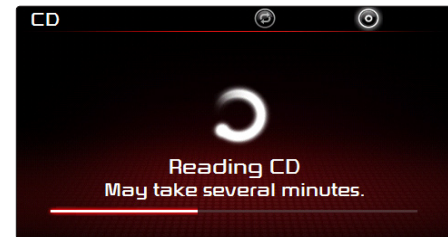

2. Ejecting a Disc

Press the  button.


The disc will immediately be stopped and ejected.

Note

- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player. In such cases, the disc will not begin playing automatically.

Listening to an Audio CD

1. Insert a CD or press the **MEDIA** key on the control panel if the CD has already been inserted.

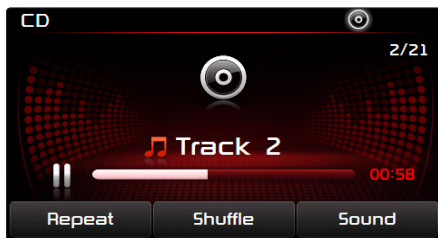

2. When a track is playing and you wish to pause, press the **||** button next to the progress bar. Press the **▶** button to restart the track.

Note

- When playing a CD-TEXT, the title and artist will also be displayed.

Selecting a CD track

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** **▲** or **SEEK TRACK** **▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next track will begin playing.

Note

- If the **SEEK TRACK** **▼** key on the Control panel or **▼** key on the steering wheel controller are pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the track has been playing for less than 3 seconds, the start of the previous track will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected track.

2. Press the **TUNE** knob to play the selected track.


Note

- The current track will continue playing even as you search tracks through the **TUNE** knob.

BT AUDIO MODE

BT Audio mode is a feature which allows you to stream music stored in your handset device via a *Bluetooth*® wireless technology connection. Music saved in the handset device can be played in the car through *Bluetooth*® wireless technology audio streaming. BT audio can be played only when a handset device has been connected. To play BT audio, pair a handset device with the system. If *Bluetooth*® wireless technology is disconnected while playing BT audio, music play will be discontinued. The audio streaming function may not be supported in some handset devices. Only one function can be used at a time between the *Bluetooth*® wireless technology handsfree or BT audio function. Playing music from the car is not possible when there are no music files stored in the handset device.

BT Mode Screen and Features

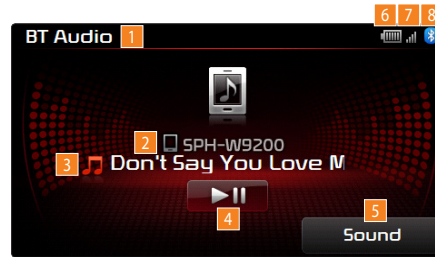

1 Mode Display

Displays the current mode as BT Audio mode.

2 *Bluetooth*® wireless technology enabled device information

Displays information about the *Bluetooth*® wireless technology enabled device

3 Song Title

Displays the song title.

4 Play/Pause

Plays/pauses the song.

5 Sound

Enters Sound Setup.

6 Phone Battery charge status

Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.

7 Signal Strength

Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.

8 *Bluetooth*® wireless technology connection state

Becomes displayed when a *Bluetooth*® wireless technology enabled phone has been connected with the car system.

Listening to music from your Bluetooth® wireless technology enabled device





1. Pair your *Bluetooth*® wireless technology enabled device to the handsfree system. For more information on pairing your *Bluetooth*® wireless technology enabled devices, refer to the 'Pairing your handset device to the handsfree system' section.
2. Press the **MEDIA** key on the control panel to turn on BT audio mode.
3. When streaming music from your *Bluetooth*® wireless technology enabled device and you wish to pause, press the **▶||** button next on the screen. Press the **▶||** button to restart music.

Note

- While music saved in the *Bluetooth*® wireless technology enabled device will automatically begin playing after converting to the BT Audio screen, this music player function may not be supported in some *Bluetooth*® wireless technology enabled devices.

- If music does not begin playing even after displaying the Phone music screen, try starting the music directly from the *Bluetooth*® wireless technology enabled device.





Selecting a song

1. Press the **SEEK TRACK**  or **SEEK TRACK**  keys on the control panel or the  or  keys on the steering wheel controller to play the desired song.
2. The previous or next song will begin playing.

Note

- File selection may not be supported in some *Bluetooth*® wireless technology enabled devices.

REW/FF a song

1. Press and hold the **SEEK TRACK**  or **SEEK TRACK**  keys (over 0.8 seconds) on the control panel or the  or  keys (over 0.8 seconds) on the steering wheel controller.
2. The track will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

Note

- The play/pause, song selection and REW/FF features are supported only in handset devices with AVRCP Ver. 1.3 or higher. If play control features are not working, first check the AVRCP version of your *Bluetooth*® wireless technology enabled device.
- When such operations are not supported, use the handset device to perform these functions.

JUKEBOX MODE

The UVO system offers you maximum convenience by allowing you to copy songs from your MP3 CD and USB and store them to the JUKEBOX within the system. For more information on copying songs into JUKEBOX, refer to the 'Copying songs into JUKEBOX' section.

JUKEBOX Mode Screen and Features



1 Mode Display

Displays that the current mode is JUKEBOX mode.

2 Menu

Displays the JUKEBOX folder and file lists.

3 Favorite

Adds/removes current song to Favorites list.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to JUKEBOX

1. Press the **MEDIA** key on the control panel to turn to JUKEBOX mode.
2. The system will automatically restore the most recently played song.

Selecting a JUKEBOX song

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** keys on the control panel or the **^** or **v** keys on the steering wheel controller to play the desired track.
2. The previous or next song will begin playing.

Note

- If the **SEEK TRACK** key on the Control panel or **v** key on the steering wheel controller is pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.


3. Selecting from the list



1. Press the **Menu** button.

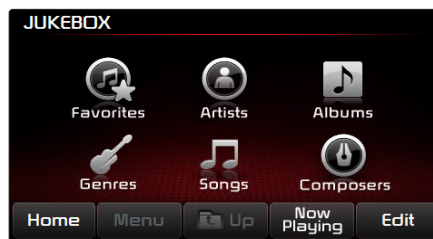

2. Press the **Now Playing** button.

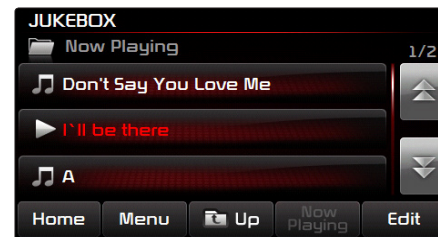


3. Press the name of the song from the list. The song will automatically start playing.

PART 2 | AUDIO FEATURES

4. By Artists, Albums, Genres, Song, Composers



1. Press the **Menu** button.

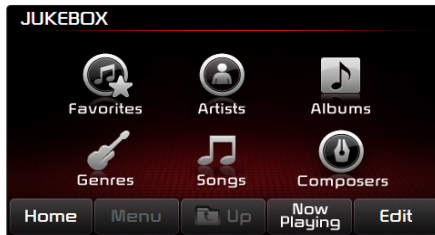

2. Choose the category through which you wish to select. JUKEBOX mode allows you to select by Favorites, Artists, Albums, Genres, Songs, and Composers.

Adding Favorites

The Favorites feature allows you to create a separate Favorites list of songs.



1. While listening to JUKEBOX, press the **★** button.




2. The **★** icon will be displayed on the screen to signify that the song has been saved in Favorites.

3. To delete a song from Favorites, press the **★** button.


Playing Favorites



1. While playing JUKEBOX, press the **Menu** button.

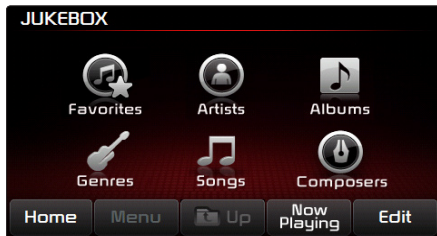

2. In the JUKEBOX Menu screen, press the **Favorites** button.

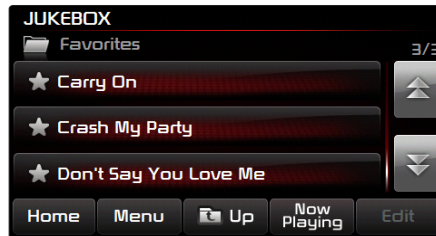

3. Press the name of the song from the list.
The song will begin playing.

Note


- The Favorites button will be inactive when there are no songs saved as Favorites.
- When deleting favorites from the Favorites list, the deleted favorites will be removed from the favorites list. The songs will not be deleted from the system.

PART 2 | AUDIO FEATURES


Memory Management

Checking System Information

1. Press the **SETUP** key on the control panel.

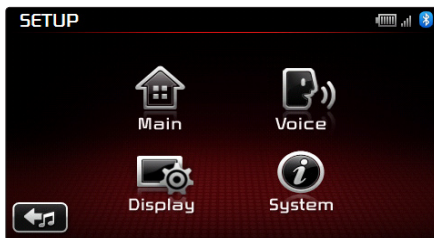

2. Press the **System** button.

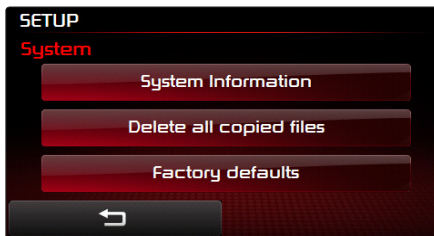

3. Press the **System Information** button.




4. The system information screen shows you the memory currently in use.


Deleting JUKEBOX

1. Deleting JUKEBOX


1. While in JUKEBOX mode, press the **Menu** button.

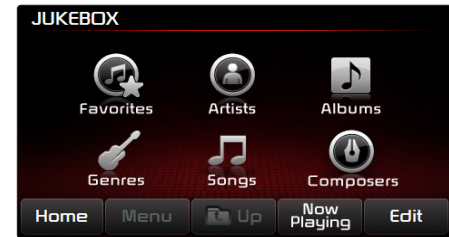

2. Press the **Now Playing** button.

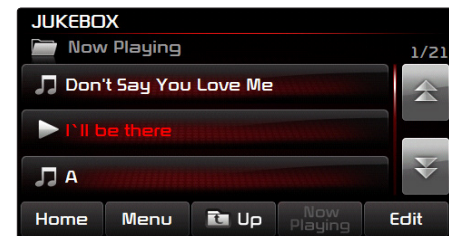


3. Press the **Edit** button.

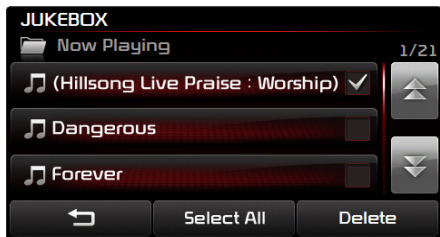


4. Select the songs you wish to delete. When selected, a will be displayed next to the selected song. To select all songs, press the **Select All** button. All of the songs in the play list will be selected.
5. Press the **Delete** button.

2. Deleting all files

1. Press the **SETUP** key on the control panel.

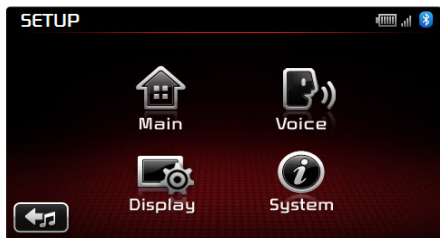

2. Press the **System** button.

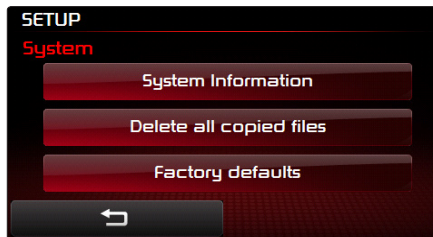

3. Press the **Delete all copied files** button.
4. The system will reboot and automatically restore the FM mode.

Note

- When using the **Delete all copied files** feature, all JUKEBOX files will be deleted.