

UVO

Powered by **Microsoft**

UVO SYSTEM USER'S MANUAL



Preface

Congratulations on the Purchase of your new UVO system!

Your new UVO system allows you to enjoy various audio and multimedia features through the main audio system.

For the latest information about this product or other KIA products and accessories, visit <http://www.KIA.com>

Please read this manual to get the full benefit of the system.

These operating instructions are designed to ensure that you can operate the UVO system in a safe and convenient way.

We recommend that this manual be kept in the car so that it will be easier for you to find information in case of an emergency.

If you cannot find the information you need in this manual or in the "Troubleshooting" section, your local authorized retailer will be pleased to clarify any inquiries you may have with the system or operations.

KIA Motors recommends the use of only parts and accessories that have been tested and approved by KIA Motors in terms of function, safety and suitability.

iPod®

iPod® is a registered trademark of Apple, Inc.

Bluetooth®

The *Bluetooth®* word mark and logos are registered trademarks owned by *Bluetooth®* SIG, Inc. and any use of such marks by Kia is under license. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

Microsoft®

Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries.

zune®

zune® is a registered trademark of Microsoft Corporation in the United States and or other countries.



Copyright(c) 2011 KIA Motors. All Rights Reserved.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Table of contents

WARNING & SAFETY INFORMATION

Safety Symbols	7
FCC Information	7
Safety Precautions	8

PART 1 GETTING STARTED

Controls and Features

Control Panel	10
Steering Wheel	12

Basic Features

System Power	14
1. Turning System Power On	14
2. Turning System Power Off	14
Select Display Language	15
Resetting and Initializing UVO system	15
1. Resetting the system	15
2. Initializing the system	16

Sound and Display Settings

Sound Settings	17
1. FADER/BALANCE	17
2. TONE	18
3. Touch Screen Beep	18
4. Speed Dependent Volume Control	18
5. Power Bass (Optional)	19
Display Settings	20
1. Setting Brightness	20

• Automatic Brightness Control	20
• Manual Brightness Control	20
Turning Display On and Off	21
Turn Text Scroll On and Off	22
Setting the Clock	23
1. Time Setting	23
2. Clock Type	23
3. Clock Display	23
• Analog Clock	23
• Digital Clock	23

Table of contents

PART 2 AUDIO FEATURES

FM/AM MODE

FM/AM Mode Screens and Features	26
Listening to the FM/AM radio	27
1. Selecting a broadcast frequency	27
• Selecting through SEEK	27
• Selecting through manual search	28
• Selecting through preset	28
2. Storing presets	28
3. Scanning FM/AM broadcast frequencies	29
4. Preset Scan	29

SIRIUS MODE

SIRIUS Mode Screen and Features	30
Listening to the SIRIUS radio	30
1. Selecting a SIRIUS channel	30
• Selecting through SEEK	30
• Selecting through manual search	31
• Selecting through preset	31
• Selecting through channel search	31
• Selecting through SIRIUS category list	32
2. Using Skip	32
3. Storing preset	33
4. Viewing SIRIUS channel information	33

MEDIA MODE

Common Features	34
• Play/Pause	34
• REW/FF	34
• Jump	35
• Using Repeat	35
• Using Shuffle	35

AUDIO CD MODE

Cautions upon handling Audio CDs	36
AUDIO CD Mode Screen and Features	38
Inserting/Ejecting a Disc	38
1. Inserting a Disc	38
2. Ejecting a Disc	38
Listening to an Audio CD	39
Selecting a CD track	39
1. Selecting through Track Up/Down	39
2. Selecting through manual search	39

MP3 CD MODE

Cautions upon handling MP3 CD	40
MP3 CD Mode Screen and Features	41
Listening to an MP3 CD	41
Selecting an MP3 CD song	42
1. Selecting through song Up/Down	42
2. Selecting through manual search	42
3. Selecting from MP3 list	42

4. by Artists, Albums, Genres, Songs Composers	42
Explore CD	43
Viewing song information	43
Copying songs into JUKEBOX	43
1. Copying the current song	43
2. Copying songs from list	44

USB MODE

Cautions upon handling USB MP3	45
Precautions upon handling USB	46
Connecting your USB device	47
USB Mode Screen and Features	47
Listening to USB music	48
Selecting USB music	48
1. Selecting through song Up/Down	48
2. Selecting through manual search	48
3. Selecting from the playlist	49
4. by Folders, Artists, Albums, Genres Songs, Composers	49
Explore USB	49
Viewing song information	50
Copying songs into JUKEBOX	50
1. Copying the current song	50
2. Copying songs from list	51

iPod MODE

About iPod 52

1. Trademark 52

2. Connecting your iPod device 52

iPod Mode Screen and Features 53

Listening to your iPod 53

Selecting iPod music 54

1. Selecting through song Up/Down 54

2. Selecting through manual search 54

3. Selecting from the playlist 54

4. By Artists, Albums, Genres, Songs, Podcasts, Composers, Audiobooks 54

Viewing song information 55

zune MODE

About zune 56

1. Trademark 56

2. Connecting your zune device 56

zune Mode Screen and Features 56

Listening to your zune 57

Selecting zune music 57

1. Selecting through song Up/Down 57

2. Selecting through manual search 57

3. Selecting from the playlist 57

4. By Songs, Genres, Albums, Artists, Playlists 58

Viewing song information 58

AUX MODE

AUX Mode Screen 59

Connecting an AUX media device 59

Listening to AUX media 59

BT AUDIO MODE

BT Mode Screen and Features 60

Listening to music from your *Bluetooth*[®] wireless technology enabled device 61

Selecting a song 61

REW/FF a song 61

JUKEBOX MODE

JUKEBOX Mode Screen and Features 62

Listening to JUKEBOX 63

Selecting a JUKEBOX song 63

1. Selecting through song Up/Down 63

2. Selecting through manual search 63

3. Selecting from the playlist 63

4. by Artists, Albums, Genres, Songs, Composers 64

Adding Favorites 64

Playing Favorites 65

Memory Management

Checking System Information 66

Deleting JUKEBOX 66

1. Deleting JUKEBOX 66

2. Deleting all files 67

PART 3 PHONE FEATURES

Using your *Bluetooth*[®] wireless technology

Handsfree system 70

Smart driving practices 71

Pairing your handset device to the handsfree system

Pairing a *Bluetooth*[®] wireless technology enabled device for the first time 72

Deleting a paired handset device 73

Connecting a handset device 74

Setting Priority 74

Using the phone features

Phone Mode Screens and Features 76

1. When a mobile phone is connected 76

2. When making a call 76

3. When receiving an incoming call 77

4. When on a call 77

Answering an incoming call 78

Rejecting an incoming call 78

Table of contents

Call waiting	78	Phone settings	3. MEDIA	101
Placing a call	79	Setting Phone Volume	4. JUKEBOX	102
1. By dialing a number	79	Turn Streaming Audio On and Off	Command List - Phone Commands	103
2. By contact list	79	Contacts Sync	PART 5 REAR VIEW CAMERA	
3. By recent calls	80	SMS	About Rear View Camera	
Contact list	81	Changing passkey	106
1. Downloading contact list		PART 4 VOICE COMMANDS	PART 6 TROUBLESHOOTING GUIDE	
(from mobile phone)	81	Conditions for voice command system	TROUBLESHOOTING GUIDE	
Searching your contacts	82	Before thinking the product has	
1. By name	82	Operating Voice Command	malfunctioned	108
2. By number	83	Using Voice Command	Troubleshooting	109
Checking missed calls	84	Voice Command Help		
SMS	85	Turning Command Feedback On and Off		
1. Downloading SMS messages		Adjusting Voice Command Volume		
(from mobile phone)	85	Speaker Adaptation		
2. Checking an SMS message	85	Creating a Voice Profile	PART 7 INDEX	
3. Sending an SMS message		Selecting a Previous Voice Profile	INDEX	
(Custom Messages)	85	Deleting a Voice Profile	112
4. Editing Custom Messages	85	Voice Command List		
5. Switching the call between handsfree		Command List - General Commands		
and handset device	86	Command List - Audio Commands		
6. Transferring the handsfree call to your		1. FM/AM Radio		
Handset device	86	2. SIRIUS		
7. Transferring a call on your Handset				
device to handsfree	86			

WARNING & SAFETY INFORMATION



Safety Symbols

Warning

- When encountering this symbol in the manual, you must follow these recommendations to avoid irreparable damage to your car, system or connected devices or to avoid accidents with injuries or death.
-

Caution

- When encountering this symbol in the manual, you must be very careful and follow the recommendations to avoid damage to your car, system or connected devices or to avoid injury.
-

Note

- Information which you must be aware of or recommendations for your convenience and for optimal operation of your system.
-

WARNING & SAFETY INFORMATION

Warning

Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and/or death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



- Read and understand all instructions before you use the system. If damage is caused by failure to follow instructions, the warranty will not apply.



- Do not operate the audio system in an unsafe manner while driving.



- Do not dismantle, assemble, or modify the audio system.



- Do not stare at the screen for long periods of time while driving.



- To reduce the risk of traffic accidents, do not watch the screen when driving.
- Set the volume to a level which allows you to be aware of external conditions.



- Use only the supplied mounting hardware for safe operation.

Caution



- Do not operate the audio system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.



- Do not expose the device to rain or water.
- Never insert foreign objects into the slots or other openings on the device.



- Do not cause severe shock to the device. Direct pressure to the front side of the monitor may cause damage to the LCD or touch panel.



- In case of product malfunction, contact your place of purchase or service center.



- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use abrasive materials, chemical cloths, or solvents, such as alcohol, ammonia, benzene, thinners, etc. Such materials may damage the touch panel or cause color and quality deterioration.

PART 1 GETTING STARTED

Controls and Features

Control Panel 10
 Steering Wheel 12

Basic Features

System Power 14
 1. Turning System Power On 14
 2. Turning System Power Off 14
 Select Display Language 15
 Resetting and Initializing UVO system 15
 1. Resetting the system 15
 2. Initializing the system 16

Sound and Display Settings

Sound Settings 17
 1. FADER/BALANCE 17
 2. TONE 18
 3. Touch Screen Beep 18
 4. Speed Dependent Volume Control 18
 5. Power Bass (Optional) 19
 Display Settings 20
 1. Setting Brightness 20

• Automatic Brightness Control 20
 • Manual Brightness Control 20
 Turning Display On and Off 21
 Turn Text Scroll On and Off 22
 Setting the Clock 23
 1. Time Setting 23
 2. Clock Type 23
 3. Clock Display 23
 • Analog Clock 23
 • Digital Clock 23

Controls and Features

Control Panel



1 DISC EJECT

Ejects the inserted disc.

2 FM/AM

Turns on FM/AM mode. Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.

3 SIRIUS

Turns on SIRIUS mode.

4 MEDIA

Turns on MEDIA mode. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod/zune → AUX → BT Audio → CD.

5 POWER/VOLUME

Push : Turns Power On/Off.
Dial : Turns Volume Up/Down.

6 ∨ SEEK/TRACK ∧

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next frequency.

In SIRIUS mode, automatically searches and plays the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod, zune, BT AUDIO), plays the previous or next track, song, or file.

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod, zune, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

7 V CATEGORY ^

In SIRIUS mode, moves to the previous or next SIRIUS category.

8 TUNE

In FM/AM mode, turn the knob to manually search for frequencies.

In SIRIUS mode, turn the knob to manually search for channels. Press the knob to receive the selected channel.

In MEDIA mode (CD, MP3, USB, iPod, zune), turn the knob to manually search for the previous or next track, song, or file.

Press the knob to receive the selected track, song, or file.

In JUKEBOX mode, turn the knob to manually search for the previous or next track. Press the knob to receive the selected track.

9 SETUP

Displays SETUP mode.

10 PHONE

Displays *Bluetooth*[®] wireless technology Phone mode.

11 eServices

Displays eServices mode.

12 RESET

Reset the system to be used if system is acting abnormally.

13 DISC indicator LED

Displays that a DISC has been inserted.

14 DISP

Displays the clock setting screen.

Steering Wheel



1 ▾ SEEK/TRACK ▲

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next preset frequency.

In SIRIUS mode, automatically searches and plays the previous or next preset channel.

In MEDIA mode (CD, MP3, USB, iPod, zune, BT AUDIO), plays the previous or next track, song, or file.

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod, zune, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

2 + VOLUME -

Turns Volume Up/Down.

3 MODE

Changes the mode. Each press will change modes in the order of FM → AM → SIRIUS → CD → USB/iPod/zune → AUX → BT Audio → JUEKBOX → FM.

4 MUTE

Mutes the sound.

5 Voice Command

Short (under 0.8 seconds)

If Voice recognition is off, turns on Voice recognition.

If system is speaking, interrupts speaking and enters listening mode.

Long (over 0.8 seconds)

If Voice recognition is on, turns off Voice recognition.

6 **Bluetooth® wireless technology Phone**

Pressing this key will receive an incoming call. If the Audio is on, the *Bluetooth®* wireless technology phone screen will be displayed.

When a SMS message is received, reads back message.

7 **End Bluetooth® wireless technology Phone**

Pressing this key will reject an incoming call. If pressed during a call, the current call will be ended.

When a SMS message is received, ignores message.

Basic Features

System Power

1. Turning System Power On



1. Turn on the ignition.
2. While the system is off, press the **POWER/VOL** knob to turn the system on.

3. The system will automatically restore the most recently played mode. For example, pressing the **POWER/VOL** knob will turn on the system and display FM radio mode if FM mode had been the last operated mode prior to turning off the system.
4. You can also turn the system on by pressing the **FM/AM**, **SIRIUS**, **MEDIA** and **JUKEBOX** keys.

Note

- Pressing any one of the **FM/AM**, **SIRIUS**, **MEDIA** and **JUKEBOX** keys will turn on the system and display the last mode corresponding to each key. For example, pressing the **MEDIA** key will turn on the system and display CD mode if the last operated MEDIA mode prior to turning off the system had been CD mode.

2. Turning System Power Off

1. While the system is on, press the **POWER/VOL** knob to turn off the system.

Note

- If the system power was on when the ignition was turned off, the system will turn back on automatically. Conversely, if the system power was off when the ignition was turned off, the system will remain off.
- If the battery voltage is low, the audio may take a prolonged time to boot upon turning on the vehicle.

Select Display Language


The UVO system allows you to select the preferred display language for maximum convenience and system usability. The system provides you with options of three languages - English, French (Canadian) and Spanish. The default language is English.




1. Press the **SETUP** key on the control panel.



2. Press the **Main** button.

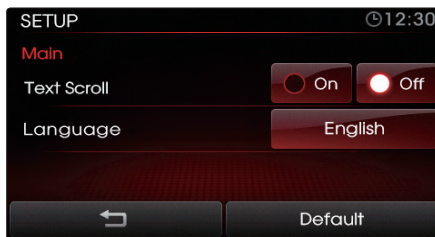

3. Press the **English** button next to the Language menu.

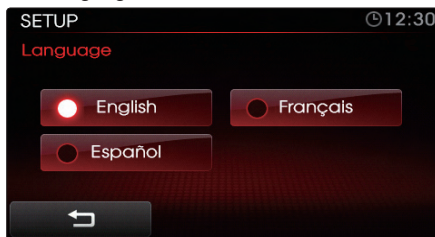

4. Select the desired language.

5. The system will reboot and automatically restore the most recent mode in the new language.


Note

- Changing language will delete all paired phones.

Resetting and Initializing UVO system

1. Resetting the system

If the system is behaving abnormally, press the reset button to reset the system.

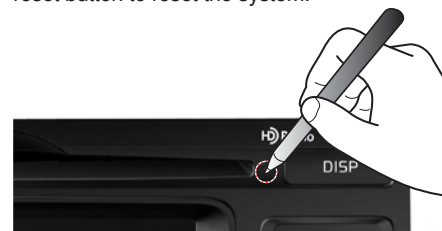

1. Use a ball-point pen or similar object to press the **RESET** key.
2. The system will reboot and automatically restore the most recent mode.

! Caution



- The reset button should only be used in case of system malfunction. Never use the reset key while the system is operating normally.
- If you wish to reset while the system is operating normally, turn the power off first then reset.

2. Initializing the system



1. Press the **SETUP** key on the control panel.

2. Press the **System** button.

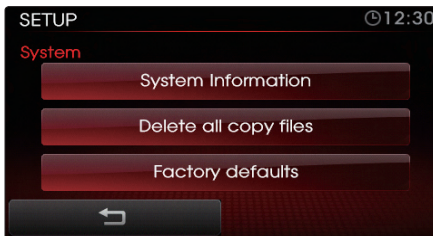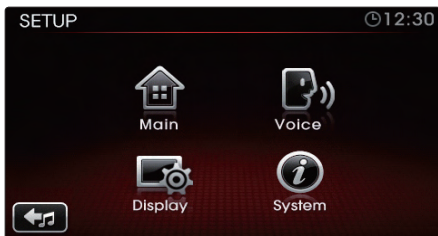

3. Press the **Factory defaults** button.


Note

- Initializing the system will erase all Phone settings, and other changes which you have made to the system.
- Some songs in the USB or CD may be misrecognized during the indexing process. If such problems persist, reset the device using the Factory Default button in SETUP>System.
- For updating the system, visit [http: www.KIA.com](http://www.KIA.com)

Sound and Display Settings

Sound Settings

Sound settings can be adjusted from any audio mode. The system allows you to optimize various sound settings to add convenience when listening to the system.

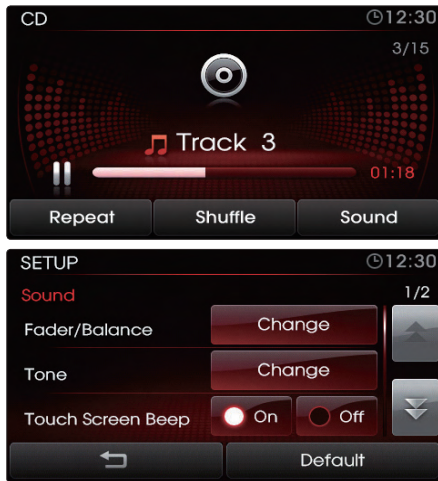

Press the **Sound** button on the main screen of each audio mode (FM/AM, SIRIUS, MEDIA,


JUKEBOX) to enter Sound Setup.

Note

- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. FADER/BALANCE

Fader/Balance allows you to adjust the position of sound within the vehicle. For instance, adjusting the sound so that it is closer to the driver-side seat will proportionally lower the volume in the passenger-side and rear seats.

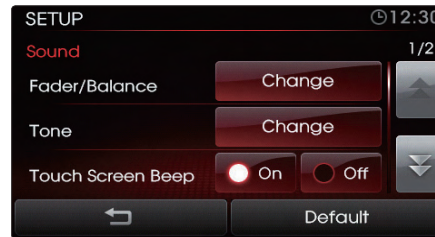

1. Press the Fader/Balance setting button.




2. Use the **▲**, **▼**, **◀**, **▶** buttons to make adjustments to the sound position.
3. Press the **↶** button to return to Sound Setup.

Note


- Press the **Default** button to restore the default setting.




2. TONE

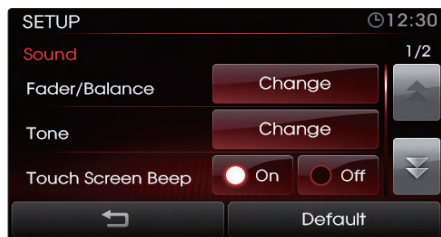Tone allows you to make changes to the Treble, Middle and Bass settings.

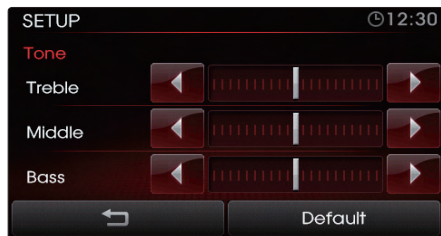

1. Press the Tone setting button.




2. Use the ,  buttons to make adjustments to the Treble, Middle and Bass. Press the  button to return to Sound Setup.



Note

- Press the **Default** button to restore the default setting.

3. Touch Screen Beep

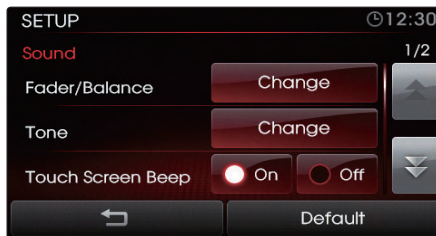Touch Screen Beep allows you to turn on/off the beep that sounds when you touch the screen.





1. In Sound Setup, press the  or  button next to the Touch Screen Beep menu to turn the feature on or off.

4. Speed Dependent Volume Control

Speed Dependent Volume Control allows you to automatically control the volume according to the speed of the vehicle. This feature will gradually increase the volume as speed increases to offset outside noise.




1. Press the  or  button next to the Speed Dependent Volume Control menu to turn the feature on or off.

5. Power Bass (Optional)

1. Press the Power Bass setting button.



2. Select the desired Power Bass setting from Off, Low, Middle or High. Press the  button to return to Sound Setup.

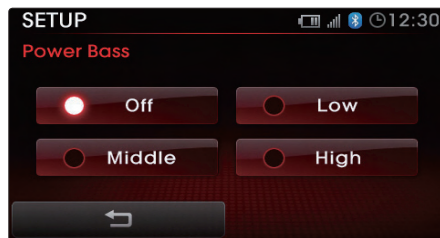

Note

- Press the **Default** button to restore the default setting.

Display Settings

The various Display setup options offered within the UVO system allow you to change display settings according to your personal preference.



1. Press the **SETUP** key on the control panel.



2. Press the **Display** button to enter Display Setup mode.

Note

- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. Setting Brightness

The UVO system allows you to control the screen brightness automatically and manually.

• Automatic Brightness Control

When the Display brightness is set to automatic, the brightness will be controlled automatically by assessing the amount of ambient light.




1. Press the **Display** button.



2. Press the **Automatic** button.

• Manual Brightness Control

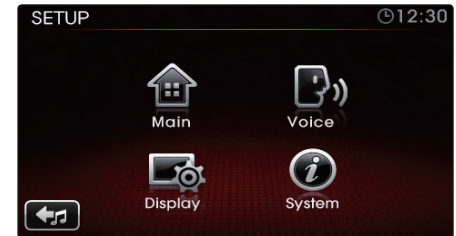

1. Press the **Display** button.



2. Press the **Daylight** or **Night** buttons.



3. Use the **◀**, **▶** buttons to make adjustments to the display brightness.

Note

- When Brightness control is set to **Automatic**, the manual **◀**, **▶** buttons are not active.
- Press the **Default** button to restore the default setting.

Turning Display On and Off

This feature turns off the display, allowing you to listen only to the audio. It is a useful feature when you are driving at night and wish to eliminate glare from the display. Even when the display is off, audio will still be played.



1. Press the **Display** button.



2. Press the **Display off** button.

3. Press any key on the control panel or steering wheel controller to turn the display back on.

Note

- Touching any place on the screen will also turn on the display.

Turn Text Scroll On and Off


Text shown on the screen can be scrolled. Turning on this feature is helpful when viewing long lines of text on the screen.



1. Press the **SETUP** key on the control panel.



2. Press the **Main** button.

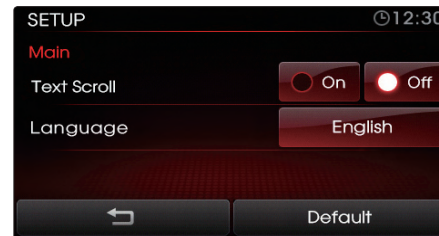

3. Press the **On** or **Off** button next to the Text Scroll menu to turn the feature on or off.

Setting the Clock

Press the **CLOCK** on the front panel to display the Clock setting screen.

1. Time Setting

The time can be set by pressing the hour, min up/down buttons.



2. Clock Type

Selects the clock type shown as the entire screen when the system power is turned off.



3. Clock Display

When set to “On”, the clock will be displayed when the Power is Off.

• Digital Clock



Note

- Press the **OFF** on the Clock Screen to turn off the screen.

• Analog Clock



PART 2 AUDIO FEATURES

FM/AM MODE

FM/AM Mode Screens and Features	26
Listening to the FM/AM radio	27
1. Selecting a broadcast frequency	27
• Selecting through SEEK	27
• Selecting through manual search	28
• Selecting through preset	28
2. Storing presets	28
3. Scanning FM/AM broadcast frequencies	29
4. Preset Scan	29

SIRIUS MODE

SIRIUS Mode Screen and Features	30
Listening to the SIRIUS radio	30
1. Selecting a SIRIUS channel	30
• Selecting through SEEK	30
• Selecting through manual search	31
• Selecting through preset	31
• Selecting through channel search	31
• Selecting through SIRIUS category list	32
2. Using Skip	32
3. Storing preset	33
4. Viewing SIRIUS channel information	33

MEDIA MODE

Common Features	34
• Play/Pause	34
• REW/FF	34
• Jump	35
• Using Repeat	35
• Using Shuffle	35

AUDIO CD MODE

Cautions upon handling Audio CDs	36
AUDIO CD Mode Screen and Features	38
Inserting/Ejecting a Disc	38
1. Inserting a Disc	38
2. Ejecting a Disc	38
Listening to an Audio CD	39
Selecting a CD track	39
1. Selecting through Track Up/Down	39
2. Selecting through manual search	39

MP3 CD MODE

Cautions upon handling MP3 CD	40
MP3 CD Mode Screen and Features	41
Listening to an MP3 CD	41
Selecting an MP3 CD song	42
1. Selecting through song Up/Down	42
2. Selecting through manual search	42
3. Selecting from MP3 list	42

4. by Artists, Albums, Genres, Songs Composers	42
Explore CD	43
Viewing song information	43
Copying songs into JUKEBOX	43
1. Copying the current song	43
2. Copying songs from list	44

USB MODE

Cautions upon handling USB MP3	45
Precautions upon handling USB	46
Connecting your USB device	47
USB Mode Screen and Features	47
Listening to USB music	48
Selecting USB music	48
1. Selecting through song Up/Down	48
2. Selecting through manual search	48
3. Selecting from the playlist	49
4. by Folders, Artists, Albums, Genres Songs, Composers	49
Explore USB	49
Viewing song information	50
Copying songs into JUKEBOX	50
1. Copying the current song	50
2. Copying songs from list	51

iPod MODE

About iPod	52
1. Trademark	52
2. Connecting your iPod device	52
iPod Mode Screen and Features	53
Listening to your iPod	53
Selecting iPod music	54
1. Selecting through song Up/Down	54
2. Selecting through manual search	54
3. Selecting from the playlist	54
4. By Artists, Albums, Genres, Songs, Podcasts, Composers, Audiobooks	54
Viewing song information	55

zune MODE

About zune	56
1. Trademark	56
2. Connecting your zune device	56
zune Mode Screen and Features	56
Listening to your zune	57
Selecting zune music	57
1. Selecting through song Up/Down	57
2. Selecting through manual search	57
3. Selecting from the playlist	57

4. By Songs, Genres, Albums, Artists, Playlists	58
Viewing song information	58

AUX MODE

AUX Mode Screen	59
Connecting an AUX media device	59
Listening to AUX media	59

BT AUDIO MODE

BT Mode Screen and Features	60
Listening to music from your <i>Bluetooth</i> [®] wireless technology enabled device	61
Selecting a song	61
REW/FF a song	61

JUKEBOX MODE

JUKEBOX Mode Screen and Features	62
Listening to JUKEBOX	63
Selecting a JUKEBOX song	63
1. Selecting through song Up/Down	63
2. Selecting through manual search	63
3. Selecting from the playlist	63
4. by Artists, Albums, Genres, Songs, Composers	64
Adding Favorites	64
Playing Favorites	65

Memory Management

Checking System Information	66
Deleting JUKEBOX	66
1. Deleting JUKEBOX	66
2. Deleting all files	67

FM/AM MODE

FM/AM Mode Screens and Features



1 Mode display

Displays the FM /AM mode.

2 PRESET indicator

If listening to a preset, displays the preset number.

3 Frequency

Displays the current frequency.

4 Program Type

If data is being transmitted, displays the program type.

5 Program Service Name

If data is being transmitted, displays the program service name.

6 Radio text

If data is being transmitted, displays radio text information.

7 Radio Icon

When pressed while listening to RDS Radio stations, displays information about the cur-

rent station.

8 Presets

Enters Preset list screen.


9 Scan

Scans all frequencies and plays only frequencies with high quality reception for 5 seconds each.

10 Sound

Enters Sound Setup.

Listening to the FM/AM radio

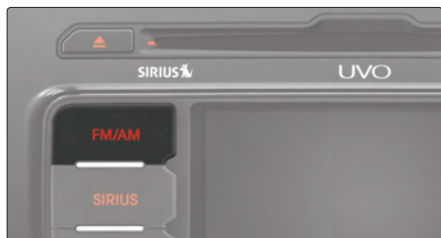

1. Press the **FM/AM** key on the control panel. The most recently played FM/AM radio band will automatically begin playing.
2. Press the **FM/AM** key to switch to the desired radio band.





Note

- Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.
- Even when the system power is off, press the **FM/AM** key to turn on the most recently played FM/AM mode.
- The RDS (Radio Data System) operates in areas with FM stations broadcasting RDS signals.




1. Selecting a broadcast frequency

The UVO system provides you with various ways to search for radio broadcasts. There are 3 ways to select radio broadcasts- selecting through SEEK, selecting through manual search, and selecting through presets.

• Selecting through SEEK

Press the **SEEK TRACK**  or **SEEK TRACK**  keys on the control panel for under 0.8 seconds or  or  keys on the steering wheel controller for over 0.8 seconds. As SEEK operates, the previous or next radio broadcasts with high quality reception will automatically be searched and played.

Note

- While SEEK is operating, pressing the same **SEEK TRACK**  key will terminate SEEK. Pressing the opposite key will operate SEEK in the reverse direction.
- Press and hold the **SEEK TRACK**  or **SEEK TRACK**  keys (over 0.8 seconds) to quickly move through the frequencies while the button is pressed and held. Once released, the system will

automatically search and play the previous or next frequency.


• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will increase or decrease the frequency by 1 step (FM: 0.2MHz, AM: 10kHz).
2. When you find the desired radio broadcast, stop turning the **TUNE** knob to listen to the selected frequency.

• Selecting through preset

1. Press the **Presets** button.



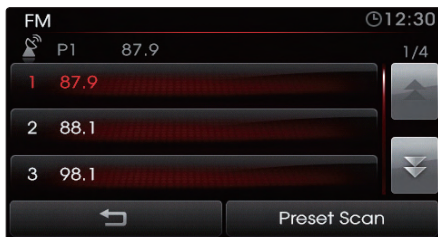

2. Select the desired preset and press the button to start listening.


Note

- Press the , keys (under 0.8 seconds) on the steering wheel controller to flip through the presets sequentially.
- Press and hold the , keys (over 0.8 seconds) on the steering wheel controller to operate SEEK.

2. Storing presets

Presets are a way for you to save your favorite radio broadcasts. Up to 12 presets can be saved in FM mode while up to 6 frequencies can be saved in AM mode.

1. Select the desired radio broadcast.
2. Press the button.

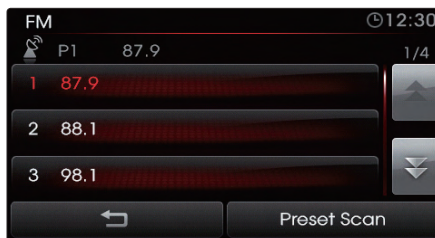

3. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.
4. The current radio broadcast will automatically be saved to the preset number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

3. Scanning FM/AM broadcast frequencies

Radio broadcasts can be scanned to conveniently find radio broadcasts with high quality reception. Each radio broadcast will be played for 5 seconds. This feature is particularly useful when traveling in new areas.



1. Press the button.

Note


- When scanning has completed an entire revolution, the scan function will terminate automatically and the previously played frequency will be restored.

4. Preset Scan

Preset scan will scan presets in the current band (FM-12 presets, AM-6 presets) in sequential order. Each preset will be played for 5 seconds.

SIRIUS MODE

SIRIUS Mode Screen and Features

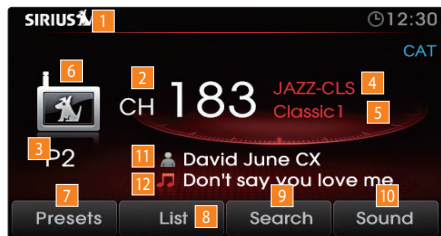

1 Mode display

Displays the current mode as SIRIUS mode.

2 Channel number

Displays the current channel number.

3 PRESET indicator

If listening to a preset, displays the preset number.

4 Category name

Displays the category name.

5 Channel name

Displays the channel name.

6 SIRIUS Icon

When pressed, displays information about the current channel (artist, title, composer and other information).

7 Presets

Enters Preset list screen.

8 List

Displays the channel or category list.

9 Search

Displays the channel search screen.

10 Sound

Enters Sound Setup.

11 Artist

Displays the artist name.

12 Title

Displays the title.

Listening to the SIRIUS radio

Press the **SIRIUS** key on the control panel. The most recently played SIRIUS channel will automatically begin playing.

Note

- Even when the system power is off, pressing the **SIRIUS** key will turn on the most recently played SIRIUS channel.

1. Selecting a SIRIUS channel

• Selecting through SEEK

Press the **SEEK TRACK** \wedge or \vee **SEEK TRACK** keys on the control panel for under 0.8 seconds or \wedge or \vee keys on the steering wheel controller for over 0.8 seconds. As SEEK operates, the previous or next SIRIUS channel will automatically be searched and played.

Note

- Press and hold the **SEEK TRACK** \wedge or \vee **SEEK TRACK** keys (over 0.8 seconds) to quickly move through the channels while the button is pressed and held. Once released, the system will

automatically search and play the previous or next channel.

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display the corresponding channel information.
2. When you find the desired SIRIUS channel, press the **TUNE** knob to listen to the selected channel.



• Selecting through preset




1. Press the **Presets** button.
2. Select the desired preset and press the button to start listening.

Note

- Press the **↑**, **↓** keys (under 0.8 seconds) on the steering wheel controller to flip through the presets sequentially.

• Selecting through channel search

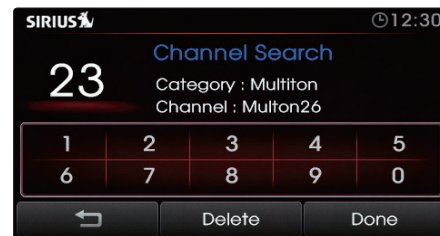


1. Press the **Search** button. The channel search screen will be displayed.
2. Input the desired channel number and press the **Done** button. To delete entries, press the **Delete** button.


Note

- If you input a number where there is no channel, the **Done** button will become inactive.

• Selecting through SIRIUS category list

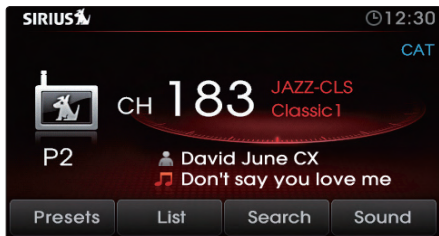


1. Press the **List** button.

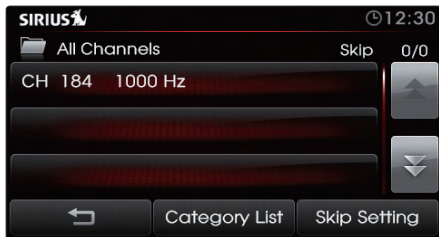


2. Select the desired channel to start listening or press the **Category List** button to display the channels in the selected category.

2. Using Skip

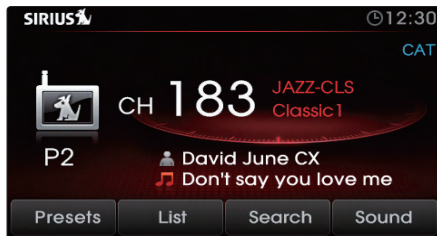

1. Press the **List** button.

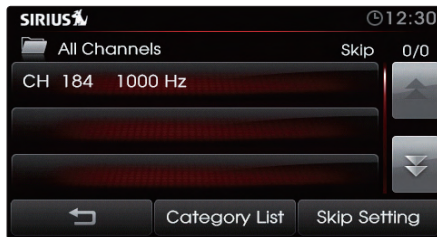

2. Press the **Skip Setting** button.



3. Select the channels you wish to skip. When selected, an **X** will be displayed next to the selected channel.

3. Storing presets



Presets are a way for you to save your favorite SIRIUS channels. Up to 18 presets can be saved in SIRIUS mode.

1. Select the desired SIRIUS channel.
2. Press the **Presets** button.




3. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.

4. The current radio broadcast will automatically be saved to the present number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

4. Viewing SIRIUS channel information



1. Press the SIRIUS icon.

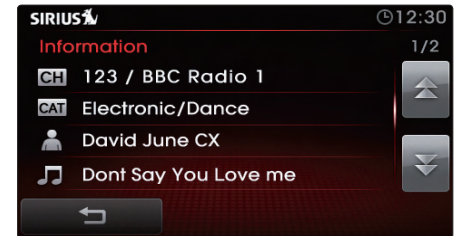

2. Information about the current channel (channel, category, artist, title) will be displayed.

MEDIA MODE

The MEDIA mode within your UVO system offers a variety of media modes which allow you convenience and ease in operating your system. Media mode includes a variety of modes, such as audio CD, MP3 CD, USB, iPod, zune, BT audio, and Aux. The features listed below describe common features which you will encounter when operating Audio CD, MP3 CD, USB, iPod, zune, and JUKEBOX modes.

Common Features

• Play/Pause



1. Insert or connect the desired media (Audio CD, MP3 CD, USB, iPod, zune) or press the **MEDIA** key on the control panel if the desired media has already been inserted or connected.
2. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod/zune → AUX → BT AUDIO → CD.
3. When a desired media is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

• REW/FF



1. Press and hold the **SEEK TRACK ^** or **SEEK TRACK v** keys (over 0.8 seconds) on the control panel or the **▲**, **▼** keys (over 0.8 seconds) on the steering wheel controller.
2. The song will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

Note

- If you rewind to the beginning of the current song, the current song will automatically begin playing.
- If you fast-forward to the end of the current song, the next song will automatically begin playing.

• Jump



1. You can jump to different points in a song by touching the position on the progress bar.

Note

- The Jump feature is not supported in iPod or iPhone devices.

• Using Repeat

The repeat setting can be used to repeat the currently playing song.



1. Press the **Repeat** button. The 'Repeat' icon will be displayed.
2. Press once to turn on the Repeat setting and again to turn off.

• Using Shuffle

The Shuffle setting can be used to play all song in the current mode randomly.



1. Press the **Shuffle** button. The 'Shuffle' icon will be displayed.
2. Press once to turn on the Shuffle setting and again to turn off.

AUDIO CD MODE

Cautions upon handling Audio CDs

1. Precautions upon handling discs

- Store discs within their intended cases to prevent scratches.
- Never use heart-shaped, octagon-shaped or any other abnormally shaped discs.
- Never expose discs to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Never clean with solvents, such as anti-static sprays, cleaners, benzene, or thinners.
- Dust, scratch, and other foreign substances may cause popping sounds as well as sound deterioration.
- Never place paper on either side of the disc or write on disc surfaces.
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth.

- Copy-protected CDs, such as S-type CDs may not operate properly in the system.
- DATA CDs are not supported by the system.

2. For safe and efficient operation

- Never disassemble the CD Player(CDP) for repair purposes. Contact your place of purchase in case of malfunction. (Full service assistance will not be provided if the user disassembles the device.)
- Never use water to clean the system.
- Heed caution not to introduce foreign substances into the disc slot.
- The system may not operate in extremely hot or cold temperatures. (The operational temperature range is: -10C° ~ 65C°).
- Steam may condense on the fiber optic lens due to rain, wet conditions, or heat caused by system operation.
- Never clean the system with chemical solvents. Always use a clean and dry cloth.

3. Supported disc format

- The disc types supported by this device are as shown below.

Disc format	Disc media	Format
CD	CD CD-R CD-RW	CD-DA MP3 WMA CD-ROM CD-TEXT

Disc Size	5inch (12.7cm)
-----------	----------------

Disc Format	Audio Format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver. 9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation.

4. Disc/content format and compatibility

Ordinary disc compatibility

- This system has been designed to be compatible with software bearing the following logo marks.



- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not operate properly.

Special formats or special features regarding software

CD-R/RW Compatibility

- This system operates as a CD-ROM and supports CD-R and CD-RW discs in CD audio or MP3 CD format.

- CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device. However, some information, such as play time, may still be displayed.

PC-created DISC compatibility

- When burning a disc with a personal computer, even discs compatible with the formats described above may not operate properly due to software settings within the burning application. In such cases, contact the software developer.
- Additional information regarding compatibility can be found on the CD-R/RW software disc box. DVD-R/RW discs are not supported by the device.

Compressed audio compatibility


This system plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly

displayed.

- Physical formats of CD: Model 1, Model 2 XA format 1.
- This system only supports tracks with file extension of ".MP3" or ".WMA".
- This system does not support multisession discs.
- This system supports a maximum of 256 folders and maximum 512 files. Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto MP3 files. This system has been designed to be compatible with various bit rates. Audio which has been encoded at 128kbps will sound similar to CD audio sound quality. Although this device supports low bit rate MP3 files, such files may result in a low quality sound.
- For stable operation, the use of files in 95kbps~192kbps bit rate range and 44.1kHz sampling frequency is recommended.
- For Mixed CDs (MP3+CD-DA), only CD-DA files will be recognized and supported.

AUDIO CD Mode Screen and Features

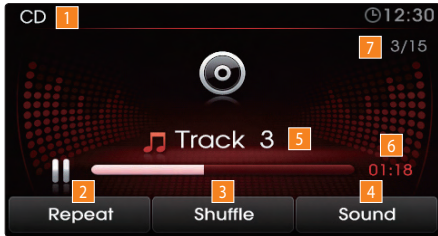

1 Mode Display

Displays that the current mode is CD mode.

2 Repeat

If Repeat is operating, the current track will be repeated and the corresponding icon will be displayed.

3 Shuffle

If Shuffle is operating, the tracks will be played in random order and the corresponding icon will be displayed.

4 Sound

Enters Sound Setup.

5 Track Number

Displays the track number

6 Play Time

Displays the play time.


7 Current/Total Track Number

Displays the current track number and total number of tracks on CD.

Inserting/Ejecting a Disc

1. Inserting a Disc

Insert the disc into the slot. The disc will begin playing automatically after it has been inserted.

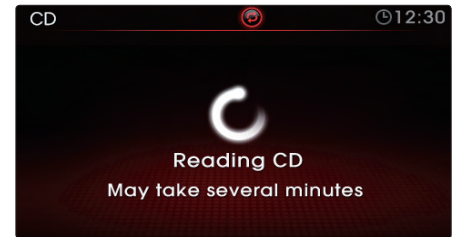

2. Ejecting a Disc

Press the  button.


The disc will immediately be stopped and ejected.

Note

- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player. In such cases, the disc will not begin playing automatically.

Listening to an Audio CD

1. Insert a CD or press the **MEDIA** key on the control panel if the CD has already been inserted.

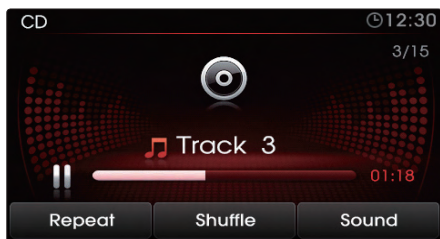

2. When a track is playing and you wish to pause, press the **||** button next to the progress bar. Press the **▶** button to restart the track.

Note

- When playing a CD-TEXT, the title and artist will also be displayed.

Selecting a CD track

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** **▲** or **SEEK TRACK** **▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next track will begin playing.

Note

- If the **SEEK TRACK** **▼** key on the Control panel or **▼** key on the steering wheel controller are pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the track has been playing for less than 3 seconds, the start of the previous track will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected track.

2. Press the **TUNE** knob to play the selected track.

Note

- The current track will continue playing even as you search tracks through the **TUNE** knob.

MP3 CD MODE

Cautions upon handling MP3 CD

1. Precautions upon handling discs

- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (KHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1KHz

2. ID3 tag

- This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

3. Supported media

- The MP3 media supported by the device are CD-ROM and USB.

4. Supported media formats

- This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 8 layers
- Maximum folder length: 64 Bytes, file name length: 64 Bytes
- Maximum number of folders which can be stored onto one disc: 256 folders (including ROOT directory)
- Maximum number of files which can be stored onto one disc: 512 files

5. Precautions upon burning MP3 files

- The use of ISO 9660 LEVEL 2 JULIET format is recommended when burning MP3 files. Burning in other formats may abnormally display the file names.
- It is possible to display up to 32 characters for file and folder names in case of UNICODE, and up to 64 characters in case of ASCII.
The full length of the artist name and the song title can be displayed by using the scroll function.

6. Precaution

- Use an MP3 bit rate which is less than 128 kbps. The sound quality cannot be guaranteed for MP3s exceeding 128kbps.

MP3 CD Mode Screen and Features



1 Mode Display

Displays that the current mode is MP3 CD mode.

2 Menu

Displays the categories and song lists for the MP3 CD.

3 Copy

Copies current song into JUKEBOX.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to an MP3 CD

1. Insert an MP3 CD or press the **MEDIA** key on the control panel if the CD has already been inserted.



2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Note

- For some media formats, the system requires time for media indexing. In the case of MP3 CDs, the system will take 1.5sec / song.

Selecting an MP3 CD song

1. Selecting through song Up/Down

1. Press the **SEEK TRACK** \wedge or \vee **SEEK TRACK** keys on the control panel or the \wedge or \vee keys on the steering wheel controller to play the desired track or song.

Note

- If the \vee **SEEK TRACK** key on the Control panel or \vee key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from MP3 list



1. Press the **Menu** button.

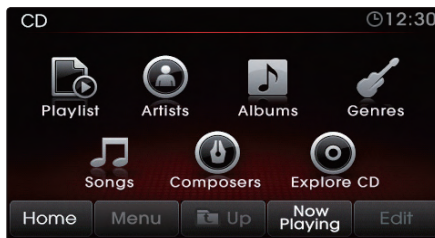

2. Press the **Now Playing** button.



3. Press the name of the song from the list. The song will automatically start playing.


Note

- In the MP3 list screen, the **TUNE** knob can also be used to select songs.

4. By Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.

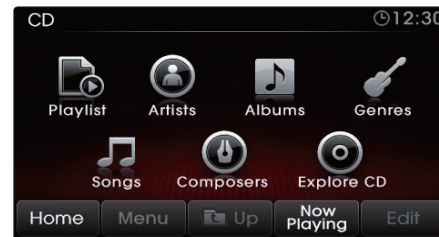


2. Choose the category through which you

wish to select the song. MP3 CD mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

Explore CD

Explore CD is a feature which allows you to browse files and folders of the CD by the names of categories.


1. While in the MP3 CD Menu screen, press the **Explore CD** button.

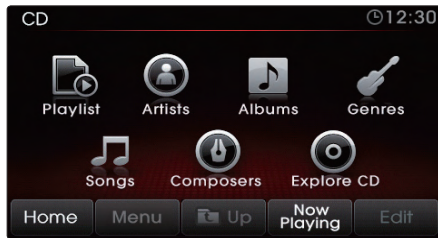

2. Search the corresponding files and folders to select the desired song.

Viewing song information

When listening to an MP3 CD song, you can browse through song details and information.

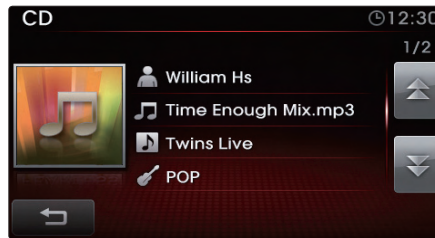

1. Press the Album art icon.
2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.
3. Press the **←** button to return to the previous screen.

Note

- Even as you browse through song information, you can use the **SEEK TRACK** **^** or **SEEK TRACK** **v** keys on the control panel or **^** or **v** keys on the steering wheel controller to select different MP3 songs. For more information, refer to the 'Selecting an MP3 CD song' section.

Copying songs into JUKEBOX

1. Copying the current song

The UVO system allows you to copy songs from an MP3 CD into JUKEBOX.



1. Press the **Copy** button.



2. Once copying is complete, you can listen to copied music in JUKEBOX mode.



2. Copying songs from list

Copying MP3 songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Note

- If memory is already full and songs can no longer be copied, the “Memory full! Please delete music from your JUKEBOX” message will be displayed and you must delete songs from JUKEBOX. For more information on deleting JUKEBOX songs, refer to the ‘Deleting JUKEBOX’ section.
- When copying MP3 CD songs, you can listen to all modes except CD mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

USB MODE

Cautions upon handling USB MP3

1. The MP3 file standards supported by the device are as follows.

- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1kHz

2. ID3 tag

- This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

3. Supported media

- The MP3 media supported by the device are CD-ROM and USB.

4. Supported media formats

- This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 16 layers

5. Precautions upon formatting USB & downloading MP3 files

- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

6. Precautions

- Use an MP3 bit rate which is less than 192kbps and a fixed bit rate. The sound quality cannot be guaranteed for MP3s exceeding 192Kbps. Certain features may operate abnormally when playing MP3 formats with variable bit rates, such as being limited to FF/REW.

Precautions upon handling USB

When using an external USB device, make sure to connect the device some time after turning on the ignition. The USB device may be damaged if connected before the ignition is turned on.

- The USB device may fail to operate when playing formats other than MP3 or WMA formats.
- Only MP3 files with compression rates between 8kbps~320kbps are supported.
- Only WMA files with compression rates between 8kbps~320kbps are supported.
- Be cautious of static electricity when connecting/disconnecting an external USB device.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting a USB device, the system may not properly recognize some USB states.
- When formatting an external USB device, the system may not properly recognize

byte/sector selections other than 512Byte or 2048Byte.

- The device will recognize only USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly due to compatibility issues. Verify that the external device is supported by the system before use.
- Avoid contact between the USB connector with bodily parts and foreign substances.
- Repeatedly connecting/disconnecting the USB in a short period of time may damage the system.
- A sound may occasionally occur when disconnecting the USB device.
- Do not disconnect a USB device when it is operating. Make sure to disconnect the USB device only after the audio power is turned off or when operating a different mode.
- The time required to recognize a USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in time are not

indications of malfunction. Please wait until the system becomes recognized.

- This system supports only USB devices used to play music files.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. This may lead to worsened performance or system damage.
- This system may not recognize the USB device if a separately purchased USB hub or extension cable is used. Connect the USB device directly to the terminal in the vehicle.
- Some mass storage USB devices may have multiple logical drives partitioned for user convenience. In such cases, only music files within the top-level logical drive will be supported.
- This system may not operate normally if the USB terminal is used to connect MP3 Players, mobile phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives).
- This system may not operate normally when using a USB memory type other

than a metal cover type USB device.

- This system may not operate normally when using HDD, CF, or SD memory formats.
- This system does not support DRM (Digital rights management) locked files.
- The device may not operate normally during severe vehicle vibrations.
- Avoid using USB devices also used as key chains or mobile phone accessories.

Connecting your USB device

Connect the USB as shown in the picture.



USB Mode Screen and Features



1 Mode Display

Displays that the current mode is USB mode.

2 Menu

Displays the categories and song lists for the USB.

3 Copy

Copies current song into JUKEBOX.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to USB music



1. Connect a USB device or press the **MEDIA** key on the control panel if a USB device has already been connected.

2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Note

- For some media formats, the system requires time for media indexing. In the case of USB mp3 songs, the system will take 1.5ms/song (Flash/HDD) or 40ms/song (mp3 players).

Selecting USB music

1. Selecting through song Up/Down

Press the **SEEK TRACK ^** or **SEEK TRACK v** keys on the control panel or the **^** or **v** keys on the steering wheel controller to play the desired song.

Note

- If the **SEEK TRACK v** key on the Control panel or **v** key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from the list



1. Press the **Menu** button.

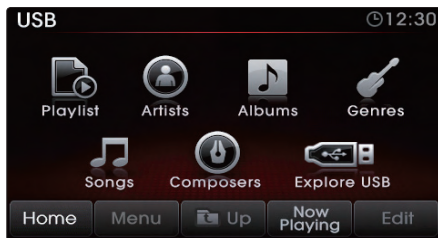

2. Press the **Now Playing** button.



3. Press the name of the song from the list.
The song will automatically start playing.

Note

- If in the MP3 list screen, the **TUNE** knob can also be used to select songs.

4. By Folders, Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.



2. Choose the category through which you wish to select a song. USB Mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.


Explore USB

Explore USB is a feature which allows you to browse files and folders of the USB by the names of categories.



1. While in the USB Menu screen, press the **Explore USB** button.

2. Search the corresponding files and folders to select the desired song.

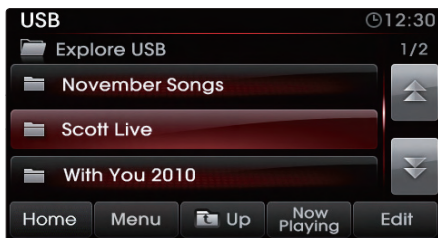



Viewing song information

When listening to USB music songs, you can browse through song details and information.





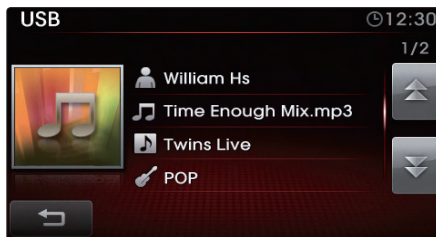

1. Press the Album art icon.



2. The song information (Artist, Title, Album, Genre) for the current USB song will be displayed. Press the  button to return to the previous screen.

Note

- Even as you browse through song information, you can use the  or  keys on the control panel or  or  keys on the steering wheel controller to select different USB songs. For more information, refer to the 'Selecting music songs' section.

Copying songs into JUKEBOX

1. Copying the current song

The UVO system allows you to copy songs from your USB device into JUKEBOX.



1. Press the  button.



2. Once copying is complete, you can listen to copied music in JUKEBOX mode.




2. Copying songs from list

Copying USB music songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.

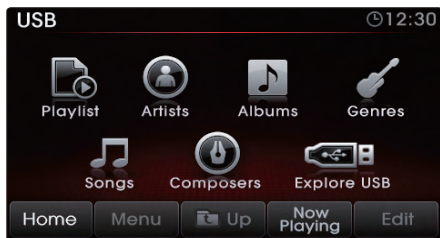

2. Press the **Now Playing** button.



3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Note

- If memory is already full and songs can no longer be copied, the “Memory full! Please delete music from your JUKEBOX” message will be displayed and you must delete songs from JUKEBOX. For more information on deleting JUKEBOX songs, refer to the ‘Managing JUKEBOX’ section.
- When copying USB songs, you can listen to all modes except USB mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

iPod MODE

About iPod

1. Trademark

iPod® is a registered trademark of Apple, Inc.

2. Connecting your iPod Device

Connect your iPod device as shown in the picture.



The identification of the iPod device, battery recharge, and other functions provided by the iPod device is normally supported by using your iPod connector cable.

! Caution

- If a playing iPod is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds. Please turn the iPod device to pause/stop prior to connecting it to the vehicle.

Note

- Supported iPod devices: iPod Nano 2G/3G/4G/5G/6G, iPod Classic 5G/6G, iPod Touch 1G/2G/3G/4G, iPhone 3G/3GS/4

iPod Mode Screen and Features



1 Mode Display

Displays that the current mode is iPod mode.

2 Menu

Displays the categories and song lists for the iPod.

3 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

4 Shuffle

If Shuffle is operating, the song will be played in random order and the corresponding icon

will be displayed.

5 Sound

Enters Sound Setup.

6 Play Time

Displays the play time.

7 Artist name

Displays the artist name.

8 Song Title

Displays the song title.

9 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

10 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to your iPod

1. Connect an iPod device or press the **MEDIA** key on the control panel if an iPod device has already been connected.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.