

## MP3 CD Mode Screen and Features



### 1 Mode Display

Displays that the current mode is MP3 CD mode.

### 2 Menu

Displays the categories and song lists for the MP3 CD.

### 3 Copy

Copies current song into JUKEBOX.

### 4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

### 5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

### 6 Sound

Enters Sound Setup.

### 7 Play Time

Displays the play time.

### 8 Artist name

Displays the artist name.

### 9 Song Title

Displays the song title.

### 10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

### 11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

## Listening to an MP3 CD

1. Insert an MP3 CD or press the **MEDIA** key on the control panel if the CD has already been inserted.



2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

### Note

- For some media formats, the system requires time for media indexing. In the case of MP3 CDs, the system will take 1.5sec / song.

## Selecting an MP3 CD song

### 1. Selecting through song Up/Down

1. Press the **SEEK TRACK**  $\wedge$  or  $\vee$  **SEEK TRACK** keys on the control panel or the  $\wedge$  or  $\vee$  keys on the steering wheel controller to play the desired track or song.

#### Note

- If the  $\vee$  **SEEK TRACK** key on the Control panel or  $\vee$  key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


### 2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.


### 3. Selecting from MP3 list



1. Press the **Menu** button.

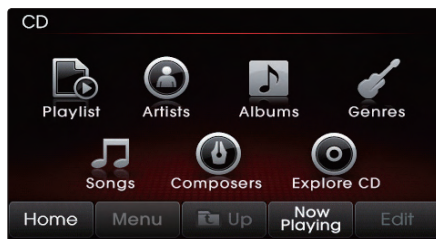

2. Press the **Now Playing** button.

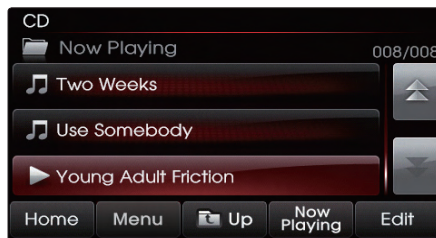

3. Press the name of the song from the list. The song will automatically start playing.


#### Note

- In the MP3 list screen, the **TUNE** knob can also be used to select songs.

### 4. By Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.

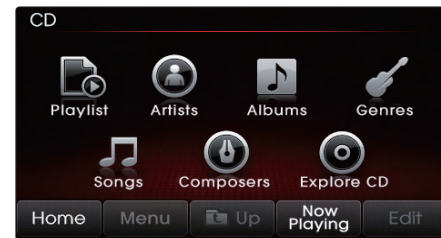


2. Choose the category through which you

wish to select the song. MP3 CD mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

## Explore CD

Explore CD is a feature which allows you to browse files and folders of the CD by the names of categories.


1. While in the MP3 CD Menu screen, press the **Explore CD** button.

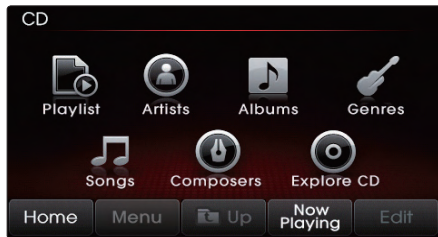

2. Search the corresponding files and folders to select the desired song.

## Viewing song information

When listening to an MP3 CD song, you can browse through song details and information.

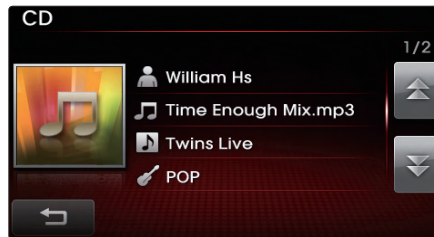

1. Press the Album art icon.
2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.
3. Press the **←** button to return to the previous screen.

### Note

- Even as you browse through song information, you can use the **SEEK TRACK** **^** or **SEEK TRACK** **v** keys on the control panel or **^** or **v** keys on the steering wheel controller to select different MP3 songs. For more information, refer to the 'Selecting an MP3 CD song' section.

## Copying songs into JUKEBOX

### 1. Copying the current song

The UVO system allows you to copy songs from an MP3 CD into JUKEBOX.



1. Press the **Copy** button.



2. Once copying is complete, you can listen to copied music in JUKEBOX mode.




## 2. Copying songs from list


Copying MP3 songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.

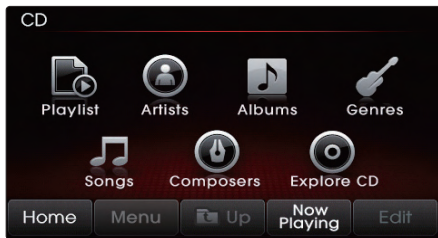

2. Press the **Now Playing** button.

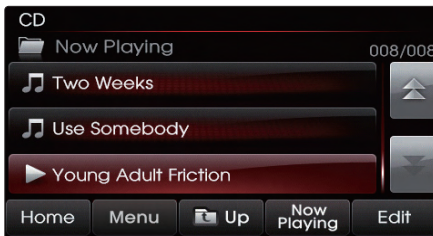

3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a  will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

### Note

- If memory is already full and songs can no longer be copied, the “Memory full! Please delete music from your JUKEBOX” message will be displayed and you must delete songs from JUKEBOX. For more information on deleting JUKEBOX songs, refer to the ‘Deleting JUKEBOX’ section.
- When copying MP3 CD songs, you can listen to all modes except CD mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

## USB MODE

### Cautions upon handling USB MP3

#### 1. The MP3 file standards supported by the device are as follows.

- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1kHz

#### 2. ID3 tag

- This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

#### 3. Supported media

- The MP3 media supported by the device are CD-ROM and USB.

#### 4. Supported media formats

- This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 16 layers

#### 5. Precautions upon formatting USB & downloading MP3 files

- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

#### 6. Precautions

- Use an MP3 bit rate which is less than 192kbps and a fixed bit rate. The sound quality cannot be guaranteed for MP3s exceeding 192Kbps. Certain features may operate abnormally when playing MP3 formats with variable bit rates, such as being limited to FF/REW.

### Precautions upon handling USB

When using an external USB device, make sure to connect the device some time after turning on the ignition. The USB device may be damaged if connected before the ignition is turned on.

- The USB device may fail to operate when playing formats other than MP3 or WMA formats.
- Only MP3 files with compression rates between 8kbps~320kbps are supported.
- Only WMA files with compression rates between 8kbps~320kbps are supported.
- Be cautious of static electricity when connecting/disconnecting an external USB device.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting a USB device, the system may not properly recognize some USB states.
- When formatting an external USB device, the system may not properly recognize

byte/sector selections other than 512Byte or 2048Byte.

- The device will recognize only USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly due to compatibility issues. Verify that the external device is supported by the system before use.
- Avoid contact between the USB connector with bodily parts and foreign substances.
- Repeatedly connecting/disconnecting the USB in a short period of time may damage the system.
- A sound may occasionally occur when disconnecting the USB device.
- Do not disconnect a USB device when it is operating. Make sure to disconnect the USB device only after the audio power is turned off or when operating a different mode.
- The time required to recognize a USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in time are not

indications of malfunction. Please wait until the system becomes recognized.

- This system supports only USB devices used to play music files.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. This may lead to worsened performance or system damage.
- This system may not recognize the USB device if a separately purchased USB hub or extension cable is used. Connect the USB device directly to the terminal in the vehicle.
- Some mass storage USB devices may have multiple logical drives partitioned for user convenience. In such cases, only music files within the top-level logical drive will be supported.
- This system may not operate normally if the USB terminal is used to connect MP3 Players, mobile phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives).
- This system may not operate normally when using a USB memory type other

than a metal cover type USB device.

- This system may not operate normally when using HDD, CF, or SD memory formats.
- This system does not support DRM (Digital rights management) locked files.
- The device may not operate normally during severe vehicle vibrations.
- Avoid using USB devices also used as key chains or mobile phone accessories.

## Connecting your USB device

Connect the USB as shown in the picture.



## USB Mode Screen and Features



### 1 Mode Display

Displays that the current mode is USB mode.

### 2 Menu

Displays the categories and song lists for the USB.

### 3 Copy

Copies current song into JUKEBOX.

### 4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

### 5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

### 6 Sound

Enters Sound Setup.

### 7 Play Time

Displays the play time.

### 8 Artist name

Displays the artist name.

### 9 Song Title

Displays the song title.

### 10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

### 11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

## Listening to USB music



1. Connect a USB device or press the **MEDIA** key on the control panel if a USB device has already been connected.

2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

### Note

- For some media formats, the system requires time for media indexing. In the case of USB mp3 songs, the system will take 1.5ms/song (Flash/HDD) or 40ms/song (mp3 players).

## Selecting USB music

### 1. Selecting through song Up/Down

Press the **SEEK TRACK ^** or **SEEK TRACK v** keys on the control panel or the **^** or **v** keys on the steering wheel controller to play the desired song.

### Note

- If the **SEEK TRACK v** key on the Control panel or **v** key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

### 2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.



### 3. Selecting from the list



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the name of the song from the list.  
The song will automatically start playing.

#### Note

- If in the MP3 list screen, the **TUNE** knob can also be used to select songs.

### 4. By Folders, Artists, Albums, Genres, Songs, Composers




1. Press the **Menu** button.



2. Choose the category through which you wish to select a song. USB Mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.


### Explore USB

Explore USB is a feature which allows you to browse files and folders of the USB by the names of categories.

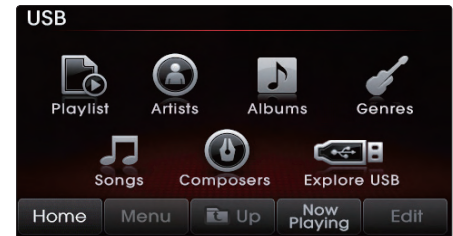

1. While in the USB Menu screen, press the **Explore USB** button.

2. Search the corresponding files and folders to select the desired song.

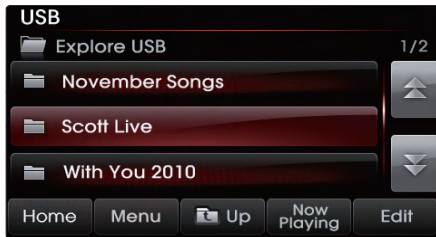



### Viewing song information

When listening to USB music songs, you can browse through song details and information.





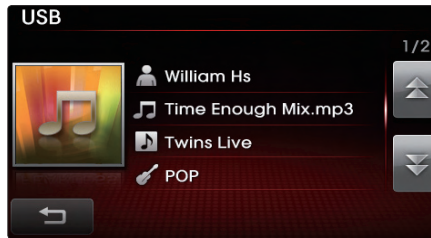

1. Press the Album art icon.



2. The song information (Artist, Title, Album, Genre) for the current USB song will be displayed. Press the  button to return to the previous screen.

### Note

- Even as you browse through song information, you can use the  or  keys on the control panel or  or  keys on the steering wheel controller to select different USB songs. For more information, refer to the 'Selecting music songs' section.

## Copying songs into JUKEBOX

### 1. Copying the current song

The UVO system allows you to copy songs from your USB device into JUKEBOX.



1. Press the  button.



2. Once copying is complete, you can listen to copied music in JUKEBOX mode.



## 2. Copying songs from list

Copying USB music songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a  will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

### Note

- If memory is already full and songs can no longer be copied, the "Memory full! Please delete music from your JUKEBOX" message will be displayed and you must delete songs from JUKEBOX. For more information on deleting JUKEBOX songs, refer to the 'Managing JUKEBOX' section.
- When copying USB songs, you can listen to all modes except USB mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

### iPod MODE

#### About iPod

##### 1. Trademark

iPod® is a registered trademark of Apple, Inc.

##### 2. Connecting your iPod Device

Connect your iPod device as shown in the picture.



The identification of the iPod device, battery recharge, and other functions provided by the iPod device is normally supported by using your iPod connector cable.

#### ! Caution

- If a playing iPod is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds. Please turn the iPod device to pause/stop prior to connecting it to the vehicle.

#### Note

- Supported iPod devices: iPod Nano 2G/3G/4G/5G/6G, iPod Classic 5G/6G, iPod Touch 1G/2G/3G/4G, iPhone 3G/3GS/4

## iPod Mode Screen and Features



### 1 Mode Display

Displays that the current mode is iPod mode.

### 2 Menu

Displays the categories and song lists for the iPod.

### 3 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

### 4 Shuffle

If Shuffle is operating, the song will be played in random order and the corresponding icon

will be displayed.

### 5 Sound

Enters Sound Setup.

### 6 Play Time

Displays the play time.

### 7 Artist name

Displays the artist name.

### 8 Song Title

Displays the song title.

### 9 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

### 10 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

## Listening to your iPod

1. Connect an iPod device or press the **MEDIA** key on the control panel if an iPod device has already been connected.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

## Selecting iPod music

### 1. Selecting through song Up/Down

Press the **SEEK TRACK**  $\wedge$  or  $\vee$  **SEEK TRACK** keys on the control panel or the  $\wedge$  or  $\vee$  keys on the steering wheel controller to play the desired song.

#### Note

- If the  $\vee$  **SEEK TRACK** key on the Control panel or  $\vee$  key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


### 2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.


### 3. Selecting from the list



1. Press the **Menu** button.

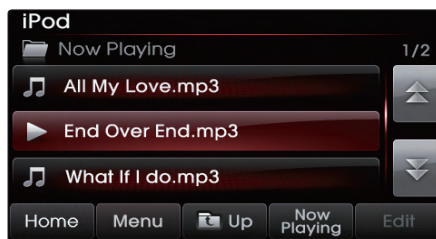

2. Press the **Now Playing** button.

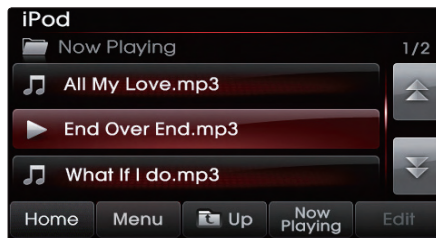

3. Press the name of the song from the list. The file will automatically start playing.


#### Note

- In the iPod list screen, the **TUNE** knob can also be used to select the desired song.

### 4. By Artists, Albums, Genres, Songs, Podcasts, Composers, Audiobooks



1. Press the **Menu** button.

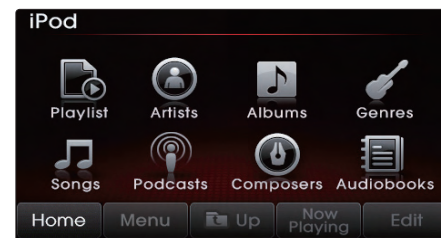


2. Choose the category through which you wish to select. iPod mode allows you to select by Playlists, Artists, Albums, Genres, Songs, Podcasts, Composers and Audiobooks.

## Viewing song information

When listening to your iPod, you can browse through song details and information.



1. Press the Album art icon.

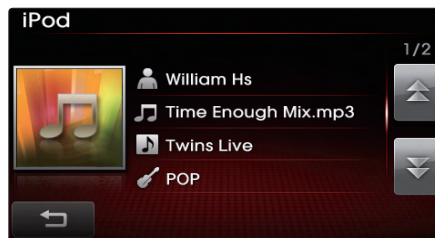

2. The song information (Artist, Title, Album, Genre) for the current iPod song will be displayed.

3. Press the  button to return to the previous screen.

### Note

- Songs in the iPod can be properly played in UVO system only when they have been downloaded through iTunes.
- If you receive a call or SMS while playing music from the iPhone, the music may not properly be restored after the call or SMS. In this case, reconnect the iPhone.
- After upgrading the iPod or iPhone firmware, reboot the iPod or iPhone and connect with the UVO system for normal operation.
- Songs cannot be copied from iPod or iPhone to JUKEBOX.

### zune MODE

#### About zune

##### 1. Trademark

zune® is a registered trademark of Microsoft Corporation in the United States and or other countries.

##### 2. Connecting your zune Device

Connect your zune device as shown in the picture.



#### zune Mode Screen and Features



##### 1 Mode Display

Displays that the current mode is zune mode.

##### 2 Menu

Displays the categories and song lists for the zune.

##### 3 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

##### 4 Shuffle

If Shuffle is operating, the songs will be played in random order and the corre-

sponding icon will be displayed.

##### 5 Sound

Enters Sound Setup.

##### 6 Play Time

Displays the play time.

##### 7 Artist name

Displays the artist name.

##### 8 Song Title

Displays the song title.

##### 9 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

##### 10 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.



## Listening to your zune

1. Connect zune device or press the **MEDIA** key on the control panel if zune device has already been connected.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

### Note

- When connecting some external media formats, the system requires time for media indexing. In the case of zune files, the system will take 60ms/song.
- Songs cannot be copied from zune to JUKEBOX.

## Selecting zune music

### 1. Selecting through song up/down

Press the **SEEK TRACK ▲** or **SEEK TRACK ▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired song.

### Note

- If the **SEEK TRACK ▼** key on the Control panel or **▼** key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.


### 2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.


### 3. Selecting from the list



1. Press the **Menu** button.

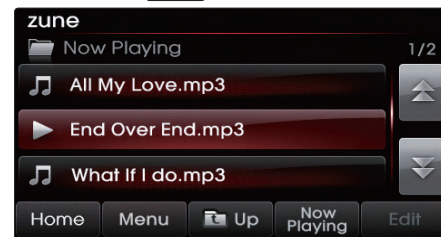

2. Press the **Now Playing** button.

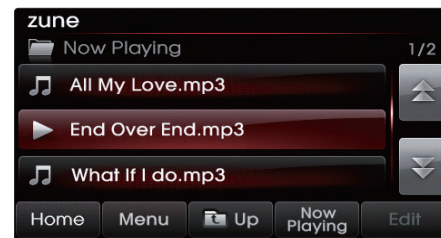

3. Press the name of the song from the list.  
The song will automatically start playing.

#### 4. By Songs, Genres, Albums, Artists, Playlists



1. Press the **Menu** button.




2. Choose the category through which you wish to select. zune mode allows you to select by Songs, Genres, Albums, Artists, and Playlists.

#### Viewing song information

When listening to your zune, you can browse through song details and information.



1. Press the Album art icon.

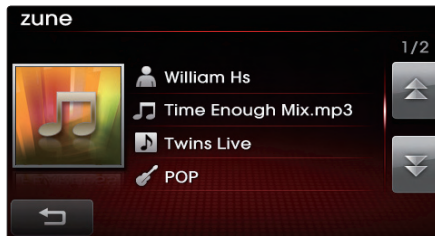

2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.

3. Press the **Back** button to return to the previous screen.

## AUX MODE

### AUX Mode Screen



#### 1 Mode Display

Displays that the current mode is AUX mode.

#### 2 AUX Status

Displays the AUX connection status

#### 3 Sound

Enters Sound Setup.

### Connecting an AUX media device

Connect a cable from the headphone jack on your AUX device to the jack located in your vehicle.



#### Note

- Connecting your AUX device with the vehicle will not provide power to your AUX device. If you plan on using your AUX device for long periods of time, make sure to charge with a cigarette jack power adaptor or a separate USB cable.

### Listening to AUX media

1. Connect an AUX device or press the **MEDIA** key on the control panel if the AUX device has already been connected.



2. Once in AUX mode, the connected audio will automatically begin playing from the car system provided that your external device is turned on and playing audio.

### BT AUDIO MODE

BT Audio mode is a feature which allows you to stream music stored in your handset device via a *Bluetooth*® wireless technology connection. Music saved in the handset device can be played in the car through *Bluetooth*® wireless technology audio streaming. BT audio can be played only when a handset device has been connected. To play BT audio, pair a handset device with the system. If *Bluetooth*® wireless technology is disconnected while playing BT audio, music play will be discontinued. The audio streaming function may not be supported in some handset devices. Only one function can be used at a time between the *Bluetooth*® wireless technology handsfree or BT audio function. Playing music from the car is not possible when there are no music files stored in the handset device.

### BT Mode Screen and Features



#### 1 Mode Display

Displays the current mode as BT Audio mode.

#### 2 *Bluetooth*® wireless technology enabled device information

Displays information about the *Bluetooth*® wireless technology enabled device

#### 3 Song Title

Displays the song title.

#### 4 Play/Pause

Plays/pauses the song.

#### 5 Sound

Enters Sound Setup.

#### 6 Phone Battery charge status

Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.

#### 7 Signal Strength

Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.

#### 8 *Bluetooth*® wireless technology connection state

Becomes displayed when a *Bluetooth*® wireless technology enabled phone has been connected with the car system.

---

## Listening to music from your *Bluetooth*<sup>®</sup> wireless technology enabled device

---

1. Pair your *Bluetooth*<sup>®</sup> wireless technology enabled device to the handsfree system. For more information on pairing your *Bluetooth*<sup>®</sup> wireless technology enabled devices, refer to the 'Pairing your handset device to the handsfree system' section.
2. Press the **MEDIA** key on the control panel to turn on BT audio mode.
3. When streaming music from your *Bluetooth*<sup>®</sup> wireless technology enabled device and you wish to pause, press the **II** button next on the screen. Press the **▶** button to restart music.

---

### Note

- While music saved in the *Bluetooth*<sup>®</sup> wireless technology enabled device will automatically begin playing after converting to the BT Audio screen, this music player function may not be supported in some *Bluetooth*<sup>®</sup> wireless technology enabled devices.
- If music does not begin playing even after displaying the Phone music screen, try

starting the music directly from the *Bluetooth*<sup>®</sup> wireless technology enabled device.

---

## Selecting a song

---

1. Press the **SEEK TRACK ▲** or **SEEK TRACK ▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired song.
2. The previous or next song will begin playing.

---

### Note

- File selection may not be supported in some *Bluetooth*<sup>®</sup> wireless technology enabled devices.

---

## REW/FF a song

---

1. Press and hold the **SEEK TRACK ▲** or **SEEK TRACK ▼** keys (over 0.8 seconds) on the control panel or the **▲**, **▼** keys (over 0.8 seconds) on the steering wheel controller.
2. The track will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

---

### Note

- The play/pause, song selection and REW/FF features are supported only in handset devices with AVRCP Ver. 1.3 or higher. If play control features are not working, first check the AVRCP version of your *Bluetooth*<sup>®</sup> wireless technology enabled device.
- When such operations are not supported, use the handset device to perform these functions.

### JUKEBOX MODE

The UVO system offers you maximum convenience by allowing you to copy songs from your MP3 CD and USB and store them to the JUKEBOX within the system. For more information on copying songs into JUKEBOX, refer to the 'Copying songs into JUKEBOX' section.

#### JUKEBOX Mode Screen and Features



#### 1 Mode Display

Displays that the current mode is JUKEBOX mode.

#### 2 Menu

Displays the JUKEBOX folder and file lists.

#### 3 Favorite

Adds/removes current song to Favorites list.

#### 4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

#### 5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

#### 6 Sound

Enters Sound Setup.

#### 7 Play Time

Displays the play time.

#### 8 Artist name

Displays the artist name.

#### 9 Song Title

Displays the song title.

#### 10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

#### 11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

## Listening to JUKEBOX

1. Press the **JUKEBOX** key on the control panel to turn to JUKEBOX mode.
2. The system will automatically restore the most recently played song.

## Selecting a JUKEBOX song

### 1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next song will begin playing.

### Note

- If the **SEEK TRACK** key on the Control panel or **▼** key on the steering wheel controller is pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

### 2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

### 3. Selecting from the list



1. Press the **Menu** button.



2. Press the **Now Playing** button.




3. Press the name of the song from the list. The song will automatically start playing.

### 4. By Artists, Albums, Genres, Song, Composers



1. Press the **Menu** button.

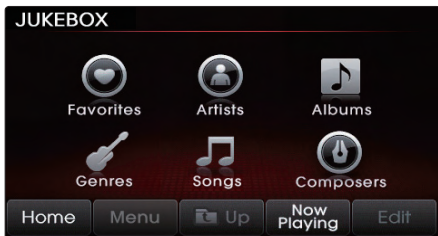

2. Choose the category through which you wish to select. JUKEBOX mode allows you to select by Favorites, Artists, Albums, Genres, Songs, and Composers.

### Adding Favorites

The Favorites feature allows you to create a separate Favorites list of songs.



1. While listening to JUKEBOX, press the **Menu** button.



2. The heart icon will be displayed on the screen to signify that the song has been saved in Favorites.


3. To delete a song from Favorites, press the **Menu** button.



## Playing Favorites



1. While playing JUKEBOX, press the **Menu** button.

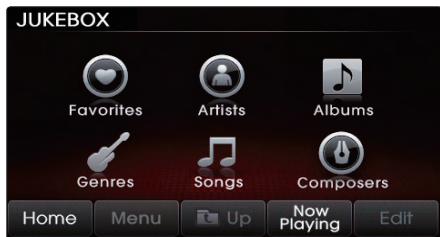

2. In the JUKEBOX Menu screen, press the **Favorites** button.



3. Press the name of the song from the list.  
The song will begin playing.


### Note

- The Favorites button will be inactive when there are no songs saved as Favorites.
- When deleting favorites from the Favorites list, the deleted favorites will be removed from the favorites list. The songs will not be deleted from the system.


### Memory Management

#### Checking System Information

1. Press the **SETUP** key on the control panel.

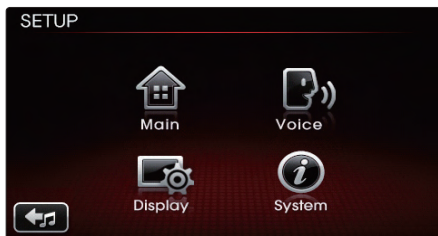

2. Press the **System** button.

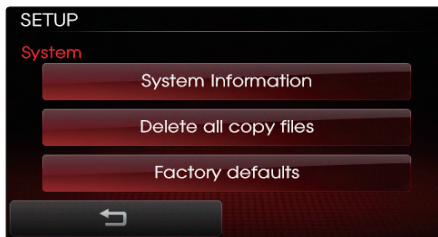

3. Press the **System Information** button.




4. The system information screen shows you the memory currently in use.


#### Deleting JUKEBOX

##### 1. Deleting JUKEBOX


1. While in JUKEBOX mode, press the **Menu** button.

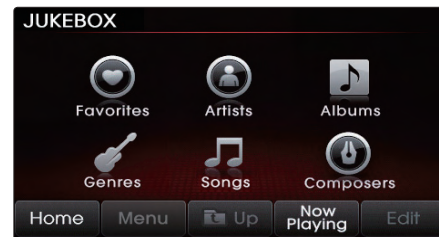

2. Press the **Now Playing** button.

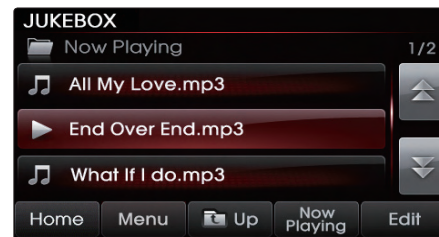


3. Press the **Edit** button.

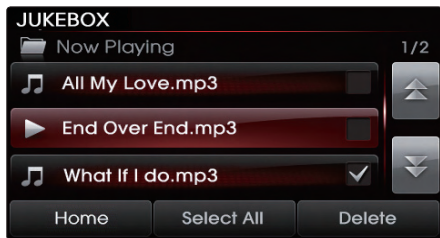


4. Select the songs you wish to delete. When selected, a  will be displayed next to the selected song. To select all songs, press the **Select All** button. All of the songs in the play list will be selected.
5. Press the **Delete** button.

## 2. Deleting all files

1. Press the **SETUP** key on the control panel.

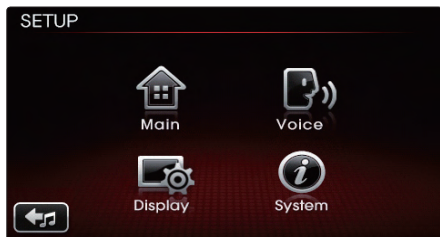

2. Press the **System** button.

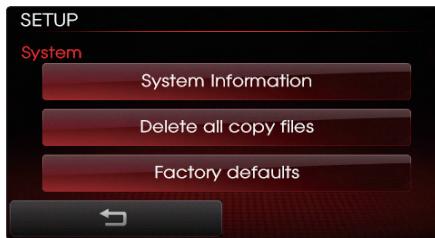

3. Press the **Delete all copy files** button.
4. The system will reboot and automatically restore the FM mode.

### Note

- When using the **Delete all copy files** feature, all JUKEBOX files will be deleted.



## PART 3 PHONE FEATURES

### Using your *Bluetooth*® wireless technology

#### Handsfree system

..... 70

#### Smart driving practices

..... 71

#### Pairing your handset device to the handsfree system

Pairing a *Bluetooth*® wireless technology enabled device for the first time ..... 72

Deleting a paired handset device ..... 73

Connecting a handset device ..... 74

Setting Priority ..... 74

#### Using the phone features

Phone Mode Screens and Features ..... 76

1. When a mobile phone is connected ..... 76

2. When making a call ..... 76

3. When receiving an incoming call ..... 77

4. When on a call ..... 77

Answering an incoming call ..... 78

Rejecting an incoming call ..... 78

Call waiting ..... 78

Placing a call ..... 79

1. By dialing a number ..... 79

2. By contact list ..... 79

3. By recent calls ..... 80

Contact list ..... 81

1. Downloading contact list (from mobile phone) ..... 81

Searching your contacts ..... 82

1. By name ..... 82

2. By number ..... 83

Checking missed calls ..... 84

SMS ..... 85

1. Downloading SMS messages (from mobile phone) ..... 85

2. Checking an SMS message ..... 85

3. Sending an SMS message (Custom Messages) ..... 85

4. Editing Custom Messages ..... 85

5. Switching the call between handsfree and handset device ..... 86

6. Transferring the handsfree call to your Handset device ..... 86

7. Transferring a call on your Handset device to handsfree ..... 86

#### Phone settings

Setting Phone Volume ..... 87

Turn Streaming Audio On and Off ..... 87

Contacts Sync ..... 88

SMS ..... 89

Changing passkey ..... 89

### Using your *Bluetooth*<sup>®</sup> wireless technology Handsfree system

Welcome to KIA's connected world of wireless personal networking. The UVO system with *Bluetooth*<sup>®</sup> wireless technology allows you to safely and conveniently use various *Bluetooth*<sup>®</sup> wireless technology enabled phone features as you drive your vehicle.

The *Bluetooth*<sup>®</sup> wireless technology handsfree system offers:

- Pairing mobile phones (Up to 5 phones)
- Connecting/disconnecting mobile phones
- Making/Answering phone calls
- Downloading Contacts
- Downloading Call history lists
- Playing music saved in a *Bluetooth*<sup>®</sup> wireless technology enabled phone in the vehicle

## Smart driving practices

**Check related laws and regulations on using mobile devices and their accessories and always make sure to obey them. The use of such devices may be prohibited or restricted in certain areas.**

Your mobile device lets you communicate through voice and data almost anywhere and anytime. When driving a car, driving comes first. If you choose to use your mobile device while driving, remember the following:

- **Some laws do not allow the use of handheld devices while driving.**  
Always obey local laws and, even if permitted, do not use your handheld device unless it is safe to do so.
- **Get to know your mobile device and features.**  
Knowledge of your mobile device and its features will help you to arrive safely and easily.

- **Place your mobile device in easy reach.**  
Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, always use your handsfree connection or let your voice mail answer it.
- **Do not search for phone numbers while driving.**  
Searching through your address book takes attention away from driving safely.
- **Let the other person know you are driving; when necessary, suspend the call in difficult traffic or weather conditions.**  
Rain, sleet, snow, ice or heavy traffic can be threats to safe driving.
- **Use your mobile device to call for help.**  
Dial 911 or other local emergency number in case of fire, traffic accident, or medical emergencies\*

- **Use your mobile device to help others in cases of emergency.**  
If you witness an accident, a crime, or an emergency situation where lives are in danger, call 911 or your local emergency number.
- **Call roadside assistance when necessary.**  
If you see a broken-down vehicle, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, contact your local roadside assistance, or local authorities, as appropriate.

## Pairing your handset device to the handsfree system


Before you can use the *Bluetooth*® wireless technology handsfree system to make hands-free calls, you must create a *Bluetooth*® wireless technology connection between your handsfree system and handset device. A *Bluetooth*® wireless technology connection is made between your handsfree system and handset device with a paired link.

When setting up a paired link, the handsfree system will always remember your handset device. Once the system is paired with the device, your hand-free system can be set so that it automatically connects to your handset each time you start your vehicle.

### ! Caution


- For safety, make pairings between your handsfree system and handset only while the vehicle is parked.

## Pairing a *Bluetooth*® wireless technology enabled device for the first time

1. Press the  button on the steering wheel or the **PHONE** key on the control panel.




2. Press the  button.

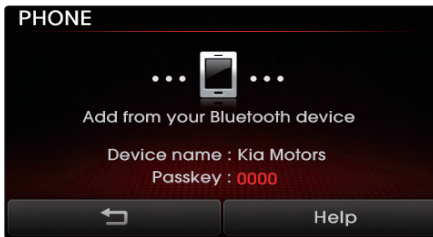

3. Perform a device discovery from

the handset device. For details on device discovery for your handset device, refer to the handset device user's manual.

4. Once the device is discovered, input the passkey in the handset device.

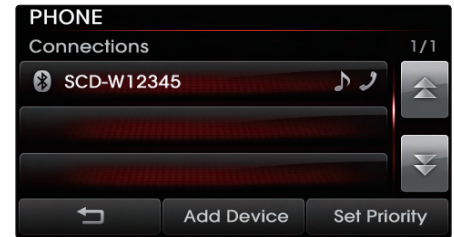

5. Once pairing is complete, the handset device will be shown in the Connections list.

### Note


- Initial pairing may require some time due to initial uploading of your contacts into the system. The contacts upload feature may not be supported in some handset devices.
- Before connecting the *Bluetooth*® wireless technology handsfree system with the handset device, check to see that the handset device supports *Bluetooth*® wireless technology.




ogy handsfree and *Bluetooth*® wireless technology is turned on.

- The process for initiating *Bluetooth*® wireless technology connections may vary depending on the manufacturer. Use the handset device user's manual as a reference guide.
- The UVO system supports up to 5 pairings. After 5 handsets have already been paired, you must delete a handset to connect a new handset.


## Deleting a paired handset device

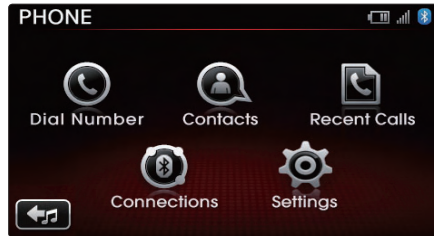

1. While in Phone mode, press the **Connections** button.

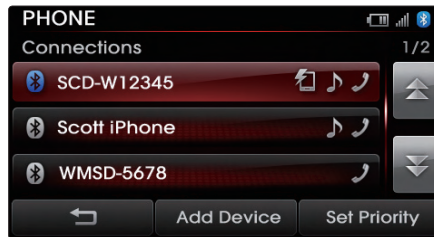

2. Select the handset device you want to delete.

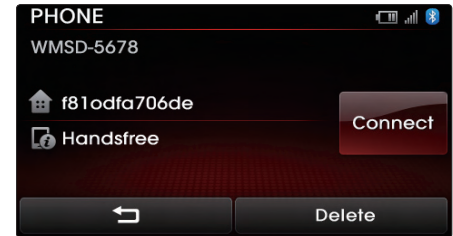

3. Once the phone is selected, press the **Delete** button.




4. Press the **Yes** button.

### Note


- When you delete a paired phone, data will also be erased. For instance, deleting a paired phone will also erase recent calls, contact lists, and SMS data from the system.

## Connecting a handset device

The system automatically connects the *Bluetooth*® wireless technology enabled device set at the highest priority. As a result, in order to connect a different phone, follow the following steps.

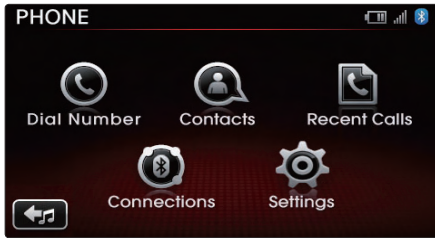


1. While in Phone mode, press the **Connections** button.

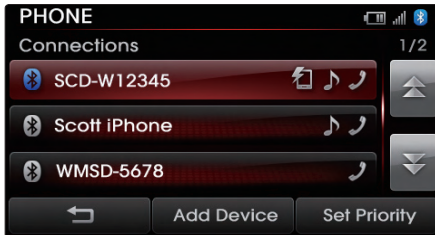

2. Select the handset device you want to

connect.

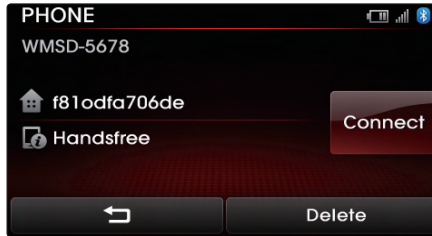


3. Press the **Connect** button.

### Note


- After initial pairing, your highest priority handset device will automatically connect with the handsfree system every time you start your vehicle (if your handset device is powered on and the relevant *Bluetooth*® wireless technology settings are not changed).

## Setting Priority


When more than one device has been paired to the system, you can set the connection priority so that a certain phone is connected with priority starting from the next time you turn on the system.

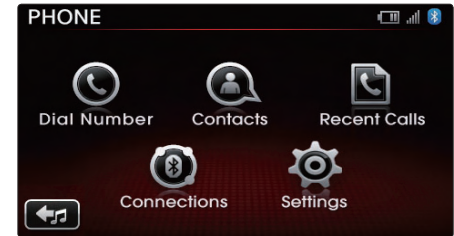

1. While in Phone mode, press the **Connections** button.

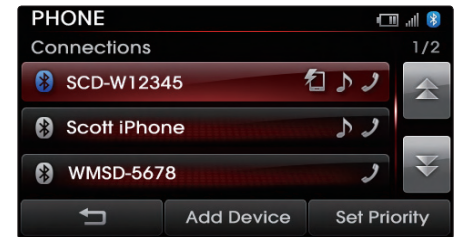

2. Press the **Set Priority** button.

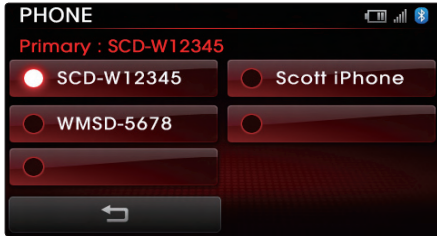


3. Select the phone you wish to set as preferred priority.

## Using the phone features

### Phone Mode Screens and Features

#### 1. When a mobile phone is connected

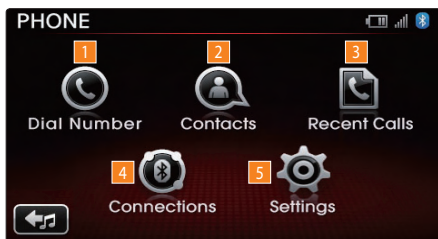

##### 1 Dial Number

Displays the Dial Pad screen.

##### 2 Contacts

Displays the Contacts list

##### 3 Recent Calls

Displays the Recent Calls list.


##### 4 Connections

Displays the Connections screen.

##### 5 Settings

Displays the Settings screen.

#### 2. When making a call

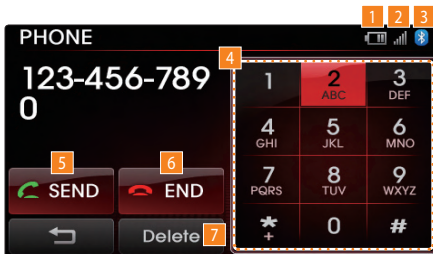

##### 1 Phone Battery charge status

Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.

##### 2 Signal Strength

Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.

##### 3 Bluetooth® wireless technology connection state

Becomes displayed when a Bluetooth® wireless technology enabled phone has been connected with the car system.

##### 4 Dial

Input the phone number through the dial pad.

##### 5 SEND

Makes the call to the dialed number. If a number has not been entered into the phone number input window, pressing the send button displays the call history list screen.

##### 6 END

Ends the call. If a number has been inputted, then erases the entire number.

##### 7 Delete

Deletes one digit at a time.

### 3. When receiving an incoming call



#### 1 Accept

Accepts the incoming call.

#### 2 Reject

Rejects the incoming call.

### 4. When on a call



#### 1 Call state

Displays the call state, such as talk time, phone connection, and end time.

#### 2 END

Ends the call.

#### 3 Name of the other party

Displays the name of the other party. The name of the caller will not be displayed if the caller's phone number has not been saved in contacts.

#### 4 Number of other party

Displays the number of the other party


#### 5 PRIVATE


When talking on the car handsfree, use this function to switch the call to the mobile phone.

#### 6 MUTE

Mutes the sound of the call. The caller will not be able to hear the conversation taking place in the car.

### Answering an incoming call

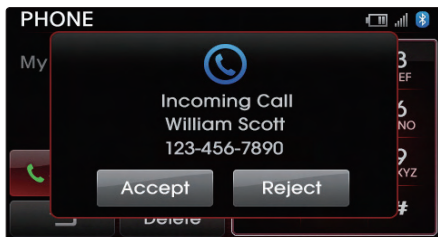



1. When there is an incoming call, an incoming call window will be displayed on the screen. Press the **Accept** button on the screen or the  key on the steering wheel controller to answer the call.
2. The call will be connected.

#### Note

- You can also accept an incoming call using your handset device if you wish to talk in private mode.

### Rejecting an incoming call

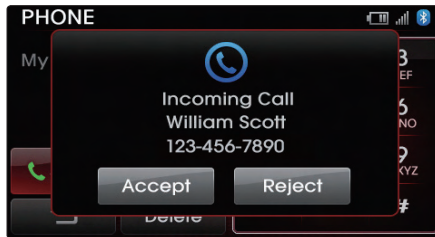



1. Press the **Reject** button on the screen or the  key on the steering wheel controller.
2. The call will be rejected.


### Call waiting

Call waiting is a feature which allows you to place the current call on hold in order to receive a second call. When you are in a call, the 'incoming Call' window will be displayed to the sound of a beep to signal a second incoming call.

1. If a second call is received while already on a call, the incoming call window will be displayed on the screen.

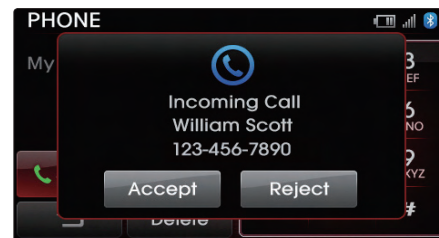

2. Press the **Accept** button or the  key on the steering wheel controller to take the second incoming call. Press the **Reject** button to reject the second incoming call.

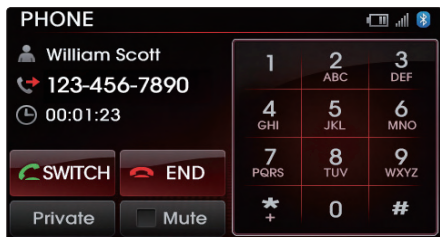


3. To switch again to the other caller, press the **SWITCH** button or the **SWITCH** key on the steering wheel. The other call will be received and the previous call will switch back to call waiting.

### Note


- The Call waiting function may not be supported in some handset devices.

## Placing a call


### 1. By dialing a number

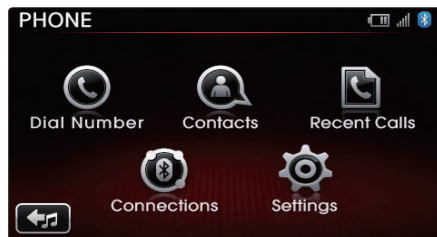

1. While in Phone mode, press the **Dial Number** button.

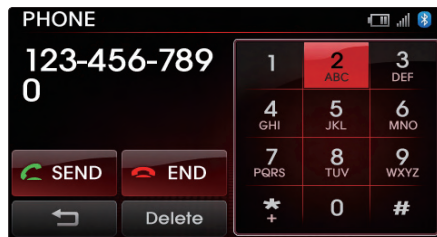

2. Use the dial pad on the right side of the screen to enter the phone number.

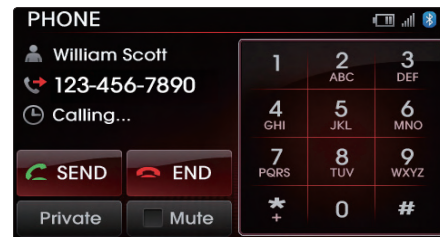


3. Press the **SEND** button on the screen or the **SEND** key on the steering wheel controller to connect the call.


### Note

- Pressing and holding the **SEND** button or **SEND** key will redial the most recent number.
- You can delete digits by pressing the **Delete** or **END** button on the screen.
- The **Delete** button will delete one digit at a time while the **END** button will erase all digits.
- When placing international calls, press and hold the “\*”. A “+” sign is displayed, allowing you to place an international call.


## 2. By contact list

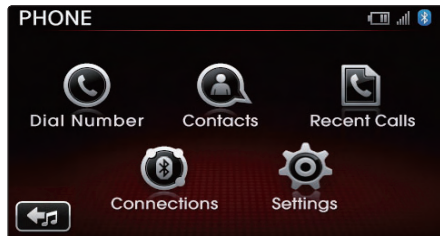

1. While in Phone mode, press the **Contacts** button.

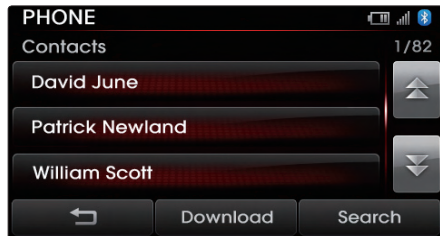


2. Select the contact you want to call from the list.

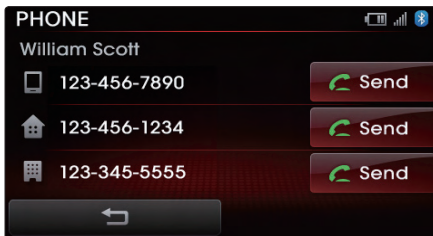


3. Press the **SEND** button on the screen or the **SEND** key on the steering wheel controller to connect the call.


## 3. By recent calls

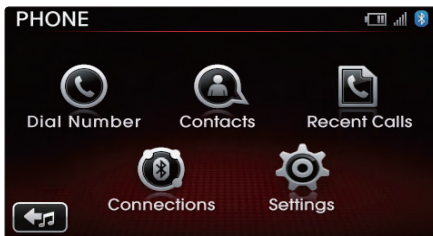

1. While in Phone mode, press the **Recent Calls** button.

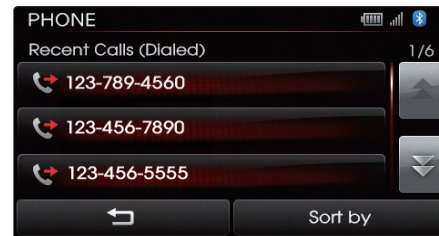

2. Select the contact you want to call from the list.

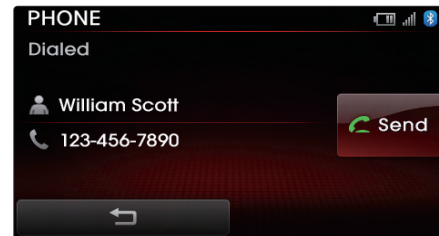

3. Press the **SEND** button on the screen or the **SEND** key on the steering wheel controller to connect the call.