


Address Book


Search the destination with the address book.

Press the **NAV** head unit key. ► Select the **Destination** tab. ► Select the **Address Book** icon.

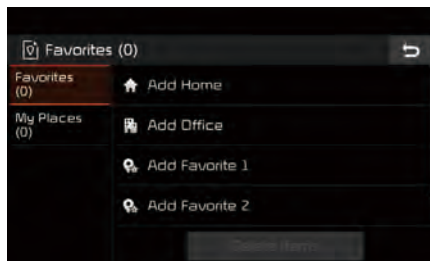

Select the desired group.


If you save address in the Favorites tab, you can set destinations easily by pressing the icons such as **Go Home** and **Office** at the bottom of the Destination menu.

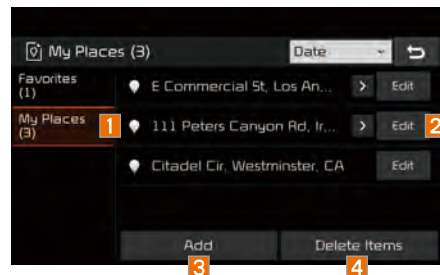


Name	Description
1	Select the desired destination from the searched items.
2	Edit the item.
3	Register a new Address.
4	Delete the desired item.

Coordinates

Press the **NAV** head unit key. ► Select the **Destination** tab. ► Select the **Coordinates** to search by coordinates.

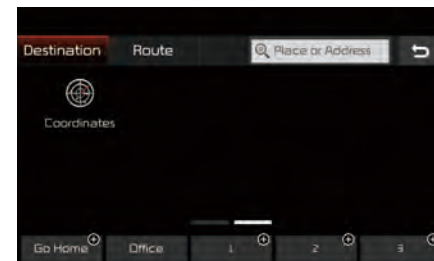

There are two ways to search by coordinates (D.M.S or Decimal Degrees). After typing coordinates, press the **OK** button to search.

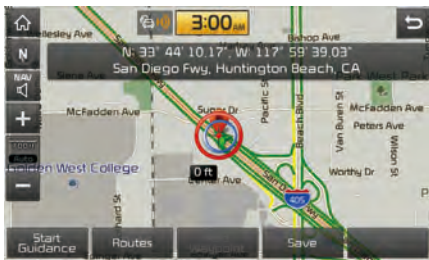

Press the **Start Guidance** button to start guidance.


Favorite Places

Set the route using your favorite places.


Press the **NAV** head unit key. ► Select the **Destination** tab. ► Select from favorite places.




On the button where locations are not registered, the **+** icon is displayed. When a location is registered, the **+** button disappears and the buttons 1 to 3 are displayed as your favorite places.

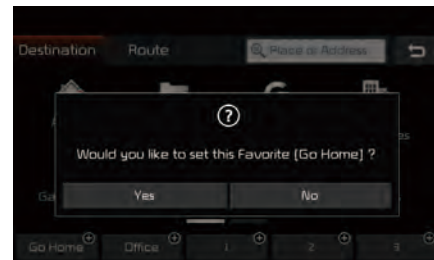

Press the **Go Home** button then press the **Yes** button to set the Favorite 'Go Home'.

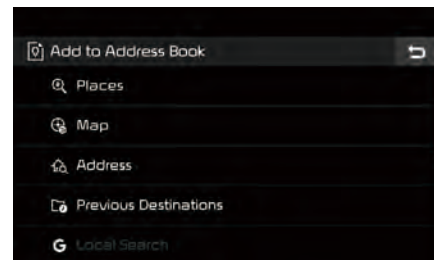


Office, Special 1, Special 2, and Special 3 can also be set as a Favorite using the same steps.

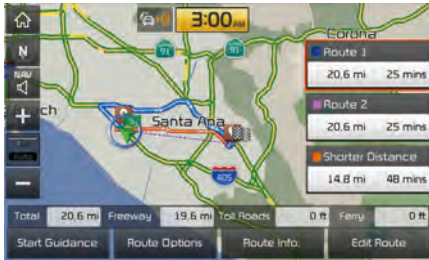

Pressing any of the Favorite Place buttons will start the route guidance to the saved Favorite address.

Route Setting


The route can be set after searching for a destination.

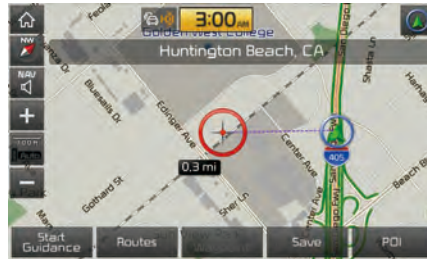

While the destination is set, the buttons **Start Guidance**, **Routes**, and **Add Waypoint** appear.


Press the desired button to change a destination or add a waypoint.

Destination Setting

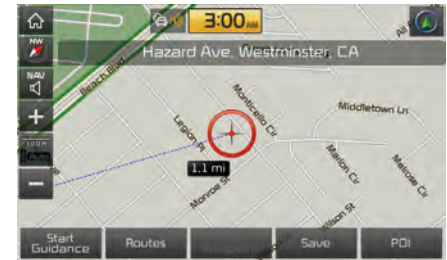

After searching the destination, press the **Start Guidance** button to set the location as a destination.

All Routes

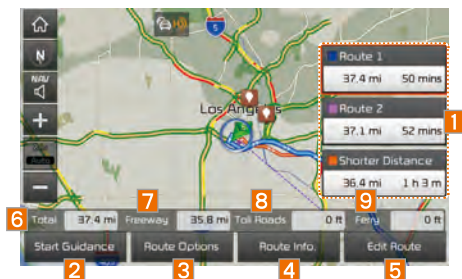


Three routing options are displayed based on real time traffic information and traffic pattern information and shorter distance.

- Route 1: Select the best route based on combine real-time traffic information and traffic pattern data on the map.
- Route 2: Select the best route based on real-time traffic information.
- Shorter Distance: Select short distance, regardless of how fast or slow progress will be calculated.

Name	Description
1 Route 1 37.4 mi 50 mins Route 2 37.1 mi 52 mins Shorter Distance 36.4 mi 1 h 3 m	Display total distance, travel time. Select the desired route.
2 Start Guidance	Start the guidance with the route.
3 Route Options	Change the route option.
4 Route Info.	You can check route information.
5 Edit Route	Edit the route.
6 Total	Display total distance of the route.
7 Freeway	Display length of free-way on the route.
8 Toll Road	Display length of toll road on the route.
9 Ferry	Display length of Ferry route on the route.

Adding Waypoint

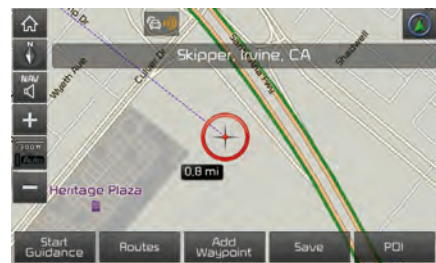


Press the **Add Waypoint** button to set the position as a waypoint and search the route.



Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5	Press the button to finish editing.
6	Press the button to add waypoint.

Registering Location

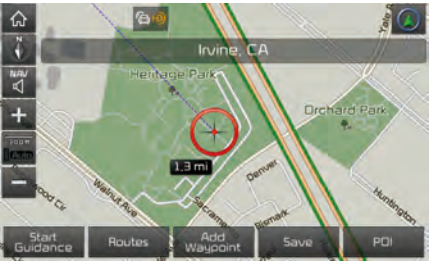

Press at the desired location to register the location.






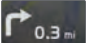
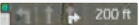
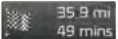
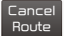

Enter the detailed information of the location to save.

Route Guidance


Show route guidance detailed information.

Route Guidance Screen

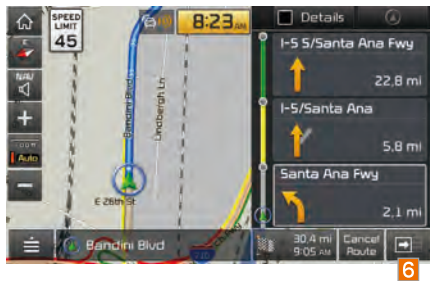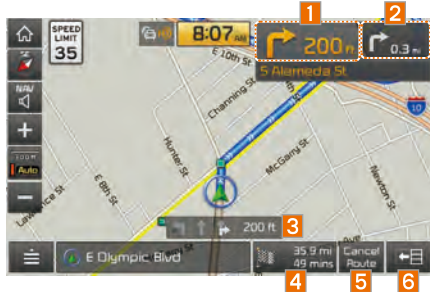





Name	Description
1 	Displays the distance and direction to the first turn point.
2 	Displays the distance and direction to the second turn point.
3 	Displays the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.
4 	Displays the distance to the destination and the estimated time of arrival. Press the button to check the detailed information. If no waypoint is set, you will see the remaining distance or estimated time of arrival in turn each time you click the button.
5 	Cancel the route.
6 	Displays the Turn List. Closes the Turn List.

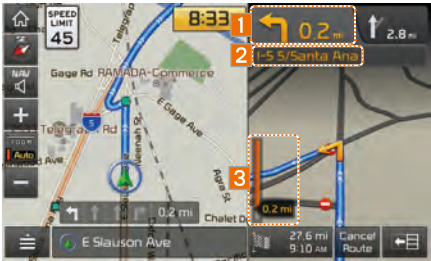
Split Screen during Route Guidance

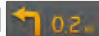



Approaching the turning point, the detailed road and travel information is automatically displayed on the right side of the screen.

Name	Description
1 	<ul style="list-style-type: none"> Turn Point: Displays direction and shape to turn shortly. Distance to turn: Displays distance to next turn point.
2 	Road name to maneuver: Info of the road.
3 	Detail Distance Bar: Displays distance to next turn point.

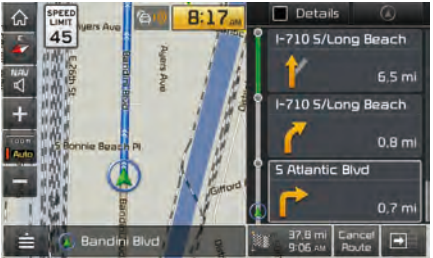


 additional info can be displayed on Freeway.

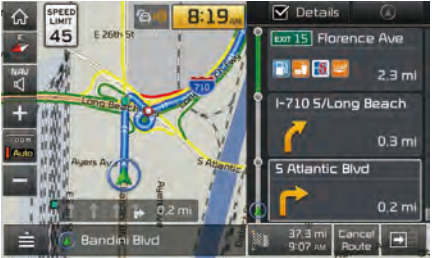

Additional info of Freeway exit or Rest area can be displayed by pressing the button .

Detailed information for POIs around free-way exit is listed by pressing POI symbols.

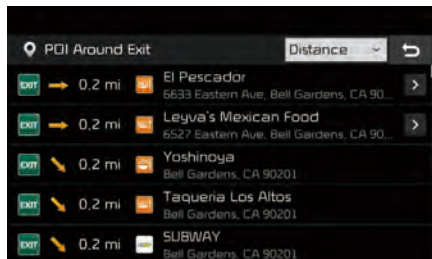


Route Search


Canceling Route

Cancel the route.

Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Cancel Route**.

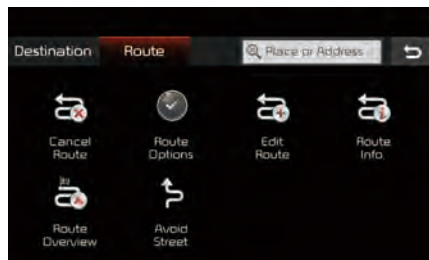


Press the **Cancel Route** icon.

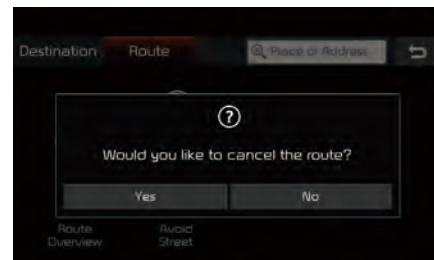

Press the **Yes** button to cancel the route.

Route Options

Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Route Options**.

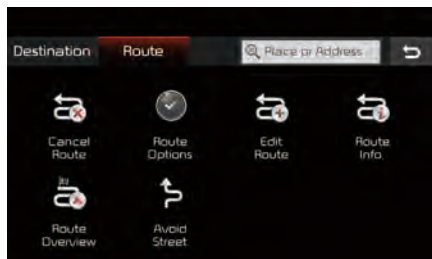

Press the **Route Options** icon.



Determine the route options to guide the route.

Editing Route





Edit the current route.


Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Edit Route**.



Press the **Edit Route** icon.



Name	Description
1 	Display the selected point on the map screen.
2 	Move the selected item up.
3 	Move the selected item down.
4 	Delete the selected item.
5 Done	Press the button to finish editing.
6 Add Waypoint	Press the button to add waypoint.

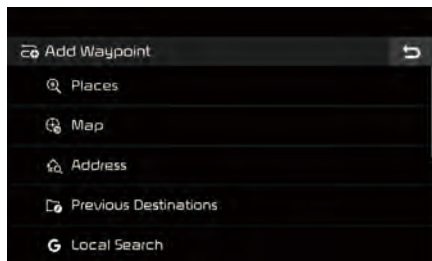


Add the waypoint through various searching methods.

Display Route Information

Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Route Info.**




Press the **Route Info.** icon.

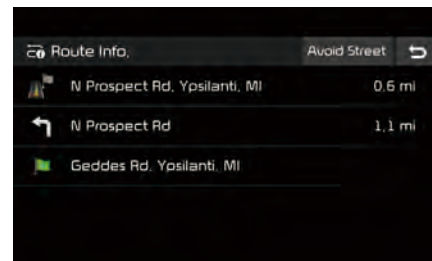

Check the information on the map. Select the desired item to see the map information.

Avoiding a road

Click the **Avoid Street** button to avoid the street or road.

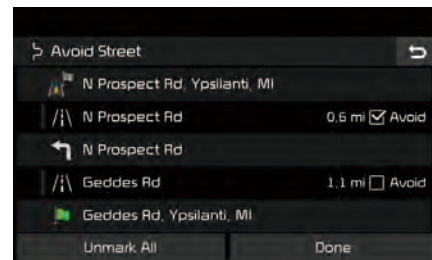


Check the desired item and press the **Done** button to finish.


Route Overview

Check the information on route including the distance, estimated time, toll fees, etc.

Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Route Overview**.

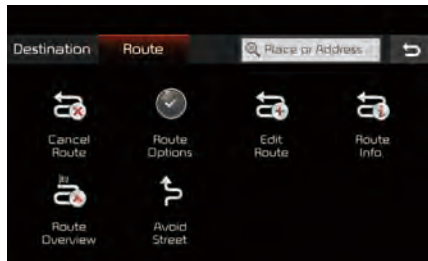

Press the **Route Overview** icon.

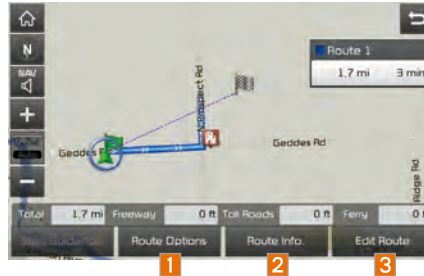

Name	Description
1 Route Options	Change the search option.
2 Route Info.	You can check route information.
3 Edit Route	Edit the current route.


Avoid Street

Search new route by avoiding the selected street(s).

Press the **NAV** head unit key. ► Select the **Route** tab. ► Select **Avoid Street**.



Press the **Avoid Street** icon.


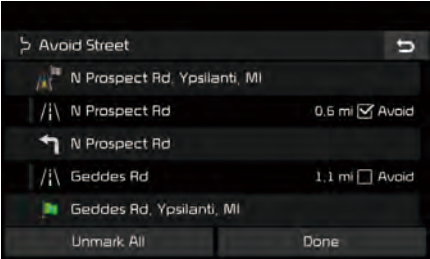


Press the **Done** to plan new route after selecting the street(s) that you want to avoid.

Navigation Settings

Display

Change general settings.

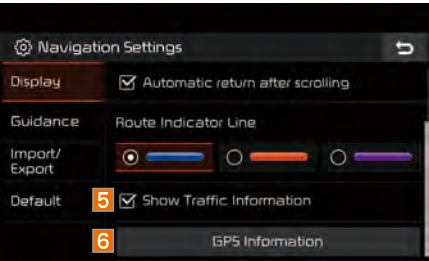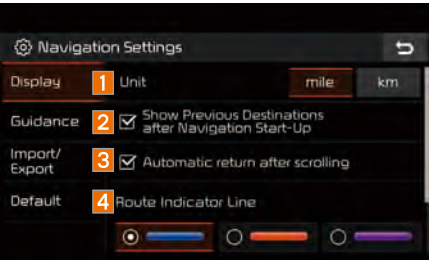

Name	Description
1	Change the unit of mile , km .
2	Press the <input checked="" type="checkbox"/> button to change the previous destination view setting when starting the navigation.
3	When <input checked="" type="checkbox"/> button selected, navigation will automatically return to current vehicle position after scrolling through map display.
4	Change the route guidance line colors.
5	Select the <input checked="" type="checkbox"/> button to display traffic information on the map.
6	Check the GPS information.