

# DIGITAL NAVIGATION SYSTEM



# Preface

Thank you for purchasing this Audio Navigation System.

This user's manual explains how to use the Hyundai Motor Audio Navigation System.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

## iPod®

iPod® is a registered trademark of Apple Inc.

## Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hyundai is under license.

A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology. Bluetooth® phone compatibility can be checked by visiting [www.hyundaiusa.com](http://www.hyundaiusa.com) and under the SERVICE & PARTS – BLUETOOTH COMPATIBILITY menu.

- Areas that can be checked – 9 areas, such as Pairing, Connection, Handsfree Calling, Streaming, etc.

## HD Radio™ Technology (if equipped)

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.



All Map Database cannot be copied without permission.

This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without M&Soft, Inc's prior written consent.

## PART 1 PRE-OVERVIEW

<b>Introduction .....</b>	<b>1-2</b>	Sorting items from list .....	1-11
Important information about this manual	1-2	Conditions for voice recognition system .....	1-11
Precaution for safe usage .....	1-2	How to operate menu by voice command .....	1-11
<b>Controller and functions .....</b>	<b>1-3</b>	Sound setting .....	1-12
Control panel .....	1-3	Giving voice command .....	1-12
Steering wheel remote controller .....	1-5	FAD/BAL .....	1-12
HVAC System .....	1-6	BASS/MID/TREB .....	1-13
Room Mirror .....	1-7	Auto volume control ON/OFF .....	1-13
<b>Basic operation and setting .....</b>	<b>1-9</b>	Touch screen beep ON/OFF .....	1-13
System Power ON .....	1-9	Operating Variable EQ .....	1-13
Turning the Power ON .....	1-9	Variable EQ Setup (Optional) .....	1-13
Turning the Power OFF .....	1-9	Display mode .....	1-14
Turning the Audio ON/OFF .....	1-9	Brightness .....	1-14
Adjusting audio volume.....	1-10	Display OFF .....	1-14
How to operate the screen menu .....	1-10	Display ON .....	1-14
Operating typical screen menu .....	1-10	Display setting .....	1-14
Inputting letter by using screen keyboard.....	1-10	Viewing Current Time.....	1-14
Displaying the list .....	1-10	Display Photo Frame .....	1-15
Selecting an item in a list .....	1-11	Setting the Clock .....	1-15
		Setting Display OFF .....	1-15

## Introduction

### Important information about this manual

This user manual contains instructions related to safety. Closely observe and comply with all of the safety instructions found within this manual.

#### **WARNING !**

Disobeying the warnings listed within this user's manual may cause fatal or serious injuries. Warnings indicate matters which may directly lead to accidents.

#### **CAUTION!**

Disobeying the cautions listed within this user manual may lead to accidents or cause injury. Cautions indicate matters which may lead to vehicle damage or malfunction.

#### **INFORMATION**

Information which the user must be aware or allows for more convenient use of the device.

### Precaution for safe usage

#### **WARNING !**

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the Audio Navigation system while driving.
- Do not disassemble, assemble, or modify the Audio Navigation system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

#### **CAUTION!**

- Do not operate the Audio Navigation system for prolonged periods of time with the vehicle ignition in ACC. Such operations may

lead to battery discharge.

- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

#### **Reference Page**

This indicates the title and page that you should refer to.



This indicates a key on the control panel.



#### **Voice Command**

This indicates an operation by voice command.

## Controller and functions

### Control panel

#### 1 Power / Volume control knob

- Push knob (over 0.8 second) : turns the power off.
- Push knob (under 0.8 second) : each time the knob is pressed, the Audio is turned on and off.
- Tune knob : the range of volume adjustment is between 0 ~ 35.

#### 2 FM/AM

Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...

#### 3 XM

Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1 ...

#### 4 SEEK/TRACK Up/Down

- SHORT KEY (less than 0.8 second)
  - FM/AM Mode : automatically searches for the previous or next broadcast frequency and starts playing.
  - XM Mode : receives the previous or next channel.
  - CD Mode : plays the previous or next track.
  - MP3, USB Mode : Plays the previous or next file.
  - iPod Mode : plays the previous or next song.
- LONG KEY (over 0.8 second)
  - FM/AM Mode : quickly moves through the frequencies while the button is pressed. Once released, automatically searches for broadcasts which can be received.
  - XM Mode : quickly moves to the previous or next channel.
  - CD Mode : REW/FF the current playing track.

#### 5 MEDIA

Each press will change the bands in the following order: DISC(CD, MP3) → (USB or iPod) → (AUX) → (Phone Music) → DISC(CD, MP3)...

- MP3, USB Mode : REW/FF the current playing file.
- iPod Mode : REW/FF the current playing song.

## 6 PHONE

Displays the Bluetooth® handsfree screen.

## 7 INFO

Display the Blue Link® screen.

## 8 MAPVOICE

Displays the map screen for the current position.

## 9 ROUTE

Displays the Route menu screen.

## 10 DEST

Displays the displays setting screen.

## 11 TUNE

- FM/AM Mode : push the key to search for the desired frequency. Press the key to receive the selected frequency.

- XM Mode : push the key to search for the desired channel. After a brief moment, the selected channel will be displayed.
- CD Mode : push the key to search for the desired track. Press the key to play the selected track.
- MP3, USB Mode : push the key to search for the desired file. Press the key to play the selected file.
- iPod Mode : push the key to search for the desired song. Press the key to play the selected song.

## 12 SETUP

Displays the Setup menu screen.

## 13 ENTER

Completes the command.

## 14 RESET

Resets the system - if software locks-up.

## **i** INFORMATION

If pressing the power off knob for over 0.8 second and the system does not shut down, and carefully use and insert a straightened paper clip at the access hole shown next to the right DISC indicator LED to reset the software. The system power will shut-off and restart.

## 15 Clock

- Short Key (under 0.8 second)
  - When the screen is turned on : displays the current time in the center of the screen.
  - When the screen is turned off : turns the full clock screen on and off.
- Long Key (over 0.8 second)
  - Displays the clock setting screen.

## 16 DISC eject

Ejects the inserted disc.

## 17 DISC insert indicator LED

Displays whether a DISC has been inserted.

## Steering wheel remote controller

### 1 MODE

Each time the Mode key is pressed, the mode changes in the following order: FM1 → FM2 → AM → XM1 → XM2 → XM3 → (DISC) → (USB or iPod) → (AUX) → (Phone Music) → FM1 ...

If an unsupported DISC is inserted, if there is no disc, or if an external device (e.g. iPod, USB memory stick, etc.) has not been connected, the mode will not be recognized and automatically switch to the next mode.

- Press this key for over 0.8 second to turn the Audio ON and OFF.
- Press this key when the Power is turned off to turn the power on.

### 2 Volume Up/Down

Increases or decreases the volume within a range between 0 ~ 35. Volume for navigation and voice guidance can be adjusted in the setup mode.

### 3 Seek Up/Down

- SHORT KEY (less than 0.8 second)

- FM/AM : receives the previous or next pre-set frequency.
- XM Mode : receives the previous or next preset channel.
- CD Mode : plays the previous or next track.
- MP3, USB Mode : plays the previous or next file.
- iPod Mode : plays the previous or next song.
- LONG KEY (Over 0.8 second)
  - FM/AM Mode : quickly moves through the frequencies while the key is pressed. Once released, automatically searches for broadcasts which can be received.
  - XM Mode : quickly moves to the previous or next channel.
  - CD Mode : REW/FF the current playing track.
  - MP3, USB Mode : REW/FF the current playing file.
  - iPod Mode : REW/FF the current playing song.

### 4 Voice Recognition

Starts Voice Recognition.

### 5 CALL

Press this key to receive an incoming call. If pressed while in Audio/Navigation mode, the Bluetooth® handsfree screen will be displayed.

### 6 END

Press this key to reject an incoming call. If pressed while on a call, then the call will be terminated.

## Room Mirror

Selecting the room mirror key allows you to make service related inquiries, POI info searches, and manual rescues by connecting to the Blue Link Center. Such features can be used only after subscribing to the Blue Link service.

### 1 Blue Link Center

Makes requests for Blue Link service related inquiries and consultations.

Upon selecting this key, you will be connected to the Blue Link Center service operator. Re-pressing the key will end the call.

This feature does not operate when you are on a Bluetooth phone call or when in the camera screen.

### 2 Blue Link for POI

Makes requests for desired POI (point of interest) information, such as Gas Stations, Restaurants, etc.

Upon selecting this key, you will be connected to IVR-POI. Re-pressing the key will end the call.



The incoming POI information can be checked at INFO>Downloaded POI.

This feature does not operate when you are on a Bluetooth phone call or when in the camera screen.

 


### 3 Blue Link for SOS

Places request to Blue Link center for assistance in cases of vehicle abnormality or when requiring manual rescue.

Upon selecting the key, you will be connected to the Blue Link Center Emergency Rescue Center. Re-pressing the key will end the call.

If you are on a Bluetooth phone call, the call will end and you will be connected to the Blue Link Emergency Rescue Center.

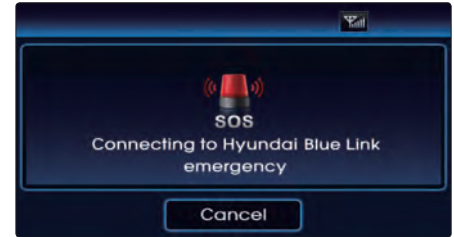


## i INFORMATION


You cannot talk on the Bluetooth phone and Blue Link phone simultaneously. When talking on either the Bluetooth® or Blue Link phone and you place or receive a call on the other phone, the following screen is displayed.



 
### When connecting a Blue Link call while on a Bluetooth call

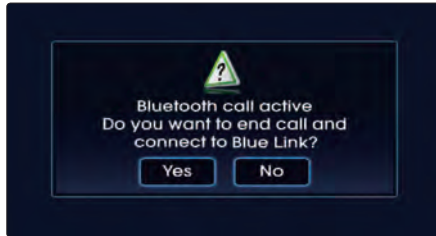

### When receiving a Bluetooth call while on a Blue Link call

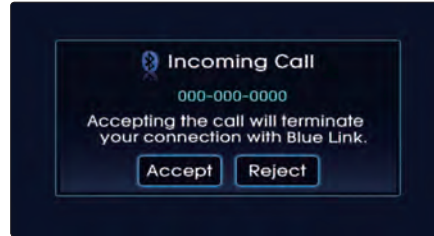 

### When connecting a Bluetooth call while on a Blue Link call

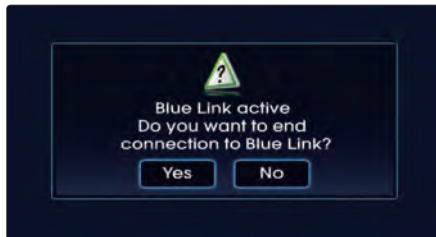 

## Basic operation and setting

### Turning the Power ON

1. Turn the ignition key onto ACC or ON. If the system power had been on when the ignition was turned off, the system will turn back on automatically.
2. If the system power had been off when the ignition was turned off, the system will remain off. In this case, press the **POWER** knob to turn on the system power.

### System Power ON

#### **i** INFORMATION

As system booting starts from the point the door lock is unlocked, the device may complete booting before the ACC is turned on or the **POWER** knob is pressed.

Consequently, the booting screen may not be displayed upon initially turning on the system power.



3. Once system booting is complete, the most recent operated mode will be displayed. For example, turning on the system will display FM1 radio mode if the last operated mode prior to turning off the system had been FM1 radio mode.

### Turning the Power OFF

If the **POWER** knob is pressed for over 0.8 second, a beep will sound and the system power will be turned off.

### Turning the Audio ON/OFF

Press the **POWER** knob for under 0.8 second with the system power on to turn the Audio on and off.

#### **i** Voice Command

1. Press the **VOICE** key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Audio On"  
"Audio Off"

#### **i** INFORMATION

Conducting the following operations while the AUDIO is off will automatically turn on the Audio system.

- Pressing the Audio related keys (**FM/AM**, **XM**, **MEDIA**).
- Inserting a DISC or connecting an external device.

## Adjusting audio volume

Turn the **POWER** knob in clockwise direction to increase the volume and counter-clockwise to decrease the volume.

### **i** INFORMATION

- The range of volume adjustment is between 0 ~ 35.
- Adjustments to the volume cannot be made while the AUDIO is turned off.

 
## How to operate the screen menu

### Operating typical screen menu

- If a menu button on the screen is pressed, the corresponding function will begin operation.
- The same menu button may perform different functions depending on the length of time the button is pressed (under 0.8 seconds or over 0.8 second). For more information, refer to the specific function within this user manual.
- The current operated button will be highlighted upon display.

- Buttons which cannot be operated under the current conditions will be displayed in disabled state. Pressing a disabled button will not perform any operation.

### Inputting letter by using screen keyboard

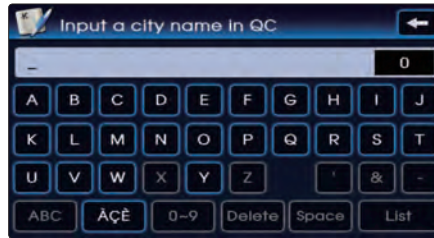

**ABC** : Displays the English alphabet keypad.

**AÇÈ** : Displays the French alphabet keypad. (if available)


**0-9** : Displays the number and symbol keypad.

**Delete** : Deletes the previously inputted letter. Pressing for over 0.8 second will delete all content.

**Done** : The input is completed.

**←** : Restores to previous screen. The inputted text will not be saved.

### Displaying the list

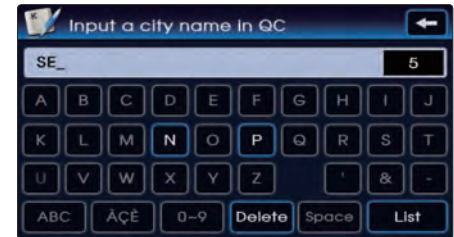 

**List** : Even if input is not complete, the current matching items from the database will be displayed.

### **i** INFORMATION

The number at the upper-right side of the screen displays the number of current matches.

## Selecting an item in a list



▲ ▼: Moves to the next page or previous page.

▶ ◀: The ▶ button will be displayed if the text is too long to be displayed in one button.

Press the ▶ button to move the cursor to the end of the text. Press the ◀ button to move the cursor to the front of the text.

## Sorting items from list



Select the desired sorting method to reorganize the list in accordance to the selected method.






## How to operate menu by voice command

### Conditions for voice recognition system




Most of the functions within the Audio and Navigation system can be operated by voice. Please follow the instructions below for optimal voice recognition performance.

- Close all windows and the sunroof. The voice recognition can be improved when in a quiet environment.
- Press the voice recognition button and say the desired voice command after the sound of the beep.
- The microphone is positioned above the driver so that voice commands can be said while maintaining a proper posture.
- Pronounce the voice commands naturally and clearly as if in normal conversation.

## Giving voice command

1. Press the  key on the steering wheel remote controller.  
A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command.
  -  [Voice command list], page 5-6.
  -  [Searching a destination by voice command], page 5-19.

### INFORMATION





Press the  key shortly to input the desired voice command. The system voice instruction comment will immediately terminate. When the  icon changes into the  icon with a beep sound, it is possible to input voice commands.

## Sound setting

Press the **Sound** button on the main screen of each Audio mode (FM/AM, XM, CD, MP3, USB, iPod) to display the Sound setting screen.



### FAD/BAL

The position of the sound can be adjusted by using the up-down and left-right (, , , ) buttons on the left side of the screen.

Press the **Center** button to position the sound in the center of the vehicle.

## BASS/MID/TREB

The BASS/MID/TREB can be adjusted by using the left/right buttons (◀, ▶) of each control.

## Auto volume control ON/OFF

Each time the **Auto volume control** button is pressed, the Auto volume control function is turned on or off.

### **i** INFORMATION

The Auto Volume Control is a function which automatically adjusts the volume level in accordance to changes in vehicle speed.

## Touch screen beep ON/OFF

Each time the **Touch screen beep** button is pressed, the beeping sound that follows each press on the screen will turn on or off.

## Variable EQ Setup (Optional)

### Operating Variable EQ

1. Press the **Variable EQ** button at the top of the **Sound** screen.



2. Within the <Variable EQ> screen, three types of EQ setups such as Normal, Dynamic, Concert can be selected.



3. Press the **Detail** button to view specific information on the three EQ settings.

### **i** INFORMATION

 
The Variable EQ feature may not be supported in some vehicle models and tuner mode.

## Display setting

Press the **SETUP** key on the control panel to display the Setup menu screen.



Press **Display** button to display the Display Setup screen.

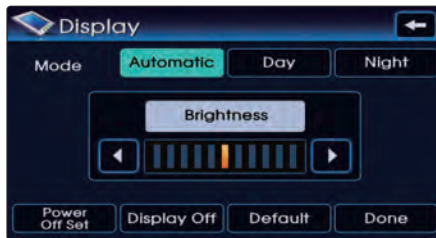

## Display mode

Press the button for the desired display mode from **Automatic**, **Day**, and **Night** modes. The current selected mode is highlighted.

- **Automatic**

The display is automatically converted between Daylight and Night modes in accordance to the on/off state of the vehicle taillights.

- **Day**

The bright screen is always maintained regardless of the on/off state of the vehicle taillights.

- **Night**

The dark screen is always maintained regardless of the on/off state of the vehicle taillights.

## Brightness

Use the left/right buttons (**◀**, **▶**) for control to make adjustments.

## Display OFF

 
Press the **Display Off** button.

## Display ON


Press anywhere on the black screen. The screen prior to display setting will be displayed.

## Viewing Current Time


Press the **📶🕒** on the front panel shortly (under 0.8 second) to display the current time at the center of the screen.

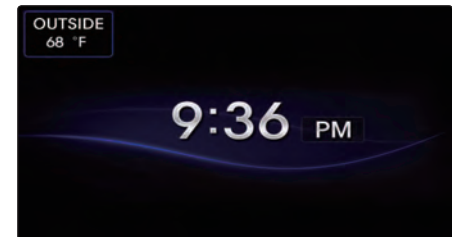

## **i** INFORMATION

If the screen is turned off, selecting the  will display the current time on the entire screen.

### Setting the Clock

Press and hold the  on the front panel (over 0.8 second) to display the Clock setting screen.



#### • GPS Time

The time received from the GPS will be displayed automatically.

#### • Clock Type

Selects the clock type shown as the entire screen when the system power is turned off.

#### • Time Format

When the clock type is digital, this button is used to convert the time between 12 hour/ 24 hour systems.

#### • Daylight Saving Time



Turns the Daylight Saving Time function on or off.

 
## **i** INFORMATION

Clock setting mode can be displayed while the clock is displayed on the screen even when the system is turned off.

### Setting Display OFF

#### Display Photo Frame

1. Press the  button in the DISPLAY setup screen.
2. Press the  button in the <Setting Display Off> setup screen.

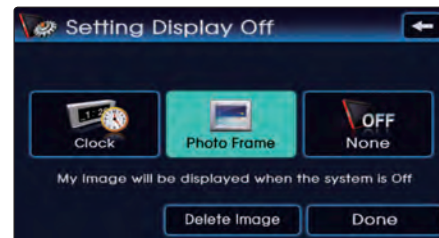

3. The registered image will be displayed once power is turned off.

## **i** INFORMATION

For Photo Frame setup, the frame must be set in USB Image mode. (For details on setting the Photo Frame, refer to the USB IMAGE page.)

4. To delete an image registered as a frame, press the  button.





## PART 2 Audio SYSTEM

### Operating the radio ..... 2-2

Listening to the FM/AM radio .....2-2

FM/AM screen and functions .....2-2

### FM/AM Radio .....2-2

Selecting FM/AM broadcast frequency 2-3

Storing FM/AM preset .....2-4

Scanning FM/AM broadcast frequency 2-5

### HD Radio Technology(if equipped) .....2-6

Starting HD Radio Mode .....2-6

HD Radio Mode Screens and

Functions .....2-6

Operating HD Radio Mode.....2-6

HD Radio digital Broadcast On/Off ...2-7

### XM radio .....2-9

Listening to the XM radio .....2-9

XM screen and functions .....2-9

Switching the XM mode (Channel /  
Category) ..... 2-10

Selecting XM broadcast channel ... 2-10

Storing XM preset ..... 2-12

Scanning XM broadcast channel ... 2-12

### Operating the CD Player ..... 2-13

Precautions upon handling discs ... 2-13

For safe and efficient operation ..... 2-13

### About CD Player ..... 2-13

Supported disc formats ..... 2-14

Disc/Content format compatibility 2-15

Inserting a Disc ..... 2-16

Ejecting a Disc ..... 2-16

Inserting/Ejecting Disc ..... 2-16

### CD ..... 2-17

Listening to CD music ..... 2-17

CD screen and functions ..... 2-17

Selecting the CD track ..... 2-17

REW/FF CD track..... 2-18

Setting Repeat function for

CD music..... 2-18

Setting Random function for

CD music..... 2-18

Scanning CD track ..... 2-19

MP3 disc related information and

precaution ..... 2-20

Listening to MP3 music ..... 2-21

MP3 screen and functions ..... 2-21

Selecting to MP3 music ..... 2-22

REW/FF MP3 file ..... 2-23

Viewing detail information for

MP3 file ..... 2-23

Setting Repeat function for

MP3 file ..... 2-23

Setting Random function for

MP3 file ..... 2-23

Scanning MP3 file ..... 2-24

## PART 2


### Audio SYSTEM

<b>Operating external devices .....</b>	<b>2-25</b>	AUX screen .....	2-34
Connecting iPod devices .....	2-25	AUX .....	2-34
iPod® .....	2-25		
Listening to iPod music .....	2-26		
iPod screen and functions .....	2-26		
Selecting an iPod song .....	2-27		
REW/FF iPod song .....	2-28		
Setting Repeat function for iPod song .....	2-28		
Setting Random function for iPod song .....	2-28		
USB MP3 related information and precaution .....	2-29		
Precautions upon handling USB ...	2-29		
Connecting the USB .....	2-31		
Listening to USB music .....	2-31		
Starting USB IMAGE Mode .....	2-32		
USB IMAGE mode menu screen configuration .....	2-32		
Operating USB IMAGE Mode .....	2-33		
Connecting AUX .....	2-33		
Playing AUX .....	2-33		


## Operating the radio

### FM/AM Radio

 
#### Listening to the FM/AM radio

1. Press the **FM/AM** key on the control panel.  
The FM/AM radio band of the most recent listened station will be displayed.
2. Press the **FM/AM** key to change the desired radio band. Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...
3. Select the desired broadcast frequency.  
 [Selecting FM/AM broadcast frequency], page 2-3.

#### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - " Radio"
  - "(Radio) AM"
  - "(Radio) FM"
  - "(Radio) FM <1 or 2>"
  - "AM Frequency <530 to 1710>"
  - "FM Frequency <87.5 to 107.9>"
  - "AM Preset <1 to 6>"
  - "FM <1 or 2> Preset <1 to 6>"

#### FM/AM screen and functions

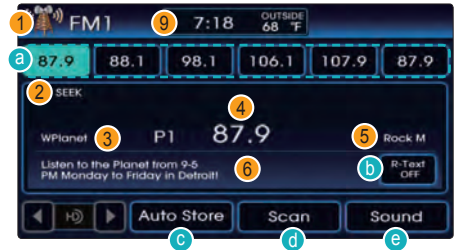

- 1 Mode display : displays the FM1/FM2/ AM modes.
- 2 SEEK/SCAN/PRESET SCAN/AUTO PRESET indicator : if SEEK/SCAN/PRESET SCAN / AUTO PRESET is operating, the switch is displayed.

- ③ Program Service name : displays the program service name if data is being broadcast.
  - ④ Frequency : displays the current playing frequency.
  - ⑤ Program type name : displays the program type name if data is being broadcast.
  - ⑥ Radio Text : displays the radio text information if data is being broadcast.
  - ⑦ Frequency Bar : displays the position of the current frequency within the total frequency range.
  - ⑧ Current time : displays the current time manually automatically according to the GPS time.
- a **Presets** buttons : the desired frequency can be preset and selected.
    - 🔗 [Storing FM/AM preset], page 2-4.
  - b **R-Text** ON/OFF button : turns the Radio Text information on and off.

### **i** INFORMATION

If the **R-Text** is on OFF state, text will not be displayed even if there is text being transmitted from the broadcast station.

If the **R-Text** is on ON state, the frequency bar will not be displayed. Even if the **R-Text** is on ON state, text may not be displayed if text is not being received from the broadcast station.

- c **Auto Store** button : searches the 6 frequencies with the most superior reception and automatically stores as preset buttons in corresponding order.
  - 🔗 [Storing FM/AM preset], page 2-4.
- d **Scan** button : scans all frequencies or just the preset frequencies for 5 seconds each.
  - 🔗 [Scanning FM/AM broadcast frequency], page 2-5.
- e **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.
  - 🔗 [Sound setting], page 1-12.

### Selecting FM/AM broadcast frequency

There are 3 ways to select the broadcast frequency - (a) selecting through preset, (b) selecting through SEEK, (c) selecting through manual search.

#### (a) Selecting a frequency through preset

Press the preset button of the desired broadcast frequency.


### **i** INFORMATION

- Press the **▲** or **▼** key on the steering wheel remote controller shortly. The preset frequencies of the current band will be selected in order.
- There are 6 preset frequencies each for FM1, FM2, and AM modes.
- 🔗 [Storing FM/AM preset], page 2-4.

### **Voice Command**



1. Press the **Voice** key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "Preset <1 to 6>"
  - "Preset Up"
  - "Preset Down"

### (b) Selecting a Broadcast frequency through SEEK


Press the  key on the control panel for less than 0.8 second.

Once the SEEK function is operating (SEEK indicator blinking), the next or previous broadcast frequency with superior reception will be searched automatically.


#### INFORMATION

- Press the  key on the control panel or steering wheel remote controller for more than 0.8 second to quickly move to the nearest desired frequency. Once the button is released, the next frequency with superior reception will be searched automatically.
- If the SEEK function is operating, pressing the  key on the control panel again will terminate SEEK operation and select the current frequency.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Seek Up"  
"Seek Down"

### (c) Selecting a broadcast frequency through manual search


Press the  key to search for desired frequency.

Each click on the  key will increase or decrease the frequency by 1 step (FM: 0.2 MHz, AM: 10 kHz).

### Storing FM/AM preset

There are 2 ways to store preset frequencies - (a) storing manually and (b) auto store.

#### (a) Storing manually


1. Select the desired frequency.  
 [Selecting FM/AM broadcast frequency], page 2-3.

2. Press the preset button to store for over 0.8 second. The frequency will become stored along with a beep sound.

 
#### INFORMATION

Six preset frequencies each for FM1/ FM2/AM modes can be stored using the above instructions.


#### (b) Auto store

After selecting the desired band, press the  button. The 6 frequencies with the most superior reception will be stored as preset buttons in corresponding order.


#### INFORMATION

If the  button is pressed again while operating Auto Store, then the Auto Store operation will be terminated and the previously played frequency will be restored.


### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Auto preset"


### Scanning FM/AM broadcast frequency


1. Press the  button.
  - SCAN (less than 0.8 second) : scans all frequencies and plays only frequencies with superior reception for 5 seconds each.

### Voice Command

1. Press the  key on the steering wheel remote controller.
  2. After the beep sound, say a command.  
"Scan"
- PRESET SCAN (over 0.8 second): scans the 6 frequencies stored as delete this part in the current band for 5 seconds each.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Preset Scan"

2. Press the  button again to continue listening to a frequency. The scan will be terminated and the current frequency will continue to be played.

### INFORMATION

When scanning has completed an entire revolution, the scan function will terminate automatically and the previous played frequency will be restored.

## HD Radio™ Technology(if equipped)



**PSD** Program Service Data: Contributes to the superior user experience of HD Radio Technology. Presents song name, artist, station IDs, HD2/HD3 Channel Guide, and other relevant data streams.

**HD2/HD3** Adjacent to traditional main stations are extra local FM channels. These HD2/HD3 Channels provide new, original music as well as deep cuts into traditional genre.

**Digital Sound** Digital, CD-quality sound. HD Radio Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

## Starting HD Radio Mode

1. Press the **FM/AM** key to turn on FM/AM mode. If an HD Radio broadcast is received radio mode will switch from analog broadcast to HD Radio broadcast.
2. Press the **FM/AM** key will convert the mode in the order of FM1 → FM2 → AM and convert to HD Radio broadcast once an HD Radio broadcast becomes received.

## HD Radio Mode Screens and Functions



- 1 Preset Button: desired HD Radio frequencies are saved for convenient frequency selection. Saves up to HD1~HD8 according to sub broadcasts.
- 2 HD Radio Broadcasting reception display: displays HD Radio main Channel, broadcast receiving from sub broadcast 1 ~ 8. The yellow indicates the currently playing sub broadcast.
- 3 Broadcast station name
- 4 Genre Display : displays the current genre.
- 5 Detail On: displays detailed information for current broadcast.
- 6 HD Radio sub broadcast move button : moves from HD Radio main 1 broadcast to sub 8 broadcast.



## **i** INFORMATION

HD Radio broadcasts simultaneously receive up to 8 different sub broadcasts for each channel, allowing users to listen to various broadcasts. Main 1 broadcast is an HD Radio broadcast for the same broadcast contents as analog, while sub 2 ~ 8 are broadcasts of different contents.

### Operating HD Radio Mode

- Selecting a Frequency



As HD Radio reception is included within Radio mode, the methods of moving between channels, saving presets, searching, or methods of searching frequencies are identical. However, while the HD Radio reception is turned on, the HD Radio related icon display will become active when within regions where an HD Radio signal can be received.

- Selecting frequency through Preset



This allows you to select previously saved HD Radio frequencies for broadcast.

1. Press the buttons with HD1~HD8 displayed above the preset button to listen to the corresponding HD Radio channel broadcast.

- Selecting frequency through TUNE

1. Select a channel receiving HD Radio broadcast automatically or manually and press the 00 button to move to the corresponding HD Radio channel sub broadcast.

### **i** INFORMATION

For HD Radio broadcast channels without sub channels, the sub channels of sub numbers will be skipped to move only to channels which can be received.

- Storing a frequency to a preset button

- Storing Manually

This function allows you to manually save the desired sub broadcast frequency within the currently playing HD Radio broadcast channel. Method of saving is identical with the method of saving radio presets. After saving is complete, the HD Radio sub broadcast number will be displayed on above the frequency.

### HD Radio Digital Broadcast On/Off


HD Radio Broadcasts can be turned on and off for HD Radio FM and AM mode.

In Setup > Main setup screen, press the On/Off setting for the desired HD Radio mode.




## XM radio

### Listening to the XM radio

1. Press the **XM** key on the control panel.  
The XM radio band screen of the most recent listened station will be displayed.
2. Press the **XM** key to change the desired radio band. Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1 ...
3. Select the desired broadcast channel.  
 [Selecting XM broadcast channel], page 2-10.



### Voice Command



1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"XM"  
"XM <1 or 2 or 3>"  
"XM Channel <0 to 255>"  
"XM <1 or 2 or 3> Preset <1 to 6>"





### XM screen and functions



- 1 Mode display : displays the XM1/XM2/ XM3 modes.
- 2 SCAN/PRESET SCAN indicator : if SCAN/ PRESET SCAN is operating, the switch is displayed.

- 3 Channel number : displays the current playing channel.
- 4 Channel mode indicator : displays the channel mode in orange.
- 5 Category mode indicator : displays the category mode in orange.
- 6 Channel name : displays the channel name.
- 7 NAME : displays the artist and other related information.
- 8 Title name : displays the title name.
- 9 Category name : displays the category name.
- 10 Current time : displays the current time manually automatically according to the GPS time.

- a Preset buttons : the desired channel can be preset and selected.  [Storing XM preset], page 2-10.
- b Mode buttons : switches between channel mode and category mode.  [Switching the XM mode], page 2-10.

- c** **List** button : displays the channel or category list.  [Selecting XM broadcast channel], page 2-10.
- d** **Search** button : selects the channel by directly inputting the channel number.  [Selecting XM broadcast channel], page 2-10.
- e** **Scan** button : scans all frequencies or just the preset channels for 5 seconds each.  [Scanning XM broadcast channel], page 2-10.
- f** **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.  [Sound setting], page 1-12.

### Switching the XM mode (Channel / Category)

Each time the **Mode** button is pressed, the mode will switch between channel mode and category mode.

Use the tune knob to change categories and press the tune knob change to selected category.




### Selecting XM broadcast channel

There are 5 ways to select a broadcast channel - (a) selecting through preset, (b) selecting with channel Up/Down, (c) Selecting a channel through manual search, (d) selecting through channel/ category list, (e) selecting by directly inputting the channel number.


#### (a) Selecting a channel through preset

Press the preset button of the desired channel.


#### **INFORMATION**

- Press the  or  key on the steering wheel remote controller for less than 0.8 second. The preset channels of the current band will be selected in order.
- There are 6 preset channels each for XM1, XM2, and XM3.  [Storing XM preset], page 2-12.

### **Voice Command**


1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Preset <1 to 6>"  
"Preset Up"  
"Preset Down"

#### (b) Selecting with Channel Up/Down


Press the  key on the control panel for less than 0.8 second.

The previous or next channel will be selected.


#### **INFORMATION**

- If in Channel mode, the channel is selected from all channels. If in Category mode, the first channel of each category is selected.
- Press the  key on the control panel or steering wheel remote controller for more than 0.8 second to quickly move to the nearest desired channel. Once the button is released, the current channel will be selected.

## Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Channel Up"  
"Channel Down"


## (c) Selecting a channel through manual search

Press the  key to display the previous or next channel information. After a brief moment, the selected channel will be displayed.

## INFORMATION

 
If in channel mode, the channel is selected from all channels. If in category mode, the first channel of each category is selected. (Category search)

## (d) Selecting channel through channel/category list

1. Press the  button.
  - If in category mode, the all category list screen will be displayed.  
Select the desired category button to display the channel list screen for the corresponding category.




- If in channel mode, the all channels list screen will be displayed.

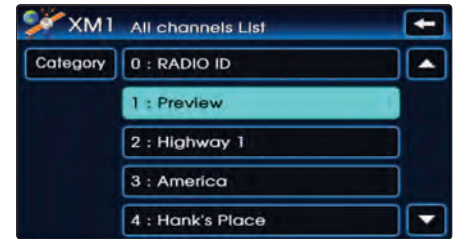


2. Select the desired channel button. The previous screen will be restored and the selected channel will begin playing.

## (e) Selecting channel by directly inputting the channel number

 1. Press the  button. The channel input screen will be displayed.




2. Input desired channel number, and press the  button.

The previous screen will be restored and the selected channel will begin playing.


### **INFORMATION**

To prevent inputting a channel which exceeds the channel range, numbers which cannot be inputted are set to disabled state.

### **Voice Command**

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Channel<0 to 255>"


### **Storing XM preset**

1. Select the desired channel.  [Selecting XM broadcast channel], page 2-7.
2. Press the preset button for over 0.8 second.  
The frequency will be saved along with beep sound.


### **INFORMATION**

Six preset frequencies each for XM1/ XM2/ XM3 modes can be stored using the above instructions.

### **Scanning XM broadcast channel**


1. Press the  button.
  - SCAN (under 0.8 second): scans all channels for 5 seconds each if in channel mode. If in category mode, scans all channels within the current category for 5 seconds each.


### **Voice Command**

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Scan"

- PRESET SCAN (over 0.8 second): scans the 6 preset channels within the current band for 5 seconds each.

### **Voice Command**

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Preset Scan"

1. Press the  button again to continue playing the channel. The scan will be terminated and the current channel will continue to be played.

### **INFORMATION**

- When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played channel will be restored.
- Channel 0 is the radio ID and contains information required for XM Activation.

## Operating the CD Player

### About CD Player

#### Precautions upon handling discs

- After using a disc, keep it in the original case to prevent it from becoming scratched, which may cause the CD to make popping sounds.
- Do not use heart-shaped discs, octagon-shaped discs, or any other abnormally shaped disc. Such discs may be the cause of malfunctions.
- Do not clean discs with chemical solutions such as record sprays, antistatic sprays, antistatic liquids, benzene, or thinners. Such materials may cause the surface of DISC to be unrecoverable.
- Do not expose the disc to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Dust, scratch, and other substances may cause popping sound while playing as well as sound deterioration.
- Never place paper on either side of the disc or write on disc surfaces. Sharp writing utensils and inks used in felt-tip pens may cause damage to disc surfaces
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth. Only soft cloths should be used as there are no grooves for dust to get in as is the case with LPs.
- Copy-protected CDs such as S-type CDs may not function in the device.
- DATA CDs are not supported by the device. (However, such discs may operate abnormally.)

#### For safe and efficient operation

- Do not disassemble the CD Player for repair purposes. Contact your place of purchase in the case of malfunction. (Complete service assistance will not be provided if the user disassembles the device.)
- Do not use water to clean the device. Exposure to water may cause damage to the device.
- Be cautious not to introduce foreign substances into the disc insert slot. Foreign substances may cause damage to the interior of the device.
- The device may fail to operate properly in extremely hot or cold temperatures. Discontinue the use of the device unless normal temperature is maintained. (The operational temperature range is:  $-10^{\circ}\text{C} \sim 65^{\circ}\text{C}$ ).
- Steam can be condensed on the fiberoptic lens due to rain, wet conditions, or upon operating the heating system.
- Skipping may occur to the audio when driving on bumpy roads for prolonged periods of time or upon severe shock to the vehicle.
- Do not use chemical solvent to clean the device. Such solvents may cause damage to the surfaces of the device. Always use a clean and dry cloth.

## PART 2 AUDIO SYSTEM

### WARNING!

Always pay full attention to driving.

Avoid operating your system in such a way that you are distracted from driving your vehicle.

### Supported disc formats

- The disc types supported by this device are as shown below.

Disc Size
3-inch (7.6 cm)
5-inch (12.7cm)

Disc Type	Disc Media	Disc Format
CD	CD	CD-DA
	CD-R	MP3
	CD-RW	WMA
	Multisession-CD	DTS-CD
		CD-ROM
		CD-G
		CD-EXTRA
	CD-TEXT	

Disc format	Audio format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation or recognition.



## Disc/Content format compatibility

- Ordinary disc compatibility
- This device has been designed/ manufactured to be compatible with software bearing the following logo marks.



Audio-CD

CD-R

CD-RW

- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not properly function in the device. This may be caused by damaged recording method, contamination by dirt and other foreign substance on the disc surfaces or play lens, and various other reasons.
- Special formats or special features regarding software
- CD-R/RW Compatibility.
- This device operates as a CD-ROM including CD-R and CD-RW DISC written in CD Audio or MP3 CD Format.

However, other contents may cause abnormal disc operation such as noise.

- The writing of CD-R and CD-RW discs with this device is not supported.
- Although CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device, some information such as play time may be displayed.
- PC-created DISC compatibility.
- When recording a disc with a personal computer, even discs recorded in a "format compatible" with the formats described above may not operate on the device caused by software settings of the recording application. In such cases, contact the software developer.
- Additional information regarding compatibility can be found on the CD-R/ RW software disc box.
- DVD-R/RW are not supported by the device.

- Compressed audio compatibility

This device plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly displayed.
- Physical formats of CD : Model 1, Model 2 XA format 1.
- This device only supports tracks with file extension of ".MP3" or ".WMA".
- This device does not support multi-session discs.
- This device supports a maximum of 256 folders and maximum 512 files. Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto a MP3 file.

This device has been designed to be compatible with various bit rates.

Audio which has been encoded at 128kbps will sound similar to CD audio sound quality.

Although this device supports low bit rate MP3 tracks, such tracks may only provide low quality sound.

- For stable operation, the use of files in 95kbps ~ 192kbps bit rate range and 44.1kHz SAMPLING frequency is recommended.

### Inserting/Ejecting Disc

#### Inserting a Disc

Insert the disc into the slot.

The disc will begin playing automatically after it has been inserted.

#### **i** INFORMATION

If the operation mode had been Audio mode before inserting the disc, the device will convert to the DISC mode screen and begin playing.

If the operation mode had been Navigation mode, then Navigation mode screen will remain and the disc play status will be displayed through the Audio bar.

#### Ejecting a Disc

Press the  key.

The disc will immediately be stopped and ejected.

#### **i** INFORMATION


- If the operation mode had been in Audio mode before ejecting the disc, the device will be converted back to Audio mode.

If the operation mode had been in Navigation mode, then Navigation mode screen will remain.


- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player.  
In such a case, the disc will not begin playing automatically.

## CD

 
### Listening to CD music


1. Insert the CD or press the **MEDIA** key on the control panel if the CD is already inserted.
2. Select the desired track.  [Selecting the CD track], page 2-15.




### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"DISC"  
"CD"  
"CD Track <1 to 665>"
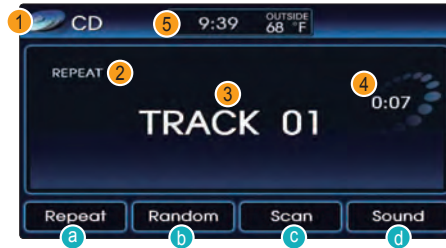
### CD screen and functions




- 1 Mode display : displays that the current mode is CD mode.
  - 2 REPEAT/RANDOM/SCAN indicator : if REPEAT/RANDOM/SCAN is operating, the switch is displayed.
  - 3 Track number : displays the track number.
  - 4 Play Time : displays the play time.
  - 5 Current time : displays the current time manually automatically according to the GPS time.
- a** **Repeat** buttons : repeat the current playing track.  
 [Setting Repeat function for CD music], page 2-18.

- b** **Random** button : plays the tracks on the disc in random order.  
 [Setting Random function for CD music], page 2-18.
- c** **Scan** button : scans all tracks on the disc for 10 seconds each.  
 [Scanning CD track], page 2-19.
- d** **Sound** button : adjusts the FAD/BAL, BAS, MID, TRE controls.  
 [Sound setting], page 1-12.


### Selecting the CD track

There are 2 ways to select a CD Track - (a) selecting through Track Up/Down, (b) selecting through searching Track.


#### (a) Selecting through Track Up / Down

Press the  key on the control panel or steering wheel remote controller for less than 0.8 second. The next or previous track will begin playing.



### INFORMATION


If the  key on the control panel or steering wheel remote controller is pressed shortly while the track has played for more than 3 seconds, the start of the current track will begin playing. If the track has been playing for less than 2 seconds, the start of the previous track will begin playing.

### Voice Command


1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Next Track"  
"Previous Track"

### (b) Selecting track through search

1. Press the  key to search for desired to display track. Each click on the  key will display the information of the next or previous track. The current playing track will continue to be played.


2. Press the  key at the desired track.  
The searched track will begin playing.

### REW/FF CD track

Press and hold the  key on the control panel or steering wheel remote controller for over 0.8 second.


The track will play 20 times faster while holding the button and return to normal play when the button is released.

### Setting Repeat function for CD music


Press the  button. Each press will change the function in the following order: REPEAT → REPEAT OFF → REPEAT

- REPEAT : repeats the current playing track.

### Voice Command


1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Repeat Track"  
Say "Normal Play" in order to terminate the set Repeat.

### Setting Random function for CD music

Press the  button. Each press will change the function in the following order: RANDOM → RANDOM OFF → RANDOM...

- RANDOM : plays all tracks in the disc in random order.


### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Random"  
Say "Normal Play" in order to terminate the set Random function.

## Scanning CD track

1. Press the **Scan** button. Each press will change the function in the following order: SCAN → SCAN OFF → SCAN...
  - SCAN : scans all tracks in the disc for 10 seconds each.

## Voice Command

1. Press the  key on the steering wheel remote controller.
  2. After the beep sound, say a command.  
"Scan"  
Say "Normal Play" in order to terminate the set Scan function.
2. Press the **Scan** button again to continue listening to the track. The scan will be terminated and the current track will continue to be played.

## INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played track will be restored.

### MP3

#### MP3 disc related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (KHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (Kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 Kbps fixed bit rate /44.1KHz
- ID3 tag  
This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.
- Supported media  
The MP3 media supported by the device are CD-ROM and USB.


- Supported media formats  
This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 8 layers
- Maximum folder length: 64 Bytes, file name length: 64 Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one disc: 256 folders (including ROOT directory)
- Maximum number of files which can be stored onto one disc: 512 files
- Precautions upon burning MP3 files
- The use of ISO 9660 LEVEL 2 JOLIET format is recommended when burning MP3 files. Burning in other formats may abnormally display the file names.
- It is possible to display up to 32 characters for file and folder names in case of UNICODE, and up to 64 characters in case of ASCII. Although the full length of the file name can be displayed by using the scroll function, the full

length of folder names may not be displayed as the scroll function does not operate when displaying folder names.


- Precaution

Please use a MP3 bit rate which is less than 128 kbps. The sound quality cannot be guaranteed for MP3s exceeding 128kbps.

 
## Listening to MP3 music

1. Insert the MP3 disc or press the **MEDIA** key on the control panel if the MP3 disc is already inserted.
2. Select the desired file.  [Selecting the MP3 file], page 2-19.





### Voice Command

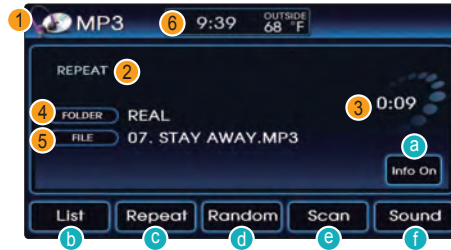1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "DISC"
  - "CD"
  - "MP3"

## MP3 screen and functions




- 1** Mode display : displays that the current mode is MP3 disc mode. (MP3 files on DVD discs are not supported.)
- 2** REPEAT/RANDOM/SCAN indicator : if REPEAT/RANDOM/SCAN is operating, the switch is displayed.
- 3** Play Time : displays the play time.
- 4** Folder name : displays the folder name.
- 5** File name : displays the file name.
- 6** Current time : displays the current time manually automatically according to the GPS time.

- a** **Info On/Off** button : displays or hides the detailed file information for the current playing file.
  -  [Viewing detail information for MP3 file], page 2-23.
- b** **List** button : displays the MP3 folders and file lists for the disc.
  -  [Selecting the MP3 file], page 2-21.
- c** **Repeat** button : repeats the current playing folder or file.
  -  [Setting repeat function for MP3 file], page 2-23.
- d** **Random** button : plays all files on the disc or folder in random order.
  -  [Setting random function for MP3 file], page 2-23.
- f** **Scan** button : scans all files on the disc or folder for 10 seconds each.


### Selecting to MP3 music

There are 3 ways to select an MP3 file - (a) selecting through file up/down, (b) selecting through searching files, (c) selecting through MP3 list.


#### (a) Selecting through File Up / Down

Press the  key on the control panel or steering wheel remote controller for less than 0.8second. The next or previous file will begin playing.

#### INFORMATION

If the  key on the control panel or steering wheel remote controller is pressed shortly while the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 2 seconds, the start of the previous song will begin playing.

#### Voice Command

1. Press the  key on the steering wheel remote controller.

2. After the beep sound, say a command.



"Next File"

"Previous File"

"Next Folder"


"Previous Folder"

#### (b) Selecting through search


1. Press the  key to search for desired to display file. Each click on the  key will display the information of the next or previous file. The current playing file will continue to be played.

#### INFORMATION

If the operation of the Tune knob is too rapid, there may be a delay in displaying the file information.

 
2. Press the  key at the desired file. The searched file will begin playing.

#### (c) Selecting through MP3 List

1. Press the  button. The file list of the folder for the current playing file will be displayed.

#### INFORMATION


If many songs and folders are recorded onto a DISC, file loading time may be longer and cause the play list to be improperly displayed or song search through TUNE operation to operate improperly. In such cases, wait until file loading is complete and try again.

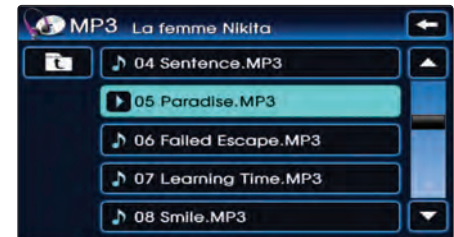

2. Press the desired menu to return to the main screen and play the selected file.




## REW/FF MP3 file


Press and hold the  key on the control panel or steering wheel remote controller for over 0.8 second.

The file will play 20 times faster while holding the button and return to normal play when the button is released.

## Viewing detail information for MP3 file

1. Press the  button. The detailed information (Title, Artist, Album, Genre) for the current playing MP3 will be displayed.



2. Press the  button. The detailed information will be turned off.

## CAUTION!

- If the ID3 TAG info is not included in the MP3 file, the artist/song title/genre information may not be displayed.
- ID3 TAG : Standard format being used to add various information to the MP3 file, such as song title, copyrighter, music channel, etc.


## Setting Repeat function for MP3 file

Press the  button.

Each press will change the function in the following order: Repeat → Folder Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing file.
- Folder Repeat : repeats the files in the current folder.

## Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "Repeat File"
  - "Repeat Folder"
 Say "Normal Play" in order to terminate the set Repeat function.


## Setting Random function for MP3 file

Press the  button.

Each press changes the setting as follows : Random → Folder Random → Random Off → Random ...

- Folder Random : plays the files in the current folder in random order.
- Random : plays all files in the disc in random order.

## Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "Random"
  - "Random Folder"
 Say "Normal Play" in order to terminate the set Random function.


### Scanning MP3 file

1. Press the  button.

Each press will change the function in the following order : Scan → Folder Scan → Scan Off → Scan ...

- Folder Scan : plays all files in the current folder for 10 seconds each.
- Scan: scans all files in the disc for 10 seconds each.

### Voice Command


1. Press the  key on the steering wheel remote controller.

2. After the beep sound, say a command.

"Scan"

"Folder Scan"

Say "Normal Play" in order to terminate the set Scan function.

2. Press the  button again to continue listening to the file. The scan will be terminated and the current file will continue to be played.

### INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previously played file will be restored.

## Operating external devices

### iPod®

iPod® is a registered trademark of Apple Inc.

#### Connecting iPod devices

Connect the iPod device as shown in the picture.

The Hyundai iPod Power cable is needed in order to operate iPod with the audio buttons on the audio system. The USB cable provided by Apple may cause malfunction and should not be used for Hyundai vehicles.

The Hyundai iPod Power cable maybe purchased through your Hyundai dealership.

- Unsupported iPod devices : iPod generations before iPod 3G, iPod Shuffle, and iPad.

#### CAUTION!

Some functions may not operate properly depending on the firmware version in some iPod or iPhone devices.

#### INFORMATION

In order to prevent such malfunction, check the following before connecting your iPod or iPhone device with the Hyundai iPod Cable.

- If the battery has been completed discharged, charge the device for at least 10 minutes before connecting.
- Turn on the device before connecting.
- If the device is set to lock, release the lock before connecting.
- For iPhones, audio will not play if the audio system and BT are paired. Disconnect the pairing before connecting.

When there are no songs in the iPod or iPhone or if there is no response from the device after connecting with the Hyundai Cable, a "No Media Connected" pop-up message will be displayed for 5 seconds and the previous mode will automatically be restored. In such cases, disconnect the iPod or iPhone and try connecting again.

If the message continues even after reconnecting the iPod, check to see if there are any problems with the iPod device.

#### CAUTION!

- If a playing iPod is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds. Please turn the iPod device to pause/stop prior to connecting it to the vehicle.
- There are two types of iPod exclusive cables, the detachable USB/AUX type and the All-in-one type.
  - ※ Upon connecting or disconnecting the detachable iPod cable, you must connect or disconnect both the USB/AUX terminals.
  - ※ The iPod exclusive cable must be connected to both the USB/AUX terminals for iPod charging and operations to be supported.

### Listening to iPod music

1. Connect the iPod or press the **MEDIA** key on the control panel if the iPod is already connected.


#### **i** INFORMATION

Even if the iPod is connected, message may be displayed if an error has occurred. In such a case, reconnect the iPod.

2. Select the desired song.

 [Selecting an iPod song], page 2-27.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"iPod"

### iPod screen and functions



- 1 Mode display : displays that the current mode is iPod mode.
- 2 REPEAT/RANDOM indicator : if REPEAT/RANDOM is operating, the switch is displayed.
- 3 Title name : displays the title name of the playing file.
- 4 Play Time : displays the play time.
- 5 Artist name : displays the artist name of


the playing file.

- 6 Album name : displays the album name of the playing file.
- 7 Current time : displays the current time manually automatically according to the GPS time.


**a** **Menu** button : converts to the search menu screen.

 [Selecting an iPod song], page 2-27.

**b** **Repeat** buttons : repeats the current playing song.

 [Setting repeat function for iPod song], page 2-28.

**c** **Random** button : plays all songs in the current playing list in random order or randomly in album unit.

 [Setting random function for iPod song], page 2-28.


**d** **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.

 [Sound setting], page 1-12.


## Selecting an iPod song

There are 3 ways to select songs from the iPod device - (a) selecting song through Up/Down, (b) selecting song through sequential search, (c) selecting song through menu.


### (a) Selecting song through Up / Down

Press the  key on the for less than 0.8 second. The next or previous song will begin playing.

### INFORMATION



If the  key on the control panel or steering wheel remote controller is pressed shortly while the track has played for more than 3 seconds, the start of the current song will begin playing. If the track has been playing for less than 2 seconds, the start of the previous song will begin playing.

### Voice Command


1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Next Song"

"Previous Song"


### (b) Selecting song through search

 
1. Press the  key to search for desired to display file. Operate the  key dial to display the previous or next channel information. After a brief moment, the selected channel will be displayed.

### INFORMATION

If the operation of the  key is too rapid, there may be a delay in displaying the song information.

### (c) Selecting song through Menu


1. Press the  button. The iPod menu screen will be displayed.

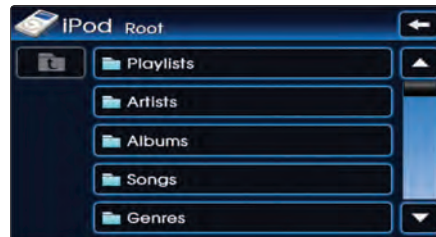

2. Press the button for the desired search method.

### INFORMATION

 If the search mode is accessed while playing a song, the most recent searched step will be displayed. The search steps upon initial connection are listed below.

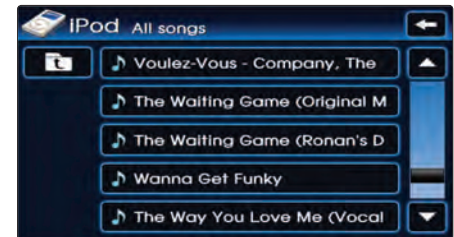


3. Press the desired song button to return to the main screen and play the selected song.

## PART 2 AUDIO SYSTEM

	1 Step	2 Step	3 Step	4 Step
Playlist	Playlist	Song		
Genre	Genre	Artist	Album	Song
Artist	Artist	Album	Song	
Composer	composer	Album	Song	
Album	Album	Song		
Audiobooks	Song			
Songs	Song			
Podcasts	Program	Episode		

### REW/FF iPod song

Press and hold the  key on the control panel or steering wheel remote controller for over 0.8 second. The song will be play faster while holding the button and return to normal play when the button is released.


### Setting Repeat function for iPod song

Press the  button. Each press will change the function in the following order :  
Repeat → Repeat Off → Repeat ...


- Repeat : repeats the current playing song.



### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Repeat Song"  
Say "Normal Play" in order to terminate the set Repeat function.

### Setting Random function for iPod song

Press the  button. Each press will change the function in the following order :  
Random → Album Random → Random Off → Random ...

- Album Random : plays the songs in the current play list randomly in album units. However, songs within the same album will be played sequentially.


e.g.) Album1 (Music1→Music2→Music3→  
...→Music10)→Album5 (Music→Music2)  
→Album4 (Music1→Music2→Music3) ...

- Random : plays all files in the current play list (All Songs, certain albums, or user designated iPod Playlists) randomly regardless of album.

e.g.) Music1→Music9→Music5→Music13 ...



### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Random"  
"Random Album"  
Say "Normal Play" in order to terminate the set Random.

## USB MP3

### USB MP3 related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)
- Acceptable bit rate : 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1kHz
- ID3 tag  
This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.
- Supported media  
The MP3 media supported by the device are CD-ROM and USB.

- Supported media formats  
This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 20 layers
- Maximum length of folder name/file name: 250Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT directory)
- Maximum number of files which can be stored onto one USB: 6000 files
- Precautions upon formatting USB & downloading MP3 files
- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

- Precaution

Please use an MP3 bit rate which is less than 192Kbps and a fixed bit rate.

The sound quality cannot be guaranteed for MP3s exceeding 192Kbps and operation of specific functions (limited to FF/REW functions) may be abnormal with variable bit rates.

### Precautions upon handling USB

- When using the external USB device, make sure to keep the device disconnected. Connect the device only after turning on the vehicle ignition. The USB device may be damaged if the USB device already connected when the ignition is turned on. (USB device is not an electronic automotive component)
- The external USB device may not operate if the USB device already connected when vehicle ignition is turned on or off.
- The device will not operate when playing a format which is not MP3 or WMA file formats.

## PART 2 AUDIO SYSTEM

 
1. Only MP3 files with compression rates between 8Kbps~320Kbps are supported.

2. Only WMA files with compression rates between 8Kbps~320Kbps are supported.

- Be cautious of static electricity when connecting/disconnecting the external USB device.
- Encoded MP3 Players will not be recognized when connected as the external device.
- Charging through the USB may not be supported in some mobile devices.  
※ An iPod car cable (Provided or sold separately) is required to use the iPod.

• Detachable USB/AUX

• All-in-one USB/AUX

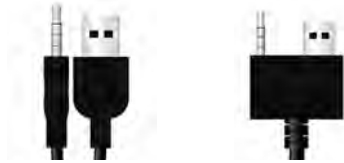

- When connecting an external USB device, the device may not be properly recognize the USB when the USB is in some states.
- When formatting the external USB device,

the device may not be properly recognize a Byte/Sector selection other than 512Byte or 2048Byte.

- The device will only recognize USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly because of compatibility issues. Verify that the external device is supported by the device before starting use.
- Avoid contact between the USB connector with bodily parts and foreign substances.
- Repeatedly connecting/disconnecting the USB in a short period of time may cause damage to the device.
- When disconnecting the USB, an abnormal sound may occur occasionally.
- Abruptly disconnecting the external USB device while the USB is operating may cause the device to be damaged or function abnormally.

Make sure to disconnect the USB device only after the audio power is turned off or when the audio is operating in a different mode.

- The amount of time required to recognize

the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in the required time are not indications of malfunction.

Please wait the period of time required to recognize the device.

- The device supports only USB devices used to play music files.
- Do not use the USB I/F to charge batteries or USB accessories which generate heat. Such acts may lead to deteriorated performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly to the multimedia terminal of the vehicle.
- In the case of high capacity USB devices, there are instances where the logical drives are partitioned for user convenience. In this case, only the USB music in the top-level logical drive will be possible to play. When using partitioned drives, save the songs desired to play on the device only in the top-level logical drive.



In addition, certain USB devices are configured with a separate drive used to install application programs and songs from such drives may not be possible to play for the reasons as described above.

- The device may not support normal operation if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected to the device.
- The device may not support normal operation when using a USB memory type besides the Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).
- The device may not support normal operation if the proper connection with the USB memory fails due to vibrations caused by the vehicle. (i-stick type, etc.)
- Please avoid using USB memory products which can be used as key chains or cellular

phone accessories as they could cause damage to the USB jack.

Please make certain only to use plug type connector products as shown below.

Plug Type Connector




### Connecting the USB

Connect the USB as shown in the picture.



### Listening to USB music

1. Connect a USB or press the **MEDIA** key on the control panel if the USB is already connected.
2. Select the desired file.  [Selecting the MP3 file], page 2-19.

#### **INFORMATION**

The USB screen and operation method is the same with MP3 mode. Please refer to the MP3 mode section for more information.

### USB IMAGE Mode

#### Starting USB IMAGE Mode

 
1. The USB mode will automatically start when the USB is inserted. When in a different mode, repeatedly press the **MEDIA** key to convert to USB mode. (Each press will change in order of AUX→DISC→USB)

2. The image will be displayed on the screen.

#### **i** INFORMATION

Press the **Music** button on the bottom left side to enter either mode. (Supported only when compatible files exist within the USB)

#### USB IMAGE mode menu screen configuration

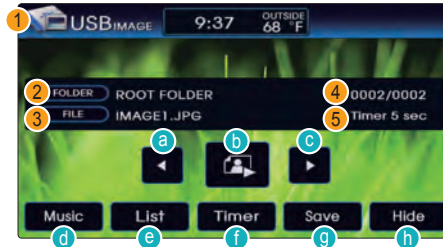



- 1 Mode display : display that the current mode is <USB Image> mode.
- 2 Folder name : displays the name of the folder where photo files are located.
- 3 File name : displays the file name of the current photo.
- 4 File index : displays the number of Image files within the USB (current file / all files)
- 5 Slide Show Interval : displays intervals of 5, 10, and 20 seconds.
- a ◀ button : displays the previous photo.
- b Slide Show View : displays photos in intervals of 5, 10, and 20 seconds.
- c ▶ button : displays the next photo.


- d **USB music (MP3) Mode** **Music** button : converts to <USB Music> mode.
- e **List** button : displays the <Image List> screen.
- f **Timer** button : allows changes to slide show interval.
- g **Save** button : upon turning off power, saves the current image as the frame screen image.
- h **Hide** button : hides the button display.

## Operating USB IMAGE Mode


### (a) Moving to next IMAGE

1. Press the screen.
2. Within the Image screen, press the  or  button to flip through each file.

### (b) Displaying USB IMAGE Slideshow Interval

1. Repeatedly press the  button at the bottom to change the slideshow interval (converts in time intervals of 5 seconds → 10 seconds → 20 seconds → 5 seconds).



 


### (c) Registering Frame

1. Press the  button at the bottom of the <Image> screen. The currently displayed image will be registered as the frame.

### INFORMATION

For details on setting up the frame, refer to the frame setup page within Screen setup.

Restrictions while driving – Image Play related buttons cannot be used while the vehicle is in motion.

There are five buttons such as <  /  /  /  /  .

### AUX

#### Connecting AUX

Connect the external Audio player as shown in the picture.




#### **i** INFORMATION

Connect only by using AUX terminals.

#### Playing AUX

Connect an AUX or press the **MEDIA** key on the control panel if the AUX is already connected.

#### **🔊** Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Line In"

#### AUX screen



Audio AUX screen



## PART 3 NAVIGATION SYSTEM

### PART 3 NAVIGATION SYSTEM

#### Limitations of the navigation

<b>system</b> .....	<b>3-2</b>
GPS signal reception state .....	3-2
Vehicle position display .....	3-3
Route Guidance .....	3-4
Route Re-calculation .....	3-4
Starting navigation system .....	3-5

#### Map Functions ..... 3-5

Current position map screen (without route) .....	3-5
Switching map mode (North Up / Heading Up) .....	3-6
Viewing GPS signal state .....	3-7
Changing the map scale .....	3-8
Displaying / Hiding POI icons on the map	3-9
Displaying/Hiding Q.POI icons .....	3-9
Displaying / Hiding icons other than Q.POI icons .....	3-9
Making a call to POI .....	3-10
Scrolling map .....	3-11

#### Setting a destination ..... 3-12

Destination menu screen and functions .....	3-12
Searching a Destination .....	3-13
Searching an Address .....	3-13
Searching a Previous Destination .....	3-17
Searching an Intersection .....	3-17
Searching a POI .....	3-20
Searching from Address book .....	3-24
Searching for Emergency facilities ...	3-25
Searching your Home .....	3-25
Searching favorite places .....	3-26
Searching from MAP .....	3-26
Searching POI by local POI list .....	3-26
Operating after searching a destination	3-27
Changing destination position .....	3-27
Setting as Destination / waypoint .....	3-27
Adding to address book .....	3-27

#### Operating after setting a destination ... 3-28

Route guidance screen .....	3-28
Selecting other route .....	3-29

#### Route guidance..... 3-30

Route menu screen and functions.....	3-30
Finishing route guidance (Delete Destination) .....	3-30
Route overview (View Entire Route) ...	3-31
Changing Route option .....	3-32
Editing waypoints .....	3-32
Deleting waypoints .....	3-34
Re-ordering waypoints .....	3-34
Setting detour distance .....	3-35
Setting avoid streets on route .....	3-35

#### Setup and Information ..... 3-36

Setup menu screen and functions.....	3-36
Main setting .....	3-37
Setting keyboard for inputting letter	3-37
Setting voice command feedback ON/OFF .....	3-37
Setting Language .....	3-37
Initializing system .....	3-37
Navigation setting .....	3-38
Setting units (mile/ km) .....	3-38

## PART 3

# NAVIGATION SYSTEM

Setting arrival time and distance display.....	3-38	Traffic Setup .....	3-52
Registering avoid area .....	3-38	Traffic Information .....	3-52
Editing avoid area .....	3-40	Help.....	3-54
Deleting avoid area .....	3-41		
Deleting all avoid areas .....	3-41		
Setting Q.POI icons.....	3-42		
Setting estimate travel time .....	3-42		
My places setting .....	3-43		
Registering new address in address book .....	3-43		
Editing an address of address book ...	3-45		
Deleting an address of address book	3-46		
Deleting an address book .....	3-47		
Registering home address .....	3-48		
Deleting home address .....	3-48		
Registering favorite place .....	3-49		
Deleting favorite place .....	3-50		
System information and update .....	3-51		
Voice guidance volume setting .....	3-51		
Voice guidance volume control.....	3-51		
Adaptive volume control ON/OFF .....	3-52		

### Limitations of the navigation system

#### GPS signal reception state

- As the GPS satellite frequency is received / transmitted in straight lines, reception may not work if devices are placed on or near the GPS antenna or when traveling through the following locations.



- Tunnels



- Basement parking structures



- Underneath an overpass



- Roads within forested areas



- Areas near high rise buildings



- Roads within canyons



## Vehicle position display

- If multipass errors occur due to reflections from buildings or related causes, the current position mark on the navigation may differ from the actual position of the vehicle.
- The position of the vehicle on the navigation may be different from the actual position if the vehicle is under the following conditions. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GPS information (several minutes may be necessary in certain cases).
  - When driving on a Y-shaped road with a narrow angle, the current position may be displayed in the opposite direction.
  - If the vehicle is loaded onto a ferry or a car transport vehicle, the current position mark may be stalled on the last position prior to loading.
  - When driving on a spiral-shaped road.
  - When driving in mountain regions with sharp turns or sudden brakes.
  - When entering a road after having been in an underground parking structure, building parking structure, or turntable with many rotations.
  - When the tires have recently been replaced (Especially upon use of spare or studless tires)
  - If the battery terminal is removed.
  - When driving in city streets, the current position may be displayed on the opposite side or on an off-road position.
  - When changing the zoom level from the maximum zoom in level to a different zoom level, the current position mark may be displayed on a different road.
  - When driving in heavy traffic with frequent go · stops in traffic or intersections.
  - When driving under slippery conditions, such as heavy sand, snow, etc.
  - When driving with the tire chain in place.
  - When using a tire with an incorrect size specification.
  - When the tire pressure for the 4 tires are different.
  - When the replacement tire is a worn or used tire (Especially studless tires having passed a 2nd seasons, etc.)
  - When driving near high-rise buildings
  - If a roof carrier has been installed
  - When driving under high speeds or having calculated a long-distance route.

### Route Guidance

- Suitable route guidance may not occur caused by search conditions or the driving position.
- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when having turned at an intersection.
- There are certain intersections in which guidance may not occur.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc.).
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight).
- Map Data may be missing or incorrect causing route guidance to not be given.

### Route Re-calculation

- The following phenomena may occur after conducting route recalculation.
- Guidance may be given to a position differing from the current position when turning at an intersection.
- Route Recalculation may take a longer period of time when driving under high speeds.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc).
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight)

## Starting navigation system



Press the Navigation mode key ( **MAP VOICE**, **DEST**, **ROUTE**, **SETUP** ). The Caution screen will always be displayed when first entering into Navigation mode. Read the contents of the caution screen carefully and press the **Agree** button.

## Map Functions

### Current position map screen (without route)

Press the **MAP VOICE** key on the control panel to display the map of current position and the neighboring area.



- 1 GPS signal state indicator : displays the state of GPS signal reception.
  - ⓘ [Viewing GPS signal state], page 3-7.
- 2 Map scale level indicator : displays the current map scale.
  - ⓘ [Changing the map scale], page 3-8.
- 3 Landmark icons : landmark icons are displayed on the map when the map scale level is set to under 300 ft (100m depending on map data)
  - ⓘ [Appendix : landmark icons], page 10-7.
- 4 POI icons : POI icons are displayed on the map when the map scale level is set to under 0.5 mi (800m).
  - ⓘ [Appendix : POI icons], page 10-5.
- 5 Current vehicle position icon : displays the current position of the vehicle.

- a North Up / Heading Up switch : displays the current map mode and the map mode can be switched between North Up and Heading Up.
  - [Switching map mode], page 3-6.
- b POI : displays or hides the POI icon on the map.
  - [Displaying/Hiding POI icons on the map], page 3-9.
- c Map scale : increases or decreases the map scale.
  - [Changing the map scale], page 3-8.

### Switching map mode (North Up / Heading Up)

Each time the compass button is pressed, the screen will switch in the order shown below.  
Heading Up → North Up → Heading Up ...

#### **i** INFORMATION

All map screens (map screen after setting destination & whole route display screen) except the current position screen will always be displayed in North Up mode.




- North Up : displays the map always facing the North direction regardless of the direction which the vehicle is traveling.

The vehicle icon is displayed in the center position of the map.






- Heading Up : displays the map always facing the direction which the vehicle is traveling. The vehicle icon is displayed in the lower center position of the map.

#### **v** Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"North Up"  
"Heading Up"

## Viewing GPS signal state

The state of GPS signal reception is displayed as shown below.

-  (active) :  
GPS reception is satisfactory.
  -  (inactive) :  
GPS reception is unsatisfactory.
-  [System information and update], page 3-51.

### INFORMATION

- GPS (Global Position System) : GPS is a system developed and operated by the United States which determines the current location of the user (longitude, latitude, etc.) by generally using 4 or more satellites. This system is used with related GPS information, various sensors, road map data, and other navigation related information.
- GPS information may not operate under the following conditions.
  - When buildings, tunnels, or other obstructions block satellite signals.
  - When materials are placed above the GPS antenna and block satellite signals.
  - When the satellite does not transmit signals (signal transmission is controlled by the satellite control center in the United States and may not transmit when under repair, modification, etc).
  - When a digital cellular phone (1.5GHz) is placed near the GPS antenna.
- This system uses GPS information, various sensors, road map data, and other related information to display the current position. Errors may occur if the satellite is transmitting inaccurate signals or only two or less satellite signals can be received. Errors which occur in such conditions cannot be corrected.

# PART 3 NAVIGATION SYSTEM

## Changing the map scale

Press the or button. The map scale will be increased or decreased by one level.

### INFORMATION

Each time the or button is pressed, the scale bar will be displayed.

The scale can be changed by directly pressing the scale level on the scale bar.


The green color on the scale bar indicates the current scale level while the orange color indicates the selected scale level.

- Press the or button for over 0.8 second. The scale will continuously change.
- If the scale range limit is reached, the or button will be disabled.
- The map scale range is between 1 and 14:  
10,240,000 ~ 1 : 5,000.




Level	Actual distance	
	mi / ft	km / m
1	150 ft	50 m
2	300 ft	100 m
3	700 ft	200 m
4	0.25 mi	400 m
5	0.5 mi	800 m
6	1 mi	1.6 km
7	2 mi	3.2 km
8	4 mi	6.4 km
9	8 mi	12 km
10	16 mi	25 km
11	32 mi	50 km
12	64 mi	100 km
13	130 mi	200 km
14	250 mi	400 km

## Voice Command








1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "Zoom In"
  - "Zoom Out"
  - "Zoom Maximum"
  - "Zoom Minimum"
  - "Zoom level <1 to 14>"
  - "Zoom <actual distance>"
  - "(ex. Zoom 700ft)"

## Displaying / Hiding POI icons on the map


### Displaying/Hiding Q.POI icons

1. Press the  button.  
Related menu buttons will be displayed at the bottom of the screen.


### INFORMATION

The Q.POI icons are set to  - Gas Station,  - Parking,  - Hotel,  - Golf Course,  - Bank,  - Fast Food (6 icons) by default. This setting can be changed in SETUP.  
 [Setting Q.POI icons], page 3-42.





2. Press the icon buttons to display or hide.  
To turn off all POI icons displayed on the map, press the  button.

### INFORMATION

- The current displayed POI icons are highlighted while the icons not being displayed are shown as normal buttons.
- If there are no POI icons being displayed, the  button will be disabled.
- POI icons are displayed when the scale is under 0.5 mi (800m).

### Displaying / Hiding icons other than Q.POI icons

1. Press the  button.  
Related menu buttons will be displayed at the bottom of the screen.
2. Press the  button.

### INFORMATION

Q.POI stands for Quick POI and refers to the function which turns POI icon display on or off on the map.

## PART 3 NAVIGATION SYSTEM

### (a) by category list



3. Press the desired main category button.




4. Select the desired sub category menu to display or hide (Multiple selections are possible).

Press the selected menu again to cancel the selection.

5. If the **Show Icon(s)** button is pressed, the selected menus will be displayed or hidden on the map screen.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Show <POI name>" (ex. Show ATM)  
"Hide <POI name>" (ex. Hide ATM)  
"Hide All"

### Making a call to POI

After searching a POI, the POI phone number information can be used to make a call to the POI facility.

1. Use the various search methods, such as the map scroll function, Q,POI search function, and destination search function to search for a POI.



2. Press the  button.





3. Bluetooth is used to make a call to the POI facility.



 
4. Once the call is ended, the map is restored to the current vehicle location.

### **i** INFORMATION

- Making a call is not possible if there is no telephone information for a POI or if there is no mobile phone connected through Bluetooth.
- For more information of mobile phone authentication through Bluetooth or detailed information on conducting search, refer to [Pairing and connecting a Bluetooth phone], page 5-4.

### Scrolling map

Press the map area on the map screen. The selected point will be centered on the screen and the scroll mark will be displayed. Information about the marked point and straight line distance from the current position will be displayed at the top of the screen.

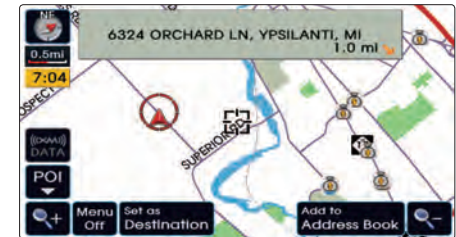


### **i** INFORMATION

If a map area on the map screen is pressed, the map will continuously scroll in the corresponding direction until the pressing is released.

## Setting a destination

### Destination menu screen and functions

 Press the **DEST** key on the control panel to display the destination menu screen.

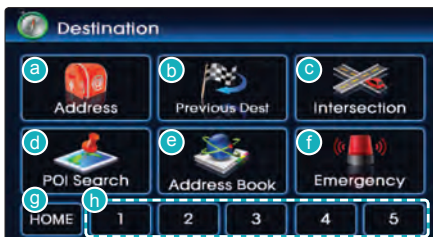

- a** Address : sets the destination through address search.  
🔍 [Searching an Address], page 3-13.
- b** Previous Dest : sets the destination through the previous destination list.  
🔍 [Searching a Previous Destination], page 3-17.
- c** Intersection : sets the destination through intersection search.  
🔍 [Searching an Intersection], page 3-17.
- d** POI Search : sets the destination through POI Category search.  
🔍 [Searching a POI], page 3-20.
- e** Address Book : sets the destination through address book search.  
🔍 [Searching from Address book], page 3-24.


- f** Emergency : sets the destination through emergency facilities search.  
🔍 [Searching for Emergency facilities], page 3-25.
- g** HOME : sets the stored HOME as the destination.  
🔍 [Searching your Home], page 3-25.
- h** Favorite place **1** ~ **5** : sets the destination with one of the stored favorite places.  
🔍 [Searching favorite places], page 3-26.

## Searching a Destination

 
### Searching an Address

There are 2 ways to set the destination through address search-(a) by street, (b) by city.

1. Press the **DEST** key.
2. Press the **Address** button.

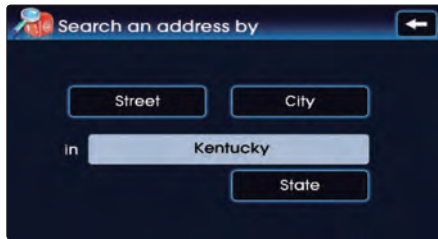

 3. Press the **State** button to change the state.

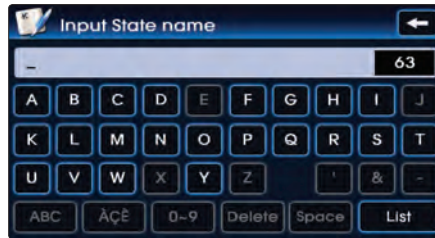

4. Input the State name and press the **List** button.


If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically.

If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.




5. Select the desired state from the list to change the state.

### (a) by street

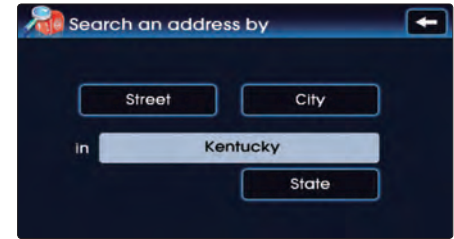 

 6. Press the **Street** button.

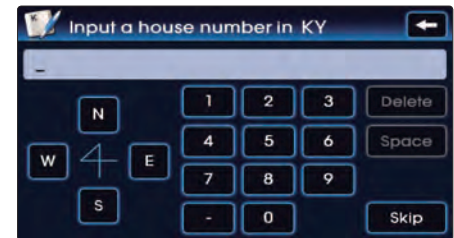


## PART 3 NAVIGATION SYSTEM

7. Input the House number and Press the

**Done** button to complete.

If the House number is not recognized, press the **Skip** button.

 In this case, the range of house numbers will be displayed during the last step.

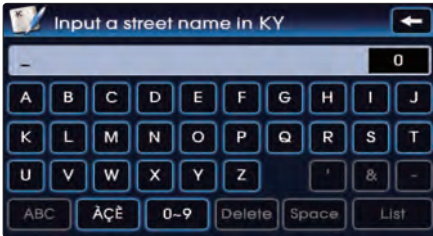

8. Input the Street name and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.




9. If the desired street from the list is selected, the corresponding position will be displayed on the map.

### **i** INFORMATION

 
If more than 30 cities exist with the selected street, then the city input screen will be displayed. If less than 30 cities exist, then the city selection screen will be displayed.




10. Input the city name and press the **List** button to complete. If the number of matches with the input is less than 4 results, then the list screen will be displayed automatically.

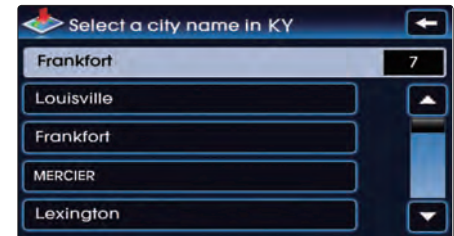

 11. Select the desired city from the list.

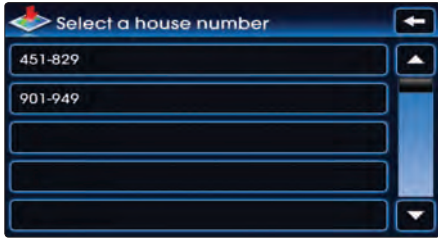

 
12. This screen will be displayed if the House number had not been inputted during step 6 and more than 2 house numbers ranges exist.  
Select the desired House number range.

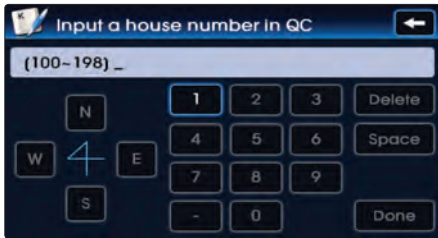

13. This screen will be displayed if the House number had not been inputted and only one house numbers range exists.

Input the House number and press the **Done** button to complete.  
The corresponding position will be displayed on the map.


**(b) by city**

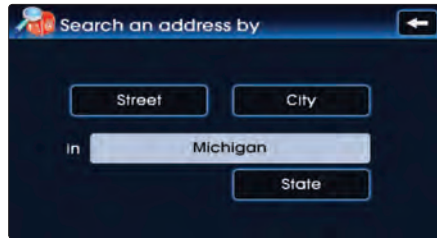 


5. Press the **City** button.



 6. Input the city name and press and press the **List** button.  
If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

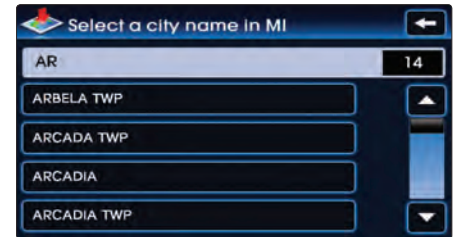

 7. Select the desired city from the list.

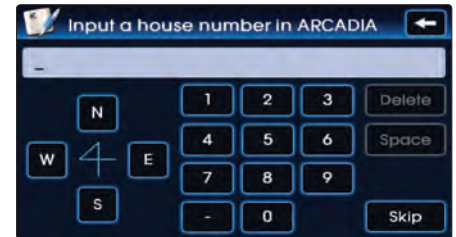


## PART 3 NAVIGATION SYSTEM

8. Input the house number and press the **Done** button to complete.


If the House number is not recognized, press the **Skip** button.

 In this case, the range of house numbers will be displayed during the last step.

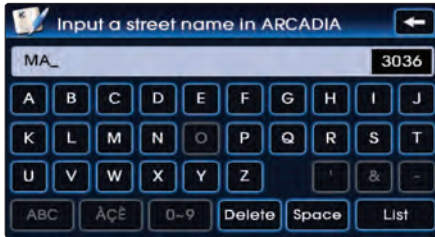


9. Input the Street name and press the **List** button to complete.

 If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

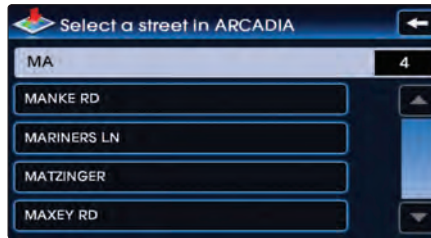


 10. Select the desired street from the list and the corresponding position will be displayed on the map.

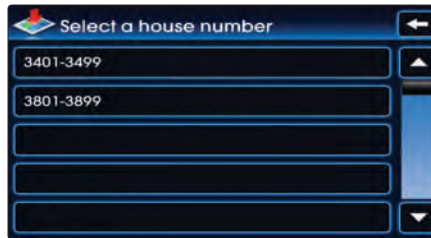

11. This screen will be displayed if the House number had not been inputted during step 8 and more than 2 House number ranges exist.

 Select the desired House number range.

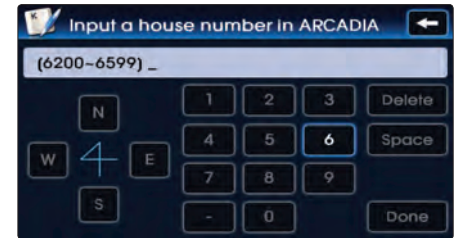



12. This screen will be displayed if the House number had not been inputted during step H and only one House number range exists.

Select the house number range and Press the **Done** button to complete.

The corresponding position will be displayed on the map.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Find address"  
 [Find address], page 5-19.






### Searching a Previous Destination

1. Press the **DEST** key.
2. Press the **Previous Dest** button.



3. Select the desired previous destination. The corresponding position will be displayed on the map.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
  - "Previous destination"
    -  [Previous destination], page 5-24.
  - "Previous start point"
    -  [Previous start point], page 5-25.

 
### Searching an Intersection

There are two ways to set the destination through intersection search-(a) by street, (b) by city.

1. Press the **DEST** key.
2. Press the **Intersection** button.



3. Press the **State** button to change the state.

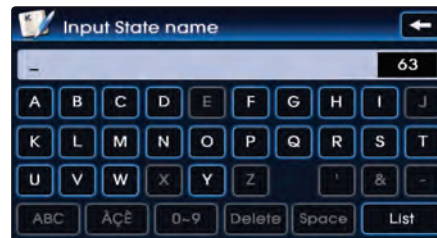

4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.



5. Select the desired state from the list to change the state.

## PART 3 NAVIGATION SYSTEM

### (a) by street

 


6. Press the **Street** button.




7. Input the name of the 1st street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

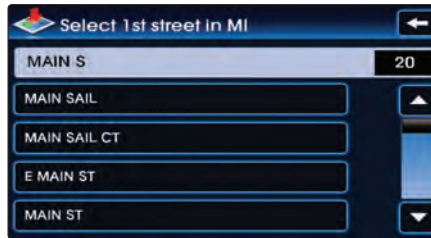


 8. Select the desired 1st street from the list.

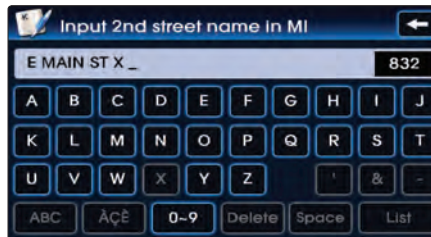

9. Input the name of the 2nd street and press the **List** button.

 If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

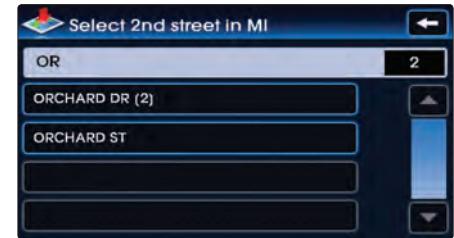

10. Select the desired 2nd street menu from the list. The corresponding position will be displayed on the map.



11. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed.

Select the desired city menu from the list. The corresponding position will be displayed on the map.



 
(b) by city



6. Press the **City** button.




7. Input the city name and press the **List** button.  
If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

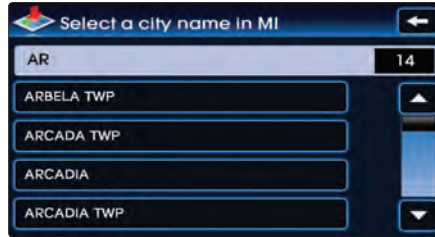


8. Select the desired city name.



 9. Input the name of the 1st street and press the **List** button.  
If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

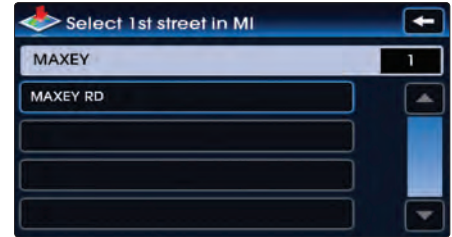


 10. Select the desired 1st street menu from the list.

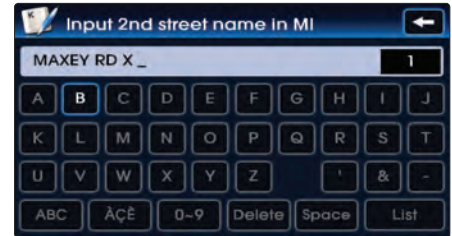


11. Input the name of the 2nd street and press the **List** button.  
If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

## PART 3 NAVIGATION SYSTEM

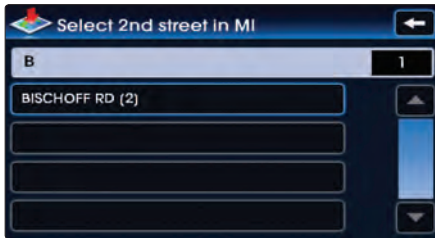 

12. Select the desired 2nd street menu from the list.

 The corresponding position will be displayed on the map.

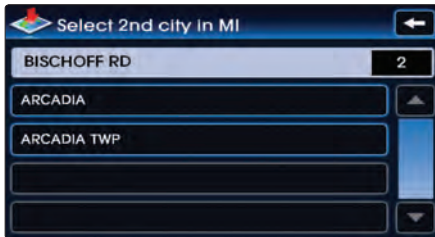

13. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed. Select the desired city menu from the list. The corresponding position will be displayed on the map.

### Searching a POI

There are 3 ways to set the destination through POI search - (a) by category, (b) by name, (c) by phone number.

1. Press the **DEST** key.
2. Press the **POI Search** button.



3. Press the **State** button.



4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If there is only one matching result, then the state will automatically be changed without having to manually select the state.



5. Select the desired state from the list to change the state.

**(a) By category**

Searches for facilities nearby the current position or from the city center.



6. Press the **Category** button.



7. Press the **Near current position** button to search for facilities nearby the current position, or press the **Near city center** button to search for facilities in the near city center.



**(a-1) Near current position**

 
Searches for facilities within a 50 mi (80Km) radius of the current position.




8. Press the desired main category menu.

**Voice Command**

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Find nearest POI"  
 [Find nearest POI], page 5-20.

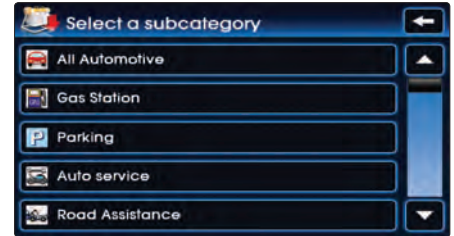

 9. Press the desired sub category menu.

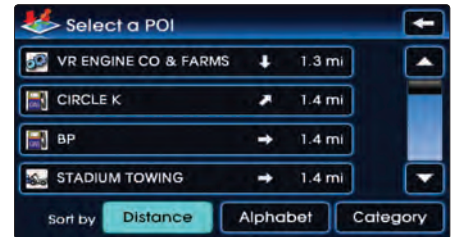

10. Select the desired menu button.  
The corresponding position will be displayed on the map.

## PART 3 NAVIGATION SYSTEM

 
### (a-2) Near city center

Searches for facilities from the city center.



8. Input the city name and press the **List** button.


If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

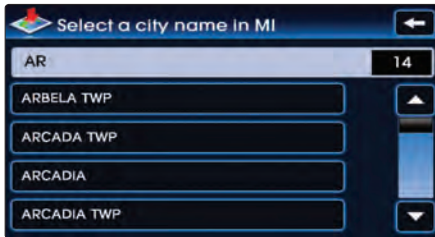


9. Press the desired city menu.



 10. Press the desired main category.

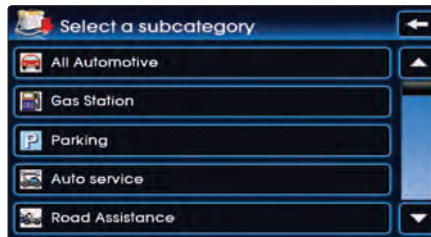

 11. Press the desired sub category.

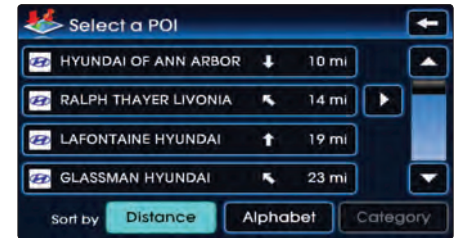

12. Select the desired menu button.

The corresponding position will be displayed on the map.

### **i** INFORMATION

The distance on each POI item button refers to the distance from the city center.

**(b) By name**



6. Press the **Name** button.



7. Input the name of the POI and press the **List** button.

If the number of matches with the input is less than 4 results, then the facilities list screen will be displayed automatically.



8. Select the desired POI menu.

The corresponding position will be displayed on the map.

**i INFORMATION**

When necessary, the search conditions for the city and category can be changed by pressing the **Advanced** button.



• Changing City

1. Press the **City** button.
2. Input the city name and press the **List** button.
3. Select the desired city name.

 
• Changing Category

1. Press the **Category** button.
2. Select the desired main category menu.
3. Select the desired sub category menu.

**(c) By phone number**



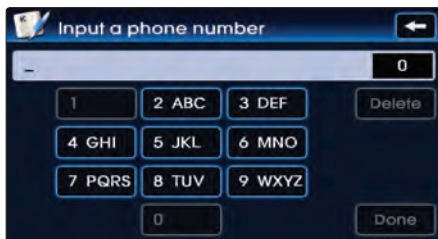

6. Press the **Phone #** button.



7. Input the phone number and Press the **Done** button to complete.  
The corresponding position will be displayed on the map.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Destination POI by Phone Number"  
 [Destination POI by phone number], page 5-22.

### Searching from Address book

 
1. Press the **DEST** key.
2. Press the **Address book** button.




3. Select the desired address book (user) menu.



### INFORMATION

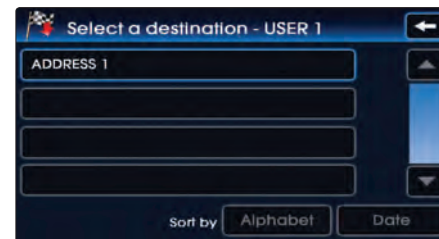This system provides 5 address books. Each addresses book can hold up to 200 entries.



4. Select the desired address name from the list.  
The corresponding position will be displayed on the map.  
 [Registering new address in address book], page 3-43.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Destination by address book"  
 [Destination by address book], page 5-24.



## Searching for Emergency facilities

1. Press the **DEST** key.
2. Press the **Emergency** button.



3. Select the desired facility category.



4. Select the desired facility.  
The corresponding position will be displayed on the map.

## Voice Command

1. Press the key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Find emergency <Category>"  
 [Find emergency <Category>], page 5-23.

## Searching your Home

1. Press the **DEST** key.
2. Press the **HOME** button.  
The Home position will be displayed on the map.

### INFORMATION

If the Home address is not registered, then the **HOME** button will not be displayed.

[Registering home address], page 3-48.

## Voice Command

1. Press the key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Go home"  
 [Go home], page 5-25.

### Searching favorite places



1. Press the **DEST** key.
2. Select the desired button from **1** ~ **5** .  
The corresponding position will be displayed on the map.

### **i** INFORMATION

If the address of the Favorite place is not registered, then the **1** ~ **5** buttons without registered addresses will be disabled.

 [Registering favorite place], page 3-49.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Destination by memory point <1 to 5>"  
 [Destination by memory point <1 to 5>], page 5-25.

### Searching from MAP

 
Position the scroll mark at the destination by scrolling the map on the map screen.

### Searching POI by local POI list

1. Press the **POI** button on the map screen.
2. Press the **Others** button.



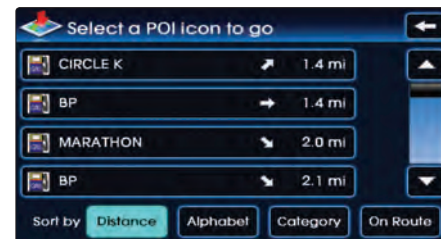

3. Press the **Local POI lists** button.



4. Select the desired POI menu.  
The corresponding position will be displayed on the map.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Find nearest <POI name>"  
 [Find nearest <POI name>], page 5-21.



## Operating after searching a destination



**Changing destination position :**  
 Changes the position of the destination by scrolling the map.  
 [Scrolling map], page 3-11.

**Setting as Destination / waypoint :**  
 Sets the position as the destination or waypoint.

## Voice Command

1. Press the key on the steering wheel remote controller.
2. After the beep sound, say a command.  
 "Start guidance"  
 (Sets the position of the scroll mark as the destination and begins route guidance.)

## Adding to address book :

Saves the position in the address book.  
 [Registering new address in address book], page 3-43.

## Voice Command

1. Press the key on the steering wheel remote controller.
2. After the beep sound, say a command.  
 "Store Marked Location to <text tag>"

## Operating after setting a destination



### Starting Route Guidance

Press the **Start Guidance** button. Route Guidance will start.

- Route simulation
- If the **Start Guidance** button is pressed and held for over 0.8 second, then the route simulation will start.
- If the **MAP VOICE** key on the control panel is pressed during route simulation, then route simulation will be terminated.

### Voice Command

1. Press the **MAP VOICE** key on the steering wheel remote controller.
2. After the beep sound, say a command.

 
"Time to destination"

"Distance to destination"


### Route guidance screen




- Symbol guidance mode : if the **MAP VOICE** button is pressed, then the following route guidance screen will be displayed.

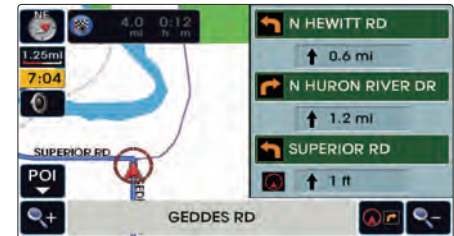

 
- Turn-List mode : if the **MAP VOICE** button is pressed, then the following route guidance screen will be displayed.

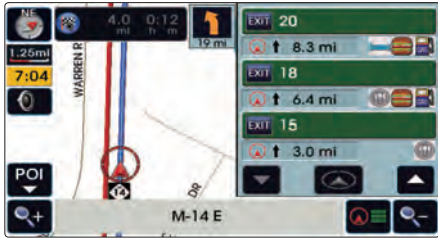

- Highway mode : if the  button is pressed, then the following route guidance screen will be displayed.



 - Highway junction mode : this route guidance screen is automatically displayed during guidance at highway junctions. Once guidance at a highway junction is complete, this screen will automatically disappear and the previous guidance screen will be restored.

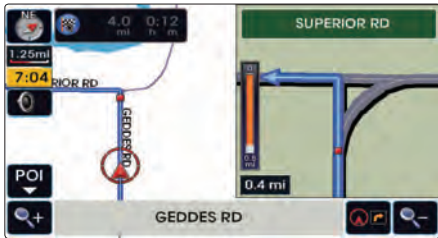



- Intersection zoom mode : this route guidance screen is automatically displayed during guidance at an intersection. Once guidance at the intersection is complete, the screen will automatically disappear and the previous guidance screen will be restored.

## Selecting other route



1. Press the **Alternative Route** button.



2. Other routes can be selected by pressing the  or  buttons.

## Route guidance

### Route menu screen and functions

 
Press the **ROUTE** key on the control panel.  
The ROUTE menu screen will be displayed.



- a Cancel Route: deletes destination, waypoints and terminates route guidance.  
🔗 [Finishing route guidance], page 3-30 .
- b Route Overview: displays the entire route and route detailed.  
🔗 [Route overview], page 3-31 .
- c Route Option: the route option can be changed.  
🔗 [Changing Route option], page 3-32 .
- d Edit Waypoint: waypoints can be added/ deleted and the order can be changed.  
🔗 [Editing waypoints], page 3-32 .
- e Detour : searches detour routes.  
🔗 [Setting detour distance], page 3-35 .
- f Avoid Streets: searches routes which avoid the selected streets.  
🔗 [Setting avoid streets on route], page 3-35.


### Finishing route guidance (Delete Destination)

1. Press the **ROUTE** key.
2. Press the **Cancel Route** button.

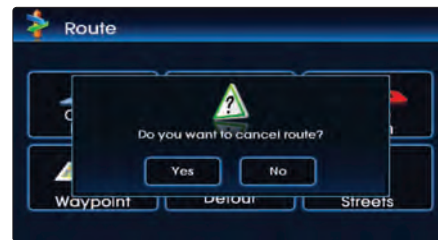

3. Press the **Yes** button.  
The destination and waypoints are deleted and the route guidance is terminated.  
🔗 [Finishing route guidance], page 3-30 .

## Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Cancel route"  
(Terminates route guidance and deletes the set destination and waypoints.)

### Route overview (View Entire Route)

1. Press the **ROUTE** key.
2. Press the **Route Overview** button.



3. Press the **Turn by Turn** button.

### INFORMATION

If the **Return to guidance** button is pressed, route guidance screen is displayed.



4. The detailed route information can be viewed


### Changing Route option

1. Press the **ROUTE** key.
2. Press the **Route Option** button.



3. Press the button for the desired route guidance method.  
Guidance will be restarted after recalculating the route with the selected guidance method.

### Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Replan recommended route"  
"Replan shortest route"

### Editing waypoints

#### Adding waypoints

There are 2 ways to add waypoints - (a) searching for POI nearest to the route, (b) using advanced search.

1. Press the **ROUTE** key.
2. Press the **Edit Waypoint** button.



3. Press the **Press to add new waypoint** button.

 
(a) Searching POI lists near route




4. Press the **Near POI Lists on Route** button.



5. Select the desired category.

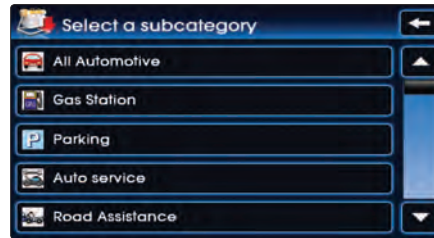


 6. Select the desired sub category from list.

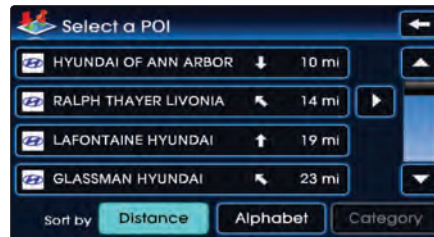

7. Select the desired POI from the list.

 The corresponding position will be displayed on the map.

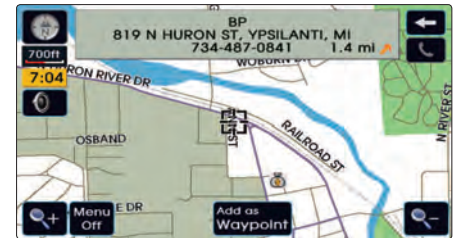

8. Press the **Add as Waypoint** button.



9. Press the **Done** button to complete.

Guidance will restart after recalculating the route.



## PART 3 NAVIGATION SYSTEM

### (b) Using advanced Search

The method for searching waypoints through the **Advanced(more)** button is the same method as searching destination.

 
 [Searching a Destination], page 3-13.

### Deleting waypoints

1. Press the **ROUTE** key.
2. Press the **Edit waypoint** button.



3. Select the waypoint and press the **Delete** button.

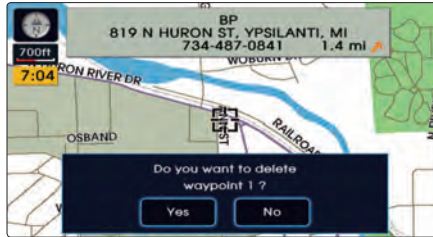


4. Press the **Yes** button.



5. After deleting, press the **Done** button to complete.  
Guidance will restart after recalculating the route.

### Re-ordering waypoints

 1. Press the **ROUTE** key.
2. Press the **Edit waypoint** button.

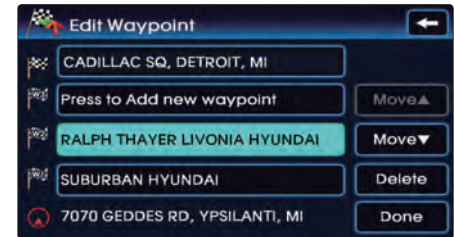

3. Select the desired waypoint and use the **Move▲**, **Move▼** buttons to change the order.
4. Once re-ordering is complete, press the **Done** button to complete.  
Guidance will restart after recalculating the route.




## Setting detour distance

1. Press the **ROUTE** key.
2. Press the **Detour** button.



3. Select the desired detour range.  
Guidance will restart after recalculating the detour route.



## Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.  
"Detour <1 or 2 or 5 or 10> miles"  
"Detour <1 or 2 or 5 or 10> kilometers"

## Setting avoid streets on route

1. Press the **ROUTE** key.
2. Press the **Avoid streets** button.



3. Select the desired streets to avoid(  avoid,  allow) and press the **Done** button to complete.  
Guidance will restart after recalculating the route to avoid the selected streets.

### Setup and Information

#### Setup menu screen and functions


Press the **SETUP** key on the control panel to display the setup menu screen.



**a** Main button : changes to the input keyboard type, voice command feedback ON/OFF settings and system initialization can be made.

 [Main setting], page 3-36 .

**b** Voice Setup button : adjusts the Navigation guidance volume.

 [Voice guidance volume setting], page 3-51.

**c** Navigation button : navigation related settings can be set.


 [Navigation setting], page 3-38 .

**d** Clock Setup button

**e** My Places button : the Address book, Home address, Favorite places, Previous destination can be edited.

 [My places setting], page 3-43 .

**f** Help button : the help contents can be viewed.

 [Help], page 3-54 .

**g** Traffic Setup : sets to display traffic information on map, or to provide upcoming traffic information voice guidance, and or to display the detour route popup showing upcoming traffic information.

## Main setting

1. Press the **SETUP** key.
2. Press the **Main** button.



3. Select the desired changes and press the **Done** button to complete.

### Setting keyboard for inputting letter

Press the desired keyboard type button. The selection will be highlighted.

### Setting voice command feedback ON/OFF

Press the desired setting button.

### Setting Language

1. Press the **Change** button.



2. Press the desired language.



 
3. Press the **Done** button to complete.

### Initializing system

1. Press the **Factory Default** button.



2. Press the menu desired for initialization.

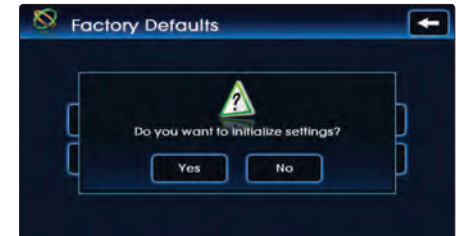


3. Press the **Yes** button

## PART 3 NAVIGATION SYSTEM
 
### Navigation setting

1. Press the **SETUP** key.
2. Press the **Navigation** button.

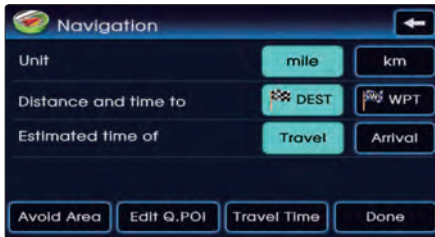

3. Select the desired changes and press the **Done** button to complete.

### Setting units (mile/ km)

 
Select the desired distance unit.

### Setting arrival time and distance display

Select the desired setting button.

### Registering avoid area


1. Press the **Avoid Area** button.

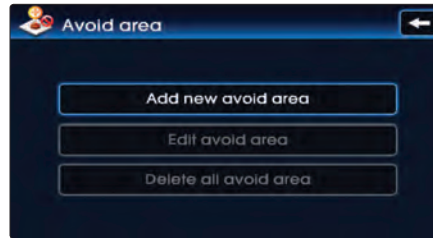

2. Press the **Add new avoid area** button.



 3. Set the start position of the avoid area and press the **Next** button.

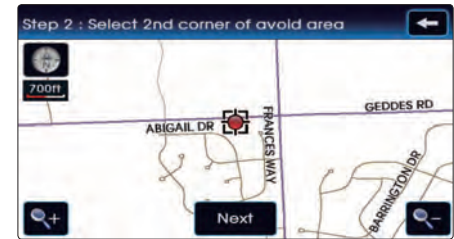

4. Set the end position of the avoid area and press the **Next** button.





 
5. Press the **Done** button to complete.



6. If the Avoid area needs to be renamed, press the **Rename** button.



8. Each time the **Avoid** button is pressed, the function will switch between avoid (  ) or allow(  ).

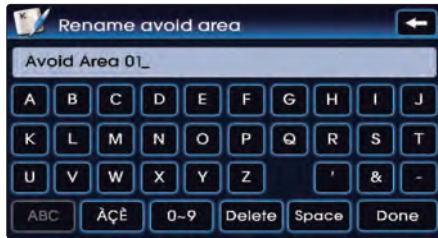


7. Rename the Avoid area and Press the **Done** button to complete.

9. Press the **Done** button to complete the setting.


## PART 3 NAVIGATION SYSTEM
 
### Editing avoid area

1. Press the **Avoid area** button.

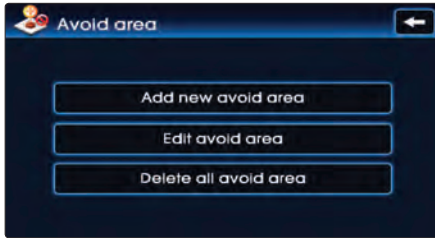

 2. Press the **Edit avoid area** button.

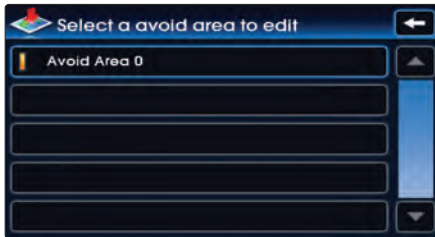

3. Select the Avoid area button to edit.



4. If the Avoid area needs to be renamed, press the **Rename** button.



5. Rename the Avoid area and press the **Done** button to complete.




6. Each time the **Avoid** button is pressed, the function will switch between avoid(🚫) or allow(📍).


7. Press the **Done** button once editing is complete.

## Deleting avoid area

 1. Press the **Avoid area** button.

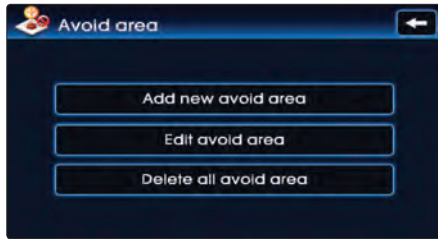

 
2. Press the **Edit avoid area** button.

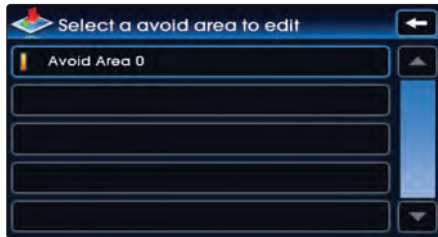

3. Select the **Avoid area** button to delete.



 
4. Press the **Delete** button.

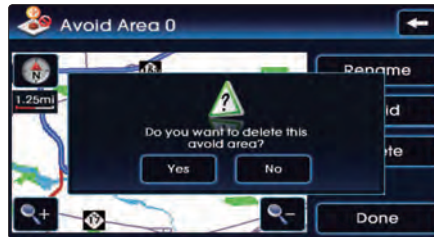


5. Press the **Yes** button.

## Deleting all avoid areas

 1. Press the **Avoid area** button.

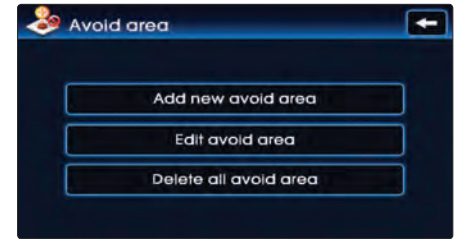

 2. Press the **Delete all avoid area** button.

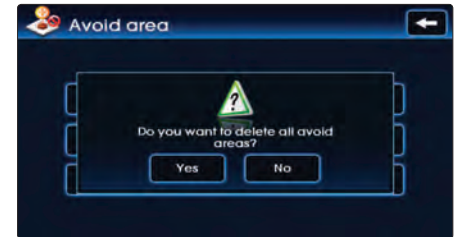

3. Press the **Yes** button.



## PART 3 NAVIGATION SYSTEM

### Setting Q.POI icons

 
1. Press the **Edit Q.POI** button.



2. Select the desired menu.



3. Select the desired category.

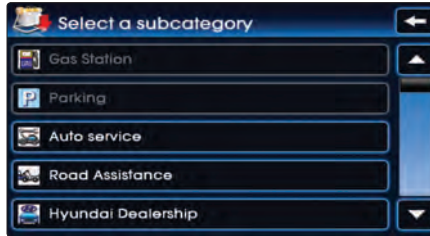

4. Select the desired sub category.



5. Press the **Done** button to complete.

### **i** INFORMATION

Q.POI stands for Quick POI and refers to the function which turns POI icon display on or off on the map.

### Setting estimate travel time

1. Press the **Travel Time** button.



2. Press the **◀** or **▶** button on the Residential, Main street, and Freeway controls to adjust the speed.

Press the **Default** button to set the speeds to the default settings.

3. Press the **Done** button to complete the setting.



## My places setting

### Registering new address in address book

 
There are 3 ways to register a new address in the address book - (a) by DEST menu, (b) by registering address in address book, (c) from map scroll.

#### (a) by DEST menu


1. Press the **DEST** key.
2. Search through the desired method.  
The search process is the same as the method for destination search.  
📍 [Searching a destination], page 3-13.



3. Press the **Add to Address Book** button.

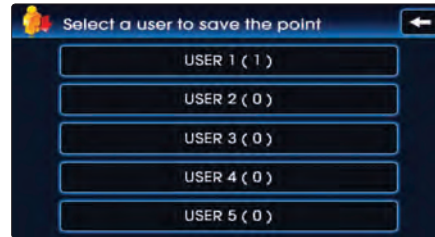

 
4. Press the desired address book (user) button.

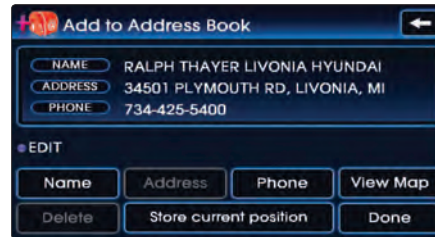

5. Input the name and telephone information and press the **Done** button to complete.  
📍 [Editing an address of address book], page 3-45.

#### (b) by registering in the address book

 1. Press the **SETUP** key.
2. Press the **My Places** button.

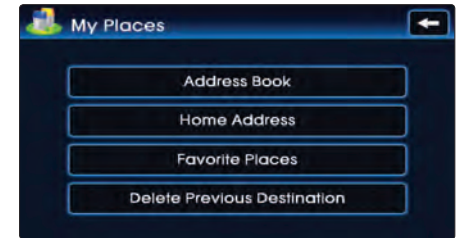


3. Press the **Address Book** button.




4. Press the desired address book (user) button.


## PART 3 NAVIGATION SYSTEM

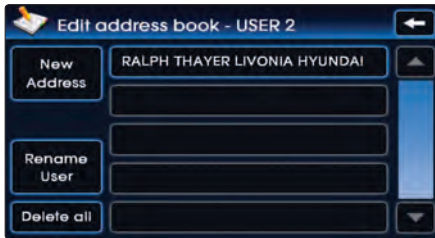 

 5. Press the **New Address** button.

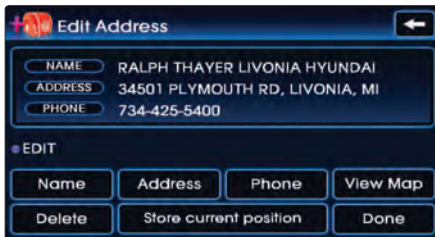


6. Press the **Address** button to search the address.

 [Searching an address], page 3-13.

### INFORMATION

Press the **Store current position** button to input the address of the current position.

7. Input the name and telephone information and press the **Done** button to complete.

 
 [Editing an address of address book], page 3-45.

### (c) from map scroll

1. In the map screen, scroll the map to the desired position.




2. Press the **Add to Address Book** button.

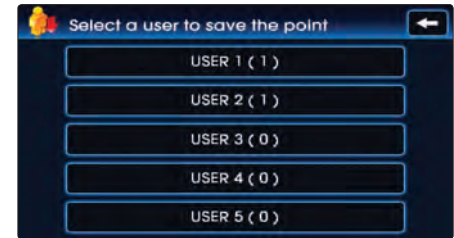


3. Press the desired address book (user) button.

4. Input the name and telephone information and press the **Done** button to complete.


 [Editing an address of address book], page 3-45.

## Editing an address of address book

 
1. Press the **SETUP** key.
2. Press the **My Places** button.

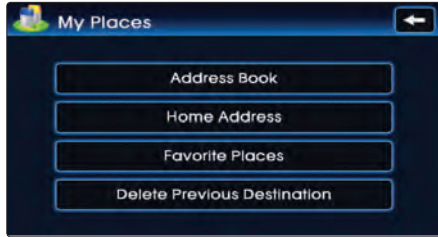

 
3. Press the **Address Book** button.

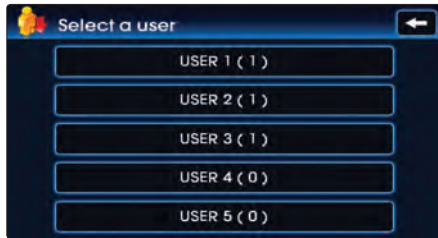

 
4. Select the desired address book (user) button.

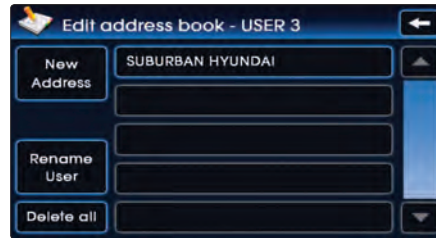

 
5. Select the desired address to edit.

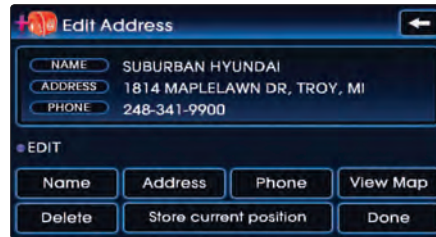

 6. Press the **Name** button to input the address name.

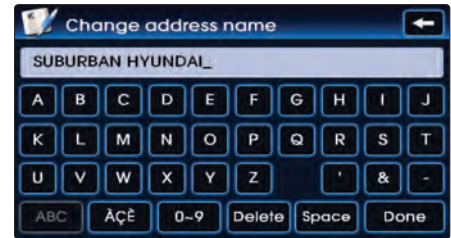

 7. Input the address name and press the **Done** button to complete.

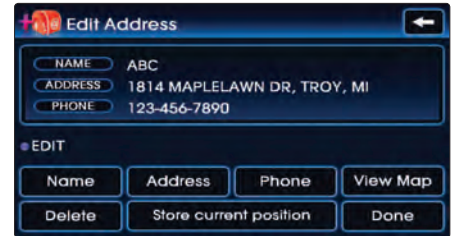

8. Press the **Address** button to search the address. The process is the same as the method for searching an address.


[Searching an Address] , page 3-13.

### **INFORMATION**

 
Press the **Store current position** button to input the address of the current position.

## PART 3 NAVIGATION SYSTEM

9. Press the **Phone** button to input the phone number.

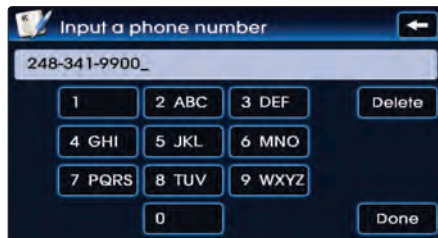

 
10. Input the phone number and press the **Done** button to complete.

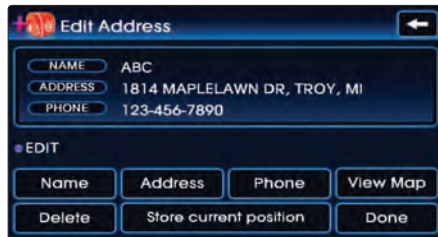

11. Press the **Done** button to complete.

### Deleting an address of address book

 
1. Press the **SETUP** key.
2. Press the **My Places** button.

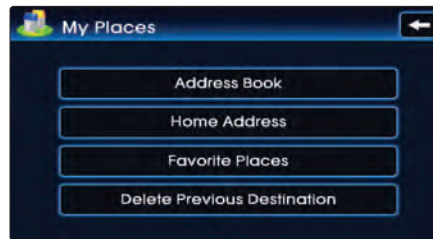


3. Press the **Address Book** button.



 4. Select the desired address book (user) button.

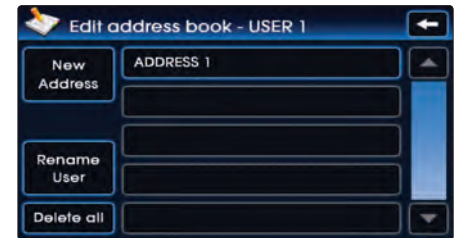

 5. Select the desired address button to delete.

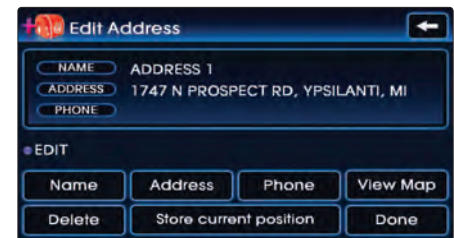

6. Press the **Delete** button.