

CAR MULTIMEDIA SYSTEM

USER'S MANUAL



The Power to Surprise

Thank you for purchasing this multimedia system.

This user's manual explains how to use the Kia Motor multimedia system. Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precaution for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

⚠ WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation

of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

- Infinity® is a trademark of Harman International Industries, Inc.
- At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS6 compatibility expected early 2013. Additional compatible devices expected late 2013.
- The App Store is a service mark of Apple Inc. No charge for the UVO eServices app. The App runs on your smartphone cellular data service. Normal data rates will apply.
- HD Radio™ and the HD Radio™ logo are proprietary trademarks of iBiquity Digital Corporation.

- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
- 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
- The rear-camera display is not a substitute for proper and safe backing-up procedures. The rear-camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.



All Map Database cannot be copied without permission.

Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without HYUNDAI MnSoft, Inc's prior written consent.

Read the following safety precautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

- ※ The design and specifications of this product may change without prior notification for product and service improvement. The actual features in the vehicle may differ from the illustrations. For more accurate information about the vehicle, please refer to the catalogue.
- ※ For more information on open licenses and legal notices, refer to the website below.
http://www.mobiszone.co.kr/front/mall/jsp/manual/avn_download_center_manual.jsp

Notations used within this User's Manual

WARNING

- Failure to observe the instructions within this category could result in damage to the vehicle.
-

CAUTION

- Information on matters that could potentially lead to injury or vehicle damage/malfunction information that could lead to higher user safety
-

Information

- Information and tips that provide additional user convenience in using the product
-

NOTICE

- Information on specific features that facilitate proper product use and functional understanding
 - Information on terminology used within this manual
-

Table of Contents

1. Basics

Warnings and Precautions..... 1-2

Key Product Features..... 1-4

Component Names and Functions 1-5

Head Unit..... 1-5

Steering Wheel Remote Controller..... 1-7

Starting the System for the First Time 1-9

Turning the System On/Off 1-9

System Reset 1-9

Battery Warning Message 1-10

Restrictions on Features for Safety Measures 1-10

Home Screen 1-11

On-Screen Touch Controls 1-12

2. About Using AV

FM/AM Mode 2-2

Accessing FM/AM Mode 2-2

About HD Radio™ Technology ... 2-4

Basic Mode Screen (HD Radio™ reception ON) 2-5

SiriusXM™ Mode 2-5

SiriusXM™ Mode Hard Key Controls ... 2-5

SiriusXM™ Mode Display Controls ... 2-6

Selecting through Channel/Category List ... 2-8

Direct Tune 2-8

Viewing Menu 2-8

Media Mode 2-10

Starting Mode 2-10

About Disc 2-11

Precautions upon Handling Discs 2-11

Supported Disc Formats 2-12

Disc/Content Format Compatibility 2-12

Before Playing an MP3 Disc 2-14

CD Mode..... 2-16

Basic Mode Screen 2-16

Using MP3 Mode 2-19

Basic Mode Screen 2-19

About USB..... 2-22

Before Playing a USB MP3..... 2-22

USB MP3 Information and

Precautions 2-24

Supported Image Specifications..... 2-24

USB Music 2-25

USB Image 2-28

About iPod® 2-30

Using iPod® Devices 2-30

iPod® 2-34

AUX..... 2-37

Connecting an External Device 2-37

Bluetooth® Audio Mode 2-38

Bluetooth® Audio 2-38

Bluetooth® Connections Settings 2-39

My Music..... 2-40

3. Using Bluetooth®

Before Using the Bluetooth®

Handsfree.....3-2

What is *Bluetooth*® Wireless

Technology?3-2

Precautions for Safe Driving 3-2

CAUTIONS upon Connecting Bluetooth®

Phone 3-3

Bluetooth® Connection3-4

Pairing a New Device 3-4

Connecting Bluetooth® Devices 3-4

Disconnecting Bluetooth® Devices 3-5

Deleting Bluetooth® Devices 3-5

Bluetooth® Phone.....3-6

Phone Status Icons 3-6

Dial 3-7

Accept/Reject Call 3-7

Using the Menu During a Phone Call... 3-8

Call History 3-9

Contacts3-10

Favorites3-11

4. UVO eServices

The 911 Connect feature may not operate in the following situations... 4-2

About UVO eServices4-4

Before using UVO eServices.....4-5

Connecting Bluetooth.....4-5

Pair a device from Bluetooth-enabled phone4-5

Connecting to smartphone via USB.....4-6

Activating UVO eServices 4-6

911 Connect4-7

911 Connect 4-7

Initiating a 911 Call 4-7

Roadside Assist.....4-8

Roadside Assist 4-8

Vehicle Diagnostics4-9

Conducting Vehicle Diagnostics 4-9

Schedule Service 4-10

Send Report 4-10

Scheduled Diagnostics 4-11

Automatic Diagnostics..... 4-12

My Car Zone..... 4-12

Curfew Limit Alert 4-13

Speed Alert 4-14

Geo Fence Alert 4-14

Parking Minder 4-15

Sending Parking Location 4-15

My POIs 4-16

Sending Points of Interest to Your Navigation System..... 4-16

eServices Guide 4-16

eServices Guide 4-16

UVO eServices Settings 4-16

5. Navigation

Basic Features	5-2
Operating Navigation Screen	5-2
Changing Map View	5-3
Voice Guidance Volume On/Off	5-3
Zoom In /Zoom Out.....	5-3
Map Scale	5-4
Menu	5-4
Route Option	5-4
Detour	5-5
Navigation Volume	5-5
Nearby POIs	5-6
Search	5-14
Places	5-14
Address	5-15
Route Setting	5-24
Route Guidance	5-27
Route	5-29
Canceling Route	5-29
Display Route Information	5-29
Route Overview	5-30
Route Preview	5-30

Editing Route	5-31
Route Options	5-32
Avoid Street	5-32
Navigation Settings	5-33
General	5-33
Display	5-33
Guidance	5-34
Route	5-34
Traffic	5-34
Troubleshooting	5-35

6. Voice Recognition

What is Voice Recognition?	6-2
Recommendations Required for Successful Voice Recognition	6-2
Starting/Ending and Setting Voice Recognition	6-3
Starting Voice Recognition	6-3
Ending Voice Recognition	6-3
Quick Run of Voice Recognition (Manual Mode)	6-3
Extending the Standby Time	6-4
Skipping Prompt Messages	6-5
Adjusting Voice Recognition Volume ...	6-5
Voice Recognition Screen Overview	6-6
Start Screen.....	6-6
Help Display.....	6-6
Instructions for Using Voice Recognition...	6-7
Voice Commands	6-8
Types of Commands	6-8
Call Commands	6-8
Navigation Commands	6-9
Radio Commands	6-11

Media Commands	6-12
UVO eServices Commands List (Optional)	6-15
Other Commands List (Commands used in List / Help)	6-15
“Find the Nearest <Category>” List ...	6-16
UVO Voice Local Search	6-21
What is UVO Voice Local Search?	6-21
Starting UVO Voice Local Search	6-21
Siri Eyes Free.....	6-22
How to start Siri	6-22
How to use Siri.....	6-22

7. Info

Start Up.....	7-2
Pandora Radio Mode.....	7-2
Pandora Radio Mode	7-2
Pandora Radio Mode Screen Controls ...	7-3
Download Center	7-6
Apps List	7-6
My Apps	7-7
SiriusXM™ Data	7-8
About SiriusXM™ Data Service	7-8
Accessing SiriusXM™ Data	7-8
SiriusXM™ Weather Announcement... ..	7-8
SiriusXM™ Traffic Information.....	7-9
SiriusXM™ Fuel Price Information	7-10
SiriusXM™ Stock Information.....	7-11
SiriusXM™ Sports Information	7-12
SiriusXM™ Movie Information	7-14
SoundHound	7-16
Accessing SoundHound	7-16
SoundHound Main Screen	7-16
Recognizing Music	7-17

Searching Music	7-17
Song Main Screen	7-18

8. Other Features

Climate Mode.....	8-2
Operating Climate Mode.....	8-2
Basic Mode Screen.....	8-2
Camera (Optional).....	8-4
About Rear Detection Camera	8-4
AVM (Around View Monitor)	8-4
Front AVM	8-5
Rear AVM	8-5
Parking Guidance Settings	8-6

9. Setup

Setup	9-2
Navigation Settings.....	9-3
Sound Settings.....	9-3
Display Settings	9-4
Phone Settings.....	9-4
Phone Settings	9-4
Bluetooth® Connection Settings	9-4
Auto Connection Priority	9-5
Ringtone	9-6
System Bluetooth® Information	9-6
UVO eServices Settings	9-7
911 Connect	9-8
Parking Minder.....	9-8
My Car Zone	9-9
Scheduled Diagnostics	9-11
Trip Info Sync Reminder	9-12
Voice Recognition Settings	9-12
Clock Settings	9-12

Wi-Fi Settings	9-13
Wi-Fi Settings Screen	9-13
How to Connect to a Network.....	9-13
Language Settings	9-13
Keyboard Settings	9-14
Downloaded Apps Settings	9-14
Screen Saver Settings.....	9-14
System Info.....	9-15
System Update	9-15

10. Appendix

Product Specification	10-2
Before Thinking the Product Has Malfunctioned	10-4
Troubleshooting	10-5
FAQ	10-7
About Pairing Mobile Phones	10-7
About Making/Answering Phone Calls ...	10-8
About <i>Bluetooth</i> ® Wireless Technology/ Head Unit Use Environment	10-8



PRECAUTIONS upon Using SD Cards

- **Ejecting and Inserting SD Cards**

- Ejecting and inserting SD cards while the multimedia system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the multimedia system and the vehicle ignition.
- Eject/insert SD cards only to update the multimedia system with a new version.

- **Usage of SD Cards**

- The SD Card is formatted to include only Map and new system update files.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth® Wireless Technology

The *Bluetooth®* Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth®* Wireless Technology SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth®* Wireless Technology enabled cell phone is required to use *Bluetooth®* Wireless Technology. *Bluetooth®* Wireless Technology phone compatibility can be checked by visiting www.kia.com/us/bluetooth.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



01

part. 1 **Basics**

Warnings and Precautions

Key Product Features

Component Names and Functions

Starting the System for the First Time

Basics

Safety Warnings

- Even when receiving route guidance from the Multimedia system, please abide by actual traffic and road regulations. Following only the Navigation route guidance may lead to violations of actual traffic and road regulations and lead to traffic accidents.
- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not operate the Multimedia system while driving, such as entering POIs or conducting route searches. Such acts could lead to accidents, fire, or electric shock. Park the vehicle before operating the device.
- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.
- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Safety Precautions

Pay attention to traffic conditions while driving.

- In some instances, the navigation may provide guidance through restricted areas.
- Operating the device while driving could lead to accidents due to a lack of attention to external surroundings. First park the vehicle before operating the device. In addition, the touch screen may not work for some functions when the vehicle is in motion. The touch screen feature will be supported once the vehicle has stopped.
- Adjust the volume to levels that allow the driver to hear sounds from outside of the vehicle. Driving in a state where external sounds cannot be heard may lead to accidents.
- Pay attention to the volume setting when turning the device on. A sudden output of extreme volume upon turning the device on could lead to hearing impairment. (Adjust the volume to a suitable level before turning off the device.)
- If you want to change the position of device installation, please inquire with your place of purchase or service maintenance center. Technical expertise is required to install or disassemble the device.
- Turn on the car ignition before using this device. Do not operate the Navigation system for long periods of time with the ignition turned off as such operations may lead to battery discharge.
- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product malfunctions, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Key Product Features

 
This device is a Multimedia system equipped with a multifunctional disc player that supports Radio (FM, AM), HD Radio™ technology, SiriusXM™, Audio CD, MP3, USB, iPod®, Audio AUX, Bluetooth® Audio and My Music features. The WIDE VGA LCD provides a high quality resolution while the powerful and rich sound system adds to the driving enjoyment.

Display	<p>Wide TFT-LCD Display</p> <ul style="list-style-type: none"> • Provides high quality video through a Wide TFT-LCD Display using an LED Back Light. • Touch screen for maximum user convenience.
Radio	<p>Digital Tuner Feature</p> <ul style="list-style-type: none"> • Digital Tuner using PPL method that supports memory of 12 broadcast stations for each AM and FM modes. <p>Radio broadcast station name</p> <ul style="list-style-type: none"> • Displays broadcast station names for key locations. <p>HD Radio™/Satellite Radio feature</p> <ul style="list-style-type: none"> • Supports HD Radio™ reception and Satellite Radio (SiriusXM™).

Multimedia Player	<p>Support for various Media Formats</p> <ul style="list-style-type: none"> • Support for various media formats, including Radio, Audio CD, MP3, USB, iPod, AUX and Bluetooth® Audio Streaming modes <p>My Music</p> <ul style="list-style-type: none"> • Supports copying of music stored within USB devices into My Music (internal memory) mode
Navigation	<p>Voice Guidance</p> <ul style="list-style-type: none"> • Voice route guidance to safely and conveniently reach set destinations • Various map scales that enable drivers to accurately view map and surrounding areas <p>Automatic Correction for Current Location</p> <ul style="list-style-type: none"> • Automatically corrects current position using map matching and GPS information.
Miscellaneous	<p>Bluetooth® Wireless Technology</p> <ul style="list-style-type: none"> • Convenient use of Bluetooth® Handsfree by using buttons within the steering wheel remote controller <p>Digital Screen Control Features</p> <ul style="list-style-type: none"> • Easy control of features through touch screen options <p>Steering Wheel Remote Controller</p> <ul style="list-style-type: none"> • Control over audio features, voice recognition and Bluetooth® through the steering wheel remote controller for maximum convenience

Component Names and Functions

Head Unit

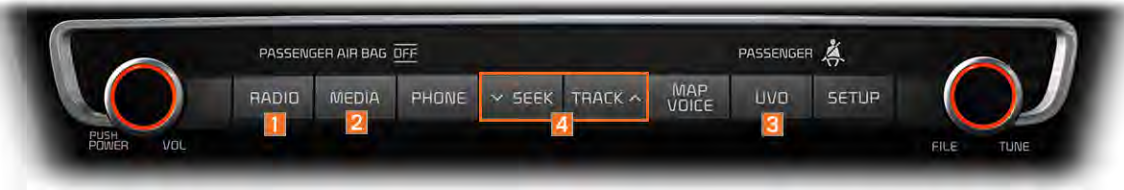

 

 



Name	Description
1 RADIO	<p>Converts to FM/AM/SiriusXM™ mode</p> <ul style="list-style-type: none"> Each time the key is pressed, the mode is changed in order of FM → AM → SiriusXM™ → FM
2 MEDIA	<p>Converts to MEDIA mode</p> <ul style="list-style-type: none"> If the media is not connected or is or CD player not available for Model, Media mode will not be activated. Press this key to move to the last mode that you accessed in Media. Press it once again to display the screen where you can select a Media mode.
3 UVO	Displays the UVO mode

Name	Description
4 SEEK TRACK	<p>When key is pressed shortly. (under 0.8 seconds)</p> <ul style="list-style-type: none"> FM/AM mode : plays previous/next frequency SiriusXM™ mode : plays the previous/next channel MEDIA (Disc/USB/iPod/My Music) mode : changes the track, file or title (except USB Image and AUX) <p>When key is pressed and held. (over 0.8 seconds)</p> <ul style="list-style-type: none"> FM/AM mode : continuously changes the frequency until the key is released SiriusXM™ mode : continuously changes the channel until the key is released and plays the current channel MEDIA (Disc/USB/iPod/My Music) mode : rewinds or fastforwards the track or file (except USB Image, Bluetooth Audio and AUX)


Head Unit






Name	Description
5  MAP	SD Card insert slot
6  PWR/ VOL	<ul style="list-style-type: none"> • When power is off, press to turn power on • When power is on, press and hold (over 0.8 seconds) to turn power off • When power is on, press shortly (under 0.8 seconds) to turn Audio off • Turn left/right to control volume
7  MAP	Displays the map for the current position
8  PHONE	Takes user to phone screen
9  SETUP	Displays the Setup mode



Name	Description
10  TUNE	<ul style="list-style-type: none"> • FM/AM mode : changes the frequency • SiriusXM™ mode : changes the channel • MEDIA (Disc/USB/iPod/My Music) mode : changes the track, file or title (except USB Image, Bluetooth Audio and AUX)
RESET	Resets the system settings. (Preset radio channels and other data will not be deleted.)

Steering Wheel Remote Controller

Name	Description
1 	When pressed shortly. (under 0.8 seconds) <ul style="list-style-type: none"> • Activates voice recognition When pressed and held. (over 0.8 seconds) <ul style="list-style-type: none"> • Ends voice recognition • Activates Siri Eyes Free

Name	Description
2 	<ul style="list-style-type: none"> • Each time this key is pressed, mode is changed in order of FM → AM → SiriusXM™ → Disc → USB Music or iPod → AUX → Bluetooth Audio → My Music • If the media is not connected, corresponding modes will be disabled • Press and hold the key (over 0.8 seconds) to turn the Audio system on/off • When power is off, press the key to turn power back on
3 	Controls the volume
4 	When keys are pressed shortly. (under 0.8 seconds) <ul style="list-style-type: none"> • FM/AM mode : searches broadcast frequencies saved to Presets • SiriusXM™ mode : searches broadcast channels saved to Presets • MEDIA(Disc/USB/iPod/My Music) mode : changes the track, file or chapter (except USB Image, AUX) When keys are pressed and held. (over 0.8 seconds) <ul style="list-style-type: none"> • FM/AM Mode : Automatically searches broadcast frequencies • SiriusXM™ mode : automatically searches broadcast channels • MEDIA(Disc/USB/iPod/My Music) mode : Quickly looks up songs (excluding USB images, AUX, and Bluetooth audio files)

Steering Wheel Remote Controller

Name	Description
<p data-bbox="841 370 868 393">5</p> 	<p data-bbox="998 182 1404 205">When pressed shortly. (under 1.2 seconds)</p> <ul data-bbox="998 211 1494 341" style="list-style-type: none"><li data-bbox="998 211 1494 235">• When pressed in the dial screen, makes a call<li data-bbox="998 235 1494 288">• When pressed in the incoming call screen, answers the call<li data-bbox="998 288 1494 341">• When pressed during call waiting, switches to waiting call (Call Waiting) <p data-bbox="998 346 1404 370">When pressed and held. (over 1.2 seconds)</p> <ul data-bbox="998 376 1494 582" style="list-style-type: none"><li data-bbox="998 376 1494 429">• When pressed in the Bluetooth® Handsfree, redials the last call<li data-bbox="998 429 1494 482">• When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private)<li data-bbox="998 482 1494 582">• When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected)
<p data-bbox="841 623 868 646">6</p> 	<ul data-bbox="998 599 1494 670" style="list-style-type: none"><li data-bbox="998 599 1494 623">• When pressed during a call, ends the phone call<li data-bbox="998 623 1494 670">• When pressed in the incoming call screen, rejects the call

※The actual feature in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the user agreement screen. To change the system language between Korean, English, French, and Spanish press the Change **Language** button.

NOTICE

- Cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

You can change Screen Saver Settings in Setup to display a clock or another chosen image on the Screen Saver.

Information

- If you turn off the system during a phone call using the hands-free feature, then the call will automatically switch to your mobile phone.

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset

 
The System Reset function restores the system when it is malfunctioning. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

NOTICE

- Resetting the system restores all existing settings and configurations (e.g. volume, display, etc.) back to their factory defaults. This is not a system defect. It occurs because the information stored in memory is reset back to factory settings as a normal process of resetting the system.


Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.

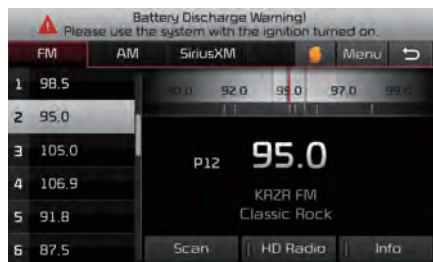

Restrictions on Features for Safety Measures

 The restriction screen will disappear when shifting gears into P or putting the parking brake on.

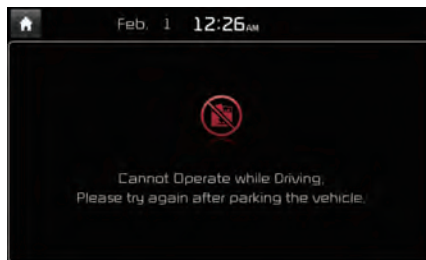


NOTICE

- If you use the system for a long time with the engine off, the battery may become completely empty.
-

Home Screen

 Controls Menu Configuration for the Home Screen

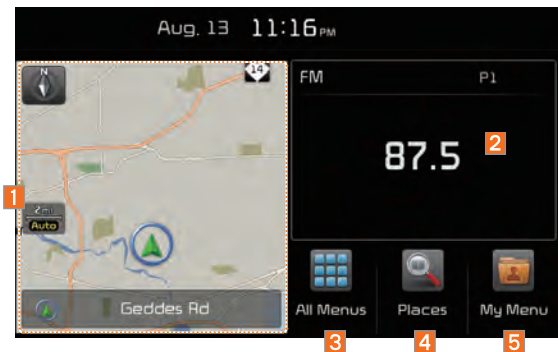

Features	Description
1 Navigation Widget	<ul style="list-style-type: none"> Provides a brief view of the navigation map and the route screen. Touch any area on the screen to move to the navigation screen.
2 AV Widget	<ul style="list-style-type: none"> Shows brief information on the radio media currently playing. Touch the area to move to the mode for what you are listening to.
3 All Menus	Shows all of the items in the system menu.
4 Places	Directly moves to the screen where you can search for your destination.
5 My Menu	<ul style="list-style-type: none"> You can add and save up to eight menu items. Add your favorite menu items to have quick and easy access to them.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

	AV-Mute	Navigation-Mute	Making a call and Bluetooth connection			Wi-Fi	
ICON							
Description	Mute AV sound	Mute Navigation sound	Bluetooth phone remaining battery	Handsfree connection	Making a call using BT phone	Bluetooth phone reception sensitivity	Wi-Fi is connected
ICON							
Description				Connecting to music stream		Connecting to Wi-Fi	
ICON							
Description				Handsfree+streaming connection	Mute Bluetooth phone microphone		
ICON							
Description				Downloading contacts/recent calls			

Adding Your Favorite Menu Items to My Menu

From the Home screen, select **My Menu** and then **Edit**.

From the Edit My Menu screen, select menu items from the list on the right, then drag and drop them to a desired place on the left.

On the other hand, if you drag items from the left and drop them on the right, they will be deleted from My Menu instead.



i Information

- Up to eight items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select

 
Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

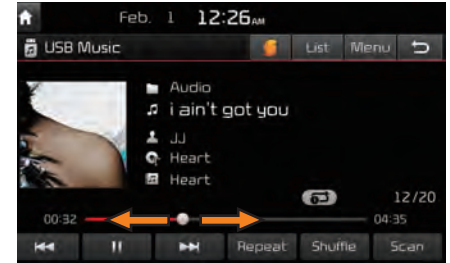

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from. However, the CD player does not support drag function.

i Information

- Music screens for Disc CD and Disc MP3 do not support this function.

 


Drag the frequency bar to the left or right to move to the frequency that you want.



From the Edit My Menu screen, drag and drop icons to add, delete, or move to/from My Menu.


Flick (Quick Scrolling)

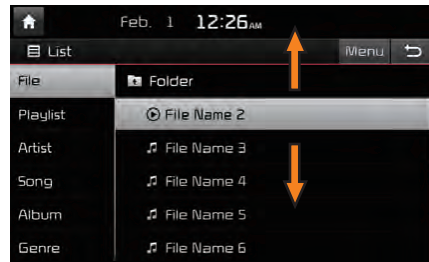

Quickly moves up and down in the list.

NOTICE

 - Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler

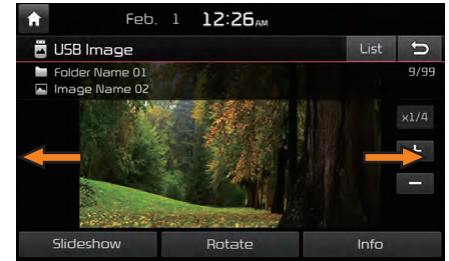



You can view the previous or next image by flicking left/right on an image on the USB Image screen.



Flick left/right on the frequency bar in the radio player to look up the previous/next frequency available.

Press and Hold

Pressing the  and  buttons in the music or video player will fast forward/rewind the music or video.

