

북미/영어-English

D9EG01 (북미/영어-English)



Thank you for purchasing this multimedia system.

This user's manual explains how to use the Kia Motor multimedia system. Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precaution for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

 SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm. com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See

siriusxm.com/traffic for details. Sirius.

XM and all related marks and logos are

trademarks of Sirius XM Radio Inc.

A WARNING

 Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Read the following safety cautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

* The design and specifications of this product may change without prior notification for product and service improvement.

The actual features in the vehicle may differ from the illustrations.

For more accurate information about the vehicle, please refer to the catalogue.

% For more information on open licenses and legal notices, refer to the website below.

http://www.mobiszone.co.kr/front/mall/jsp/manual/avn_download_ center_manual.jsp

Notations used within this User's Manual

🛕 WARNING -

• Failure to observe the instructions within this category could result in death or serious injury or damage to the vehicle.

- Information on matters that could potentially lead to injury or vehicle damage/malfunction Information that could lead to higher user safety
- i Information -
- Information and tips that provide additional user convenience in using the product

NOTICE _____

- Information on specific features that facilitate proper product use and functional understanding
- · Information on terminology used within this manual

Table of Contents

<u> 1. Basic</u>

Warnings and Cautions 1-2
Key Product Features
Component Names andFunctions1-5Head Unit1-5
Steering Wheel Control 1-7
Starting the System for the First Time
Turning the System On/Off 1-9
System Reset 1-9
Battery Warning Message1-10 Restrictions on Features for
Safety Measures1-10
Home Screen1-11
On-Screen Touch Controls1-12

<u>2. Radio/Media</u>

FM/AM2-2
Accessing FM/AM Mode 2-2
HD Radio™ Technology 2-4
Basic Mode Screen (HD Radio™ reception ON) 2-5
SiriusXM™2-5
SiriusXM [™] Mode Hard Key Controls 2-5
SiriusXM [™] Mode Display Controls 2-6
Selecting through Channel /Category List
Direct Tune 2-8
Viewing Menu 2-8
USB2-11
Before Playing a USB MP32-11
USB MP3 Information and Precautions2-13
Supported Image Specifications2-13
USB Music2-14
USB Image2-17
iPod 2-19
Using iPod Devices2-19
iPod2-23

AUX	. 2-26
Connecting an External Device	2-26
Bluetooth® Audio	. 2-27
Bluetooth Audio Mode	2-27
Bluetooth Connections Settings	2-28
My Music	. 2-29

3. Bluetooth

Before Using the Bluetooth®

What is <i>Bluetooth®</i> Wireless	
Technology?	3-2
Precautions for Safe Driving	3-2
CAUTIONS upon Connecting Bluetooth®)
Phone	3-3

Pairing a New Device	3-4
Connecting Bluetooth Devices	3-4
Disconnecting Bluetooth Devices	3-5
Deleting Bluetooth Devices	3-5
Bluetooth Phone	3-6
Phone Status Icons	3-6
Dial	3-7
Accept/Reject Call	3-7
Using the Menu During a Phone Call.	3-8
Call History	3-9
Contacts	3-10
Favorites	3-11

<u>4. UVO eServices</u>

The 911 Connect feature may not operate in the following situations
About UVO eServices
Before using UVO eServices 4-5
Connecting Bluetooth
Pair a device from Bluetooth- enabled phone
Connecting to smartphone via USB
Activating UVO eServices 4-6
911 Connect
911 Connect 4-7
Initiating a 911 Call 4-7
Roadside Assist
Roadside Assist 4-8
Vehicle Diagnostics
Conducting Vehicle Diagnostics 4-9
Schedule Service4-10
Send Report4-10
Scheduled Diagnostics4-11

Automatic Diagnostics	4-12
	1-17

My Car Zone	4-12
Curfew Limit Alert	4-13
Speed Alert	4-13
Parking Minder	4-14
Sending Parking Location	4-14
eServices Guide	4-15
eServices Guide	4-15
UVO eServices Settings	4-15

5. Voice Recognition

What is Voice Recognition? 5	- 2
Precautions Required for Successful Voice Recognition 5	- 2
Starting/Ending and Setting Voice Recognition	
Starting Voice Recognition	5-3
Ending Voice Recognition	5-3
Quick Run of Voice Recognition	
(Manual Mode)	5-3
Extending the Listening Time	5-4
Skipping Prompt Messages	5-5
Adjusting Voice Recognition Volume	5-5

Voice Recognition Screen

Overview	5-6
Start Screen	5-6
Help Display	5-6
Instructions for Using Voice Recognition.	.5-7

Types of Commands	5-8
Call Commands	5-8
Radio Commands	5-9
Media Commands5	-10

4 I Table of Contents

Other Commands List	
(Commands used in List / Help)	5-12
Siri Eyes Free	5-13
How to start Siri	5-13
How to use Siri	5-13

6. Apps/Info

Start Up 6-2
Pandora Radio Mode 6-2
Pandora Radio Mode 6-2
Pandora Radio Mode Screen Controls6-3
SiriusXM™ Data 6-6
About SiriusXM [™] Data Service 6-6
Accessing SiriusXM™ Data 6-6
SiriusXM [™] Weather Announcement 6-6
SiriusXM [™] Fuel Price Information 6-8
SiriusXM [™] Stock Information
SiriusXM [™] Sports Information6-10
SiriusXM [™] Movie Information6-12
SoundHound6-14
Accessing SoundHound6-14
SoundHound Main Screen6-14
Recognizing Music6-15

Searching Music6-15	
Song Main Screen6-16	

Apple CarPlay/Android Auto .. 6-17

What is Apple CarPlay/
Android Auto?6-17
Precautions6-17
Using Apple CarPlay/Android Auto
Features6-18
Cautions when Using Apple CarPlay \dots 6-19
Cautions when Using Android Auto $\dots 6-20$

7. Other Features

Camera	 7-2
About Rear Detection Camera	 7-2

8. Setup

Setup	8-2
Sound Settings	8-3
Display Settings	8-3
Phone Settings	8-4
Phone Settings	8-4
Bluetooth Connection Settings	8-4
Auto Connection Priority	8-5
Bluetooth System Information	8-5
UVO eServices Settings	8-6
911 Connect	8-6
Parking Minder	8-7
My Car Zone	8-7
Scheduled Diagnostics	8-10
Trip Info Sync Reminder	8-10
Voice Recognition Settings	8-10
Clock Settings	8-11
Wi-Fi Settings	8-11
How to Connect to a Network	8-11
Language Settings	8-12
Keyboard Settings	8-12

Screen Saver Settings	8-12
Connectivity Settings	8-13
iOS Connectivity	8-13
Android Connectivity	8-13
System Info	8-14
System Update	8-14

9. Appendix

Product Specification	9-2
Troubleshooting	9-4
FAQ	9-7
About Pairing Mobile Phones	. 9-7
About Making/Answering Phone Calls	. 9-8
About <i>Bluetooth[®]</i> Wireless Technology /Head Unit Use Environment	. 9-8

🗚 CAUTIONS upon Using SD Cards

Ejecting and Inserting SD Cards

- Ejecting and inserting SD cards while the multimedia system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the multimedia system and the vehicle ignition.
- Eject/insert SD cards only to update the multimedia system with a new version.

Usage of SD Cards

- The SD Card is formatted to include only Map and new system update files.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth[®] Wireless Technology

The *Bluetooth*[®] Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth*[®] Wireless Technology SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth*[®] Wireless Technology enabled cell phone is required to use *Bluetooth*[®] Wireless Technology. *Bluetooth*[®] Wireless Technology phone compatibility can be checked by visiting https://www.kia.com/us/bluetooth.

HD Radio[™] Technology

HD Radio[™] Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio[™] and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



part.1 Basic

Warnings and Cautions Key Product Features Component Names and Functions Starting the System for the First Time



Basic

🚹 Safety Warnings

- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device.
 Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.

- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.
- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)

 Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Safety Cautions

Pay attention to traffic conditions while driving.

- Operating the device while driving could lead to accidents due to a lack of attention to external surroundings. First park the vehicle before operating the device. In addition, the touch screen may not work for some functions when the vehicle is in motion. The touch screen feature will be supported once the vehicle has stopped.
- Adjust the volume to levels that allow the driver to hear sounds from outside of the vehicle. Driving in a state where external sounds cannot be heard may lead to accidents.

- Pay attention to the volume setting when turning the device on. A sudden output of extreme volume upon turning the device on could lead to hearing impairment. (Adjust the volume to a suitable levels before turning off the device.)
- If you want to change the position of device installation, please inquire with your place of purchase or service maintenance center. Technical expertise is required to install or disassemble the device.
- Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.
- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.

- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product concerns, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Key Product Features

This device is a Multimedia system that supports Radio (FM, AM), HD Radio[™] technology, SiriusXM[™], USB, iPod, AUX, Bluetooth Audio and My Music features. The WIDE VGA LCD provides a high quality resolution while the powerful and rich sound system adds to the driving enjoyment.

Display	 Wide TFT-LCD Display Provides high quality video through a Wide TFT- LCD Display using an LED Back Light. Touch screen for maximum user convenience.
Radio	 Digital Tuner Feature Digital Tuner using PPL method that supports memory of 12 broadcast stations for each AM and FM modes. Radio broadcast station name Displays broadcast station names. HD Radio™/Satellite Radio feature Supports HD Radio™ reception and Satellite Radio (SiriusXM™).
Multimedia Player	 Support for various Media Formats Support for various media formats, including Radio, USB, iPod, AUX and Bluetooth[®] Audio Streaming modes My Music Supports copying of music stored within USB devices into My Music (internal memory) mode

	Bluetooth [®] Wireless Technology
Miscellaneous	 Convenient use of Bluetooth[®] Handsfree by using buttons within the steering wheel control Digital Screen Control Features Easy control of features through touch screen
Miscellaneous	options Steering Wheel Control
	 Control over audio features, voice recognition and Bluetooth[®] through the steering wheel con- trol for maximum convenience

Component Names and Functions





Name		Description
1	PWR/ VOL	 When power is off, press to turn the power on. When power is on, press and hold for over 0.8 seconds to turn the power off. When power is on, press shortly for less than 0.8 seconds to turn Audio off. Turn left/right to adjust the volume.
2	TUNE	 FM/AM mode: Changes the frequency. SiriusXM[™] mode: Changes the channel. MEDIA (USB/iPod/My Music) mode: Changes the track, file or title (except USB Image, Bluetooth Audio, and AUX).
3	RADIO	 Moves to FM/AM/SiriusXM[™] mode. Each time the key is pressed, the mode is changed in the following order: FM → AM → SiriusXM[™] → FM.

Name		Description
4	MEDIA	Moves to MEDIA mode.If the media is not connected, the MEDIA mode will not be activated.
5	PHONE	 Displays the Bluetooth phone mode. If Apple CarPlay is connected, the Apple CarPlay feature is activated. If Android Auto is connected, the Android Auto feature is activated.

Head Unit



Name		Description
6	✓ SEEK TRACK ∧	 When the key is pressed shortly (for less than 0.8 seconds), FM/AM mode: Plays the previous/next frequency. SiriusXM[™] mode: Changes the channel. MEDIA (USB/iPod/My Music) mode: Changes the track, file or title (except for USB Image and AUX). When the key is pressed and held down (for over 0.8 seconds), FM/AM mode: Continuously changes the frequency until the key is released. MEDIA (USB/iPod/My Music) mode: Rewinds or fast forwards the track or file (except for USB Image, Bluetooth Audio, and AUX).

	Name	Description	
7 APP5/ Moves to the Apps/Info screen.			
8	UVD	Moves to the UVO mode.	
9	SETUP	Moves to the Setup screen.	

Steering Wheel Control

Name	Description				
1 VOL+ VOL-	Controls the volume				
2 MODE	 Each time this key is pressed, mode is changed in the following order: FM → AM → SiriusXMTM → USB, iPod or Apple CarPlay → AUX → Bluetooth Audio → My Music → Android Auto → Pandora → FM If the media is not connected, the corresponding modes will be disabled Press and hold the key (more than 0.8 seconds) to turn the Audio system on/off When power is off, press the key to turn power back on 				
3	 When keys are pressed quickly. (less than 0.8 seconds) FM/AM mode : searches broadcast frequencies saved to Presets SiriusXM[™] mode : searches broadcast channels saved to Presets MEDIA (USB/iPod/My Music) mode : changes the track, file or title (except USB Image, AUX) When keys are pressed and held. (more than 0.8 seconds) FM/AM mode : automatically searches broadcast frequencies SiriusXM[™] mode : automatically searches broadcast frequencies MEDIA (USB/iPod/My Music) mode : quickly looks up songs (except USB images, AUX and Bluetooth audio files) 				

Steering Wheel Control

	Name	Description
4	(fr	 When pressed quickly. (less than 0.8 seconds) Activates voice recognition When pressed and held. (more than 0.8 seconds) Ends voice recognition Activates Siri Eyes Free
5	C	 When pressed quickly. (less than 0.8 seconds) When pressed in the dial screen, makes a call When pressed in the incoming call screen, answers the call When pressed during call waiting, switches to waiting call (Call Waiting) When pressed and held. (more than 0.8 seconds) When pressed in Bluetooth[®] Hands-free, redials the last dialed call When pressed during a Bluetooth[®] Hands-free call, switches call back to mobile phone (Private) When pressed while calling on the mobile phone, switches call back to Bluetooth[®] Hands-free is connected)
6	2	 When pressed during a call, ends the phone call When pressed in the incoming call screen, rejects the call

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide. To change the system language between English, French, Spanish and Korean press the Change Language button.

 Cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

You can change Screen Saver Settings in Setup to display a clock on the Screen Saver.

i Information

 If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.

• Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset



The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

 Resetting the system restores all existing settings and configurations (e.g. volume, display, etc.) back to their factory defaults.

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.



Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.



• If you use the system for a long time with the engine off, the battery may become completely discharged.

Home Screen

Controls Menu Configuration for the Home Screen



Features	Description
1 Radio/Media Widget	 Shows brief information on the radio or media that is now playing. Tap the area to move to the mode that you are listening to.
2 Connectivity Widget	Shows any connected devices such as Apple CarPlay, Android Auto, iPod, Pandora, and Bluetooth.
3 All Menus	Shows all of the items in the system menu.
4 My Menu	 You can add up to eight menus here. Add your favorite menus to have quick and easy access to them.
5 Apps/Info	Moves to the Apps/Info screen.
6 Setup	Moves to the Setup screen.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

lcon	Description		
Audio	Displayed when the audio is muted.		
•	Displays the remaining battery of the Bluetooth phone.		
≫ ∽	Displayed when connected to Bluetooth for handsfree.		
1	Displayed when connected to Bluetooth for streaming audio.		
€	Displayed when connected to Bluetooth for streaming audio and handsfree.		
E : (1	Displayed when downloading contacts or recent calls from the Bluetooth phone.		
6	Displayed while on a call with the Bluetooth phone.		
8808	Displayed when the microphone of the Bluetooth or UVO phone is muted.		
8Tul	Displays the signal strength of the Bluetooth phone.		
٢	Displayed while on a call with the UVO phone.		
Tal	Displays the signal strength of the UVO phone.		
r:	Displayed when using 2G/3G/LTE data.		
(((•	Displayed when connected to Wi-Fi.		
() () () () () () () () () ()	Displayed when connecting to Wi-Fi.		

i Information

 Received signal strength indicator of UVO and 2G/3G/LTE information are displayed only in the devices that support the telematics system.

Adding Your Favorite Menu Items to My Menu

From the Home screen, select My Menu > and then Edit .

From the Edit My Menu screen, select menu items from the list on the right, then drag and drop them to a desired place on the left.

To remove the item from My Menu, drag item from the left and drop them on the right.



i Information

• Up to eight items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select

Tap lightly on a menu or an item to select it.

 The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.



Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.



Drag the frequency bar to the left or right to move to the frequency that you want.



From the Edit My Menu screen, drag and drop icons to add, delete, or move to/from My Menu.

Flick (Quick Scrolling)



Quickly moves up and down in the list.

NOTICE

 Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler



You can view the previous or next image by flicking left/right on an image on the USB Image screen.

1	Jan, 1	9:46	AM			
Ē	Radio	Tag Pr	esets	6	Menu	U
	FM 107.7	17.0 BB.O	89.0	90.0	91.0	
	SXM 4 REC 20Hz-2dB					
	FM 91.3	FM	89	. 1	6	
	FM 88,1					
	AM 530	Band	HD R	adio	Sca	an i

Flick left/right on the frequency bar in the radio player to look up the previous/next frequency available.

Press and Hold

Pressing the Markan and Markan buttons

in the music or video player will fast forward/rewind the music or video.



part.2 Radio/Media

FM/AM

HD Radio[™] Technology SiriusXM[™] USB iPod AUX Bluetooth[®] Audio My Music



Radio/Media

FM/AM

Accessing FM/AM Mode

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu from All Menus on the Home screen.



1 Information

- If you press the **FADIO** key when power is off, the power will turn on and a radio broadcast will be tuned up.
- If you are in radio mode, select the media widget from the Home screen to access the radio player.


Features	Description
1 Preset Frequencies	 The stored preset frequencies are displayed for user selection. After selecting frequency, press and hold the preset button for over 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
2 Frequency Bar	 Flick the frequency bar left/right to search for available radio channels to the left or right of the current channel. Dragging: Drag the frequency bar to the left/ right to find the radio channel that you want.
3 Frequency	Displays the current frequency.
4 Tag	Saves the current music's tag information to the head unit. If connected to iPod, the tag information can be saved on the device.
5 Presets	Shows the stored presets for user selection.
6 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
7 Menu	 List Moves to the frequency list. Info Turns the Radio text information transmitted from the broadcasting station on and off. Preset Scan Plays preset frequencies for 10 seconds per item. Sound Settings Moves to the Sound Settings.

A	Jan. 1	l	9	46			
Ē	Radio		Tag	Preset	s 🧯	Menu	Ð
1	FM 107.7	87.0	88.0	89.0	90.0	91.0	92
	SXM 4 •REC 20Hz-2dB					8	
э	FM 91.3		۴N	n E	19.7	9	
4	FM 88.1						
5	AM 530		Band	(н	D Radio	Sca 1	∋n

)			-	
∽ SEEK	TRACK ^	APP5/()	uvo	SETUP	13	
<u> </u>	2		-			FILE

Features	Description
8 Scan/Preset Scan	Displays an active mode from Scan and Preset Scan modes.
9 Band	Changes to the desired band from among FM, AM, and SirusXM.
10 HD Radio	Used to set whether to turn HD Radio [™] reception On or Off.
11 Scan	Shortly plays the broadcasts for the frequen- cies with superior reception for 5 seconds per item.
2 SEEK/TRACK	 Pressing this button shortly (for less than 0.8 seconds) : Seeks the previous/next frequency. Pressing and holding this button (for more than 0.8 seconds) : Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
13 TUNE	 Turn the TUNE knob to manually seek available frequencies. FM: Increment/decrement by 200 kHz AM: Increment/decrement by 10 kHz

HD Radio™ Technology

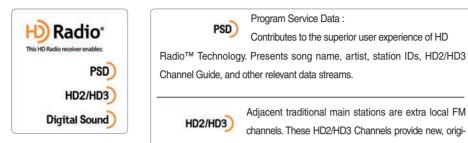

nal music as well as deep cuts into traditional genre.

Digital Sound

Digital, CD-quality sound. HD Radio[™] Technology enables local radio stations to broadcast a clean digital

signal. AM sounds like today's FM and FM sounds like a CD.

If an HD Radio[™] broadcast is received, the radio mode will switch from analog broadcast to HD Radio[™] broadcast.

i Information

 The HD Radio[™] screen is displayed only when a HD Radio[™] broadcast is being received

Basic Mode Screen (HD Radio[™] reception ON)



Name	Description
I HD Radio™ Reception &Channel Buttons	Displays main HD Radio [™] channels and used to directly select the current available channels.

Name	Description
2 HD Channel Number	HD channel number that is stored in presets.
3 HD Broadcast Info	Displays detailed infor- mation about the current broadcast. If the HD Radio is turned on, the information for album art, artist, and song appears. (if available)
4 HD Radio	Used to set whether to turn HD Radio™ recep- tion On or Off.

SiriusXM™

SiriusXM[™] Mode Hard Key Controls

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu option from All Menus on the Home screen. Select the SiriusXM[™] band from the radio player.

i Information

- If you press the RADIO key when the power is off, then the power will turn on and a radio broadcast will be tuned up.
- If you are in the SiriusXM[™] mode, select the SiriusXM[™] radio widget from the Home screen to access the radio player.
- When the power is off, pressing the RADID key will turn the power on and play a SiriusXM[™] Radio broadcast.




Features	Description
1 Preset Frequencies	 Shows the stored presets for user selection. After selecting frequency, press and hold the preset button for over 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
2 Channel Logo	Displays the current channel logo.
Channel Info	Displays the current channel number and name.
4 Content Info	Displays the artist, title, and other information on the currently playing song.
5 Category Info	Displays the category of the currently playing song.
6 Band	Changes to the desired band from among FM, AM, and SirusXM.
7 Direct Tune	Used to search for the desired channel by entering the channel number.
8 Scan	Plays all receivable channels for 10 seconds per item.
9 Category Lock	If pressed, only the channels for the current cat- egory can be searched or scanned.
10 Category Selection Buttons	Used to select the previous/next category.
11 Play Live	Switches to the live broadcast mode.
12 Skip Backward	 Repeats the previously broadcasted program. Holding for less than 0.8 seconds : Moves to the previous segment. Holding for more than 0.8 seconds : Moves to the previous 5 seconds.

A	L Jan. 1	15 16 [:] 07 _{PM} 17 18 19
Ē	a Radio	Tag Presets 🧯 List Menu 🕁
1	FM 107.7	(((XVV))) Play Live
z	SXM 4 20Hz-2dB	preview M II M SXM 1 The Vault
Э	FM 91.3	Bloomfield, Kooper, Stills Albert's Shuffle
4	FM 88.1	
5	AM 530	Band Direct Tune Scan



Features	Description
13 Play/Pause	Pauses/plays the current broadcasting program.
14 Skip/Forward	Moves to the next segment.
15 Tag	Saves the current music's tag information to the head unit. If connected to iPod, the tag information can be saved on the device.
16 Presets	Shows the stored presets for user selection.
17 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
18 List	Moves to the channel list.
19 Menu	What is on My Presets? The program schedule saved in my preset. (For more details, see Section 2.5. Viewing Menu.) Featured Favorites Theme channels recommended by SiriusXM [™] . (For more details, see Section 2.5. Viewing Menu.) Preset Scan Plays preset channels for 10 seconds each. Sound Settings Moves to the Sound Settings.
20 SEEK/TRACK	 Pressing this key shortly (for less than 0.8 seconds) : Plays the previous/next channel. Pressing and holding this key (for more than 0.8 seconds) : Continuously changes the channel until the key is released and plays the current channel.
21 TUNE	Changes the channel.

 

Press the List > Select the desired cat-

egory and channel.



Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing. If you select the Skip button, you can scan channels using the SEEK THACK key or the TUNE knob by skipping the channels that you chose to skip.

Direct Tune



Enter the number of the channel you want to receive.

Viewing Menu

Using the Menu button on the right, you can view the program schedule and information about the Featured Favorites provided by Sirius XM^{TM} .

★ Jan, 1 2:07 _{PM}							
Ē	Radio		Presets	6	List	Menu	U
1	FM 107.7	SXM 1 The Bloomfield		Whati	s an M	ly Preset	s?
z	SXM 4 •REC 20Hz-2dB			Featured Favorites			
э	FM 91,3			Preset	Scan		
4	FM 88.1	1	ROCK	Sound	Settin	gs	
5	AM 530		Band	Direct	Tune	Sc	an

÷ Feb. 1 12:26_{AM} 📾 What is on My Presets? ſ Wed, Mar 6 ET 3 8:00 AM . Fox News 1 4 🔸 🕨 1 131 Fox News The Morning Mash Up 2 SXM Hits 1 TVG Classic 93 PGA TOUR 4 1 з (12:00~12:20) Witness 4 118 BBC World 4

What is on My Presets? (Program Schedule)

You can select Menu to see program information and the schedules of broadcast channels listed in the presets.

Name	Description	
1 Change Broadcast Date	By selecting this option, you can select a broadcast- ing date and time zone. Broadcast information will be provided for one week from the current date.	
2 Preset	Shows saved presets for user selection i A total of 18 frequencies for SiriusXM [™] modes can be displayed	
Broadcasting Time	You can select the time that you want.	
4 Program Information	 Shows you the program titles to be broadcasted at the time that you have chosen. Select a program to see more details. If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button. 	

Featured Favorites

ft	Feb. 1 12:26 _{AM}	
🕑 Fe	atured Favorites	Ð
۲	Music Discovery	
۲	Holiday Music	
۲	Christmas Music (Sample)	
۲	Jim Carry Comedies (Sample)	

Featured Favorites feature allows SiriusXM[™] to broadcast additional presets

- Example 1 : "Martha's Favorites" may represent Martha Stuart's favorites presets on her radio
- Example 2 : During holidays, "Holiday Music" may represent all the SiriusXM[™] channels that are playing the holiday music for easy access by users
 Multiple sets Featured Favorites data can be broadcast by SiriusXM[™] and can change from time to time

USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music/image files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps ~ 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- This device recognizes USB devices formatted in FAT 12/16/32 file formats. This device does not recognize files in NTFS file format.
- Some USB devices may not be supported due to compatibility issues.

- Take caution so that the USB connector does not come in contact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB.
- The use of USB devices for purposes other than playing music and image files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used.
 Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- Upon playing iPods, please use a dedicated iPod car cable.
- Normal operations cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.



Plug Type Connector

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

i Information

 Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.

USB MP3 Information and Precautions

Name	Description
MP3 File Specification	Specification : MPEG1 AUDIO LAYER 3
Recommended	Acceptable sampling frequency : 32, 44.1, 48 (kHz)
Bit Rates and Sampling Frequency	Acceptable bit rate : 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (Kbps)
	96, 128, 192 Kbps fixed bit rate/44.1kHz
ID3 Tag	Supports ID3v1.0 and ID3v1.1, ID3v2.2, ID3v2.3, ID3v2.4 ID3 tags
Detailed Specifications	Maximum directory layers : 20 layers Maximum length of folder name/file name : 255Bytes Supported characters for folder name/file name : Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 char- acters Maximum number of folders which can be stored onto one USB : 2000 folders (including ROOT) Maximum number of files which can be stored onto one USB : 8000

i Information

 The sound quality of MP3 files that use bitrates exceeding 192 Kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not properly operate.

Supported Image Specifications

Name	Description		
Image format	JPG, GIF, BMP, PNG (animated GIF, etc. are not supported)		
Supported image resolution	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)		
Supported image file size	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)		

USB Music



Features	Description
1 Mode	Displays current operating mode
2 File Index	Shows the current file/total files within the USB
3 Repeat/ Shuffle/Scan	From Repeat/Shuffle/Scan, displays the current operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	 Displays the information of the current track When a track in the file tab on the list screen is selected : Displays folder, file, title, artist, album info When a track in the other tabs on the list screen is selected : Displays artist, title, album info
6 List	Moves to the list screen

Features	Description
7 Previous File	 If button is pressed (less than 0.8 seconds) : Moves to the previous file or play the current file from the beginning (Depends on the play time) If play time is less than 3 seconds, moves to previous file If play time is over than 3 seconds, play the current file from the beginning If button is pressed (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	 If button is pressed (less than 0.8 seconds) : Moves to the next file If button is pressed (over than 0.8 seconds) : It fast-forwards the track
10 Repeat	 Repeats the current file If select the song in the file tab on the list screen : Press the Repeat button to switch between repeating one song , repeating folder , and turning repeat off If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Repeat button to switch between repeating one song , and turning repeat off
11 Back Button	Converts to basic mode screen
2 Shuffle	 Plays files in random order If select the song in the file tab on the list screen : Press the Shuffle button to switch between Shuffle Folder , Shuffle All , and turning shuffle off If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Shuffle button to switch between Shuffle Category and turning shuffle off



Features	Description				
13 Scan	 Scans the beginning parts of USB files (approx. 10 seconds per file) If select the song in the file tab on the list screen : Press the Scan button to switch between Scan Folder 6, Scan All 6, and turning scan off If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Scan button to switch between Scan category 6 and turning scan off 				

Features	Description
14 Menu	 Add to Playlist : Add the current track to the Playlist. Playlist is placed on the left tab in the list Save to My Music : You can save the current track to My Music. You can play saved track from My Music without USB. Access to My Music in the Media mode. Sound Settings : Moves to the Sound Settings screen. You can change the settings of the sound.
15 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
16 SEEK/TRACK	 If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current track from the beginning If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, play the current file from the beginning If button is pressed (over than 0.8 seconds) it will rewind/fast-forward the track
17 TUNE	 Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

A	Feb. 1 12:26 _{AM}	5 3
目 List	_ 4	Menu 🕤
File	🖿 Folder 🚺	
Playlist	🕑 File Name 2 🙎	
Artist	🎜 File Name 3	
6 Song	🎜 File Name 4	
Album	🎜 File Name 5	
Genre	🞜 File Name 6	



 Playlist. Playlist is placed on the left tab in the list (Maximum 100 files). Select a desired track and press "Add to Playlist" to add the track in the playlist. Delete from Playlist : Select a track you want to delete from the playlist and press "Delete from Playlist" to delete from the playlist and press "Delete from Playlist" to delete the track in the playlist. Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file) Save to My Music : Stores the current music. The stored music can be played in My Music. (This function is not provided in Playlist.) Search tracks by the list type. Search songs 							
		5 Menu	 Delete from Playlist : Select a track you want to delete from the playlist and press "Delete from Playlist" to delete the track in the playlist Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file) Save to My Music : Stores the current music. The stored music can be played in My Music. 				
 6 Search Menu i If access the search menu while playing a track, it moves to the previous search mode. 		6 Search Menu	according to File, Playlist, Artist, Song and Album.				
previous/next file	t	7 SEEK/TRACK	 Plays previous/next track If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, play the current file from the beginning If button is pressed (over than 0.8 seconds) : Moves to play screen, and then it will rewind or fast-forward the track. It will play the track nor- 				
Image: Barton series Turn the Image: TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track.		8 TUNE	previous/next list. If the desired track is displayed,				

Features


Description

Features	Description		
Folder/ Category Name	Displays folder/category name in the list		
2 Current Song	Displays current playing file name		
3 Back Button	Converts to basic mode screen		
4 Upper Folder/ Category	Moves to Upper Folder		

USB Image



Features	Description			
1 Mode	Displays current operating mode			
2 Folder/File Name	Displays folder name where image is located			
3 File Index	Shows the current file/total files within the USB			
4 Slideshow	images as slideshow in 5, 10, 20, 30 second intervals			
5 Rotate	Rotate image in clockwise direction			
6 Info	Shows the file name, resolution and file type of current image			
7 Adjust Image Size	Enlarge/reduce (zoom-in/zoom-out) image size			
8 List	Moves to the list screen			
9 Previous/ Next image	Swipe image left or right to see Previous/ Next image			

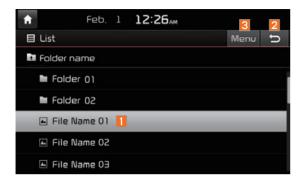



Features	Description			
Current File	Displays current playing file name			
2 Back Button	Converts to basic mode screen			
3 Menu	Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the cur- rent list includes the current file)			
4 SEEK/TRACK	Controls background mode Radio mode : Changes Frequency and Channel Media mode : Changes Track (excluding AUX) 			
5 TUNE	 Controls background mode Radio mode : Changes Frequency and Channel Media mode : Changes track (excluding AUX). If a desired track is displayed, press the knob to move to the track. 			

iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)

- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth[®] while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth[®] support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.

- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)
- During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/ iPhone product.) will charge the iPod through the head unit.
- * The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1~2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/ paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict.
 If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano /Classic, the Kia Motor logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.

- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the AVN iPod mode.
- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in AVN iPod mode.



- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/ next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimedia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.


- If you control pause, repeat, shuffle, or seek songs when the play time is when the play time is less than 3s before finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.


Туре	1G	2G	3G	4G	5G	6G	6.5G	7G
iPod Mini	Not Supported							
iPod Shuffle		Not Supported						
iPod Nano	0 0 0 0				0	0	Not released	0
iPod Touch	(iOS 1.1 not supported)	0	0	0	0	Not released		
iPad	O (Unable to charge, Not verified				, Normal w	orking not	guarantee	ed)
iPad Mini	0	○ (Unable to charge, Not verified, Normal working not guaranteed)					ed)	
iPod Classic	Not Supported			(iPod with Video)	(iPod Classic)	(iPod Classic)	Not released	
Turne	00 000 100 50				FC			
Туре	3G			3GS	4G	4GS	5G	
iPhone	Not verified, Normal working not guaranteed			0	0	0	0	



- If the iPhone/iPod Touch supports Bluetooth, it is unable to use Bluetooth Audio if the Apple device that is connected to the Multimedia system through both USB connection and Bluetooth. Disconnect the USB connection then use Bluetooth Audio
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature. Especially, if you use AUX cable like pictures, this problem may occur.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.

- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)
- iPhone and iPod Touch devices are guaranteed to work normally on iOS 7.0.6 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.

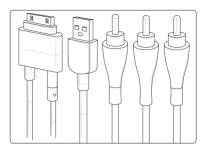

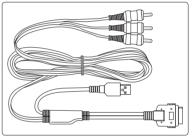

iPod



Features	Description
1 Mode	Displays current operating mode
2 Song Index	Shows the current song/total songs
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current oper- ating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the artist/song title/album info
6 List	Moves to the list screen

Features	Description
7 Previous File	 If button is pressed (less than 0.8 seconds) : Moves to the previous file or play the current file from the beginning (Depends on the play time) If play time is less than 3 seconds, moves to previous file If play time is over than 3 seconds, play the current file from the beginning If button is pressed (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	 If button is pressed (less than 0.8 seconds) : Moves to the next file If button is pressed (over than 0.8 seconds) : It fast-forwards the track
10 Repeat	Repeats the current file Press the Repeat button to switch between repeating one song and turning repeat off
11 Shuffle	 Plays files in random order When Pressing Shuffle button, it changes to shuffle Category → deractive shuffle then repeat Shuffle Category : Shuffle song in the current category
12 Back Button	Converts to basic mode screen
13 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
14 Menu	Sound Settings : Moves to the Sound Settings screen. You can change the settings of the sound.

)			
∽ SEEK	TRACK A	APP5/()	uvo	SETUP	FILE
			_		 TUNE

Features	Description
5 SEEK/TRACK	 If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, plays the current file from the beginning If button is pressed (over than 0.8 seconds) it will rewind/fast-forward the track
16 TUNE	 Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

A	Feb. 1 12:26AM 3
目 List	4 5
Playlist	🖪 Song 🚺
Artist	ာ Title Name ۱
5 Song	🕫 Title Name 2 2
Album	ា Title Name 3
Genre	🞜 Title Name 4
Other	♬ Title Name 5



Features	Description
Category Name	Displays the category name
2 Category List	Displays the contents of selected category If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder
5 Search Menu	 Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, Genre, Composer, Podcast and Audiobook . If access the search menu while playing a track, it moves to the previous search mode.
6 SEEK/TRACK	 If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, plays the current file from the beginning If button is pressed (over than 0.8 seconds) it will rewind/fast-forward the track.
7 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the TUNE knob search will be terminated.

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

- AUX mode can be used only when an external audio player has been connected.
- The AUX volume can also be controlled separately through the connected device.



- If only a cable is connected to the AUX without an external device, the mode will be changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.



Bluetooth[®] Audio

Bluetooth Audio Mode





Features	Description
1 Mode	Displays current operating mode
2 Phone Name	Displays name of connected phone
3 Artist Info	Name of current artist
4 Title	Name of current song
5 Previous File	 If play time is less than 3 seconds, moves to the previous file If play time is over than 3 seconds, plays the current file from the beginning This function may differ depending on the model of mobile phone
6 Play/Pause	Plays/Pauses Bluetooth Audio
7 Next File	Moves to the next file
8 Menu	 Connections: Moves to the Bluetooth Settings screen. You can pair a new device or change/ delete paired device(s). Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.
9 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
10 SEEK/TRACK	Plays the previous/next file
11 TUNE	TUNE is not supported.

i Information

• Artist info and Title may not be supported by mobile phone

Bluetooth Connections Settings

Settings for pairing, connection and disconnection of a Bluetooth device

A	Jan, 1		11:17	7 _{AM}		. 6	111 🛞	t sta
🚯 Bl	uetooth Con	nectio	on		He	lp		U
*	Phone Nam	e		Connec	cted	(3	
A	dd New	De	lete De	vices		Delete		

- In Bluetooth Audio play screen, select
 Menu and then Connections.
- Select SETUP key in the head unit. ►
 Select Phone. ► Select Bluetooth Connection

i Information

- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
- Please check the Bluetooth compatibility in below website : Kia Motors Corporation http://www.kia.com/us/bluetooth

My Music



Features	Description
1 Mode	Displays current operating mode
2 File Index	Shows the current file/total files
3 Repeat/ Shuffle/Scan	From Repeat/Shuffle/Scan, displays the current operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	 Displays the information about the current track When a track in the file tab on the list screen is selected : Displays file, artist, title, album info When a track in the other tab on the list screen is selected : Displays artist, title, album info
6 List	Moves to the list screen

Features	Description
7 Previous File	 If button is pressed (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) If play time is less than 3 seconds, moves to previous file If play time is over than 3 seconds, play the current file from the beginning If button is pressed (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	 If button is pressed (less than 0.8 seconds): Moves to the next file If button is pressed (over than 0.8 seconds) it will fast-forward the file
10 Repeat	 Repeats the current file If select the song in the file tab on the list screen : Press the Repeat button to switch between repeating one song and turning repeat off. If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Repeat button to switch between repeating one song and turning repeat off simple





Features	Description
11 Shuffle	 Plays files in random order If select the song in the file tab on the list screen Press the Shuffle button to switch between shuffle and turning shuffle off If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Shuffle button to switch between shuffle and turning shuffle off

Features	Description
12 Scan	 Scans the beginning parts of files (approx. 10 seconds per file) If select the song in the file tab on the list screen : Press the scan button to switch between scan and turning scan off If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the scan button to switch between scan and turning scan off
13 Menu	 Add to Playlist: Adds the current song to the Playlist Playlist is placed on the left tab in the list Delete Current File : Deletes the current track from My Music. Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.
14 SoundHound	Runs the SoundHound feature. For more information, please see the SoundHound section in Info part.
5 SEEK/TRACK	 If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning If play time is less than 3 seconds, moves to previous/next file If play time is over than 3 seconds, plays the current file from the beginning If button is pressed (over than 0.8 seconds) it will rewind/fast-forward the track
16 TUNE	 Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.





Features	Description
Folder/ Category Name	Displays folder/category name in the list
2 Category List	Displays current playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Root Folder

Features	Description	
5 Menu	 Add to Playlist : Adds the current track to the Playlist : Playlist is placed on the left tab in the list (Maximum 100 files) Select a track and press "Add to Playlist" to add the track in the playlist Delete from Playlist : Select a track from the playlist and press "Delete from Playlist" to delete the track in the playlist Delete Files : Deletes files from My Music If delete file from My Music, the information related to song also deleted in the list. Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file 	
6 Search Menu	 Search tracks by the list type. Search songs according to File, Playlist, Artist, Song and Album. If access the search menu while playing a track, it moves to the previous search mode. 	
7 SEEK/TRACK	If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning If button is pressed (over than 0.8 seconds) it will rewind/fast-forward the track	
8 TUNE	 Turn the ● TUINE knob to move the focus to previous/next file. If the file you want to play is displayed, press ● TUINE knob to play the track. If the ● TUINE knob is not pressed within 5 seconds of searching tracks, Tune search will be terminated. 	



part.3 Bluetooth

Before Using the Bluetooth[®] Handsfree Bluetooth Connection Bluetooth Phone



Bluetooth

Before Using the Bluetooth® Handsfree

What is *Bluetooth[®]* Wireless Technology?

- Bluetooth[®] Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth[®] phones, PDAs, various electronic devices, and automotive environments, *Bluetooth[®]* Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth[®] Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth[®] mobile phones through the Multimedia system.

 The Bluetooth[®] Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the Kia Motor website
 Kia Motors Corp : http://www.kia.com/ us/bluetooth

Precautions for Safe Driving

- Bluetooth[®] Handsfree is a feature that enables drivers to practice safe driving. Connecting the head unit with a Bluetooth[®] phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using *Bluetooth[®]* Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

CAUTIONS upon Connecting Bluetooth[®] Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth[®] features
- Even if the phone supports Bluetooth[®] Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth[®] power is turned off. Disable the hidden state or turn on the Bluetooth[®] power prior to searching/ connecting with the head unit.
- If Auto Connection is used, the Bluetooth[®] phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.

- If you do not want automatic connection with your Bluetooth[®] device, turn the Bluetooth[®] feature off of the Bluetooth[®] device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth[®] connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 - 1. Turn the Bluetooth[®] function within the mobile phone OFF/ON and try again.
 - 2. Turn the mobile phone power OFF/ ON and try again.
 - 3. Completely remove the mobile phone battery, reboot, and then again.
 - 4. Reboot the Multimedia System and try again.
 - 5. Delete all paired devices from both of Phone and Head Unit sides and then try again

- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth[®] devices and use of other Bluetooth[®] features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- When downloading contacts, is not functioning and is not described within this user's manual it may be related with the mobile device. When that occurs, inquire within the mobile phone manufacturer.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired. Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Select PHONE key in the head unit or key in the steering wheel remote control. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Select SETUP key in the head unit. ►
Select Phone. ► Select Bluetooth Connection.
► Select Add New. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.



The default passkey is 0000. The vehicle name above is an example.

Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.

Connecting Devices by Selecting Phone/Call

Select PHONE key in the head unit or key in the steering wheel remote control. ► Select the name of the device to connect. ► Connect Bluetooth.



Connecting Devices Through the Phone Settings

Select SETUP key in the head unit. ► Select Phone . ► Select Bluetooth Connection.

- Select the name of the device to connect.
- Connect Bluetooth.

A	Jan, 1	11:20	G	II 🚯 🖬
¢	Bluetooth Conr	nection	Help	U
	🛊 Phone Name	2 Con	nected ((5 🗆
1	Order News	Delete Devision	Delete	AU
l.	Add New	Delete Devices	Delete	All

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.

Select SETUP key in the head unit.
Select Phone . Select Bluetooth Connection .
► Select the name of the device to dis-
connect.



Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

Select SETUP key in the head unit. Select	ect
Phone . ► Select Bluetooth Connection .	
Select Delete Devices . Select the devi	ce
name to delete. ► Select Delete.	



Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.

f	Jan 1	11:23	AM	CIII 🛞 🖅
Dial	Call History	Contacts	Favorites	ŋ
Pho	ne Na	me		*
1	A	2	B DEF	<
4 GHI	1	5	6 MNO	Settings
PQRS		3.	9 WXYZ	C Call
*	0	D +	#	(Call



Description

You can use Bluetooth phones when a Bluetooth Hands-free connection is established.

You can use Bluetooth audio features when a Bluetooth audio connection is established.

You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.

Call signal strength indicator

Battery level of the Bluetooth devices connected

- Downloading Call History list
- Downloading Contacts
- In a Bluetooth phone call

Microphone muted

i Information

- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining

Dial

Dials a call after the Bluetooth devices are connected.

- Select PHONE key in the head unit or key in the steering wheel remote control.
- You can also select All Menus from the full screen display ▶ Phone.

C el	(III 🕸 I	AM	11:23	Jan. 1	ft
	ŋ	Favorites	Contacts	Call History	Dial
1	*		me	ne Na	Pho
2	×	E	2 3C	A	1
ß	Settings	6 MND	5		4 GHI
	A ====	9 WXYZ	3.	E	PORS
4	C Call	#	2	(*

Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Press and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone
2 Delete	Delete the numbers that you entered.
3 Settings	Moves to a screen of Phone Settings.
4 Call	Makes a call after you dial a number and select CALL. If the number is listed in Dialed Calls, you can select the number and press CALL to automatically dial that number again.

i Information

• Some types of mobile phones may not support the Speed Dial function.

Accept/Reject Call



If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

Name	Description
Accept	Answers the call.
2 Reject	Ignores the call.

i Information

 In some mobile phones, the caller's number may not be displayed, and the Ignore feature may not be supported.

Using the Menu During a Phone Call



When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Contacts	Displays the Contacts list.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by select- ing the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

iInformation

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Handsfree, you cannot access other modes, such as Audio Video and Settings. You can switch to in-call volume control and navigation modes only.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

Select PHONE key in the head unit ► and then Call History.



Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Information	Displays the details of your call history information.
7 Download	Downloads the call his- tory information from your mobile phone.
8 Call	Dials the selected number in your Call History Information.
9 Contacts Info	Goes to the Contact Information screen if the number has been stored.

i Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon (
- If the call history download is turned off with the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth settings or display status are normal.
- Some devices do not support call history downloading. Check if your Bluetooth device supports downloading. For details regarding Bluetoothsupported devices and their functional compatibility, visit http://www.kia.com/us/ bluetooth



Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Information	Displays contact informa- tion.
3 Download	Downloads contacts from your mobile phone.
4 Search by Name	Searches Contacts for the name that you enter.
5 Search by Number	Searches Contacts for the number that you enter.
6 Add to Favorites	Adds a phone number to Favorites.


i Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the head unit. Keep your important data in a safe place.
- Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- The status bar displays a () while downloading contacts.
- The download will not be available if the contacts download function is turned off on your Bluetooth device.

- Some devices require a device authentication for downloading your contacts. If download fails,check your phone screen and confirm the download if necessary.
- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts downloading. For Bluetooth supporting devices details and compatibility, visit http://www.kia.com/us/ bluetooth

Favorites

Select PHONE key in the head unit ► and then Favorites .

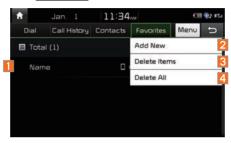

Name	Description
1 Favorites	Lists the phone num- bers saved as Favorites. Select from the list to dial the number.
2 Add New	Adds a new number to Favorites.
3 Delete Items	Deletes numbers that you select from Favorites.
4 Delete All	Deletes all of the numbers from Favorites.



part.4 UVO eServices

The 911 Connect feature may not operate in the following situations About UVO eServices Before using UVO eServices Connecting Bluetooth Pair a device from Bluetooth-enabled phone Connecting to smartphone via USB 911 Connect Roadside Assist Vehicle Diagnostics My Car Zone Parking Minder eServices Guide



UVO eServices The 911 Connect feature may not operate in the following situations

- When the vehicle ignition is not turned on
 When the phone Bluetooth[®] feature is set to off
- When the phone Bluetooth[®] cannot be connected or becomes disconnected
- When there are no phones paired with the vehicle
- When cellular service is unavailable
- When the power turns off due to phone power (battery) issues
- When a Bluetooth[®] device without phone feature support has been connected, such as an MP3 device
- When the system is booting

- When the system power supply is unstable
- When the attempted call is blocked due to user operations
- When the 9-1-1 call is unstable due to phone or other communication network issues
- When the call feature is not operating due to phone settings set by the user
- When the phone cannot be controlled via Bluetooth[®] due to phone specifications or characteristics

🛦 Using UVO eServices and Precautions

- Download the UVO eServices App and install it on your smartphone. The app can be downloaded from your smartphone's app store.
- Isometry and the provided services of the provided service of the p
- For using data communication of Vehicle Diagnostics, Parking Minder, My Car Zone and My POIs, smartphone must be connected with the vehicle via USB cable.
 - * The use of genuine cable is recommended. (The use of other products may result in abnormal or non-proper operation.)

Note: Login and activate the UVO eServices App on your smartphone.

Some UVO eServices features will only be available when the your smartphone is connected with the vehicle via USB and the UVO eServices App is running.

- UVO eServices is fully compatible within some smartphones but may not operate properly within incompatible smartphones. To view the list of compatible smartphones, please visit MyUVO.com.
- Communication between the vehicle and smartphone app may temporarily disconnect depending on the phone state.
- If the feature is not operating properly, you may need to reset the UVO eServices App or the smartphone and try again according to the following steps.
 - 1. Try feature again 2. Reset smartphone app
 - 3. Re-connect Bluetooth and USB cable.
 - 4. Reset smartphone 5. Delete Device and pair again
- Since some services use the customer's mobile phone data plan for data communication. And thus the features will function in accordance with the cellular plan.

Solution Use of the most up-to-date app version is recommended.

S For smartphone related inquiries, please visit MyUVO.com.

About UVO eServices

UVO eServices provides the following features through Bluetooth and through USB connection to your smartphone.

Name	Connection	Description
1 911 Connect	BT	If an airbag deploys, your vehicle auto- matically initiates a call to 9-1-1 and sends your vehicle's location informa- tion to the 9-1-1 operator.
2 Roadside Assist	BT & USB	If a diagnostic issue exists, you can connect with a Roadside Assist agent.
3 Vehicle Diagnostics	USB	Informs you if a diagnostic issue is found in your vehicle. If an issue is found, you can contact a call cen- ter through Roadside Assistance or reserve an appointment with your preferred Kia dealer through Schedule Service.
4 My Car Zone	USB	Keep track of pre-defined triggered alerts such as Speed Alert, Curfew Limit Alert from the My Car Zone feature.
Parking Minder	USB	Save the location of your parked vehicle on your UVO eServices smartphone app. You can check where your vehicle is parked through the UVO eServices App on your smartphone.
6 eServices Guide	BT	Receive guidance on how to use UVO eServices.

i Information

 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.

To use UVO eServices, the following conditions must be met.

- 1. The UVO eServices smartphone app must be installed and youmust log in using your MyUVO account credentials.
- 2. The smartphone must be connected via Bluetooth and USB cable to the vehicle.
- 3. Once this is complete, eServices must be activated.

Before using UVO eServices

Installing the UVO eServices App on your smartphone

1. Download and install the UVO eServices App on your smartphone.

The app can be downloaded from the Apple App Store or Google Play.

2. Register your vehicle and account at MyUVO.com

Note: MyUVO.com is accessible from your phone's browser.

3. Start the UVO eServices App on your smartphone and log in.

Connecting Bluetooth

Press the **C** key on the steering wheel or press the **PHONE** key on the UVO eServices system.

Press SETUP PHONE Bluetooth Connection

MEDIA PHONE V SEEK TRACK A

Press Yes on the touch screen when prompted to pair a phone.



Pair a device from Bluetooth-enabled phone

- 1. Turn on the Bluetooth feature on your smartphone's Bluetooth settings screen.
- Wait for "KIA MOTORS" to appear on your smartphone's Bluetooth settings screen. Note: "KIA MOTORS" may differ depending on your vehicle.
- 3. Select "KIA MOTORS" from your phone and verify the passkey shown on the touch screen.

The default passkey is "0000".

If phone supported SSP, check the passkey on your Bluetooth[®] device and confirm the authentication.



Connecting to smartphone via USB

1. Connect your smartphone with the vehicle via USB cable.

 For smartphone related inquiries, please visit MyUVO.com.


Activating UVO eServices
Press the UVO key, then press the
👰 Vehicle Diagnostics 🛛 👔 My Car Zone 🗛 🖓
Parking Minder button.
Feb. 1 12:26 ▲ ●<●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●
Roadside Vehicle My Car Zone Parking Minder
My POIs eServices UVD eServices Settings
Feb. 1 12:26 ▲ ●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●
(?)
Service Activation Required,
Do you want to activate UVO eServices?
Yes No
My POIs eServices UVO eServices Guide Settings

...

111/0 0

.

Press the Yes, then UVO eServices activation process will begin.

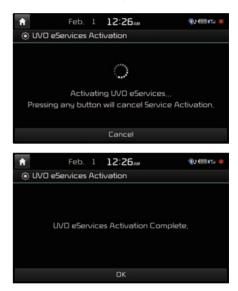

NOTICE -

 Before activating UVO eServices, ensure your phone is connected to vehicle's USB input via USB cable

911 Connect

911 Connect

If an airbag deploys, your vehicle automatically initiates a call to 9-1-1 and sends your vehicle's location information to the 9-1-1 operator.

The 911 Connect feature is available only when the mobile phone is connected via Bluetooth.

By default, this feature is turned off. To turn it on, you must turn it on in the eServices Settings menu. By enabling this feature, you are agreeing the 911 Connect terms of use.

An (E) icon is displayed at the top of the touch screen as shown below when phone is connected to UVO eServices system via Bluetooth.



Initiating a 911 Call

If an airbag deploys, the following screen is displayed and a call is automatically placed to 9-1-1 after 10 seconds.



Once a call is connected with a 9-1-1 operator, it is possible to request emergency services to be dispatched to your location.



The 9-1-1 operator may request information on the current location of your vehicle. When the 9-1-1 operator requests your vehicle location, "Sending Location" is displayed on the screen and the vehicle location is automatically sent to the 9-1-1 operator.



When the 9-1-1 operator attempts to call the driver again, the call time is displayed and allows the driver to speak with the 9-1-1 operator.



Roadside Assist

Roadside Assist

If there is any issues in the vehicle, you can connect with a Roadside Assist agent. The Roadside Assist feature can be used only when your phone is connected via Bluetooth.

Press the	UVO	key 🕨 🚊	Roadside Assist
ft	Feb. 1	12:26 _{AM}	(* 1111 sta *
🕻 Phone			Ŭ
C, Calling			
	781-30)6-3515	
📑 Use P		e: 42.2713 e: -83.6258	515 50

Vehicle Diagnostics

Conducting Vehicle Diagnostics

Vehicle Diagnostics is available only when the ignition is turned on and the vehicle is parked.

It also requires that UVO eServices is activated, and the Phone is connected via USB cable before starting Vehicle Diagnostics.

Vehicle Diagnostics
26 _{AM} 🚯 👘 🕰 🐐
,
in Progress
cel

The Vehicle Diagnostics process will begin.

When a diagnostics check is in progress, keep the vehicle in park with the ignition on. To cancel diagnostics, press the Cancel button on the touch screen or any hardkey.

ft.		Feb.	1	12:26 _{AM}	۹۶۶ الله المرد 🕸
€ V	ehicle Di	agno	stic	s	
		Engi	ne	Control Sy	stem
				ress (Roadside A) eServices main	
Sche	dule Serv	ice		iend Report	Close
Sche	dule Serv	ice	- 7	end Report	Llose

If diagnostic issues are found, press the Send Report button to send to your MyUVO account or press the Schedule Service button to schedule an appointment with your preferred or nearby Kia dealer.

Schedule Service

When scheduling an appointment using the Schedule Service button, pressing the Preferred button will allow you to request an appointment with your preferred Kia dealer and send your vehicle's diagnostics information.

Pressing the Nearest button will allow you to request an appointment with the nearest Kia dealer and send your vehicle's diagnostics information.



Press the	Preferre	d Or	Nearest	button.
ft	Feb. l	12:26 _{AM}		®⊁∰≣∎⊊ ≭
🚔 Preferred	d Dealer			
		ing Diagno our accou		
		Cancel		

Request an appointment with Preferred or Nearest Kia Dealer and send your vehicle's diagnostics data.




Send Report

Press the Send Report in the vehicle diagnostics result screen.



Vehicle Diagnostics Data is transmitted to your account and you can see the report on MyUVO.com

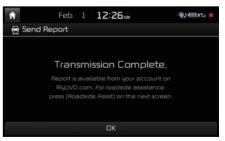

Even if diagnostic issues are not found after Vehicle Diagnostics, it is recommended that you send the diagnostic results to your MyUVO account.

Press the Send Report button to send the diagnostics results to your MyUVO account.



Scheduled Diagnostics

If you have set up Scheduled Diagnostics on your UVO eServices App, a vehicle diagnostics check will automatically start on the day you selected.


On the date of the Scheduled Diagnostics, the following window will be displayed.



Press the Yes button on the touch screen

to proceed with diagnostics.



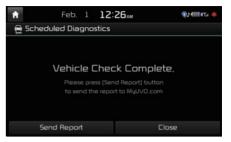


Press the Send Report to see the Vehicle Health Report on MyUVO.com.



Automatic Diagnostics

If a critical diagnostics issue with your vehicle's powertrain is detected, Automatic Diagnostics will be notified.

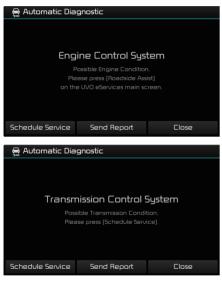

 The screen messages differ from vehicle diagnostics severity. Ensure your phone is connected to UVO eServices system via USB cable before using Schedule Service and Send Report.

My Car Zone

My Car Zone is a feature that provides alerts and driving history for Curfew Limit Alerts and Speed Alerts set by the user.

Name	Description
Curfew Limit Alert	Curfew Limit Alerts are alerts that are triggered when a driver is driving within a predefined time range.
Speed Alert	Speed Alerts are alerts that are triggered when a driver exceeds the predefined maximum speed.

My Car Zone feature is supported only when UVO eServices has been activated.

Press the UVO key 🕨 😭 My Car Zone

Curfew Limit Alerts History

ft	Feb. 1 12:	26 _{AM}	@۶4III	18Te *
Curfew	Speed	Geo Fence	Menu	U
🗏 Curfew Li	mit Alert (10)			
😇 Jan 10, 20	014	7:09 PM		
🖸 Jan 10, 20	014	4:41 AM		
🖸 Jan 8, 201	14	9:23 PM		
🖸 Jan 8, 201	14	12:41 AM		
🖸 Jan 7, 201	14	6:50 AM		

Speed Alerts History

ft	Feb. 1 12:	26 _{AM}	۱۱۱۱ کې	117 4 *
Curfew	Speed	Geo Fence	Menu	đ
🗏 Speed Ale	ert (10)			
🖸 Jan 10, 20	14	31 MPH		
🖸 Jan 9, 201		46 MPH		
😇 Jan 8, 201		48 MPH		
🖸 Jan 7, 201		38 MPH		
🖸 Jan 6, 201		48 MPH		

4-12 I UVO eServices

Curfew Limit Alert

•	Feb. 1	12:26 _{AM}	∰≯AIIII ∎Ta 3
w UVO e	5ervices		đ
		few Limit Alert! e] 12:00 AM - 11:5	50 PM
	t is currently	a restricted driving	g time,
My POIs	eServic Guid	e UVD eService e Settings	15

Speed Alert

Feb.	1 12	2:26 _{AM}	* ۲۵ mm ŵ
ervices			Ð
		i	
Plea			
		UVD eService: Settings	
	Plea than t	Ervices Sper Please do than the set s	Speed Alert! Please do not drive faster than the set speed of [50MP eServices UVO eService

Curfew Limit Alert

You can check the Curfew Limit Alert history for a list of past triggered curfew alerts.

	ft -	Feb.	1	12:26 _{AM}	۹.×۹۱۱۱	Te *
	🖰 Curfew L	imit Al	ert li	nformation		U
1	Phone			axy Nexus 2		
2	Alert Time			20, 11:38 AM		
3	Duration		16 s			
4	Driving Time			20, 11:38 AM -	Feb 20, 11:40 AN	
				View Map	Next	

Name	Description
1 Phone	Name of phone con- nected upon triggered curfew limit
2 Alert Time	Initial alert time
3 Duration	Total duration of driving while curfew limit was triggered
4 Driving Time	Total driving time from turning ignition on until turning ignition off

Speed Alert

You can check the Speed Alert history for triggered speed limit alerts of the vehicle.

	ft	Feb.		12:26 _{AM}	¢¢، اللله التد با
	n Speed A	lert Inf	orm	ation	Ũ
1	Phone			laxy Nexus 2	
2	Max Speed		60	MPH	
3	Alert Time			20, 11:39 AM - Fe	≥6 20, 11:39 AM
4	Duration		17 :		
				View Map	Next

Name	Description
1 Phone	Name of phone con- nected upon triggered speed limit alert
2 Max Speed	Maximum vehicle speed upon triggered speed limit alert
3 Alert Time	Time from first triggered alert until last triggered alert
4 Duration	Total triggered alert time from turning ignition on to turning ignition off

To check My Car Zone alert history from your smartphone, you must first send the alert history to your MyUVO account.

Parking Minder

Sending Parking Location

The location where your vehicle is currently parked can be sent to your smartphone.

The Parking Minder feature is only available when the ignition is turned on and the vehicle is parked.

Ensure that the UVO eServices system is activated via USB with the UVO eServices App running on your smartphone before using this feature. After parking the vehicle, press the

the vehicle's location to your smartphone.



Once the parking location has been sent, you can view your vehicle's location from the UVO eServices App on your smartphone.



- When the parking location is being sent, do not drive the vehicle or turn off the ignition.
 Ensure that you have logged in to the UVO eServices App, and your phone is connected to multimedia system through USB cable.
- When ignition is turned off while phone is connected via USB, Parking Minder can be transferred automatically if the option is set up in UVO eService Settings

eServices Guide

eServices Guide

eServices Guide provides guidance on how to use UVO eServices.

This feature is only available when the mobile phone is connected via Bluetooth.





part.5 Voice Recognition

What is Voice Recognition? Precautions Required for Successful Voice Recognition Starting/Ending and Setting Voice Recognition Voice Recognition Screen Overview Voice Commands Siri Eyes Free



Voice Recognition

What is Voice Recognition?

Voice recognition technology runs the system as ordered by recognizing your voice command for operation of the multimedia while you are driving the car.

Regretfully, not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

- 1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
- 2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
- 3. Voice recognition automatically ends if:
 - 1) A call is incoming or outgoing
 - 2) A media (USB or iPod, etc.) is connected or disconnected
 - The front or rear view camera is operated (optional)
 - 4) The car engine starts or stops
 - 5) A system key, such as RADIO key or MEDIA key is selected

- 4. The microphone that recognizes your voice is located over the head part in the driver's seat. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
- 5. Speaking naturally and clearly will ensure better recognition of your voice commands.
- In the following cases voice recognition will be affected by ambient noise.
 - 1) The sound of the wind if any window or the sun roof is open.
 - 2) High speed blower from the air vents. Set climate control to blow lower than level 3.
 - Vibrations from passing through a tunnel.
 - 4) Vibrations from driving on an uneven road.
 - 5) Storms and heavy rain.

Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition.



Ending Voice Recognition

- 1. Select "Exit" to the left of the bottom to end voice recognition.
- 2. Press and hold (over 0.8 seconds) the key on the steering wheel control to end voice recognition.



Quick Run of Voice Recognition (Manual Mode)

Usually, you are supposed to say a command to execute the desired operation after the voice guidance. However, it takes a little time to wait for the voice guidance. If you would like to activate the desired operation more quickly, you can just touch the commands displayed on the screen.

This feature is useful when you feel the voice guidance is too long or voice commands do not work as you desired.



Extending the Listening Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the voice recognition icon (shorter than 0.8 seconds), then the beep will sound again and standby mode will restart.

When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command again.



Skipping Prompt Messages

When you hear the prompt message, press the voice recognition icon on the steering wheel remote control to skip the message and go directly to listening mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.



Adjusting Voice Recognition Volume

During voice recognition, rotate the volume knob to adjust the message volume.




Voice Recognition Screen Overview

Start Screen

A Jan 1	9:46 _M		
Please say a comma	and. Juendy Used Commar	4	
"FM"		"AM	-
SiriusXM"	}∰{	"Musi	c"
"Call" Please pair a phone	2	"Dial Nur Please pair a	
Exit	To l	earn more, say "Help"	Help
7			6
Name	De	escriptior	า
Most frequently used commands	Displays t quently u		
2 Not available command	Displays are not a a failure conditions and thus settings. required will be de	ivailable in meet s for usir need ac The cor for usin	due to ing the ng them Iditional nditions g them

under each command.

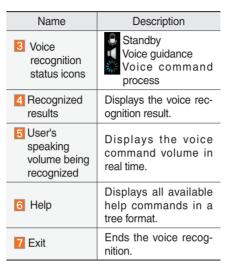

Help Display



Name	Description
1 Command list	 Shows the available commands. Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

Instructions for Using Voice Recognition



Name	Description
1 Detail instruction	This section describes how to use voice recog- nition in detail.
2 Close button	Closes the screen and restarts voice recogni- tion.

i Information

 In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you can not view it while driving for safety precautions.

Voice Commands

Types of Commands

Voice recognition commands are classified as "Global Commands" and "Local Commands."

- 1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
- 2. Local Commands (○): Commands that can be used when a multimedia, or Bluetooth function is running, or displayed on the screen, after activating voice recognition.

Call Commands

- * Check the following before using call commands :
- 1. Voice commands related to phone calls can be used after connecting a Bluetooth device.
- To call a person, for example "Call <John Smith>" whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see "Part 3. Using Bluetooth > Chapter 3. Bluetooth Phone > 3.10 Contacts".
- 3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time it takes to convert voice data may vary depending on the number of Contacts downloaded on the phone.

	Command	Operation
•	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
•	Call <name></name>	You can directly call a person by <name> in the downloaded Contacts.</name>
•	Call <name> on Mobile</name>	You can call a person <name> directly to the number that is saved as "Mobile" in the downloaded Contacts. e.g.) Call "John Smith" on Mobile</name>
•	Call <name> in Office</name>	You can call a person <name> directly to the number that is saved as "Office" in the downloaded Contacts. e.g.) Call "John Smith" in Office</name>
•	Call <name> at Home</name>	You can call a person <name> directly to the number that is saved as "Home" in the downloaded Contacts. e.g.) Call "John Smith" at Home</name>
•	Call <name> on Other</name>	You can call a person <name> directly to the number that is saved as "Other" than "Mobile, Home, or Office" in the down- loaded Contacts. e.g.) Call "John Smith" on Other</name>
•	Dial Number	Displays a screen where you can say a phone number to dial.
•	Dial <phone #=""></phone>	You can directly say the number to call. e.g.) Dial 111 555 1234
•	Redial	Directly calls at the number that you last dialed.
•	Call History	Displays your Call History, where you can say the list number to make a call.

Radio Commands

Command		Operation
٠	Radio	Plays the most recent radio channels from FM, AM, and SiriusXM™.
	FM	Plays FM radio.
•	FM <87.5~107.9>	Tunes to FM <frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five</frequency>
٠	SiriusXM	Plays SiriusXM™ radio.
•	SiriusXM <0~999>	Tunes to SiriusXM [™] Channel <channel Number> according to what you say. e.g.) SiriusXM 23: SiriusXM Twenty three</channel
	AM	Plays AM radio.
•	AM <530~1710>	Tunes to AM <frequency> according to what you say. e.g.) AM 530: AM Five thirty</frequency>
0	Preset <1~40>	Tunes to your preset stations (1 to 40).
0	Channel <0~999>	In SiriusXM™ Radio mode, turns on the <channel number=""> that you say.</channel>

Media Commands

- * Check the following before you use media commands.
- 1. If no media is connected or if no playable files exist at the time when you use these commands, a voice message will tell you that this is not available.
- 2. If you say the name of the media that is currently playing again, then that media will continue playing.
 - e.g.) Saying "USB" while USB content is playing.

	Command	Operation
	Music	Continues the last media you played.
•	iPod	Plays the iPod currently connected. This will work the same when an iPhone is connected. If a USB is connected, then it will be played instead of the iPod.
•	USB	Plays the music on the USB currently con- nected. If an iPod is connected, then the iPod will be played instead of the USB.
•	Bluetooth Audio	Plays the music on the Bluetooth phone currently connected. This may not be supported depending on the Bluetooth connection status.
•	AUX	Plays external devices that are currently connected.
٠	My Music	Plays My Music files stored in the system.
•	Pandora Radio	Plays Pandora Radio that is currently con- nected.

1. USB Music / iPod / My Music Command

(Command	Operation
0	Play	Plays a selected file. Maintains the current settings during playback.
0	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
0	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled play- back.
0	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
0	Repeat	Plays the current track or file repeatedly. Maintains the current settings during repeat play- back.
0	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

2. Pandora Radio command

Command		Operation
0	Skip	Moves to the next track.
0	Thumbs up	If you like the genre of the music currently playing, say "Thumbs up" so that more similar music will play.
0	Thumbs down	If you don't like the music currently playing, say "Thumbs down" to minimize the number of playbacks of similar genre music.

3. Bluetooth audio / AUX command

For Bluetooth audio and external devices (AUX), local commands are unavailable, including Play, Pause, Repeat and Shuffle.

Other Commands List (Commands used in List / Help)

Command		Operation
•	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
0	Line 1~4 (One~Four)	When you cannot select a certain name, such as in Call History, you can select it using numbers. Simple numbers can be recognized, such as "One" or "Two."
0	Yes / No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
0	Previous/Next	When four or more searched items are listed, you can move to the previous or next page using a voice command.
0	Manual Input	When Dial entry results are displayed, this command is used to search manually, rather than to search with a voice com- mand. Voice recognition stops after this command is used.
0	Go Back	Moves to the previous screen.
	Exit	Ends the voice recognition.

Siri Eyes Free

How to start Siri

If you want to use Siri, you have to connect your iOS device to Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding

How to use Siri

When you access the Siri screen while pressing and holding key on the steering wheel, you can press Speak button and then you can speak what you want. Please see the Multimedia system only supports "Phone" related functions. Other functions will be performed in your iOS device. If you press voice key guickly, Siri would re-start. If you hold down voice key, Siri would be terminated and the screen would go back to the previous screen. Eves-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking break on, Eyes-Free mode would be deactivated automatically.



i Information

 Functions and feedbacks from voice commands via Siri are executed in iOS device. If iOS version changed, functions and feedbacks can be changed according to iOS device.



part.6 Apps/Info

Start up Pandora Radio Mode SiriusXM™ Data SoundHound Apple CarPlay/Android Auto



Apps/Info

Start Up

Press the APPS/ key on the head unit to move to the information screen. The screen is composed of :

- "Pandora" to listen to Pandora Radio by connecting a smart phone
- "Quick Guide" to provide information about controls and major functions
- "SiriusXM Data" to show weather, stock, gas station, sports, and movie information provided by SiriusXM Travel Link
- "Voice Commands" to provide information about available voice command list to use voice recognition
- "Apple CarPlay" and "Android Auto" to conveniently use various functions of your mobile phone while driving (For more information, refer to the manual from Apple or Google or visit its company website.).

Pandora Radio Mode

Pandora Radio Mode

Press the "Pandora" icon after selecting All Menus or the APP5/@ key to enter Pandora Radio mode.

A 11:44_{AM} Jan, 1 9 PANDORA Menu 5 1 West Coast Hip Hop Radio 🛓 Snoop Dogg 🙎 🗣 Doggy Dogg World </u> 4 00:09 05:38 Ш 8


Pandora Radio Mode Screen Controls

Name	Description
1 Mode	Displays current operating mode.
2 Station Info	Shows the station name current playing.
3 Track Info	Shows the artist/title information current playing.
4 Play Time	Displays the current play time.
5 Thumb Down	 If you don't like the music current playing, press this button to move to the next music and to minimize the number of playbacks of similar genre music. You can move to next song up to specific times which pandora allows
6 Thumb Up	If you like the genre of the music current playing, press this button to send a "Thumb Up" signal to Pandora so that more similar music will play.
7 Play/Pause	Plays/pauses the current song
8 SKIP	Moves to the next track You can move to next song up to specific times which pandora allows
9 Station List	Moves to the station list screen.



				-	
✓ SEEK TRACK ∧	APP5/()	uvo	SETUP		FILE TUNE

Name	Description
10 Menu	 Bookmark Track Adds the music current playing to the book- marks list. Bookmark Artist Adds the artist of the music current playing to the bookmarks list. You can view your bookmarked artists and songs from your Pandora profile online. Go to pandora.com, then click on the "Your Profile" button above the player. That will bring up a page with your stations, bookmarked artists, and bookmarked songs.
11 SEEK/TRACK	Press briefly to play the next song.
12 TUNE	Rotate the TUNE knob to search for a station. Press the TUNE knob to play the station when you find the name that you want.

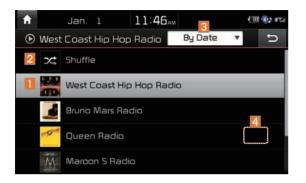



Name	Description
Current Station	Shows the name of the station current displayed.
2 Shuffle	Shuffling your stations provides a more diverse mix of music by randomly playing songs from the stations in your list.
3 Search Menu	 Sorts stations by the items in the menu. A-Z : Sorts stations in alphabetical order. By Date: Sorts stations in the order they were generated.
4 Shared Station Icon	Indicates that the station is already shared.
5 SEEK/ TRACK	Press briefly to play the next song.
6 TUNE	Rotate the TUNE knob to move to the previous/ next list. Press the TUNE knob to play a selected file.

SiriusXM™ Data

About SiriusXM[™] Data Service

The SiriusXM[™] Data Service is a paid membership satellite radio service that provides users with information such as weather, fuel prices, stocks, sports and movies.

However, weather information is not supported for vehicles purchased in Canada.

Accessing SiriusXM[™] Data

Press the "SiriusXM Data" icon after selecting All Menus or APP5/⑦ key to enter the SiriusXM™ Data mode.



SiriusXM[™] Weather Announcement

At the "SiriusXM Data" screen, press the "Weather" icon to enter the Weather Announcement mode.

Weather Forecast

This service provides current weather information and weather forecasts for the next five days in your region. To change the region, press the Other City button and select the desired region.

ft	Feb. 1 12:	26 ам	
Today	5 Days	Updat	e: 7:58 PM 🕤
Detroit Metro A	\rea (Dearborn/	Sterling Height	s/Warren/Liv…
Current 1	Neather	3 Hours Later	6 Hours Later
×.	Mostly Cloudy	Mostly Cloudy	Mostly Cloudy
↑ 0%	¥ 20-30%	47°F	1 45°F
Ւ 0 mph (N)	I miles	↑ 0%	† 10%
Dthe	r City	Warnings an	nd Advisories



Warnings and Advisories

This service provides weather warnings and advisories, such as tornado, storm, flood, etc. as symbols on the Navigation map.





SiriusXM[™] Fuel Price Information

At the "SiriusXM Data" screen, press the "Fuel Prices" icon to enter the Fuel Prices Information mode.




Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the "Nearby Stations" menu.

It shows station locations, starting from the nearest one, and select "Nearest" menu on the top right side to further sort them by price or brand name.



Select the **t** button to the right of the list to register key locations as a Favorite Station so that you can go there again with the "Favorite Stations" menu.

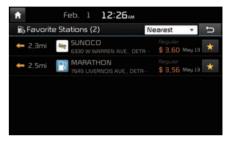

My Fuel Type Settings

With the "Filters" menu, you can select fuel types and favorite brands.

When searching for Nearby Stations, the results will reflect selected fuel types and brand information.

🔒 Feb, 1	12:26 _{AM}
√ Filters	Ū.
My Fuel Type	🖲 Regular
Favorite Brands	Midgrade
	Premium
	Diesel



SiriusXM[™] Stock Information

In the "SiriusXM Data" screen, press the "Stocks" icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.

For symbols which you are interested in, press the icon to save the symbol as a part of Saved symbols can be viewed from the My Favorites button on the Stock Main screen.

My Favorites

My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Press the Add button to move to the stock search screen.



Stock Search

Use the Stock Search menu to search for specific stocks.

Press the **t** button after searching for your favorite stocks to save them in "My Favorite".

ft	Feb. 1 12:26AM	
Q Add	a Favorite Stock	C
AT		
AU		*
AV		*
AW		*
AZ		*

In the My Favorites screen, you can find the selected stock information that you registered.

R .	Feb. 1	12:26 _{AM}		
🏹 My Fa	avorites (1)		Add	đ
JH		0,0	N/A	*

SiriusXM[™] Sports Information

Press the "Sports" icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.




My Teams

You can save teams which you are interested in as part of My teams to easily view related scores and schedules.

Select the My Teams menu and then press the Add button to search for and register your favorite teams.

Search for your favorite teams and press the to button on the right to add it to the "My Teams" list.

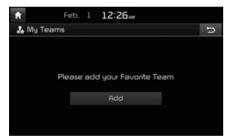

A	Feb. 1 12:26 _{AM}	
20	Add My Team	U
0	Kansas City Chiefs	
8	Miami Dolphins	*
0	Minnesota Vikings	*
0	New England Patriots	*
0	New Orleans Saints	*

You can always check the list of teams that you added in the "My Teams" menu. Press the ***** button on the right side of the team name to delete the team from "My Teams" or press the Add button to add other teams.

ft	Feb.	1	12:26 _{AM}		
🛵 My Te	eams (1)			Add	U
ø Miam	ni Dolphins				*

Press the team name to check daily results and recent schedules for that team.

ft	Feb. 1 12:26 _{AM}		
MLB		May 13, 201	Ŭ
Score	New York Yankees		12:05 PM
Schedule	Cleveland Indians		Final
	Houston Astros		7:05 PM
	Detroit Tigers		T-6
	New York Mets		7:05 PM
	St, Louis Cardinals		B-5

A	Feb. 1 12:26 _{AM}		
MLB	May 14, 2013 🕤		
Score	San Diego Padres @ Baltimore Orioles		
Schedule	Tue, May 14 7:05 PM ET		
	Seattle Mariners @ New York Yankees		
	Tue, May 14 7:05 PM ET		
	San Francisco Giants @ Toronto Blue Jays		

🔒 Feb.	1 12:26 _{AM}		
🖞 Kingsmill Champ	5		đ
Kingsmill Resort - Ri	ver Course : May!		
Name	Score	Ranking	
Cristie Kerr	-12 (0)		
Suzann Pettersen			
Ariya Jutanugarn	-10 (66)		
lihee Lee	-10 (67)		
Angela Stanford			



SiriusXM[™] Movie Information

Press the "Movies" icon to enter the Movie mode.

You can check recent movies and nearby theaters, and also register your favorite theater locations.



Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.

In the "Nearby Theaters" menu, you can search for any nearby theaters.

It shows theaters, starting from the nearest one, and selecting the "Nearest" menu at the top right side will sort them by name.

ft -	Feb. 1 12:26A			
Nearb	y Theaters (40)	Nearest		U
% 0,6mi	Roy and Edna Disney/ 631 West 2nd Street - Walt Dis	✓ Nearest		*
놫 0,7mi	Grand Performances 350 South Grand Avenue., Los	A - Z s Angeles,		*
👃 0,8mi	FigAt7th 725 South Figueroa Street., Lo		(i)	*
🔪 1.0mi	Downtown Independer 251 South Main Street., Los Ar		(i)	*
🖌 1,1mi	Regal Cinemas L.A. LIV 1000 West Olympic Boulevard		(i)	*

A		Feb.		12:26			
0	Nearby	Theater	s (4	0)	A - Z	*	U
+	7,3mi			Times Sq oulevard., Mo			*
*	7,5mi			al Citywall y Plaza, Univ			*
t	5,8mi	Alex The 216 North E				(i)	*
*	4,8mi			erama Dor pulevard., Ho			*
×	4.8mi	ArcLight 6360 W Sur		ywood vd., Holywod	od, CA		*

Select the **t** button to the right of the list to register your favorite theater so that you can always check it again using the "Favorite Theaters" menu and selecting the **(?)** button to view the current movie information for that theater.

f	Feb. 1 12:2	:6 _{AM}		
Nearb	y Theaters (40)	A - Z	*	U
→ 7,3mi	AMC Atlantic Times 450 N, Atlantic Boulevard			*
🌂 7,5mi	AMC Universal City 100 Universal City Plaza.		(i)	*
🕇 5,8mi	Alex Theatre 215 North Brand Bouleva		(i)	*
🔨 4,8mi	ArcLight Cinerama 6360 W Sunset Boulevard			*
🔨 4,8mi	ArcLight Hollywood 6360 W Sunset Blvd., Holl			*

🕾 Favori	ite Theaters (2)	Nearest	*	Ð
🔨 4.8mi	ArcLight Cinerama 6360 W Sunset Boulevard			*
🌂 7,5mi	AMC Universal City 100 Universal City Plaza,		<i>(i)</i>	*

In the "Top Movies" menu, you can check for any movies that are currently popular. Press
button to the right of a movie title to view the plot summary and any other detailed information.



SoundHound

SoundHound is a music search engine. It enables users to identify music by playing or singing a song. It is also possible to search by typing the name of the artist, song, album or lyrics.

Accessing SoundHound

- From the Home screen, select All Menus then select SoundHound button.
- Select SoundHound button on Radio modes (AM, FM and SiriusXM) or Media modes (Bluetooth Audio, iPod, USB, My Music and AUX).



SoundHound Main Screen



Name	Description
1 Mode	Displays current operating mode.
2 Back button	Goes back to previous mode.
3 What's that Song?	Starts the song recognition process. After this pro- cess is complete, it goes to Song screen.
4 Search	Goes to Search screen.
5 History	Goes to History screen.
6 Favorites	Goes to Favorites screen.
7 Charts	Goes to Charts screen.

Recognizing Music

After selecting SoundHound **ID** button, the song recognition process is activated, the system will match current playing song with the SoundHound music database.

Music from Smartphones and MP3 players that are not connected to head unit can also be recognized.



Name	Description
1 Now Listening	Message displayed while SoundHound is pro- cessing the music.
2 Retry	Starts over the song recognition process.
3 Cancel	Cancels song recognition process and Exits SoundHound.
4 Back button	Goes back to previous screen.

Searching Music

Music can also be searched by selecting the Search option in SoundHound main screen and typing a song, artist, album or lyrics into the search field.



Name	Description
1 Search	Displays current operating mode.
2 Back button	Goes back to SoundHound main screen.
3 Search field	Displays search field. Once text is typed, recom- mended song, artist, album or lyrics information that might match the search criteria is displayed in the scroll menu.
4 Search icon	Starts the searching process.

Song Main Screen



Name	Description		
1 Back button	Goes back to previous screen.		
Song, Artist and Album information	Displays song, artist and album information of currently playing song.		
3 Album Image	If album image is selected, the detailed infor- mation of the album is displayed.		
4 Artist Image	If artist image is selected, the detailed informa- tion of the artist is displayed.		
5 Favorite	It saves current playing song into Favorites by tapping on the star icon. Star icon will be highlighted when song has been saved into Favorites. To delete song from Favorites, select the star icon again or go to Favorites menu screen.		
6 Lyrics	Displays current playing song's lyrics.		
7 Recommended Songs	Displays a list of recommended songs by SoundHound.		
8 Similar Artists	Displays list of similar artists to currently play- ing artist.		
Song's Album Appearances	Displays list of albums on which currently play- ing song appears.		

Apple CarPlay/Android Auto

What is Apple CarPlay/Android Auto?

You can securely manipulate your smart phone while driving by using this feature. Various functions on your smart phone are displayed on the display of car audio so you can easily use any of them (finding the direction, making a call, listening to music, etc.).

With iPhone connected, "Apple CarPlay" appears on the display while "Android Auto" appears with Android phone connected. Available functions and operations may differ depending on the company model.

The supportable devices are as follows:

- Apple CarPlay
- OS Version: iOS 8.1 or higher (recommended to install the latest version)
- Device: iPhone 5/5S/5C/6/6PLUS or upcoming iPhone (iPod and iPad not supported)
- · For more information, refer to the manual or visit the website.
- Android Auto

For more information, refer to the manual or visit the website.

Precautions

- Apple CarPlay is a registered trademark of Apple Inc.
- · Android Auto is a registered trademark of Google Inc.
- Apple CarPlay or Android Auto is unavailable if the version of communication protocol is not supported or your phone is unable to be recognized due to a shutdown caused by a failure or defect in the device itself.
- Your phone may not be recognized if its battery is low. Charge your phone then try again.
- If your phone is shut down due to a defect in the device itself, reset your phone and try again.
- If you repeatedly connect and disconnect the USB cable on the device in a short period of time, your phone may malfunction. This can also cause a device failure.
- The device recognition time may differ depending on the device type and firmware/OS version.
- For using this feature, the dedicated cable is recommended to use. (Using a non-genuine product may cause noise or malfunction.)
- Normal operations are not guaranteed when you arbitrarily manipulate your phone while Apple CarPlay or Android Auto is active.
- You cannot run Apple CarPlay while making a call using Bluetooth or UVO eServices.

- You cannot run Android Auto during a UVO eServices call but you can run Android Auto during a Bluetooth call. (However, you cannot use audio-related features in Android Auto mode.)
- Apple CarPlay or Android Auto may not operate normally due to mobile phone issues.

Using Apple CarPlay/Android Auto Features

- 1. With Apple CarPlay, connect the USB cable provided by Apple to your mobile phone. With Android Auto, connect the USB cable provided by the mobile manufacturer.
- 2. On the Home or All Menus or Apps/Info screen, select the entry button.



3. You can use the functions for navigation, music, phone, and the like of Apple CarPlay or Android Auto.

- Before connecting your mobile phone, check whether Apple CarPlay or Android Auto is set to be used in Setup > Connectivity Settings.
- After connecting the mobile phone, you must release the lock or accept it to connect Apple CarPlay or Android Auto normally.
- With Apple CarPlay or Android Auto connected, press the carPlay or the steering wheel to run the phone function of Apple CarPlay or Android Auto.
- The screens and features displayed on the audio system are the same as what Apple and Google originally provide. The screens and features are subject to change according to the policy of each individual company.

Cautions when Using Apple CarPlay

- When Apple CarPlay is activated, you cannot use Bluetooth. If you want to use Bluetooth Phone/Audio, iPod and Pandora, remove the USB cable and connect to Bluetooth before using them.
- Apple CarPlay mode does not support the feature that enables you to search for music files by controlling the
 TUNE knob.
- In case Apple CarPlay is not activated even after a connection has been made successfully, check the following:
 - Check if Apple CarPlay is disabled in your iPhone's application settings (for detailed information, see the iPhone manual or send Apple an inquiry)
 - Check whether Apple CarPlay is set to be used in Setup > Connectivity Settings.
- When Apple CarPlay is connected, the function to send tag information from FM/SiriusXM radio to iPod is blocked. In order to send tag information to iPod, set in Setup > Connectivity Settings to use iPod mode.

Cautions when Using Android Auto

- When Android Auto is activated, you can use only phone features among all Bluetooth features. You cannot use Bluetooth Media features such as Bluetooth Audio and Pandora. If you want to use such features, remove the USB cable before use.
- Android Auto mode does not support the feature that enables you to search for music files by controlling the
 TUNE knob.
- In case Android Auto is not activated even after a connection has been made successfully, check the following:
 - Check the status of Phone Application (Check if an error has occurred)
 - Terminate the Android Auto process and attempt a reconnection
 - Check whether Android Auto is set to be used in Setup > Connectivity Settings.
- If Android Auto does not work normally even after a reconnection has been made, see the manual provided by Google or visit our website.

part.7 Other Features

Camera



Other Features

Camera

About Rear Detection Camera

- This device is connected to a rear detection camera to see behind the car when reversing.
- When the engine starts, shift the gear to R to activate the rear detection camera.
- Shift the gear to another position to deactivate the rear detection camera.

i Information

- While the device boots up, shift the gear to R to activate the rear detection camera.
- A separate chipset is used for the camera screen while booting up, so it may be different after booting up.
- When booted up, blinking may occur when you switch to a UI screen.



A wide-angle lens is installed as the rear detection camera to get a wider view, so there may be some difference between the actual distance and the distance that appears on-screen. For safety, make sure to view the back, right, and left sides of the car for yourself.

part.8 Setup

Setup Sound Settings Display Settings Phone Settings UVO eServices Settings Voice Recognition Settings Clock Settings Wi-Fi Settings Language Settings Keyboard Settings Screen Saver Settings Connectivity Settings



Setup

Setup

Setup is the screen to control system settings of the Audio.

To enter the screen, select the SETUP key of the device or the Setup button in All Menus.



Feature	Description
1 Sound	Provides the sound control options for Position, Bass, Mid, Treble, Advanced and Default settings.
2 Display	Provides the Mode/Illumination and Default settings.
3 Phone	Provides the Bluetooth Connection/Auto Connection Priority/Bluetooth System Information settings.
4 UVO eServices	Provides the 911 Connect/ Parking Minder/My Car Zone/ Scheduled Diagnostics/Trip Info Sync Reminder Settings.
5 Voice Recognition	Provides the Guidance and Priority settings.
6 Clock	Provides the Time and View settings.



Feature	Description
7 Wi-Fi	Provides the Wi-Fi On and Network Connection set- tings.
8 Language	Provides the Change Language settings.
9 Keyboard	Provides settings to switch keyboard layouts.
10 Screen Saver	Provides the Clock/None settings.
11 Connectivity	Provides connectivity set- tings for Apple CarPlay and Android Auto.
2 System Info	Provides software and storage space information and Default settings.
13 Display Off	Provides the Display Off (touch activation) function.

Sound Settings

Adjusts the sound effects for the whole system.



Feature	Description
1 Position	Select the Up/Down/Left/Right button to control sound position- ing. Press Center to concen- trate the sound on the center of vehicle.
2 Tone	Drag the slide bar to control bass/mid/treble settings. Press Center to initialize the settings.


3 Advanced	Select additional audio options such as "Speed Dependent Volume Control" that automatically controls Audio volume according to vehicle speed.	
4 Default	Resets the sound to fac- tory default settings.	
5 Beep	Select to activate a beep when pressing buttons.	

1 Information

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

Display Settings

Adjusts the level of illumination for the entire system.

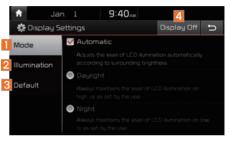

Feature	Description	
1 Mode	Select any of LCD illu- mination change modes: Automatic (changes the level automatically), Daylight, and Night.	
2 Illumination	Set the levels of illumi- nation for day and night. Press Center to initial- ize the settings.	
3 Default	Resets the display to fac- tory default settings.	
4 Display Off	Provides the Display Off (touch activation) function.	

Phone Settings

Changes Bluetooth phone settings.

Phone Settings				
Select the	SETUP	key in the head unit		
Select Phone .				

A	Jan, 1	2:41	
Ø	hone Settings		U
1	💁 Bluetooth Conn	ection	•
	\lambda Auto Connectio	n Priority	۲
(Bluetooth Syste 	m Infa	۲

Bluetooth Connection Settings				
Select the SETU	key in t	he head	l unit 🕨	
Select Phone 🕨	Select Blue	tooth Conn	ection	
🔒 Jan, 1	11:20	7	(III (\$) IT.	
🔅 Bluetooth Connec	tion	Help	Ð	
🔰 Phone Name	Con	nected	(L) (L)	
			2 3	
Add New	Delete Devices	Dele	ete All	
4	5		6	

Feature	Description	
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or discon- nected.	
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.	
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth Hands-free connec- tion.	
4 Add New	Register a new Bluetooth device.	
5 Delete Devices	Select and delete a paired device.	
6 Delete All	Delete all paired devices.	
7 Help	Switches to the Bluetooth Connection Help screen.	


iInformation

- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also completely deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.
- For Default Factory Settings, the bluetooth settings are reset to factory settings
- Select the SETUP key ► Select Phone
 - Select Bluetooth System Info
 Select
 Default Factory Settings

Auto Connection Priority

Select the SETUP key in the head unit >

Select Phone
Select Auto Connection Priority

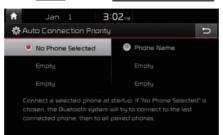


When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

Bluetooth System Information

Select the SETUP key in the head unit Select Phone Select Bluetooth System Info.

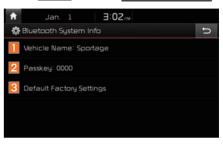

Features	Description	
Vehicle Name	You can change the Bluetooth device name of the vehicle.	
2 Passkey	You can change the pass- key used for Bluetooth device authentication. the initial passkey is 0000.	
3 Default Factory Settings	You can delete all paired devices and restore the Default Bluetooth Settings. For Default Factory Settings, all paired devices are deleted, and the system is reset to factory settings.	

BO

1 Information

• The device name above is an example. Check the actual information on the product.

UVO eServices Settings


Within the eServices Settings screen, UVO eServices related features can be set, such as activating 911 Connect, Parking Minder and setting the My Car Zone.

For safety reasons, My Car Zone Settings can not be adjusted while driving. Park the vehicle before making any changes to your settings.




911 Connect

This feature is used to used to turn on or off the 911 Connect feature.

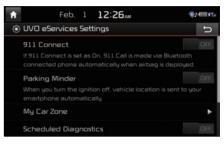

To enable 911 Connect, ensure that the DN button is selected. To disable this feature, ensure the DFF button is selected. When enabing this feature, you must first agree to the 911 Connect tems of use. After reading the tems of use, press the Agree button on the touch screen to accept.

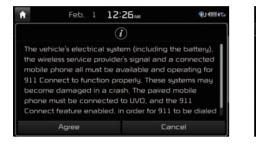

Parking Minder

If you want to send vehicle location to your smartphone automatically when you turn the ignition off, turn the Parking Minder feature **DN**.



My Car Zone

This feature is used to set My Car Zone (Curfew Limit, Speed, Geo Fence) alert conditions.

My Car Zone Settings is unavailable when UVO eServices has not been activated or GPS signals cannot be received.



The PIN must be entered to use My Car Zone Settings.

ft	Feb. 1 12	2:26 _{AM}	®⊁∰ €Ľ4
Enter PIN			U
Enter the 4 dig	jit PIN.		
1	2 ABC	3 DEF	×
4 GHI	5 .rt.	6 MNG	
7 PORS	Β τυν	9 wxvz	ОΚ
	0 +	#	

Ö

This screen is used to turn Curfew Limit, Speed, and Geo Fence Alert features On/ Off.


Set the alert conditions ON **Settings**

Feb. 1 12:26AM	€1.4000 a.C.a
My Car Zone Settings	Û
Curfew Limit Alert	ON
When driving after set curfew time, display alert and save alert history.	Settings
Speed Alert	DFF
When driving faster than set speed, display alert and save alert history,	Settings
Geo Fence Alert	ON
When driving into restricted area, display alert and save alert history.	Settings

A	Feb. 1 12:26 _{AM}	@ ≯@Ⅲ#™
🛞 My	Car Zone Settings	U
Spe	ed Alert	DFF
	n driving faster than set speed, lay alert and save alert history,	Settings
Geo	o Fence Alert	ON
	en driving into restricted area, lay alert and save alert history,	Settings
PIN		Change
Def	ault Settings	Restore

Curfew Limit Alert Settings

Within Curfew Limit Alert Settings, you can set the Curfew Limit Alert Start and End Time. You can also set the Alert Interval of alerts upon Curfew Limit.

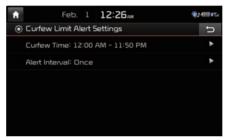

Speed Alert Settings

Within Speed Alert Settings, you can set the vehicle speed limit and Alert Interval of alerts upon overspeeding.

A	Feb.	1 12:26 _{AM}	\$\$.> €IIII «T.«
💿 5p	eed Alert Sett	tings	U
5p	eed Limit: 50 N	МРН	•
Al	ert Interval: Ond	ce	►

PIN

This feature is used to change the PIN to enter My Car Zone Settings.



• Before pressing **DK**, ensure your smartphone is connected to UVO eServices system via USB cable.

Press the DK button to transmit the new PIN to your My UVO com account.



Restore Factory Settings

This feature is used to restore all My Car Zone alert history and settings back to default state.

Car Zone Setti		Ð
	?	
	e alert history will be	
	restored to default d like to continue?	values,

Scheduled Diagnostics

This feature is for setting when scheduled diagnostics alerts display.



ft		Fet	o. 1	12:26	AM		<u>س</u>	()))) (124
۲) Sched	duled D	iagnost	ics Dat	e		Done	U
			10	11	12	13	14	
	15	16	17	18	19	20	21	
	22	23	24	25	26	27	28	
	29	30	31					

 For months without the corresponding day, the last day of the month will automatically be set as the scheduled diagnostics date.

Trip Info Sync Reminder

Trip Info is a feature used to set whether system displays alert when trip info(Driving Distance, Driving Speed, Driving Time, etc). reaches 90% of memory.


UVO eServices must be activated to use this feature.

Press	SETUP	key 🕨	🔤 UVO eServices	►
Trip Int	fo Sync	Remind	er on .	



Voice Recognition Settings

Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

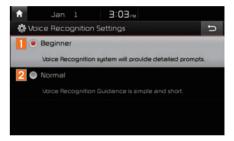

Feature	Description
1 Beginner	For beginners, the voice recognition system pro- vides voice prompts.
2 Normal	For normal users, the voice recognition system provides simple and short voice guidances.

Clock Settings

Configure the settings for time and date. Using the arrow buttons, you can change the values.



Feature	Description
1 Daylight Saving Time	The daylight saving time (DST) is applied.
2 24 Hours	The time display is set in 24-hour format.
3 Direct entry	If you tap any value, you can directly enter the number in the following screen.

Wi-Fi Settings

You can share a digital-device network with the vehicle device through Wi-Fi.



Feature	Description
🚺 Wi-Fi	Turn on/off Wi-Fi.
2 MAC Address	Displays the MAC address.
3 Refresh	Searches available net- works near the vehicle.
4 Network Name	Displays available network AP (Access Point) names.
5 Add Wi-Fi Network	Enter the network ID/ password to connect to a hidden network AP (Access Point).
6 Help	Shows the Wi-Fi setup guide.

How to Connect to a Network

- 1. In the Wi-Fi settings of a digital device, activate Internet sharing (Hotspot).
- In the vehicle network list, select the desired device to connect to. Enter the password to connect, if any.

Language Settings

You can configure the displayed system language.



When the language is changed, the system language is automatically changed.

Unique data including MP3 file name is not changed and some languages don't support voice recognition.

Keyboard Settings

You can configure the keyboard layout for each language.



You can configure ABCD or QWERTY keyboards for the system.

i Information

 Configured keyboard layouts are applied to all input modes.

Screen Saver Settings

You can select any of the following screen formats to be displayed when the screen or power is turned off.

- · Digital clock and date
- · Analog clock and date
- No display



Connectivity Settings

You can select the mode to run when an iOS or Android device is connected. If not selected, the mode does not run exclusively.

iOS Connectivity

For connection to Apple CarPlay, select Apple CarPlay with a USB cable connected. It enables and activates the Apple CarPlay functions with user agreement in case of good network connectivity. While Apple CarPlay is running, you cannot use any of Pandora, Bluetooth phone/audio, and iPod. In addition, the latest version of iOS must have been installed. In the second connectivity option, the connection can be made through a USB cable or Bluetooth.



Android Connectivity

If Android Auto is checked, you can use the functions of your Android phone with a USB cable and Bluetooth connected. It enables and activates the Android Auto functions with user agreement in case of good network connectivity. For this, the latest version of Android must have been installed. While Android Auto is running, you cannot use any of Pandora and Bluetooth audio.

🕼 Conn	ectivity S	iettings			Ð
iOS	× .	Android Au	to		
Android		upporting / JSB cable a	Android Au nd Bluetoo	re when a device ito is connected u th. Otherwise, th will start chargin	e device

1 Information

- The settings are allowed only after disconnecting any type of USB device including an iOS/Android device and a USB memory as well.
- Pandora may not be used outside of the United States.
- Regardless of using Android Auto or Apple CarPlay, when any iOS or Android device is connected with a USB cable, it basically starts charging.

System Info

At the System Info screen, software version information, updates, and storage status details are available.



Feature	Description
1 SW Info	System version information and update details are available. Select the Update button to update the system. After update is complete, the system will reboot auto- matically.
2 Storage Space	Displays the memory space available for media storage.
3 Default	Resets the system infor- mation to initial settings.

System Update

At the System Info screen, insert the USB memory with the latest file downloaded, and then select the Update button to begin updating. The system will then reboot automatically.

i Information

 This product needs supplemented software updates and additional functions, which collectively may take some time to complete, depending on the amount of data.

A CAUTION

 If the power is disconnected or the USB or SD card is removed during an update, the data might be damaged. Please wait until the update is complete while the engine is on.

part.9 Appendix

Product Specification Troubleshooting FAQ



Appendix

Product Specification

TFT-LCD

Screen Size	Navigation Device - 8 inch(176.4 x 99.36mm)
Resolution	Navigation Device - 384,000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom : ALL 89°
Internal Lighting	LED

Common

Name	Car TFT LCD Display Navigation Unit			
Power Supply	DC 14.4V Operating Power		DC 9V ~ DC 16V	
Current Consumption	2.5A	Sleep Current	0.5mA (Head Unit Only)	
Operating Temperature	-20 ~ +70°C (-4 ~ +158°F)	Storage Temperature	-30 ~ +80℃ (-22 ~ +176℉)	
Dimensions	178 X 102 X138mm (Main BOX) 2.7kg			
Weight				

Radio

Channels	FM : 87.5 MHz ~ 107.9 MHz(Step : 200 kHz)		
	AM : 530 kHz ~ 1710 kHz(Step : 10 kHz)		
Sensitivity	FM : Under 10dBu/AM : Under 35dBu		
Distortion Factor	Within 2%		

CDMA		
RX	Frequency	869MHz~894MHz (BC0), 1930MHz~1990MHz (BC1)
	Sensitivity	-104dBm under (FER = 0.5% under)
	Frequency	824MHz~849MHz (BC0), 1850MHz~1910MHz (BC1)
ТΧ	Max RF Output Power Power Class3(BC0), PowerClass2(BC1), conducted)	
Sensitivity	-104dBm under(FER=0.5% under)	
Power	23.01~30dBm (BC0, BC1, conducted)	

Bluetooth[®] Wireless Technology

Frequency	2402 ~ 2480 MHz	Supported Bluetooth [®]	3.0
Range		Specification	
Supported Profile	Handsfree(1.6), A2DP(1.2), AVRCP(1.4), PBAP(1.0)		4),
Output	-6~4dBm (Power Cla	ss2, Conducted)	
Number of Channels	79 channels		

A CAUTION

• The producer and installer cannot provide services related to life safety as the concerned radio equipment is liable to radio interference.

Wi-Fi Details

Frequency	2412 ~ 2462MHz
Specification	802.11b/g/n
Number of Channels	11 channels
Operating Temperature	-20 ~ +70°C (-4 ~ +158°F)

Troubleshooting

- 1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
- 2. If you are having problems with the device, try the suggestions listed below.
- 3. If the problems persist, contact your Kia dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	 Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	 Has the Switch for the vehicle been turned to [ACC] or [ON]? Has the SYSTEM been turned OFF?
The screen is being dis- played but sound is not working	 Has the volume been set to a low level? Has the volume been muted?
When the power is turned on, the corners of the screen are dark	 The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction If the screen is very dark, contact your nearest Kia dealer for assistance
Sound is working from only one speaker	Are the positions of Fader or Balance sound controls adjusted to only one side?

Sound does not work in AUX mode	Are the audio connector jacks fully inserted into the AUX terminal?
AOX IIIOde	
The external device is not working	• Is the external device connected with a standard connector cable?
	 Within modes that play files by reading external sources, such as discs, USB, iPod, or Bluetooth[®] streaming mode, the most recently played mode screen prior to turning off power may not properly load If there is no disc or the corresponding device is not connected, the mode operated prior to the most recent mode will operate If the previous mode still cannot be properly played, the mode operated prior to that will operate

Problem	Possible Cause	Countermeasure	Problem	Possible Cause	Countermeasure
The power does not turn	The fuse is discon- nected	Replace with a suitable fuse If the fuse is disconnected again, please contact your point of purchase or Kia dealer	The image color/tone quality is low	The brightness, satura- tion, hue, and contrast levels are not set prop- erly	 Properly adjust the bright- ness, saturation, hue, and contrast levels through Display Setup
on	Device is not properly connected	Check to see that the device has been properly con- nected		 The volume level is set to the lowest level The connection is 	 Adjust the volume level Check to see that the device
The system does not play	The vehicle battery is low	Charge the battery If the problem persists, contact your point of purchase or Kia dealer	Sound does not work not proper has been • The device is currently fast-for- warding, rewinding, • The sour		 has been properly connected The sound will not work when the device is fast-for- warding, rewinding, scan- ning, or playing in slow
			The sound or image quality is low	 Vibration is occurring from where the conversion switch has been installed Image color/tone quality is low 	 The sound may be short-circuited and the image distorted if the device vibrates The device will return to normal once vibrations stop

	Problem	Possible Cause	Countermeasure		Problem
		 USB memory is damaged USB memory has been contaminated A separately pur- burge turge turge to be an an	 Please use after formatting the USB into FAT 12/16/32 format Remove any foreign sub- stances on the contact surface of the USB memory and multimedia terminal Directly connect the USB 		Bluetooth does not work or its limited functions at available
	The USB does not work	 chased USB HUB is being used A USB extension cable is being used A USB which is not a Metal Cover Type USB Memory is being used An HDD type, CF, SD Memory is being 	 memory with the multimedia terminal on the vehicle Directly connect the USB memory with the multimedia terminal on the vehicle Use standard USB Memory Use standard USB Memory 		Apple CarPlay do not work wi proper connection Android Au does not work with proper connection
		used • There are no music files which can be played	 Only MP3, WMA file formats are supported. Please use only the supported music file formats 		<i>i</i> Inform • While op
not recog- nized ever though it h been	The iPod is not recog- nized even though it has been connected	 There are no titles which can be played The iPod firmware version has not been properly updated The iPod device does not recognize downloads 	 Use iTunes to download and save MP3 files into the iPod Use iTunes to update the firmware version and recon- nect the iPod with the device Reset the iPod and recon- nect with the device 		 corrected reset the s Press and turn off ar

Problem	Possible Cause	Countermeasure
Bluetooth does not work or its limited functions are available	 Bluetooth on your mobile phone is set to OFF The Bluetooth con- nection is not made Apple CarPlay or Android Auto is active 	 Set it to ON Make the connection active Deactivate the mode
Apple CarPlay does not work with proper connection. Android Auto does not work with proper connection	 Apple CarPlay blocking is made in your iPhone Android Auto block- ing is made in your phone The status of the application has an error 	 Release the blocking. Clear the error. End the application process and try again

nation

- perating the device, if an abnormality occurs that cannot be d with the above described measures, press the RESET key to system.
- nd hold the RESET key (over 1 second). The device power will and the system will reset.

FAQ

About Pairing Mobile Phones

- Q I cannot pair my mobile phone. What is the cause?
- A Check to see that the mobile phone supports Bluetooth[®] function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the AVN and cell phone and then register the cell phone again.
- Q What is the difference between pairing a mobile phone and connecting a mobile phone?
- A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth[®] Handsfree features, such as making/ answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

- Q What is a Passkey?
- A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with

SETUP Phone Bluetooth System Info Passkey MCNU options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, press the Accept button on the screen or the key on the steering remote controller.

To reject the call, press the Reject button on the screen or press the key on the steering wheel control.

- **Q** What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?
- A While on a call, press and hold (over 0.8 seconds) the key on the steering remote controller or press the button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth[®]* Wireless Technology/ Head Unit Use Environment

- Q What is the range of my wireless connection?
- A The wireless connection can be used within 15 yards.
- Q How many mobile phones can be paired?
- A It is possible to pair up to five mobile phones.
- Q Why is call quality sometimes poor?
- A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Index

<u>A</u>

AUX2-37
About Bluetooth® Wireless Technology
/Head Unit Use Environment10-8
About Disc2-11
About Making/Answering Phone Calls 10-8
About Pairing Mobile Phones10-7
About Rear Detection Camera 8-4
About SiriusXM [™] Data Service
About Transmission and Reception of Radio
Waves 4-3
Accept/Reject Call 3-7
Accessing FM/AM Mode 2-2
Accessing SiriusXM [™] Data 7-8
Accessing SoundHound7-16
Address5-15
Adjusting Voice Recognition Volume 6-5
App List
Auto Connection Priority 9-5
Avoid Street5-34

B

<u>C</u>

CAUTIONS upon Connecting Bluetooth®
Phone 3-3
CD2-16
Call Commands 6-8
Call History 3-9
Camera 8-4
Canceling Route5-31
Changing Map View 5-3
Climate Mode 8-2
Clock Settings
Component Names and Functions1-5
Connecting Bluetooth Devices 3-4
Connecting an External Device2-37
Connecting with the Blue Link Center 4-4
Contacts3-10

D

Deleting Bluetooth Devices	3-5
Detour	5-5
Dial	3-7
Direct Tune	2-8
Disc/Content Format Compatibility2	2-12

Disconnecting Bluetooth Devices 3-5
Display5-35
Display Route Information5-31
Display Settings
Download Center 7-6
Downloaded Apps Settings9-10
Driving Info 4-6

Ε

Editing Route5-	-33
Ending Voice Recognition	3-3
Extending the Listening Time	3-4

<u>F</u>	
FAQ	10-7
FM/AM	2-2
Favorites	3-11
"Find the Nearest <category> "List .</category>	6-16

G

General5-35
Getting Started with Blue Link 4-4
Guidance5-36
9-10 I Index

Н

HD Radio™ Technology 2-4	ŀ
Head Unit 1-5	5
Help Display 6-6	6
Home Screen1-1	
How to Connect to a Network)
How to start Siri6-2	
How to use Siri6-2	

Instructions for Using Voice Recog	nition 6-7
IPod	2-30, 2-34

Κ

I

Key Product Featur	es 1-4
Keyboard Settings	9-10

Language Settings 9-9

M

MP3	.2-19
Map Scale	. 5-4
Media	.2-10
Media Commands	.6-12
Menu	. 5-4
Modem Information	. 9-8
My Apps	. 7-7
My Music	.2-40

N

Name and Function of Each Part	4-2
Navigation Commands	6-9
Navigation Settings5-35,	9-3
Navigation Volume	5-5
Nearby POIs	5-6

0

On-Screen Touch Controls1-12
Operating Climate Mode 8-2
Operating Navigation Screen 5-2
Other Commands List
(Commands used in List / Help)6-15

Ρ

Pairing a New Device 3-4
Pandora Radio Mode 7-2
Pandora Radio Mode Screen Controls 7-3
Phone Ringtone
Phone Settings
Phone Status Icons
Places5-14
Precautions Required for Successful Voice
Recognition 6-2
Precautions for Safe Driving 3-2
Precautions upon Handling Discs2-11
Troductions apoint randing Disco 2 11

Q

Quick Run of Voi	ce Recognition	
(Manual Mode)		6-3

<u>R</u>

Radio Commands	6-11
Rear View Mirror Switch	4-2
Recognizing Music	7-17
Route	5-31, 5-36
Route Guidance	5-29
Route Option	5-4
Route Options	5-34
Route Overview	5-32
Route Preview	5-32
Route Setting	5-26

S

Screen Saver Settings9-11
Searching Music7-17
Selecting through Channel/Category List 2-8
Send to Car with Google 4-6
Service Activation

Setup	. 9-2
Siri Eyes Free	.6-21
SiriusXM™	. 2-5
SiriusXM [™] Mode Display Controls	. 2-6
SiriusXM™ Data	. 7-8
SiriusXM [™] Fuel Price Information	.7-10
SiriusXM [™] Mode Hard Key Controls	. 2-5
SiriusXM [™] Movie Information	.7-14
SiriusXM [™] Sports Information	.7-12
SiriusXM [™] Stock Information	.7-11
SiriusXM™ Traffic Information	. 7-9
SiriusXM [™] Weather Announcement	. 7-8
Skipping Prompt Messages	. 6-5
Song Main Screen	.7-18
Sound Settings	. 9-3
SoundHound	.7-16
SoundHound Main Screen	.7-16
Start Screen	6-6
Start Up	. 7-2
Starting Blue Link Voice Local Search .	4-8
Starting Mode	.2-10
Starting Voice Recognition	. 6-3
Starting the System for the First Time	. 1-9

Starting/Ending and Setting Voice
Recognition 6-3
Steering Wheel Control 1-7
Stolen Vehicle Recovery 4-5
Supported Disc Formats2-12
Supported Image Specifications2-24
System Info9-11
System Reset 1-9
System Update9-11

Т

Traffic5-3	6
Troubleshooting 5-36, 10-	-4
Turning the System On/Off 1-	.9
Types of Commands 6-	-8

U

USB	2-22
USB Image	2-28
USB Music	2-25
USB MP3 Inform	mation and Precautions 2-23
Using iPod Dev	vices2-30
Using the Men	u During a Phone Call 3-8

V

Vehicle Diagnostics	4-7
Viewing Menu	2-8
Voice Commands	6-8
Voice Guidance Volume On/Off	5-3
Voice Recognition Screen Overview	6-6
Voice Recognition Settings	9-8

W

Warnings and Cautions 1-2
What Is Blue Link? 4-3
What Is Telematics? 4-3
What is Blue Link Voice Local Search? 4-8
What is <i>Bluetooth</i> ® Wireless Technology?3-2
What is Voice Recognition? 6-2
Wi-Fi Settings 9-9
Wi-Fi Settings Screen 9-9

Ζ

Zoom In /Zoom Out	5-3
-------------------	-----

Important Safety Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the wheel.

Voice Command Control

Functions within the Multimedia system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

IC Warning

"This device complies with Industry Canada licence-exempt RSS standard(s)."

Operation is subject to the following conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas provoquer de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

