

CAR MULTIMEDIA SYSTEM USER'S MANUAL



The Power to Surprise

Read the following safety precautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

※ The design and specifications of this product may change without prior notification for product and service improvement.

The actual features in the vehicle may differ from the illustrations.

For more accurate information about the vehicle, please refer to the catalogue.

※ This Audio system contains open source software, including without limitation, software distributed and/or modified under the GNU General Public license, Version 2, June 1991, and the GNU lesser General Public License, Version 2.1, February 1999.

For additional information and to obtain related materials including without limitation, the previous referred to licenses and software, please contact us at MOBIS_OSSrequest@mobis.co.kr

Notations used within this User's Manual

WARNING

- Failure to observe the instructions within this category could result in death or serious injury or damage to the vehicle.
-

CAUTION

- Information on matters that could potentially lead to injury or vehicle damage/malfunction Information that could lead to higher user safety
-

Information

- Information and tips that provide additional user convenience in using the product
-

NOTICE

- Information on specific features that facilitate proper product use and functional understanding
 - Information on terminology used within this manual
-



Basic

Warnings and Cautions

Key Product Features

Component Names and Functions

Starting the System for the First Time

Safety Warnings

- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.
- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.





 
Safety Cautions




 

Pay attention to traffic conditions while driving.

- Operating the device while driving could lead to accidents due to a lack of attention to external surroundings. First park the vehicle before operating the device. In addition, the touch screen may not work for some functions when the vehicle is in motion. The touch screen feature will be supported once the vehicle has stopped.
- Adjust the volume to levels that allow the driver to hear sounds from outside of the vehicle. Driving in a state where external sounds cannot be heard may lead to accidents.
- Pay attention to the volume setting when turning the device on. A sudden output of extreme volume upon turning the device on could lead to hearing impairment. (Adjust the volume to a suitable levels before turning off the device.)
- If you want to change the position of device installation, please inquire with your place of purchase or service maintenance center. Technical expertise is required to install or disassemble the device.
- Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.
- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product concerns, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Component Names and Functions





Head Unit



Name	Description
1 	<ul style="list-style-type: none"> When power is off, press to turn power on. When power is on, press and hold (more than 0.8 seconds) to turn the power off. When power is on, press quickly (less than 0.8 seconds) to turn Audio off. Turn left/right to adjust the volume.
2 	<p>Selects FM/AM/SiriusXM™ mode</p> <ul style="list-style-type: none"> Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM™ → FM.
3 	Selects MEDIA mode.
4 	Displays the Bluetooth phone mode.
5 	<p>When pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> FM/AM mode: Plays the previous/next frequency. SiriusXM™ mode: Changes the channel. MEDIA (USB/iPod/My Music) mode: Changes the track, file or title (except for USB Image and AUX). <p>When pressed and held down (more than 0.8 seconds),</p> <ul style="list-style-type: none"> FM/AM mode: Continuously changes the frequency until the key is released. MEDIA (USB/iPod/My Music) mode: Rewinds or fast forwards the track or file (except for USB Image, Bluetooth Audio, and AUX).

Name	Description
6 	Moves to the Apps/Info screen.
7 	Displays the UVO mode
8 	Moves to the Setup screen.
9 	<ul style="list-style-type: none"> FM/AM mode: Changes the frequency. SiriusXM™ mode: Changes the channel. MEDIA (USB/iPod/My Music) mode: Changes the track, file or title (except USB Image, Bluetooth Audio, and AUX).
10 	Resets the system settings. (Preset radio channels and other data will not be deleted)

※ The actual feature in the vehicle may differ from the illustration.

Steering Wheel Controls

Name	Description
1 	<p>When pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> • Activates voice recognition <p>When pressed and held (more than 0.8 seconds),</p> <ul style="list-style-type: none"> • Ends voice recognition • If iOS device is connected through Bluetooth, activates or ends Siri Eyes Free
2 	<ul style="list-style-type: none"> • Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM → USB or iPod → AUX → Bluetooth Audio → My Music → Pandora → FM • If the media is not connected, the corresponding modes will be disabled • Press and hold (more than 0.8 seconds) to turn the Audio system on/off • When power is off, press button to turn power back on
3 	Controls the volume
4 	<p>When pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> • FM/AM mode: searches broadcast frequencies saved to Presets • SiriusXM™ mode: searches broadcast channels saved to Presets • MEDIA (USB/iPod/My Music) mode: changes the track, file or title (except USB Image, AUX) <p>When pressed and held (more than 0.8 seconds),</p> <ul style="list-style-type: none"> • FM/AM mode: automatically searches broadcast frequencies • SiriusXM™ mode: automatically searches broadcast channels • MEDIA (USB/iPod/My Music) mode: quickly looks up songs (excluding USB images, AUX and Bluetooth audio files)

Name	Description
5 	<p>When pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) <p>When pressed and held (more than 0.8 seconds),</p> <ul style="list-style-type: none"> • When pressed in Bluetooth® Hands-free, redials the last dialed call • When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected)
6 	<ul style="list-style-type: none"> • When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call

※The actual feature in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide. To change the system language between English, French, Spanish and Korean, select the **Language** button.

NOTICE

- You cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

You can change Screen Saver Settings in Setup to display a clock on the Screen Saver.

Information

- If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset

The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.



NOTICE

- If you use the system for a long time with the engine off, the battery may become completely discharged.
-

Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

WARNING

- Blank Screen

- Refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock).
-


WARNING

 
- Touching the Antenna During A Thunder Storm

- Do not touch the antenna during thunder or lightning as such acts may lead to lightning induced electric shock.
-

Home Screen

Controls Menu Configuration for the Home Screen

Tap the  icon on any screen to display the Home Screen below.

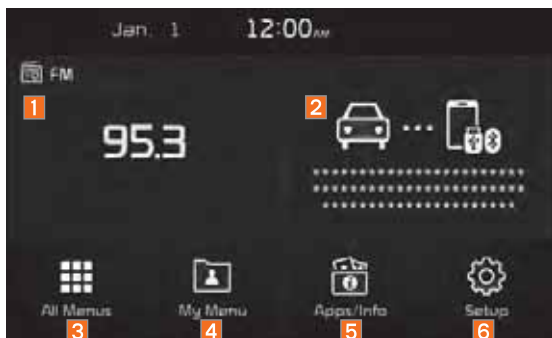








 




Features	Description
1 Radio/Media Widget	<ul style="list-style-type: none"> Shows brief information on the radio or media that is now playing. Tap the area to move to the mode that you are listening to.
2 Connectivity Widget	Shows any connected devices such as iPod, Pandora, and Bluetooth.
3 All Menus	Shows all of the items in the system menu.
4 My Menu	<ul style="list-style-type: none"> You can add up to eight menus here. Add your favorite menus to have quick and easy access to them.
5 Apps/Info	Moves to the Apps/Info screen.
6 Setup	Moves to the Setup screen.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

Icon	Description
	Displayed when the audio is muted.
	Displays the remaining battery of the Bluetooth phone.
	Displayed when connected to Bluetooth for handsfree.
	Displayed when connected to Bluetooth for streaming audio.
	Displayed when connected to Bluetooth for streaming audio and handsfree.
	Displayed when downloading contacts or recent calls from the Bluetooth phone.
	Displayed while on a call with the Bluetooth phone.
	Displayed when the microphone of the Bluetooth is muted.
	Displays the signal strength of the Bluetooth phone.
	Displayed when connected to Wi-Fi.
	Displayed when connecting to Wi-Fi.
	Displayed when 911 connect is available.

Adding Your Favorite Menu Items to My Menu

From the Home screen, select **My Menu** icon, and then **Edit** .

From the Edit My Menu screen, select menu items from the list on the right, then drag and drop them to a desired place on the left.

To remove the item from My Menu, drag item from the left and drop them on the right.



i Information

- Up to eight items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select

 
Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop


Select a menu or item you want, then drag and drop it to where you want to place it.

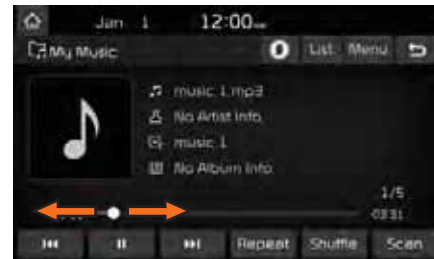

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.




 Drag the frequency bar to the left or right to move to the frequency that you want.

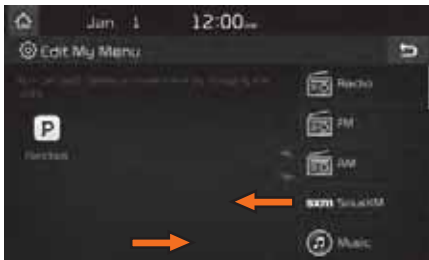

From the Edit My Menu screen, drag and drop icons to add, delete, or move to/from My Menu.

 Flick (Quick Scrolling)

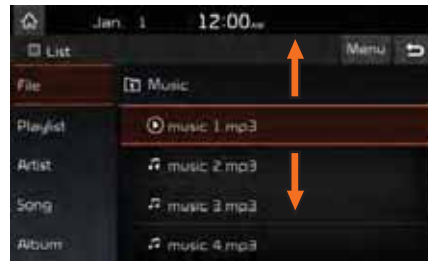

Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler





You can view the previous or next image by flicking left/right on an image on the USB Image screen.



Flick left/right on the frequency bar in the radio player to look up the previous/next frequency available.

Press and Hold

Pressing the  and  buttons in the music player will fast forward/rewind the music.



Radio/Media

FM/AM (with HD Radio™)

HD Radio™ Technology (if equipped)

FM/AM

SiriusXM™

USB

iPod

AUX

Bluetooth® Audio

My Music

Radio/Media

FM/AM (with HD Radio™)

You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu from All Menus on the Home screen.

FM/AM Mode Display Controls




i Information

- If you press the **RADIO** key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in radio mode, select the media widget from the Home screen to access the radio player.

Features	Description
1 Preset Frequencies	<ul style="list-style-type: none">• The stored preset frequencies are displayed for user selection.• After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.• Flick the preset frequencies up/down to scroll quickly through presets.
2 Frequency Bar	<ul style="list-style-type: none">• Flick the frequency bar left/right to search for available radio channels to the left or right of the current channel.• Dragging: Drag the frequency bar to the left/right to find the radio channel that you want.
3 Frequency	Displays the current frequency.
4 Tag	Saves the current music's tag information to the head unit. If connected to iPod, the tag information can be saved on the device.
5 Presets	Shows the stored presets for user selection.
6 SoundHound	Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.
7 Menu	<ul style="list-style-type: none">• List Moves to the frequency list.• Info Turns the Radio text information transmitted from the broadcasting station on and off.• Preset Scan Plays preset frequencies for 10 seconds per item.• Sound Settings Moves to the Sound Settings.




Features	Description
8 Scan/Preset Scan	Displays an active mode from Scan and Preset Scan modes.
9 Band	Changes to the desired band from among FM, AM, and SiriusXM.
10 HD Radio (if equipped)	Used to set whether to turn HD Radio™ reception On or Off.
11 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.
12 SEEK/TRACK	<ul style="list-style-type: none"> • When pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency. • When pressed and held (more than 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
13 TUNE	Turn the  TUNE knob to manually seek available frequencies. <ul style="list-style-type: none"> • FM: Increment/decrement by 200 kHz • AM: Increment/decrement by 10 kHz

HD Radio™ Technology (if equipped)



Program Service Data:

 Contributes to the superior user experience of HD Radio™ Technology. Presents song name, artist, station IDs, HD2/HD3 Channel Guide, and other relevant data streams.



Adjacent traditional main stations are extra local FM channels. These HD2/HD3 Channels provide new, original music as well as deep cuts into traditional genre.



Digital, CD-quality sound. HD Radio™ Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

i Information

- The HD Radio™ screen is displayed only when a HD Radio™ broadcast is being received

HD Radio™ Mode Display Controls



Name	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the current available channels. ⓘ The HD Radio™ related icon display becomes active within regions where an HD Radio™ signal can be received.
2 HD Channel Number	Analog station and corresponding HD Radio™ channel number saved in the pre-set list.
3 HD Broadcast Info	Displays detailed information about the current broadcast (the details of the information shown are different depending on whether the Info button is selected)
4 HD Radio	When the HD Radio™ soft button is ON (the red indicator on the HD Radio™ button is illuminated), HD Radio™ signals will be received.

FM/AM

You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu from All Menus on the Home screen.

FM/AM Mode Display Controls




i Information

- If you press the **RADIO** key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in radio mode, select the media widget from the Home screen to access the radio player.

Features	Description
1 Preset Frequencies	<ul style="list-style-type: none"> • The stored preset frequencies are displayed for user selection. • After selecting frequency, press and hold the preset button for over 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button. • Flick the preset frequencies up/down to scroll quickly through presets.
2 Frequency Bar	<ul style="list-style-type: none"> • Flick the frequency bar left/right to search for available radio channels to the left or right of the current channel. • Dragging: Drag the frequency bar to the left/right to find the radio channel that you want.
3 Frequency	Displays the current frequency.
4 Presets	Shows the stored presets for user selection.
5 SoundHound	Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.
6 Menu	<ul style="list-style-type: none"> • List Moves to the frequency list. • Preset Scan Plays preset frequencies for 10 seconds per item. • Sound Settings Moves to the Sound Settings.



Features	Description
7 Scan/ Preset Scan	Displays an active mode from Scan and Preset Scan modes.
8 Band	Changes to the desired band from among FM, AM, and SiriusXM.
9 Info	Turns the Radio text information transmitted from the broadcasting station on and off.
10 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.
11 SEEK/TRACK	<ul style="list-style-type: none"> Pressing this button briefly (less than 0.8 seconds): Seeks the previous/next frequency. Pressing and holding this button (for more than 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
12 TUNE	Turn the  TUNE knob to manually seek available frequencies. <ul style="list-style-type: none"> FM: Increment/decrement by 200 kHz AM: Increment/decrement by 10 kHz

SiriusXM™

You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu option from All Menus on the Home screen. Select the SiriusXM™ band from the radio player.

SiriusXM™ Mode Display Controls



i Information

- If you press the **RADIO** key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in the SiriusXM™ mode, select the SiriusXM™ radio widget from the Home screen to access the radio player.
- When the power is off, pressing the **RADIO** key will turn the power on and play a SiriusXM™ Radio broadcast.



Features	Description
1 Preset Frequencies	<ul style="list-style-type: none"> • Shows the stored presets for user selection. • After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
2 Channel Logo	Displays the current channel logo.
3 Channel Info	Displays the current channel number and name.
4 Content Info	Displays the artist, title and other information about the current playing song.
5 Category Info	Displays the category of the currently playing song.
6 Band	Changes to the desired band from among FM, AM, and SiriusXM.
7 Direct Tune	Used to search for the desired channel by entering the channel number.
8 Scan	Plays all receivable channels for 10 seconds per item.
9 Category Lock	If pressed, only the channels for the current category can be searched or scanned.
10 Category Selection Buttons	Used to select the previous/next category.
11 Play Live	Switches to the live broadcast mode.
12 Skip Backward	Repeats the previously broadcasted program. <ul style="list-style-type: none"> • Holding for less than 0.8 seconds: Moves to the previous segment. • Holding for more than 0.8 seconds: Moves to the previous 5 seconds.



Features	Description
13 Play/Pause	Pauses/plays the current broadcasting program.
14 Skip/Forward	Moves to the next segment.
15 Tag	Saves the current music's tag information to the head unit. If connected to iPod, the tag information can be saved on the device.
16 Presets	Shows the stored presets for user selection.
17 SoundHound	Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.
18 List	Moves to the channel list.
19 Menu	<ul style="list-style-type: none"> • What is on My Presets? The program schedule saved in my preset. (For more details, see Section 2.5. Viewing Menu.) • Featured Favorites Theme channels recommended by SiriusXM™. (For more details, see Section 2.5. Viewing Menu.) • Preset Scan Plays preset channels for 10 seconds each. • Sound Settings Moves to the Sound Settings.
20 SEEK/TRACK	<ul style="list-style-type: none"> • When pressed quickly (less than 0.8 seconds): Plays the previous/next channel. • When pressed and held (more than 0.8 seconds): Continuously changes the channel until the key is released and plays the current channel.
21 TUNE	Changes the channel.

Selecting through Channel/Category List

  Select the **List** ► Select the desired category and channel.

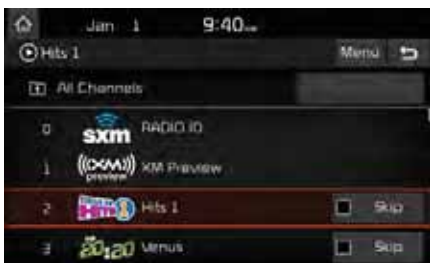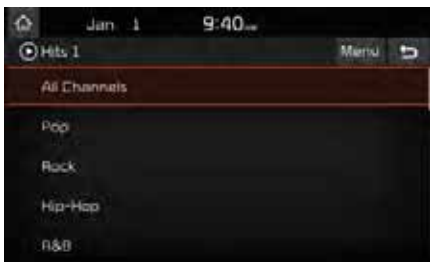

Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing.

If you select the **Skip** button, you can scan channels using the **SEEK** **TRACK** key or the **TUNE** knob by skipping the channels that you chose to skip.

Direct Tune



 
Enter the number of the channel you want to receive.

Viewing Menu


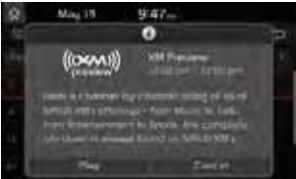 
Using the **Menu** button on the right, you can view the program schedule and information about the Featured Favorites provided by SiriusXM™.




What is on My Presets? (Program Schedule)

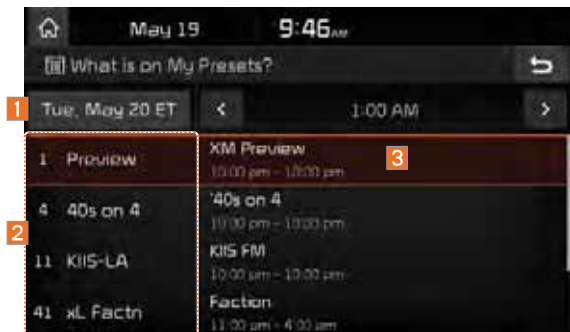

You can select Menu to see program information and the schedules of broadcast channels listed in the presets.

Name	Description
<p>1 Change Broadcast Date</p>	<p>By selecting this option, you can select a broadcasting date. Broadcast information will be provided for one week from the current date.</p> 
<p>2 Preset</p>	<p>Shows saved presets for user selection i A total of 40 frequencies for SiriusXM™ modes can be displayed</p>
<p>3 Program Information</p>	<p>Shows you the program titles to be broadcast at the time that you have chosen. Select a program to see more details.</p>  <p>i If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button.</p>

 Featured Favorites

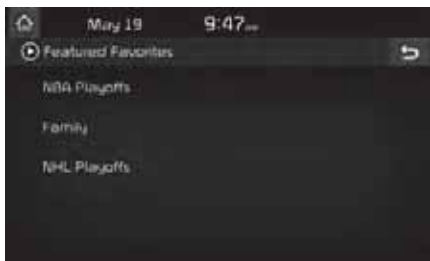

Featured Favorites feature allows SiriusXM™ to broadcast additional presets

- Example 1: "Martha's Favorites" may represent Martha Stuart's favorites presets on her radio
- Example 2: During holidays, "Holiday Music" may represent all the SiriusXM™ channels that are playing the holiday music for easy access by users

Multiple sets Featured Favorites data can be broadcast by SiriusXM™ and can change from time to time

USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music/image files will not be played.
 - For MP3/WMA/OGG files, only music files with compression rates between 8Kbps ~ 320Kbps can be played.
 - Heed caution to static electricity when connecting/disconnecting external USB devices.
 - Encoded MP3 Players will not be recognized when connected as an external device.
 - When connecting an external USB device, the device may not properly recognize the USB in some states.
 - Only products formatted with byte/sectors under 64Kbyte will be recognized.
 - USB devices, formatted to the FAT12, FAT16, or FAT32 file system, are recommended. File systems other than FAT12, FAT16, FAT32, exFAT, and NTFS are not supported.
 - Some USB devices may not be supported due to compatibility issues.
- Take caution so that the USB connector does not come in contact with body parts or objects.
 - Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
 - Make sure to connect/disconnect external USB devices with the audio power turned off.
 - The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB.
 - The use of USB devices for purposes other than playing music and image files is prohibited.
 - Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
 - The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
 - When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
 - When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- When playing iPods, please use a dedicated iPod car cable.
- Normal operation cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.
- To play USB MP3, the USB device must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.



Plug Type Connector

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

i Information

- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.

Supported USB MP3 music specifications

Name	Description
MP3 File Specification	Specification: MPEG1 AUDIO LAYER 3
Recommended Bit Rates and Sampling Frequency	Acceptable sampling frequency: 32, 44.1, 48 (kHz)
	Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (Kbps)
	96, 128, 192 Kbps fixed bit rate/44.1kHz
ID3 Tag	Supports ID3v1.0 and ID3v1.1, ID3v2.2, ID3v2.3, ID3v2.4 ID3 tags
Detailed Specifications	Maximum directory layers: 20 layers Maximum length of folder name/file name: 255Bytes Supported characters for folder name/file name: Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT) Maximum number of files which can be stored onto one USB: 8000


i Information

- The sound quality of MP3 files that use bitrates exceeding 192 Kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not properly operate.

Supported Image Specifications


Name	Description
Image format	JPG, GIF, BMP, PNG (animated GIF, etc. are not supported)
Supported image resolution	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)
Supported image file size	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)



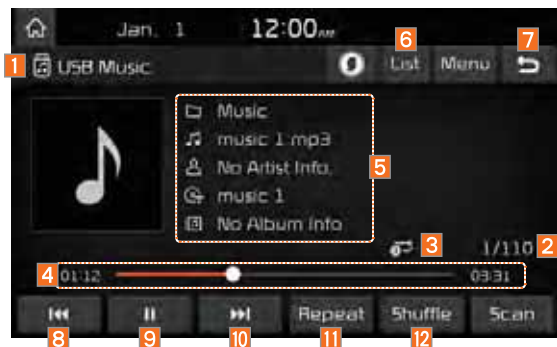 

USB Mode Display Controls



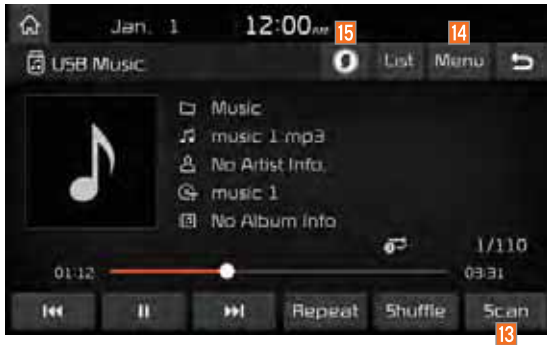 




Features	Description
8 Previous File	<p>If button is pressed (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time)</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous file • If play time is more than 3 seconds, play the current file from the beginning <p>If button is pressed (more than 0.8 seconds) it rewinds the track</p>
9 Play/Pause	Plays/pauses the current file
10 Next File	<ul style="list-style-type: none"> • If button is pressed (less than 0.8 seconds): Moves to the next file • If button is pressed (more than 0.8 seconds): It fast-forwards the track
11 Repeat	<p>Repeats the current file</p> <ul style="list-style-type: none"> • If select the song in the file tab on the list screen: Select the Repeat button to switch between repeating one song (🔁), repeating folder (🔁), and turning repeat off (🔁) • If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Repeat button to switch between repeating one song (🔁) and turning repeat off (🔁)
12 Shuffle	<p>Plays files in random order</p> <ul style="list-style-type: none"> • If select the song in the file tab on the list screen: Select the Shuffle button to switch between Shuffle Folder (🔀), Shuffle All (🔀), and turning shuffle off (🔀) • If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Shuffle button to switch between Shuffle Category (🔀) and turning shuffle off (🔀)

Features	Description
1 Mode	Displays the current operating mode
2 File Index	Shows the current file/total files within the USB
3 Repeat/ Shuffle/Scan	From Repeat/Shuffle/Scan, displays the current operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	<p>Displays the information of the current track</p> <ul style="list-style-type: none"> • When a track in the file tab on the list screen is selected: Displays folder, file, title, artist, album info • When a track in the other tabs on the list screen is selected: Displays artist, title, album info
6 List	Moves to the list screen
7 Back Button	Converts to basic mode screen



Features	Description
13 Scan	<p>Scans the beginning parts of USB files (approx. 10 seconds per file)</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen: Select the Scan button to switch between Scan Folder , Scan All , and turning scan off If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Scan button to switch between Scan category  and turning scan off 

Features	Description
14 Menu	<ul style="list-style-type: none"> Add to Playlist: Add the current track to the Playlist: Playlist is placed on the left tab in the list Save to My Music: You can save the current track to My Music. You can play saved track from My Music without USB. Access to My Music in the Media mode. Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.
15 SoundHound	<p>Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.</p>
16 SEEK/TRACK	<p>If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current track from the beginning</p> <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous/next file If play time is more than 3 seconds, play the current file from the beginning <p>If button is pressed (more than 0.8 seconds) it will rewind/fast-forward the track</p>
17 TUNE	<p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, select the  TUNE knob to play the track.</p> <p> If the  TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.</p>

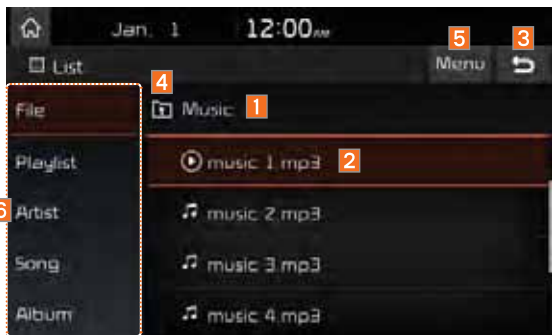 


Features	Description
5 Menu	<ul style="list-style-type: none"> • Add to Playlist: Adds the current track to the Playlist. Playlist is placed on the left tab in the list (Maximum 100 files) Select a desired track and press “Add to Playlist” to add the track in the playlist. • Delete from Playlist: Select a track you want to delete from the playlist and press “Delete from Playlist” to delete the track in the playlist • Now Playing: When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file) • Save to My Music: Stores the music. The stored music can be played in My Music. (This function is not provided in Playlist.)
6 Search Menu	<p>Search tracks by the list type. Search songs according to File, Playlist, Artist, Song and Album.</p> <p>7 If access the search menu while playing a track, it moves to the previous search mode.</p>
7 SEEK/TRACK	<p>If button is pressed (less than 0.8 seconds): Plays previous/next track</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is more than 3 seconds, play the current file from the beginning <p>If button is pressed (more than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. It will play the track normally if button released.</p>
8 TUNE	<p>Turn the TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track.</p>

Features	Description
1 Folder/ Category Name	Displays folder/category name in the list
2 Current Song	Displays the current playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder/ Category	Moves to Upper Folder

USB Image



Features	Description
1 Mode	Displays the current operating mode
2 Folder/File Name	Displays folder name where image is located
3 File Index	Shows the current file/total files within the USB
4 Slideshow	images as slideshow in 5, 10, 20, 30 second intervals
5 Rotate	Rotate image in clockwise direction
6 Info	Shows the file name, resolution and file type of current image
7 Adjust Image Size	Enlarge/reduce (zoom-in/zoom-out) image size
8 List	Moves to the list screen
9 Previous/ Next image	Swipe image left or right to see Previous/ Next image

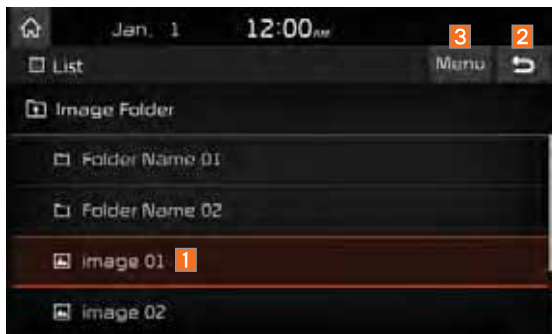 

Features	Description
1 Current File	Displays the current playing file name
2 Back Button	Converts to basic mode screen
3 Menu	Now Playing: When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
4 SEEK/TRACK	Controls background mode <ul style="list-style-type: none"> • Radio mode: Changes Frequency and Channel • Media mode: Changes Track (excluding AUX)
5 TUNE	Controls background mode <ul style="list-style-type: none"> • Radio mode: Changes Frequency and Channel • Media mode: Changes track (excluding AUX). If a desired track is displayed, press the knob to move to the track.

iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in a short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)
 - ※During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/ iPhone product.) will charge the iPod through the head unit.
 - ※**The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)**
 - ※To play iPod music through cable connection, the iPod/USB cable must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1~2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano /Classic, the Kia Motor logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the iPod mode.
- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in iPod mode.
- The screen of multimedia system can be different when you run other music players (e.g. iHeartRadio) on your connected device.

Caution

- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, the song that plays may be different between the system and the Apple device. Reset the device or delete the same songs in the Apple device using iTunes.



- If you control pause, repeat, shuffle, or seek songs when the play time is less than 3s before the song is finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.

Type	1G	2G	3G	4G	5G	6G	6.5G	7G	
iPod Mini	Not Supported								
iPod Shuffle	Not Supported								
iPod Nano	○	○	○	○	○	○	Not released	○	
iPod Touch	○ (iOS 1.1 not supported)	○	○	○	○	Not released			
iPad	○ (Unable to charge, Not verified, Normal working not guaranteed)								
iPad Mini	○ (Unable to charge, Not verified, Normal working not guaranteed)								
iPod Classic	Not Supported				○ (iPod with Video)	○ (iPod Classic)	○ (iPod Classic)	Not released	
Type	3G	3GS	4	4S	5	5C	5S	6	6+
iPhone	Not verified, Normal working not guaranteed	○	○	○	○	○	○	○	○


Caution

- If the iPhone/iPod Touch supports Bluetooth, the Apple device will not be able to use the Bluetooth function if the device is connected through both the USB port and via Bluetooth. Disconnect the USB connection then use Bluetooth Audio
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature. Especially, if you use AUX cable like pictures, this problem may occur.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.

   - If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)
- iPhone and iPod Touch devices are guaranteed to work normally on iOS 8.2 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.

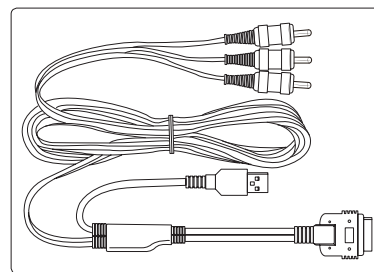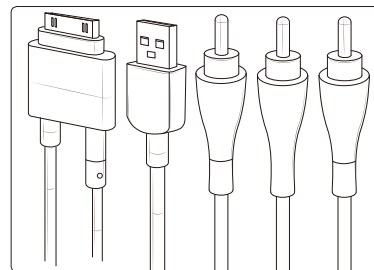



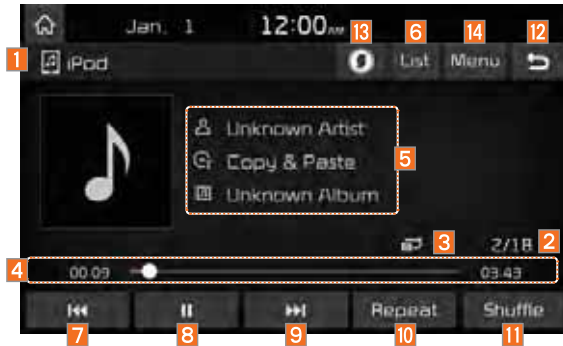


iPod Mode Display Controls






Features	Description
1 Mode	Displays the current operating mode
2 Song Index	Shows the current song/total songs
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the artist/song title/album info
6 List	Moves to the list screen

Features	Description
7 Previous File	If button is pressed (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file If play time is more than 3 seconds, play the current file from the beginning If button is pressed (more than 0.8 seconds) it rewinds the track.
8 Play/Pause	Plays/pauses the current file
9 Next File	<ul style="list-style-type: none"> If button is pressed (less than 0.8 seconds), Moves to the next file If button is pressed (more than 0.8 seconds), it does fast-forward the track.
10 Repeat	Repeats the current file Select the Repeat button to switch between repeating 1 track and turning repeat off
11 Shuffle	Plays files in random order When pressing Shuffle button , it changes to shuffle category → deactivate shuffle then repeat <ul style="list-style-type: none"> Shuffle Category: Shuffle song in the current category
12 Back Button	Move to home/previous mode screen
13 SoundHound	Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.
14 Menu	Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.

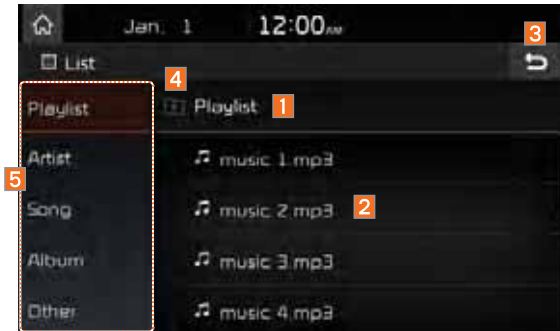 Features	Description
<p>15 SEEK/TRACK</p>	<p>If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is more than 3 seconds, plays the current file from the beginning <p>If button is pressed (more than 0.8 seconds) it will rewind/fast-forward the track</p>
<p>16 TUNE</p>	<p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track.</p> <p> If the  TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.</p>




Features	Description
1 Category Name	Displays the category name
2 Category List	Displays the contents of selected category <i>i</i> If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder
5 Search Menu	Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, Genre, Composer, Podcast and Audiobook . <i>i</i> If access the search menu while playing a track, it moves to the previous search mode.
6 SEEK/TRACK	If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is more than 3 seconds, plays the current file from the beginning If button is pressed (more than 0.8 seconds) it will rewind/fast-forward the track.
7 TUNE	Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the  TUNE knob search will be terminated.

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

 - AUX mode can be used only when an external audio player has been connected.
- The AUX volume can also be controlled separately through the connected device.

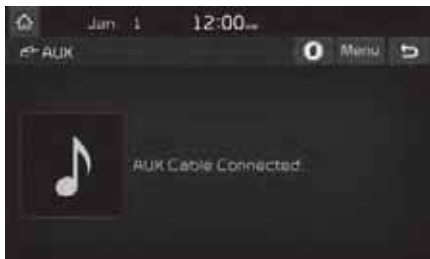


NOTICE

- If only a cable is connected to the AUX without an external device, the mode will be changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.




Bluetooth® Audio

 Bluetooth Audio Mode Display Controls

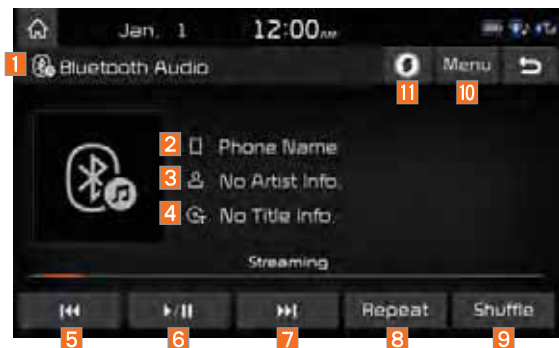

Features	Description
1 Mode	Displays the current operating mode
2 Phone Name	Displays name of connected phone
3 Artist Info	Name of current artist
4 Title	Name of current song


Features	Description
5 Previous File	<ul style="list-style-type: none"> If play time is less than 3 seconds, moves to the previous file If play time is more than 3 seconds, plays the current file from the beginning <i>i</i> This function may differ depending on the model of mobile phone.
6 Play/Pause	Plays/Pauses Bluetooth Audio
7 Next File	Moves to the next file
8 Repeat	Repeats the current file. <i>i</i> This function may differ depending on the model of mobile phone.
9 Shuffle	Plays files in random order. <i>i</i> This function may differ depending on the model of mobile phone.
10 Menu	<ul style="list-style-type: none"> Connections: Moves to the Bluetooth Settings screen. You can pair a new device or change/delete paired device(s). Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.
11 SoundHound	Runs the SoundHound feature. For more details regarding this feature, refer to the SoundHound information in the Info section.
12 SEEK/TRACK	Plays the previous/next file
13 TUNE	 TUNE is not supported.

i Information

- Artist info and Title may not be supported by mobile phone

Bluetooth Connections Settings

 Settings for pairing, connection and disconnection of a Bluetooth device

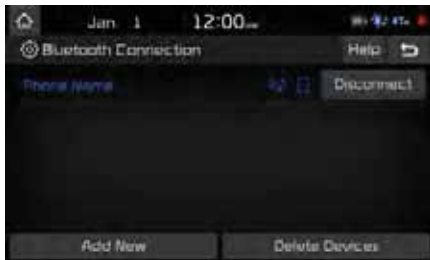


- In Bluetooth Audio play screen, select **Menu** and then **Connections**.

i Information

- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
 - Please check the Bluetooth compatibility in below website: KIA Motors Corporation <http://www.kia.com>
-


My Music

 My Music Mode Display Controls

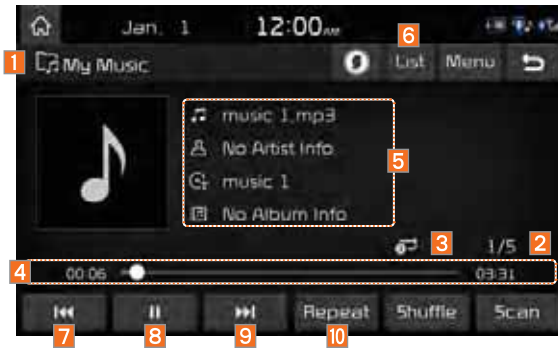


Features	Description
1 Mode	Displays the current operating mode
2 File Index	Shows the current file/total files
3 Repeat/ Shuffle/ Scan	From Repeat/Shuffle/Scan, displays the current operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the information about the current track <ul style="list-style-type: none"> When a track in the file tab on the list screen is selected: Displays file, artist, title, album info When a track in the other tab on the list screen is selected: Displays artist, title, album info

Features	Description
6 List	Moves to the list screen
7 Previous File	If button is pressed (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file If play time is more than 3 seconds, play the current file from the beginning If button is pressed (more than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	<ul style="list-style-type: none"> If button is pressed (less than 0.8 seconds): Moves to the next file If button is pressed (more than 0.8 seconds) it will fast-forward the file
10 Repeat	Repeats the current file <ul style="list-style-type: none"> If select the song in the file tab on the list screen: Select the Repeat button to switch between repeating one song (🔁) and turning repeat off. If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Repeat button to switch between repeating one song (🔁) and turning repeat off (🔁).

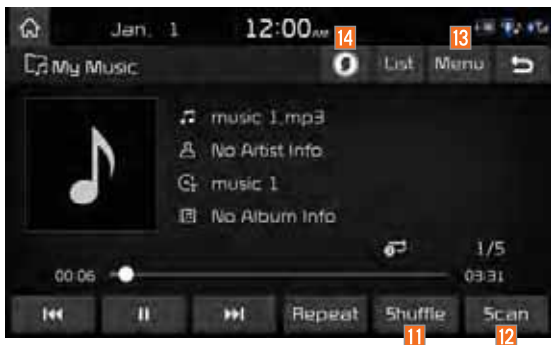 

Features	Description
12 Scan	<p>Scans the beginning parts of files (approx. 10 seconds per file)</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen: Select the Scan button to switch between scan and turning scan off If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Scan button to switch between scan and turning scan off
13 Menu	<ul style="list-style-type: none"> Add to Playlist: Adds the current song to the Playlist. Playlist is placed on the left tab in the list Delete Current File: Deletes the current track from My Music. Sound Settings: Moves to the Sound Settings screen. You can change the settings of the sound.
14 SoundHound	<p>Runs the SoundHound feature.</p> <p>For more details regarding this feature, refer to the SoundHound information in the Info section.</p>
15 SEEK/TRACK	<p>If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous/next file If play time is more than 3 seconds, plays the current file from the beginning <p>If button is pressed (more than 0.8 seconds) it will rewind/fast-forward the track</p>
16 TUNE	<p>Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track.</p> <ul style="list-style-type: none"> If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

Features	Description
11 Shuffle	<p>Plays files in random order</p> <ul style="list-style-type: none"> If select the song in the file tab on the list screen: Select the Shuffle button to switch between shuffle and turning shuffle off If select the song in the other tabs (Playlist, Artist, Song, Album) on the list screen: Select the Shuffle button to switch between shuffle and turning shuffle off

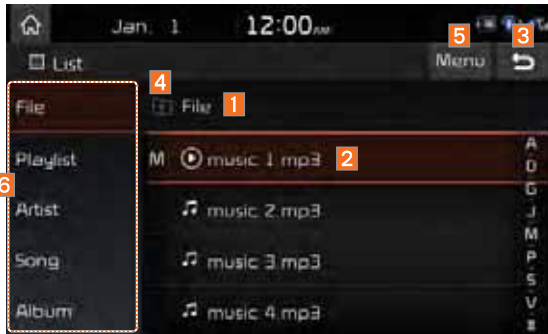 

Features	Description
1 Folder/ Category Name	Displays folder/category name in the list
2 Current Song	Displays the current playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Root Folder

Features	Description
5 Menu	<ul style="list-style-type: none"> • Add to Playlist: Adds the current track to the Playlist: Playlist is placed on the left tab in the list (Maximum 100 files) Select a track and press “Add to Playlist” to add the track in the playlist • Delete from Playlist: Select a track from the playlist and press “Delete from Playlist” to delete the track in the playlist • Delete Files: Deletes files from My Music 7 If delete file from My Music, the information related to song also deleted in the list. • Now Playing: When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
6 Search Menu	<p>Search tracks by the list type. Search songs according to File, Playlist, Artist, Song and Album.</p> <p>7 If access the search menu while playing a track, it moves to the previous search mode.</p>
7 SEEK/TRACK	<p>If button is pressed (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning</p> <ul style="list-style-type: none"> • If play time is less than 3 seconds, moves to previous/next file • If play time is more than 3 seconds, plays the current file from the beginning <p>If button is pressed (more than 0.8 seconds) it will rewind/fast-forward the track</p>
8 TUNE	<p>Turn the TUNE knob to move the focus to previous/next file. If the file you want to play is displayed, press TUNE knob to play the track.</p> <p>7 If the TUNE knob is not pressed within 5 seconds of searching tracks, Tune search will be terminated.</p>

MEMO

Bluetooth

Before Using the Bluetooth® Handsfree
Bluetooth Connection
Bluetooth Phone

Bluetooth

Before Using the Bluetooth® Handsfree

What is Bluetooth® Wireless Technology?

- *Bluetooth*® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, *Bluetooth*® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.

- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the KIA Motor website - KIA Motors Corporation: <http://www.kia.com>

WARNING - Distracted Driving

- Focus on the road while driving. The driver's primary responsibility is in the safe and legal operation of the vehicle. Drivers should not use any hand held devices or other equipment or vehicle systems that distract the driver during vehicle operation.
 - Do not stare at the multimedia screen for long periods of time while driving. Staring at the screen for prolonged periods of time can lead to traffic accidents and can result in personal injuries.
-

Precautions for Safe Driving

- Bluetooth® is a feature that enables drivers to make handsfree calls. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phonebook. Before using *Bluetooth*® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- **Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.**

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features
 - Even if the phone supports *Bluetooth®* Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/connecting with the head unit.
 - If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
 - Park the vehicle when connecting the head unit with the mobile phone.
 - Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
 2. Turn the mobile phone power OFF/ON and try again.
 3. Completely remove the mobile phone battery, reboot, and then again.
 4. Reboot the Multimedia System and try again.
 5. Delete all paired devices from both of Phone and Head Unit sides and then try again
 - The Handsfree call volume and quality may differ depending on the mobile phone.
 - Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
 - If you continue having issue downloading your contacts to your vehicle, contact your mobile phone provider.

Bluetooth Connection


Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Press the **PHONE** key or  key in the steering wheel remote control. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Press the **SETUP** key. ▶ Select **Bluetooth**. ▶ Select **Bluetooth Connection**. ▶ Select **Add New**. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.



The default passkey is 0000.


The vehicle name above is an example.

Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.

 
Connecting Devices by Selecting Phone/Call

Press the **PHONE** key or  key in the steering wheel remote control. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.



Connecting Devices Through the Phone Settings

Press the **SETUP** key. ▶ Select **Bluetooth**.
▶ Select **Bluetooth Connection**. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

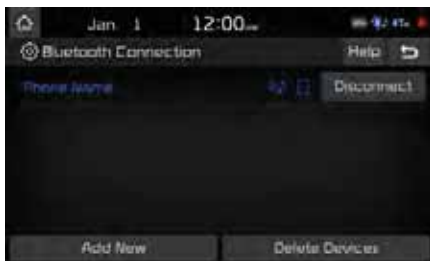

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.

 
Press the **SETUP** key. ▶ Select **Bluetooth**.
▶ Select **Bluetooth Connection**. ▶ Select the name of the device to disconnect.



Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

Press the **SETUP** key. ▶ Select **Bluetooth**. ▶ Select **Bluetooth Connection**. ▶ Select **Delete Devices**. ▶ Select the device name to delete. ▶ Select **Delete**.

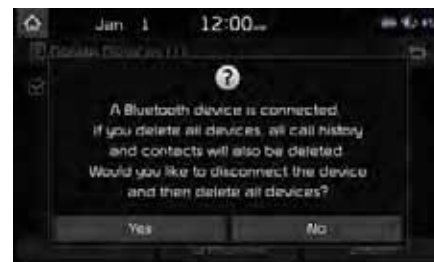
 









Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.




Icons	Description
	You can use Bluetooth phones when a Bluetooth Hands-free connection is established.
	You can use Bluetooth audio features when a Bluetooth audio connection is established.
	You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.
	Call signal strength indicator
	Battery level of the Bluetooth devices connected
	Downloading Call History list
	Downloading Contacts
	In a Bluetooth phone call
	Microphone muted

 
i Information

- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining

Dial

Dials a call after the Bluetooth devices are connected.

- Press the **PHONE** key or  key in the steering wheel remote control.
- You can also select **All Menus** icon, and then **Phone** icon.

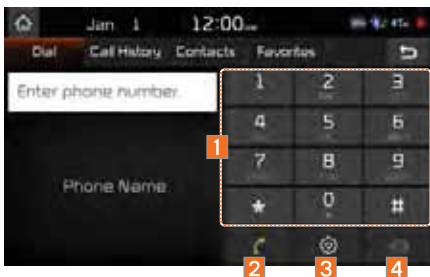


Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Press and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone
2 Call	Makes a call after you dial a number and select CALL. If the number is listed in Dialed Calls, you can select the number and press CALL to automatically dial that number again.
3 Settings	Moves to a screen of Phone Settings.
4 Delete	Deletes the numbers that you entered.

i Information

- Some types of mobile phones may not support the Speed Dial function.

 Accept/Reject Call

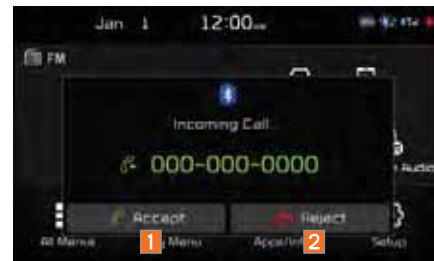


If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

Name	Description
1 Accept	Answers the call.
2 Reject	Ignores the call.

i Information

- In some mobile phones, the caller's number may not be displayed, and the Reject feature may not be supported.

 Using the Menu During a Phone Call

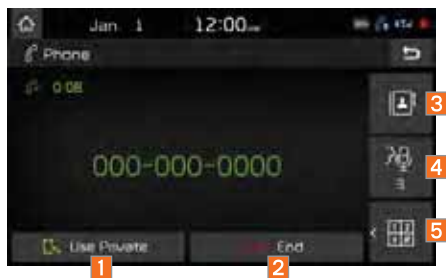

When making a call, you can use the following menu items.


Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Contacts	Displays the Contacts list.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

i Information

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Hands-free, you cannot access other modes, such as Radio and Settings.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

 Press the **PHONE** key, and then **Call History**.

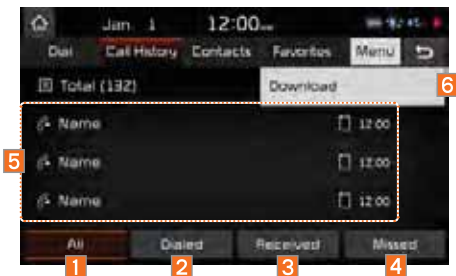


Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Download	Downloads the call history information from your mobile phone.

i Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon (📶).
- If the call history download is turned off on the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth settings or display status are normal.
- Some devices do not support call history download. Check if your Bluetooth device supports download feature. For details regarding Bluetooth-supported devices and their functional compatibility, visit <http://www.kia.com>


Contacts

 Press the **PHONE** key, and then **Contacts**.

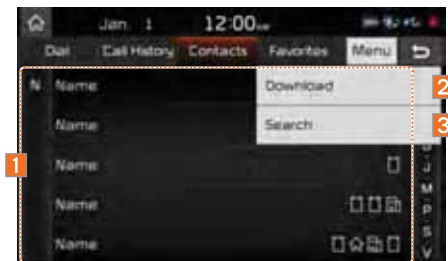


Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Download	Downloads contacts from your mobile phone.
3 Search	Searches Contacts.

i Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
 - You cannot edit or delete downloaded phone numbers from your car.
 - Contacts can be viewed only when the Bluetooth device is connected.
 - Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
 - Downloaded phone numbers may be lost depending on the condition of the head unit. Keep your important data in a safe place.
 - Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
 - The status bar displays a  while downloading contacts.
 - The download will not be available if the contacts download function is turned off on your Bluetooth device.
- Some devices require a device authentication for downloading your contacts. If download fails, check your phone screen and confirm the download if necessary.
 - Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts download. For Bluetooth supporting contacts details and compatibility, visit <http://www.kia.com>

Favorites

 Press the **PHONE** key, and then **Favorites**.

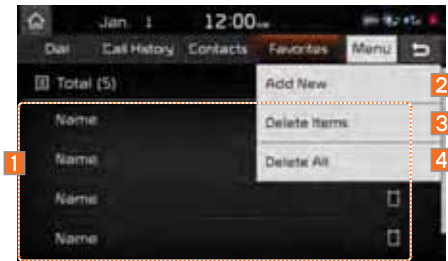

Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Add New	Adds a new number to Favorites.
3 Delete Items	Deletes numbers that you select from Favorites.
4 Delete All	Deletes all of the numbers from Favorites.

MEMO

UVO eServices

The 911 Connect feature may not operate in the following situations

About UVO eServices (For UVO Model)

Before using UVO eServices

Connecting Bluetooth

Pair a device from Bluetooth-enabled phone

Connecting to smartphone via USB

911 Connect

Roadside Assist

Vehicle Diagnostics

My Car Zone

Parking Minder

eServices Guide

UVO eServices (For UVO Model)

The 911 Connect feature may not operate in the following situations

- ❑ When the vehicle ignition is not turned on
- ❑ When the phone Bluetooth® feature is set to off
- ❑ When the phone Bluetooth® cannot be connected or becomes disconnected
- ❑ When there are no phones paired with the vehicle
- ❑ When cellular service is unavailable
- ❑ When the power turns off due to phone power (battery) issues
- ❑ When a Bluetooth® device without phone feature support has been connected, such as an MP3 device
- ❑ When the system is booting
- ❑ When the system power supply is unstable
- ❑ When the attempted call is blocked due to user operations
- ❑ When the 9-1-1 call is unstable due to phone or other communication network issues
- ❑ When the call feature is not operating due to phone settings set by the user
- ❑ When the phone cannot be controlled via Bluetooth® due to phone specifications or characteristics

Using UVO eServices and Precautions

❑ Download the UVO eServices App and install it on your smartphone. The app can be downloaded from your smartphone's app store.

❑ For using UVO eServices call features such as 911 Connect, Roadside Assist and eServices Guide, a smartphone must be connected with the vehicle via Bluetooth. Pair and connect your smartphone with the vehicle. For information on connecting your Bluetooth device, refer to the smartphone user's manual and instructions on the Phone Help screen on your radio. Up to five Bluetooth devices can be paired to the vehicle and only one device can be connected at a time.

❑ For using data communication of Vehicle Diagnostics, Parking Minder, and My Car Zone, smartphone must be connected with the vehicle via USB cable.

※ The use of genuine cable is recommended. (The use of other products may result in abnormal or non-proper operation.)

❑ Login and activate the UVO eServices App on your smartphone.

❑ Some UVO eServices features will only be available when your smartphone is connected with the vehicle via USB and the UVO eServices App is running.

❑ UVO eServices may not operate properly with incompatible smartphones. To view the list of compatible smartphones, please visit MyUVO.com

❑ Communication between the vehicle and smartphone app may temporarily disconnect depending on the phone state.

❑ If the feature is not operating properly, you may need to reset the UVO eServices App or the smartphone and try again according to the following steps.

1. Try feature again in the Head Unit.
2. Restart smartphone app
3. Re-connect Bluetooth and USB cable.
4. Reset smartphone
5. Delete Device and pair again

❑ Some services use the customer's mobile phone data plan for data communication. Therefore, the features will function in accordance with the cellular plan.

❑ Use of the most up-to-date app version is recommended.

❑ For smartphone related inquiries, please visit MyUVO.com.

About UVO eServices (For UVO Model)

UVO eServices provides the following features through Bluetooth and/or USB connection to your smartphone.

Name	Connection	Description
1 911 Connect	BT	If an airbag deploys, your vehicle automatically initiates a call to 9-1-1 and sends your vehicle's location information to the 9-1-1 operator.
2 Roadside Assist	BT & USB	If a diagnostic issue exists, you can connect with a Roadside Assist.
3 Vehicle Diagnostics	USB	Informs you if there is a diagnostic issue found in your vehicle. If an issue is found, you can contact a call center through Roadside Assist or reserve an appointment with your preferred Kia dealer through Schedule Service.
4 My Car Zone	USB	Keeps track of predefined triggered alerts such as Speed Alert and Curfew Limit Alert from the My Car Zone feature.
5 Parking Minder	USB	Saves the location of your parked vehicle on your UVO eServices smartphone app. You can check where your vehicle is parked through the UVO eServices App on your smartphone.
6 eServices Guide	BT	Receive guidance on how to use UVO eServices.

i Information

- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.

To use UVO eServices, the following conditions must be met.

1. The UVO eServices smartphone app must be installed and you must log in using your MyUVO account credentials.
2. The smartphone must be connected via Bluetooth and USB cable to the vehicle.
3. Once this is complete, eServices must be activated.

Before using UVO eServices

Installing the UVO eServices App on your smartphone

1. Download and install the UVO eServices App on your smartphone.

The app can be downloaded from the Apple App Store or Google Play.

2. Register your vehicle and account at MyUVO.com

Note: MyUVO.com is accessible from your phone's browser.

3. Start the UVO eServices App on your smartphone and log in.

Connecting Bluetooth

Press the  key on the steering wheel or press the **PHONE** key on the head unit.

Press **SETUP** ► **Bluetooth** ► **Bluetooth Connection**.



Pair a device from Bluetooth-enabled phone

1. Turn on the Bluetooth feature on your smartphone's Bluetooth settings screen.
2. Search Bluetooth devices on your smartphone.
3. Select the Vehicle Name on the phone that matches the name shown on the screen.
4. Verify the passkey shown on the touch-screen.

If the phone supports SSP, check the passkey on your Bluetooth® device and confirm the authentication.



Connecting to smartphone via USB

1. Connect your smartphone with the vehicle via USB cable.

NOTICE

 
- For smartphone related inquiries, please visit MyUVO.com.

Activating UVO eServices

Press the **UVO** key, then press the **Vehicle Diagnostics** or **My Car Zone** or **Parking Minder** button.



Press the **Yes** button, then the UVO eServices activation process will begin.

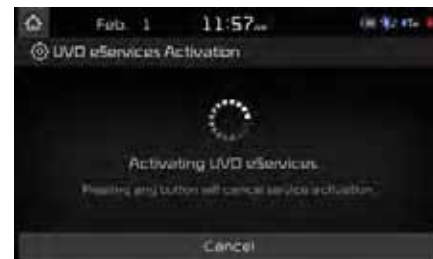

NOTICE

- Before activating UVO eServices, ensure your phone is connected to the vehicle via USB cable.


911 Connect

911 Connect

If an airbag deploys, your vehicle automatically initiates a call to 9-1-1 and sends your vehicle's location information to the 9-1-1 operator.

The 911 Connect feature is available only when the mobile phone is connected via Bluetooth.

By default, this feature is turned off. To turn it on, you must turn it on in the eServices Settings menu. By enabling this feature, you are agreeing to the 911 Connect terms of use.

A  icon is displayed at the top of the touch screen as shown below when phone is connected to UVO eServices system via Bluetooth and the 911 connect feature is turned on.



Initiating a 911 Call

If an airbag deploys, the following screen is displayed and a call is automatically placed to 9-1-1 after 10 seconds.



Once a call is connected with a 9-1-1 operator, it is possible to request emergency services to be dispatched to your location.



The 9-1-1 operator may request information on the current location of your vehicle. When the 9-1-1 operator requests your vehicle location, “Sending Location” is displayed on the screen and the vehicle location is automatically sent to the 9-1-1 operator.



When the 9-1-1 operator attempts to talk to the driver again, the call time is displayed and allows the driver to speak with the 9-1-1 operator.



Roadside Assist

Roadside Assist

If there is any issues in the vehicle, you can connect with a Roadside Assist agent. The Roadside Assist feature can be used only when your phone is connected via Bluetooth.

Press the **UVO** key ▶ **Roadside Assist**



Vehicle Diagnostics

Conducting Vehicle Diagnostics

Vehicle Diagnostics is available only when the ignition is turned on and the vehicle is parked.

It also requires that UVO eServices is activated, and the Phone is connected via USB cable before starting Vehicle Diagnostics.

Press the **UVO** key ▶ **Vehicle Diagnostics**



The Vehicle Diagnostics process will begin.

When a diagnostics check is in progress, keep the vehicle in park with the ignition on. To cancel diagnostics, press the **Cancel** button on the touch screen or any hardkey.



If diagnostic issues are found, press the **Send Report** button to send to your MyUVO account or press the **Schedule Service** button to schedule an appointment with your preferred or nearby Kia dealer.

Schedule Service

When scheduling an appointment using the **Schedule Service** button, pressing the **Preferred** button will allow you to request an appointment with your preferred Kia dealer and send your vehicle's diagnostics information.

Pressing the **Nearest** button will allow you to request an appointment with the nearest Kia dealer and send your vehicle's diagnostics information.



Press the **Preferred** or **Nearest** button.

 


Request an appointment with Preferred or Nearest Kia Dealer and send your vehicle's diagnostics data.




Send Report

Press the **Send Report** in the vehicle diagnostics result screen.

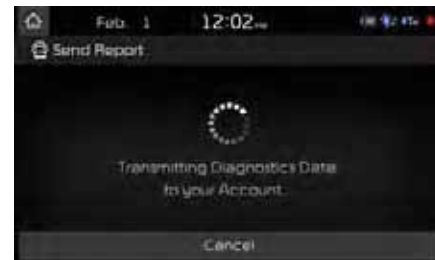

 Vehicle Diagnostics Data is transmitted to your account and you can see the report on MyUVO.com

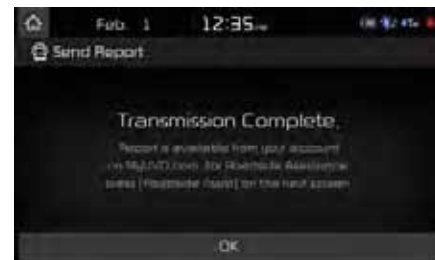

Even if diagnostic issues are not found after Vehicle Diagnostics, it is recommended that you send the diagnostic results to your MyUVO account.

Press the **Send Report** button to send the diagnostics results to your MyUVO account.



 
Scheduled Diagnostics

If you have set up Scheduled Diagnostics on your UVO eServices App, a vehicle diagnostics check will automatically start on the day you selected.

On the date of the Scheduled Diagnostics, the following window will be displayed.



Press the **Yes** button on the touch screen to proceed with diagnostics.

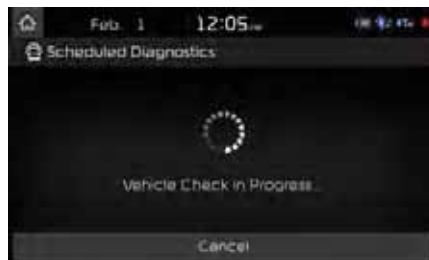

Press the **Send Report** button to see the Vehicle Health Report on MyUVO.com.



Automatic Diagnostics

If a critical diagnostics issue with your vehicle's powertrain is detected, Automatic Diagnostics will be notified.



NOTICE

- The screen messages differ based on the vehicle diagnostics severity. Ensure your phone is connected to the system via USB cable before using **Schedule Service** and **Send Report**.

My Car Zone

My Car Zone is a feature that provides alerts and driving history for Curfew Limit Alerts and Speed Alerts set by the user.

Name	Description
Curfew Limit Alert	Curfew Limit Alerts are alerts that are triggered when a driver is driving within a predefined time range.
Speed Alert	Speed Alerts are alerts that are triggered when a driver exceeds the predefined maximum speed.

My Car Zone features are supported only when UVO eServices has been activated.

Press the **UVO** key ▶  My Car Zone

Curfew Limit Alerts History



Speed Alerts History



Curfew Limit Alert



Speed Alert



Curfew Limit Alert

You can check the Curfew Limit Alert history for a list of past triggered curfew alerts.



Name	Description
1 Phone	Name of phone connected upon triggered curfew limit
2 Alert Time	Initial alert time
3 Duration	Total duration of driving while curfew limit was triggered
4 Driving Time	Total driving time from turning ignition on until turning ignition off

Speed Alert

You can check the Speed Alert history for a list of triggered speed limit alerts of the vehicle.



Name	Description
1 Phone	Name of phone connected upon triggered speed limit alert
2 Max. Speed	Maximum vehicle speed upon triggered speed limit alert
3 Alert Time	Time from first triggered alert until last triggered alert
4 Duration	Total triggered alert time from turning ignition on to turning ignition off

To check My Car Zone alert history from your smartphone, you must first send the alert history to your MyUVO account.

Parking Minder

Sending Parking Location

The location where your vehicle is currently parked can be sent to your smartphone.

Ensure that your smartphone is connected via USB and the UVO eServices App is running before using this feature.

After parking the vehicle, press the **UVO** key ► **Parking Minder** to send the vehicle's location to your smartphone.



Once the parking location has been sent, you can view your vehicle's location from the UVO eServices App on your smart-phone.



NOTICE

- When the parking location is being sent, do not drive the vehicle. Ensure that you have logged into the UVO eServices App, and your phone is connected to the multimedia system via USB cable.
- When ignition is turned off while the phone is connected via USB, Parking Minder can be transferred automatically if the option is set up in UVO eService Settings

eServices Guide

eServices Guide

eServices Guide provides guidance on how to use UVO eServices.

This feature is only available when the mobile phone is connected via Bluetooth.

Press the **UVO** key ▶ **eServices Guide**



UVO eServices Settings

Refer to **SETUP** ▶ **UVO eServices**.

MEMO

Navigation

Basic Features

Menu

Destination Search

Route Search

Navigation Settings

Troubleshooting




 











Navigation

 Basic Features

Operating Navigation Screen

 Basic features on the map screen.



	Name	Description
1		Move to Places Menu.
2		Go to the Home screen.
3		Change the map view mode.
4		Adjusts the volume.
5		Zoom in the map.
6		Set the zoom level automatically according to the guidance.
7		Zoom out the map.
8		Quick and easy selection of a destination and options.
9		Enter the navigation menu screen.
10		Touch to scroll the map.
11		Quick and easy selection of a destination from the map screen.
12		Set a waypoint to the current route.
13		Save frequently used address to address book.
14		Find a POI(Point Of Interest) around the current position.
15		View the vehicle's current position on the map screen.

Places



You can use this menu when the gear is in “Parking” mode and there is no destination set. Press the Search screen to move to “Places”.



Please refer to “Places” in “Destination Search” for more details.


Changing Map View



Touch the compass arrow icon to toggle between a map oriented to the North, oriented parallel to the vehicle's heading and 3D View.

Navigation Volume



Press the  button to adjust the navigation volume.



Name	Description
1	Set the volume to mute.
2	Turn the volume down.
3	Turn the volume up.
4	Slide to set the volume.
5	Sets the volume of voice guidance louder than that of audio.

Zoom In/Zoom Out

Zoom the map view screen in and out.





Press **+** or **-** to set the zoom level.

Map Scale

Sets the zoom level automatically according to the type of road.



Name	Description
 Scale Fix	Manually adjust the map scale.
 Auto Scale	Change the map scale automatically depending on the type of road.

Menu

Route

Press  button on the bottom left of the screen ► Press **Route** button.



Select the **Route** button to set **Reroute**, **Route Options** or **Detour**.

Reroute



The **Reroute** button is active only when there is an active route.

You can search a route again.

Route Options



You can select an option from Route, Traffic Information, Freeway, Toll Roads, Ferry, HOV/Carpool Lanes, Electronic Toll or Private/Gated Roads.

Press **Save** to save your selection.

If there is a route already saved, another route will be searched.

Detour



The **Detour** button is active only when there is an active route.



Selected distance is detoured from the current location.

Map Display

Displays the direction of the map.

Press **N**, **↑** or **3D**.



Name	Description
1 N North Up (2D)	Displays always has north at the top of screen.
2 ↑ Heading Up (2D)	Displays always shows the vehicle's direction as proceeding towards the top of the screen.
3 3D 3D	Shows the map in 3 dimensions.
4 3D Buildings 3D Buildings	Shows or hides buildings on the map.

POI

Select the **☰** button on the bottom left of the screen ▶ Select the **POI** button.

View Nearby POIs

 


Press **On**, **Off** button to set whether to show nearby POIs or not. When categories are selected, they will appear on the map. (ex. Gas Stations)

The lists of nearby gas stations are displayed.



The list can be sorted to display in order of distance or name.

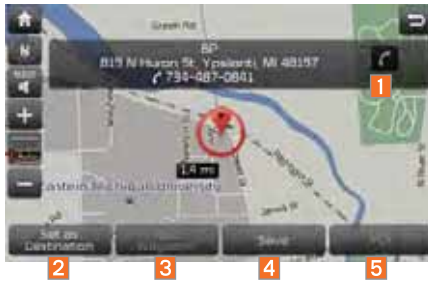

Name	Description
1	Call to the selected location (Phone needs to be connected via Bluetooth).
2	Set the place as a destination.
3	Set the location as a waypoint.
4	Save the location.
5	Search nearby POIs.

Edit



Change the shortcut POIs to display (ex. Gas Stations)



Select the desired category to change. (ex Restaurants)



Select new category to display (ex. American)



Gas Stations is changed to American .

POI Categories



Select the item to search.

Press the **History** button to check the previous search result.




Press the **Search** button to search the POI category by name.



Select the desired POI to check the location and for detailed information.

Name	Description
1	Search POI around the current position.
2	Search POI around the destination. i Active only when a route's planned.
3	Search POI along route. i Active only when a route's planned.
4	Search POI around the current cursor when the map scrolled. i Active only when the cursor position is different from the vehicle position.
5	Search POI around the city selected.

Traffic

Press the  button on the bottom left of the screen ► Select the **Traffic** button.

Traffic List



On the traffic list, the current traffic/road event information is displayed in order of distance.

Name	Description
1	Direction from the current location.
2	Distance from the current location (mi or km).
3	Displays traffic info symbol based on the type of event.
4	Description of traffic event.

Additional traffic information may be displayed upon clicking on the **Category** button.



Name	Description
1	Display 'Road Construction' information.
2	Display 'Accident' information.
3	Display 'Slow Traffic' information.
4	Display 'Incident' information.
5	Display 'Hazardous Road Conditions' information.
6	Display 'Travel Information'.

When **On Route** is activated, only traffic information on your route is displayed.






On the traffic list, the current basic traffic/road event information is displayed in order of distance.

Select the combo box to change the arrangement in order of Category/ Distance.

Name	Description
1	Select the combo box to arrange.
2	Arrangement by category: Display traffic information arranged in order of traffic information event type.
3	Arrangement by distance: Display the traffic information in order of distance closer to the current location.

 Traffic detail

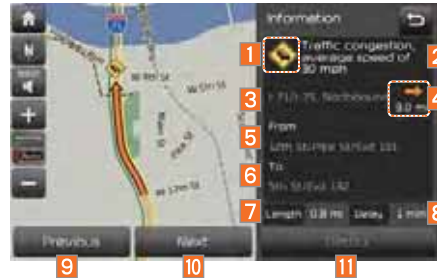

Select the traffic information on the traffic list to display the detailed screen as shown in the screen.

Display the symbol of traffic event and arrow which indicates the road from start to end of the traffic event. Detailed information is available on the right screen.

Name	Description
1	Symbol of traffic event.
2	Event name of traffic information.
3	Road name/road number including direction.
4	Direction and distance from the current location.
5	Intersection where traffic event starts.
6	Intersection where traffic event ends.
7	Total distance of traffic event.
8	Estimated delay time.
9	Check the previous traffic information.
10	Check the next traffic information.
11	Detour the route based on the traffic information.

Traffic detour

If there is traffic information on the route, it is possible to detour the route using traffic information and search other routes.

When the **Detour** button is enabled in the View Traffic Detail, press the **Detour** button to detour.



Select the desired section.

 


Check the information and press the **Detour** button.



Press the **Start Guidance** button to apply the detoured sections and search other routes.

Traffic Pop-up

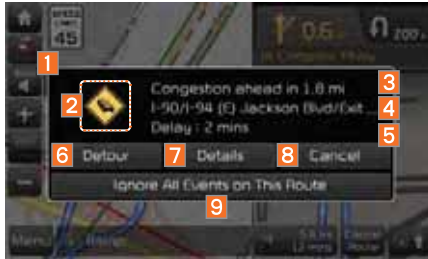

If there is “red traffic flow” on the route, a traffic information pop-up is displayed.

On the traffic information pop-up window, brief information is displayed and Details and Detour can be selected.

If you do not wish to see this pop-up displayed again during the current route, select **Ignore All Events on This Route** button on the display.

Name	Description
1	Pop-up Icon
2	Symbol of traffic event
3	Road Name/Road Number
4	Distance from current location.
5	Estimated delay time.
6	Search detour route.
7	View the detailed information regarding traffic event.
8	Close the pop-up message.
9	Set not to display pop-up on the current route. (Maintained until the destination is reset)



On the traffic information pop-up, select detour or details to perform action.




Press **Detour** to change the route.



Press **Details** for further information.

Save

Press the  button on the bottom left of the screen ► Select the **Save**.




To store the location on the current map to the address book.



Name	Description
1	Change the name.
2	Enter the phone number.
3	Select the ON , OFF button to set the sound notification.
4	Possible to register Symbol.
5	Press Icon&Name , Icon or None to display on the map screen.
6	Designate to the Favorite item. When the favorite is designated, press the button on the bottom of the Destination menu and request the route guide immediately.
7	Save the setting.

Turn List

Press the  button on the bottom left of the screen ► Select the **Turn List**.



Turn on or off the Turn List.

Destination Search

Places

You can enter POI Name, Address or Coordinates that you wish to search by.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Place or Address** Search Bar.



Enter the POI Name, Address and Coordinates of the location you want in the input window above, and press the **Done** button.



If you select a location from the search result list, it will bring you to the point.



If you press the **Filter by City** button on the search result screen, it will bring you to the City search screen where you can filter the search results by city names.



If you press the **Filter by Category** button from the search result screen, it will bring you to the POI Categories screen where you can filter the search results by POI Categories.



Once the destination has been identified either by POI name, address, or coordinates, the map screen will be displayed. From this screen you can set the destination or add a waypoint, or add the displayed destination to your address book.

Address

Set destination by address search.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Address** icon.



How to Search Address



Search criteria can be entered in any order. Example: **State** then **City** then **Street** then **House No.**

Name	Description
1	Select state to search.
2	Enter house number. If you don't know the house number, press Skip button.
3	Enter a street name. If same street names exist in other cities, the list of cities will be displayed.
4	Select a city before entering the street name. Addresses are searched only from the selected city.



Enter the address to check the location information on the map.

Name	Description
1 Set as Destination	Set the location as a destination.
2 Add Waypoint	Set the location as a waypoint.
3 Save	Save the location.
4 POI	Search nearby POIs.

Previous Destinations


Select from previously inputted addresses and POIs.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Previous Destinations** icon.



Arrange by all, latest destinations, latest searched places and latest departing places. Arrange in order of date and time.

Name	Description
1 All	Display all destinations, departing places, and searched places.
2 Destinations	Display previous destination places for route guidance.
3 Start Points	Display previous departing places for route guidance.
4 Searches	Display previously searched places for route guidance. i But, not displayed when the searched places are set as destination.

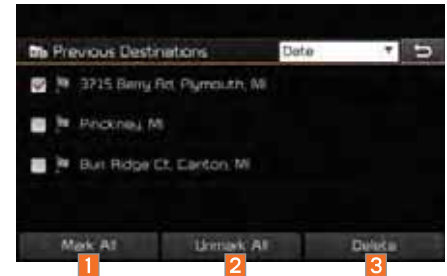 

Press the **Delete** button to delete the information.

Name	Description
1 Mark All	Select all.
2 Unmark All	Deselect all.
3 Delete	Delete the selected item(s).

Local Search

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Local Search** icon.



 
Runs Google Local Search.



Enter the desired keywords and press the **Done** button.



Searching is in progress.

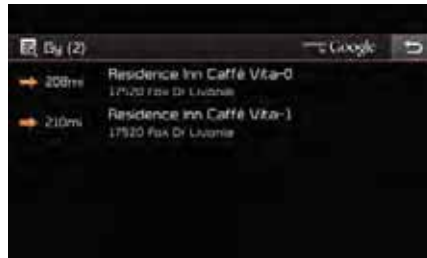

If one or more results are found, the search results are displayed. Select one of the search result.



Press the **Set as Destination** button to start guidance.

POI Categories

 
Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **POI Categories** icon.



Select the desired item.



Select the desired item in the sub-categories.

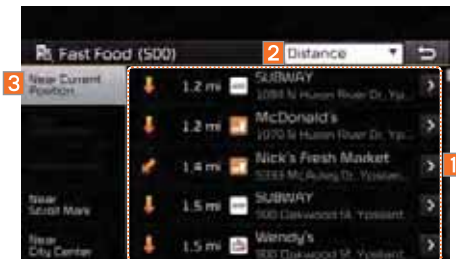

Name	Description
1	Select the desired destination among the searched items and add it as a way point.
2	Arrange in order of Distance and Name.
3	Arrange in order of Near Current Position, Near Destination, Along Route, Near Scroll Mark and Near City Center.

Gas Stations

Search for gas stations.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Gas Stations** icon.



Select the desired destinations among the search items.

Restaurants

Search restaurants.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Restaurants** icon.



Select the desired destination among the searched items.

Emergency

Search emergency facilities.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Emergency** icon.



Check the current location information and select the desired item in the sub menu (ex. Police Stations)

 


Select the desired destination among the searched items.

Address Book


Search the destination with the address book.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select the **Address Book** icon.

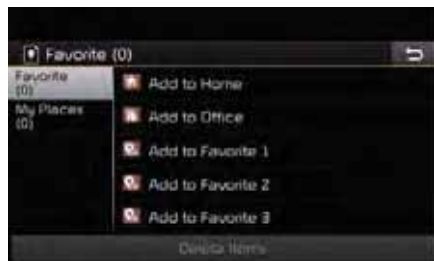

Select the desired group.

 If you save address in the Favorites tab, you can set destinations easily by pressing the icons such as **Go Home** and **Office** at the bottom of the Destination menu.

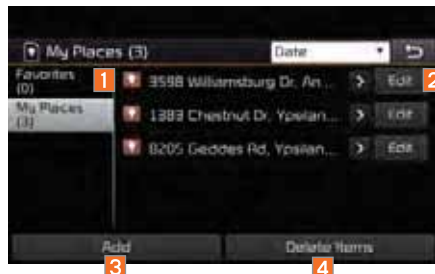

Name	Description
1	Select the desired destination from the searched items.
2	Edit the item.
3	Register a new Address.
4	Delete the desired item.

Phone Number

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Flick the screen in up direction to scroll to the bottom row of icons in the Destination tab. ▶ Select the **Phone Number** to search POI by phone.



Search destination by phone number.



Type phone number to search. To search for a list of numbers based on a partial phone number entry, enter a few numbers and press **Done** to narrow the search results.



Select the desired destination among the searched items.



Press the **Set as Destination** button to start guidance.

Freeway Exit/Entrance

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Freeway Exit/Entrance** to search by freeway exit/entrance.



Type freeway name and exit/entrance.



Press the **Set as Destination** button to start guidance.

Intersection

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Intersection** to search by intersection.



Type 1st Street name, the State, 2nd Street name.



Press the **Set as Destination** button to start guidance.

Coordinates

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Coordinates** to search by coordinates.



There are two ways to search by coordinates (D.M.S or Decimal Degrees). After typing coordinates, press the **Done** button to search.



Press the **Set as Destination** button to start guidance.

Favorite Places

Set the route using your favorite places. Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Select the **Destination** tab. ▶ Select from favorite places.



On the button where locations are not registered, the **+** icon is displayed. When a location is registered, the **+** button disappears and the buttons 1 to 3 are displayed as your favorite places.



Press the **Go Home** button then press the **Yes** button to set the Favorite 'Go Home'.



Office, Special 1, Special 2, and Special 3 can also be set as a Favorite using the same steps.



Pressing any of the Favorite Place buttons will start the route guidance to the saved Favorite address.

Route Setting

The route can be set after searching for a destination.



While the destination is set, the buttons **Set as Destination** and **Add Waypoint** appear.

Press the desired button to change a destination or add a waypoint.

Destination Setting



After searching the destination, press the **Set as Destination** button to set the location as a destination.

All Routes



When the alternative routes option is enabled in navigation setting, two routing options are displayed based on faster time and shorter distance.


- **Faster Time:** Select time-optimized route, being the fastest roads.
- **Shorter Distance:** Select short distance, irrespective of how fast or slow progress will be calculated.

Name	Description
1 Faster Time 2.2 mi 8 mins Shorter Distance 2.2 mi 8 mins	Display total distance, travel time. Select the desired route.
2 Start Guidance	Start the guidance with the route.
3 Route Options	Change the route option.
4 Route Info.	You can check route information.
5 Edit Route	Edit the route.
6 Total	Display total distance of the route.
7 Freeway	Display length of freeway on the route.
8 Toll Road	Display length of toll road on the route.
9 Ferry	Display length of Ferry route on the route.

The route will be calculated using the option “Faster Time” by default.



 Alternative routes can be suggested if necessary, **SETUP** key ► **Navigation** Icon ► **Route** ► **Alternative: ON**

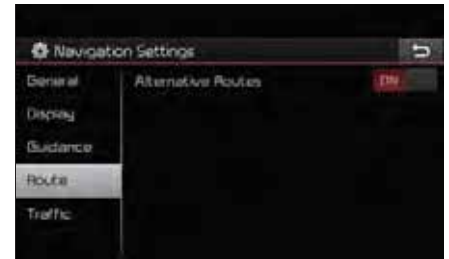

Adding Waypoint



Press the **Add Waypoint** button to set the position as a waypoint and search the route.



Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5	Press the button to finish editing.
6	Press the button to add waypoint.

Registering Location



Press **Save** at the desired location to register the location.

 
 


Enter the detailed information of the location to save.

Route Guidance

Show route guidance detailed information.

Route Guidance Screen

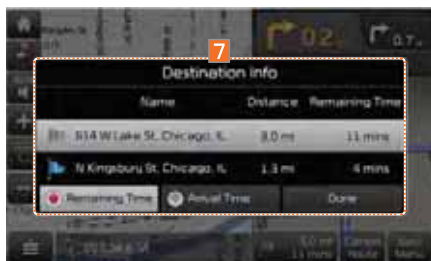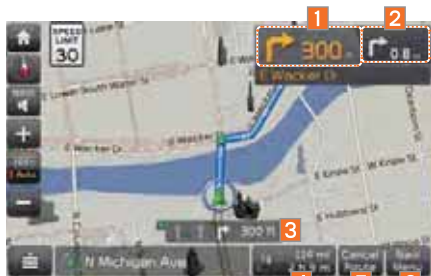

Remaining Time: Display the time remaining until destination.



Arrival Time: Display the estimated time of arrival.



Name	Description
1	Displays the distance and direction to the first turn point.
2	Displays the distance and direction to the second turn point.

3	Displays the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.
4	Displays the distance to the destination and the estimated time of arrival. Press the button to check the detailed information. If no waypoint is set, you will see the remaining distance or estimated time of arrival in turn each time you click the button.
5	Cancel the route.
6	Enter the navigation menu screen.
7	Displays the destination information.
8	Turn on or off the Turn List.

Split Screen during Route Guidance



Approaching the turning point, the detailed road and travel information is automatically displayed on the right side of the screen.

Name	Description
	<ul style="list-style-type: none"> • Turn Point: Displays direction and shape to turn shortly. • Distance to turn: Displays distance to next turn point.
	Road name to maneuver: Info of the road.
	Detail Distance Bar: Displays distance to next turn point.

 


Details additional info can be displayed on Freeway.



Additional info of Freeway exit or Rest area can be displayed by pressing the button **Details**.

Detailed information for POIs around freeway exit is listed by pressing POI symbols.

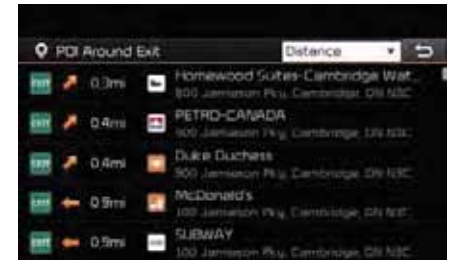

Route Search

 
Canceling Route

Cancel the route.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Cancel Route**.



Click **Cancel Route** the icon.

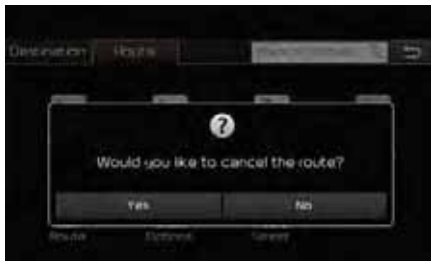

Press the **Yes** button to cancel the route.

Display Route Information

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Route Info**.



Press the **Route Info** icon.



Check the information on the map. Select the desired item to see the map information.

Avoiding a road

Click the **Avoid Street** button to avoid the street or road.



Check the desired item and press the **Done** button to finish.

 
Route Overview

Check the information on route including the distance, estimated time, toll fees, etc.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Route Overview**.



Press the **Route Overview** icon.

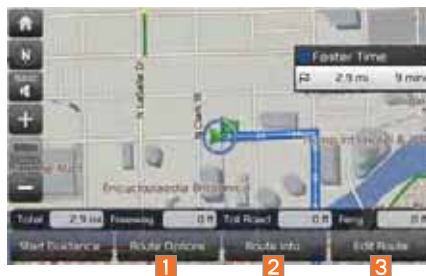

Name	Description
1 Route Options	Change the search option.
2 Route Info.	You can check route information.
3 Edit Route	Edit the current route.

Route Preview

Check the detailed turn-by-turn list.

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Route Preview**.



Press the **Route Preview** icon.



Name	Description
1 Departure Place	Move to the departure location.
2 Previous	Move to the previous maneuver.
3 Forward	Move to the next maneuver.
4 Destination	Move to the destination location.
5 Section Displaying Bar	Touch bar to move to the specific position.
6 ↶	Close the route preview.

Editing Route

Edit the current route.

Press the **MAP VOICE** head unit key. ▶ Select the **Nav Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select


Edit Route.



Press the **Edit Route** icon.



Name	Description
1 ↶	Display the selected point on the map screen.
2 ▲	Move the selected item up.
3 ▼	Move the selected item down.
4 🗑️	Delete the selected item.
5 Done	Press the button to finish editing.
6 Add Waypoint	Press the button to add a waypoint.

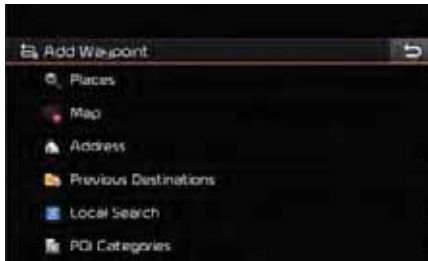 

Add the waypoint through various search-
ing methods.

Route Options

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Route Options**.



Press the **Route Options** icon.



Determine the route options to guide the route.

Avoid Street

Search new route by avoiding the selected street(s).

Press the **MAP VOICE** head unit key. ▶ Select the **Navi Menu** in the bottom of right of the screen. ▶ Press the **Route** tab. ▶ Select **Avoid Street**.



Press the **Avoid Street** icon.



Press the **Done** to plan new route after selecting the street(s) that you want to avoid.

Navigation Settings

General

Change general settings.



Name	Description
1 Unit	Change the unit of <input type="radio"/> mile <input type="radio"/> km .
2 Show Previous Destinations after Navigation Start-Up	Press the <input type="checkbox"/> ON <input type="checkbox"/> OFF button to change the previous destination view setting when starting the navigation.
3 GPS Information	Check the GPS information.
4 Restore factory settings	Press the <input type="button" value="Restore factory settings"/> button to initialize.



Press the to display the detail GPS satellites information.

Name	Description
1 Receiving	Active when current position is being calculated.
2 Speed	Display current speed of the vehicle.
3 Location	Display current position of the vehicle.
4 Elevation	Display current elevation of the vehicle.
5 Time	Display time.
6 Date	Display date.

Display

Change the display map settings.



 
Change the map colors and the route guidance line colors.



Change the vehicle symbol.

Guidance


Change the guidance setting.

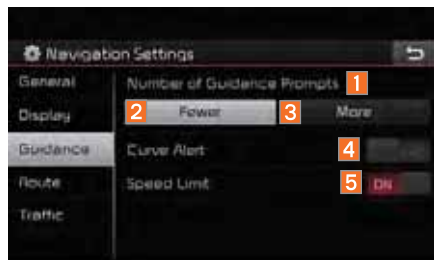

Name	Description
1 Number of Guidance Prompts	Set the frequency of guidance.
2 Fewer	Route guidance is given less frequently.
3 More	Guidance will be provided frequently.
4 Curve Alert	Change whether to turn curve alert ON and OFF .
5 Speed Limit	Change whether to show speed limit by pressing ON and OFF .

Route

 Change the route setting.

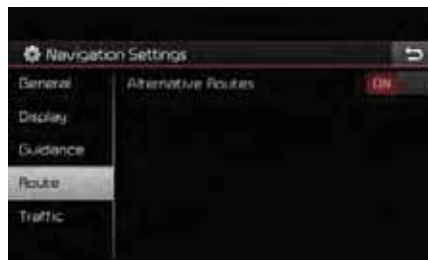

Press the **ON** or **OFF** button to change the Alternative Routes setting.

 
- Alternative on: Alternative routes will be suggested (depending on the route preference between “Faster time” and “Shorter Distance”).

NOTICE

- Alternative routes can be shown only while the vehicle is not moving.
- Alternative off: No alternative routes will be suggested. Guidance will start right after calculating with the route preference (Faster time or Shorter distance).

Traffic

Change the traffic information setting.

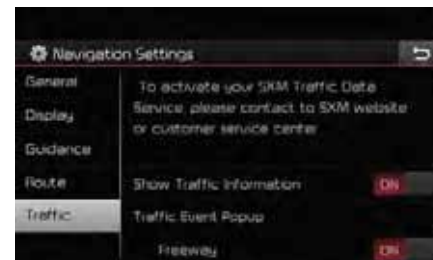

Press the **ON** or **OFF** button to change the settings.

- Show Traffic Information On/Off: Select whether to display traffic information or not.
- Traffic Event Pop-up Freeway On/Off: Select whether to display Pop-up message for traffic information on freeway.
- Traffic Event Pop-up Surface Road On/Off: Select whether to display Pop-up message for traffic information on surface road.

Troubleshooting

The current position as shown on the navigation may differ from the actual position under the following conditions.

The following occurrences are not malfunctions :

- | | |
|--|--|
| <ul style="list-style-type: none"> • When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction • Within city streets, the current position may be displayed on the opposite side or on an off-road position • When changing the zoom level from maximum to a different level, the current position may become displayed on a different road • If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading • When driving on a spiral-shaped road • When driving in mountain regions with sharp turns or sudden brakes • When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations • When driving in heavy traffic with frequent starts and stops | <ul style="list-style-type: none"> • When driving under slippery conditions, such as heavy sand, snow, etc. • When driving on spiral-shaped roads • When the tires have recently been replaced (Especially upon use of spare or studless tires). • When using tires of improper size • When the tire pressure for the 4 tires are different • When the replacement tire is worn or used (Especially studless tires having passed a second season). • When driving near high-rise buildings • When a roof carrier has been installed • When a long distance route is calculated while driving on an expressway In such cases, continued driving will automatically enable the system to conduct map matching or use updated GPS information to provide the current position (In such cases, up to several minutes may be required) |
|--|--|

Correct route guidance may not occur due to search conditions or driving position.

The following occurrences are not malfunctions :

- | | |
|---|--|
| <ul style="list-style-type: none"> • Guidance to go straight may be given while driving on a straight road • Guidance may not be given even when having turned at an intersection • There are certain intersections in which guidance may not occur • A route guidance signaling for a u-turn may occur in some No u-turn intersections | <ul style="list-style-type: none"> • Route guidance signaling entrance into a No-entry zone may occur (No-entry zone, road under construction, etc.) • Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow • Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.) |
|---|--|

These situations may occur after conducting route calculation.

The following occurrences are not malfunctions :

- | | |
|---|---|
| <ul style="list-style-type: none"> • Guidance may be given to a position differing from the current position when turning at an intersection • When driving in high speeds, route recalculation may take a longer period of time • Route guidance signaling for a u-turn may occur in some No u-turn intersections | <ul style="list-style-type: none"> • Route guidance signaling entrance into No-entry zone may occur. (No-entry zone, road under construction, etc.) • Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow • Faulty voice guidance may be given if the vehicle breaks away from the designated route (e.g. If a turn is made at an intersection while the navigation provided guidance to go straight.) |
|---|---|

END USER LICENSE AGREEMENT

PLEASE READ THIS END USER LICENSE AGREEMENT (“EULA”) CAREFULLY BEFORE USING THE NAVIGATION SYSTEM.

This is a license agreement between you and Hyundai MnSoft, INC. including its affiliates (“COMPANY”) regarding a copy of the COMPANY navigable map database together with associated software, media and explanatory printed documentation published by COMPANY (jointly the “Product”). The Product is provided for your personal, internal use only and not for resale. It is protected by copyright and is subject to the following terms which are agreed to by you, on the one hand, and COMPANY and its licensors (and their licensors and suppliers) (collectively, “Licensors”) on the other hand.

By using the Product, you accept and agree to all terms and conditions in this End User License Agreement (“EULA”). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MUST PROMPTLY EXIT THE PRODUCT OPERATION PROGRAM AND DO NOT USE OR ACCESS TO THE PRODUCT. YOU AGREE THAT YOUR RIGHTS UNDER THIS EULA MAY BE TERMINATED AUTOMATICALLY WITHOUT NOTICE IF YOU FAIL TO COMPLY WITH ANY TERM(S) OF THIS EULA.

Terms and Conditions

Personal Use Only. You agree to use this Product together with COMPANY's authorized application for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may not assign this EULA or any of the rights or licenses granted under this EULA, except when installed in the system for which it was created.

Restrictions. Except where you have been specifically licensed to do so by COMPANY, and without limiting the preceding paragraph, you may not use the Product (i) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (ii) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

COPYING OR USE OF THE PRODUCT EXCEPT AS PERMITTED BY THIS EULA IS UNAUTHORIZED AND IS COPYRIGHT INFRINGEMENT UNDER THE LAWS OF YOUR COUNTRY. IF YOU COPY OR USE THE PRODUCT WITHOUT COMPANY'S PERMISSION, EXCEPT AS PERMITTED BY THIS EULA, YOU ARE VIOLATING THE LAW AND LIABLE TO COMPANY AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.

THE PRODUCT MAY INCLUDE ENFORCEMENT TECHNOLOGY DESIGNED TO PREVENT (i) UNAUTHORIZED COPYING OF THE PRODUCT ONTO PHYSICAL STORAGE MEDIA OR VIA TRANSFER OVER THE INTERNET OR OTHER ELECTRONIC COMMUNICATION MEANS AND/OR (ii) ILLEGAL USAGE OF THE PRODUCT OTHER THAN BY A SPECIFICALLY AHTORIZED DEVICE. YOU AGREE THAT COMPANY MAY USE THESE MEASURES TO PROTECT COMPANY AND THE LICENSORS AGAINST COPYRIGHT INFRINGEMENT.

Uploads. The Product may provide functionality through which you are able to upload certain information about your use of the Product (collectively, "Uploads") to COMPANY's servers or receive other services from COMPANY (collectively, the "Services"). If you use such functionality, you authorize COMPANY to retain your Uploads on its servers. COMPANY will have no obligation to provide any Services, may change the form and nature of any Services at any time with or without notice to you, will have no liability whatsoever to you for any failure of the Product or Services to transmit your Uploads to or from COMPANY's servers, may cease providing any Services at any time with or without notice to you, and will have no obligation to retain your Uploads (or any other materials you may provide to COMPANY) on its servers or return your Uploads (or any other materials you may provide to COMPANY) to you before deleting them from its servers.

Storage. The Product may provide functionality through which you are able to store information (such as images) on the device on which you are using the Product. COMPANY will have no liability whatsoever to you or any third party for any failure of the Product to store any such information on such device.

Personal Information. By using the Product, you agree to the collection, retention and processing of your personal data (including the location of your mobile device) by COMPANY and to the storage and processing of such personal information on computers located outside of the country in which you reside. Even though COMPANY has taken steps intended to protect your personal information from being intercepted, accessed, used, or disclosed by unauthorized persons, COMPANY cannot fully eliminate security risks associated with your personal information and cannot guarantee that its systems will not be breached. See [*] for additional information regarding COMPANY's use of your personal information.

WARNING. THE PRODUCT REFLECTS REALITY AS EXISTING BEFORE YOU RECEIVED THE PRODUCT AND IT COMPRISES DATA AND INFORMATION FROM GOVERNMENT OTHER SOURCES. ACCORDINGLY, THE PRODUCT MAY CONTAIN INACCURATE OR INCOMPLETE INFORMATION DUE TO THE PASSAGE OF TIME, CHANGING CIRCUMSTANCES, SOURCES USED AND THE NATURE OF COLLECTING COMPREHENSIVE GEOGRAPHIC PRODUCT, ANY OF WHICH MAY LEAD TO INCORRECT RESULTS. THE PRODUCT AND SERVICES MAY NOT TO BE USED FOR SAFETY OF LIFE APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE ACCURACY OR RELIABILITY OF THE PRODUCT OR SERVICES COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. DO NOT ATTEMPT TO CONFIGURE THE PRODUCT OR INPUT INFORMATION WHILE DRIVING. FAILURE TO PAY FULL ATTENTION TO THE OPERATION OF YOUR VEHICLE COULD RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. BY USING THE PRODUCT, YOU ASSUME ALL RESPONSIBILITY AND RISK.

Disclaimer of Warranty. The Product is provided to you “as is,” and you agree to use it at your own risk. SUBJECT TO THE APPLICABLE LAWS, COMPANY AND THE LICENSORS MAKE NO GUARANTEES, REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, CONTENT, QUALITY, ACCURACY, COMPLETENESS, EFFECTIVENESS, RELIABILITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, USEFULNESS, USE OR RESULTS TO BE OBTAINED FROM THE PRODUCT, OR THAT THE PRODUCT OR SERVER WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT ERRORS IN THE PRODUCT OR NONCONFORMITY TO ITS DOCUMENTATION CAN OR WILL BE CORRECTED. YOU ACKNOWLEDGE THAT THE PROVISIONS OF THIS SECTION ARE A MATERIAL INDUCEMENT AND CONSIDERATION TO COMPANY AND THE LICENSORS TO GRANT THE LICENSE CONTAINED IN THIS EULA AND TO PROVIDE YOU WITH ACCESS TO THE SERVICES.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED UNDER THE APPLICABLE LAWS, COMPANY AND THE LICENSORS SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, INCURRED BY YOU OR ANY THIRD PARTY WHICH MAY ARISE IN CONNECTION WITH OR RESULT FROM THE USE OR POSSESSION OF THE PRODUCT; OR FOR ANY LOSS OF DATA, PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE PRODUCT, ANY DEFECT IN THE PRODUCT, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF COMPANY OR THE LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ANY LIMITED REMEDY PROVIDED HEREIN.

Exclusions. Some jurisdictions do not allow certain warranty exclusions or the limitation or exclusion of liability, so to that extent the above exclusion may not apply to you. To the extent that COMPANY may not, as a matter of applicable law, disclaim any implied warranty or limit its liabilities, the scope and duration of such warranty and the extent of COMPANY's liability shall be the minimum permitted under such applicable law. The disclaimer of warranty and limitation of liability set forth in this EULA does not affect or prejudice your statutory rights where you have acquired the Product otherwise than in the course of business.

Third-Party Copyright Notices. The third-party sourced data has been incorporated into or made a part of the Product and is being sub-licensed to you subject to the terms and conditions of this EULA. In this regard, you shall not remove or tamper with any intellectual property rights notice attached or used in relation to data supplied by the Licensors.

Entire Agreement. This EULA is the entire agreement between COMPANY (and the Licensors) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all previous written or oral communications or documents (including, if you are obtaining an update, any agreement that may have been included with an earlier version of the Product) with respect to such subject matter.

Governing Law. This EULA shall be governed by the laws of the jurisdiction in which you reside at the date of acquisition of the Product. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Product shall apply. In all other cases, or if the jurisdiction where you acquired the Product cannot be defined, the laws of the Republic of Korea shall apply. This EULA will not be governed by the U.N. Convention on Contracts for the International Sale of Goods. The courts competent at your place of residence at the time you acquired the Product shall have jurisdiction over any dispute arising out of, or relating to this EULA, without prejudice to COMPANY's right to bring claims at your then current place of residence.

Export Control. You agree not to export or re-export from anywhere any part of the Product in any form except in compliance with applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce.

Miscellaneous. If any provision of this EULA is found to be invalid or unenforceable, it will be enforced to the extent permissible and the remainder of this EULA will remain in full force and effect. Failure by COMPANY to prosecute any right with respect to a default hereunder will not constitute a waiver by COMPANY of the right to enforce rights with respect to the same or any other breach. No refunds or replacements will be permitted on damaged Product.

U.S. Government End Users. If the Product is being acquired by or on behalf of the United States Government or any other entity seeking or applying rights similar to those customarily claimed by the United States Government, this Product and related documentation are “Commercial Items” as that term is defined at 48 C.F.R. (“FAR”) 2.101. This Product and related documentation are licensed to the United States Government end users (a) only as “Commercial Items” and (b) with only those rights as are granted to all other end users in accordance with this EULA, and each copy of Product delivered or otherwise furnished shall be marked and embedded as appropriate with the following “Notice of Use,” and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: Hyundai MnSoft, Inc.

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: 74 Wonhyo-ro, Yongsan-gu,
Seoul 140-711, Republic of Korea

This Product and related documentation are commercial items as defined in FAR 2.101 and is
subject to this EULA under which this Product is provided.

© 2013 Hyundai MnSoft. All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify COMPANY prior to seeking additional or alternative rights in the Product.

End-User Terms Required by HERE. The Product utilizes map data that COMPANY licenses from HERE and the following copyright notices apply to such map data (the “HERE Data”): © 2013 HERE. All rights reserved.

The HERE Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen’s Printer for Ontario, © Canada Post Corporation, GeoBase®, © Department of Natural Resources Canada. All rights reserved.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2010. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

The HERE Data for Mexico includes certain data from Instituto Nacional de Estadística y Geografía.

Austria: © Bundesamt für Eich- und Vermessungswesen

Croatia, Cyprus, Estonia, Latvia, Lithuania, Moldova, Poland, Slovenia and/or Ukraine: © EuroGeographics

France: source: © IGN 2009 – BD TOPO®

Germany: Die Grundlagendaten wurden mit Genehmigung der zuständigen Behörden entnommen

Great Britain: Contains Ordnance Survey data © Crown copyright and database right 2010, and Royal Mail data © Royal Mail copyright and database right 2010.

Greece: Copyright Geomatics Ltd.

Italy: La Banca Dati Italiana è stata prodotta usando quale riferimento anche cartografia numerica ed al tratto prodotta e fornita dalla Regione Toscana.

Norway: Copyright © 2000; Norwegian Mapping Authority

Portugal : Source: IgeoE – Portugal

Spain: Información geográfica propiedad del CNIG

Sweden: Based upon electronic data Ó National Land Survey Sweden

Switzerland: Topografische Grundlage: Ó Bundesamt für Landestopographie

United Kingdom: Contains public sector information licensed under the Open Government Licence v1.0 (see for the license <http://www.nationalarchives.gov.uk/doc/open-government-licence/>) and is adapted from data from the office for National Statistics licensed under the Open Government Licence v.1.0.

Israel: © Survey of Israel data source

Jordan: © Royal Jordanian Geographic Centre. The foregoing notice requirement for Jordan Data is a material term of the Agreement. If Client or any of its permitted sublicensees (if any) fail to meet such requirement, HERE shall have the right to terminate Client's license with respect to the Jordan Data.

Mozambique: Certain Data for Mozambique provided by Cenacarta © 20XX by Cenacarta

Réunion: source: © IGN 2009 - BD TOPO ®

End-User Terms Required by ZENRIN. The Product utilizes map data that COMPANY licenses from ZENRIN and the following copyright notices apply to such map data (the "ZENRIN Data"):

Europe: Junction View Data provided by ZENRIN CO., LTD. Copyright © 20XX, All Rights Reserved.

Europe: Junction View Data and Exit View Data provided by ZENRIN CO., LTD. Copyright © 20XX, All Rights Reserved.

North America: Junction View Data provided by ZENRIN USA, INC. Copyright © 20XX, All Rights Reserved; Junction View Data fourni par ZENRIN USA, INC. Copyright © 20XX. Tous droits réservés; Las imágenes de las rutas alternas son proveídas por ZENRIN USA, INC. Copyright © 20XX. Todos los derechos reservados.

Copyright for Brand Icon

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

Copyright for Junction View

Junction View Data provided by ZENRIN USA, INC. Copyright(C) 20XX, All rights Reserved.

About Map Updates

- You can contact your KIA dealer or call at 1-888-757-0010.

Information

- This product requires regular updates for software corrections, new functions and map updates. Updating may require up to 1 hour depending on the data size.
- Turning off the power or ejecting the SD card during the update process may result in data loss. Make sure to keep the ignition on and wait until updating is complete.

CAUTION

- Please use only the SD card that was included with the vehicle purchase.
- The use of a separately purchased SD card may result in damage due to heat related deformation.
- Product malfunctions caused by the use of separately purchased SD cards shall not be covered within the product warranty.
- Repeatedly connecting/disconnecting the SD card in a short period of time may cause damage to the device.

Voice Recognition

What is Voice Recognition?

Precautions Required for Successful Voice Recognition

Starting/Ending and Setting Voice Recognition

Voice Recognition Screen Overview

Voice Commands

Siri Eyes Free

Voice Recognition

What is Voice Recognition?

The voice recognition feature operates the multimedia system by recognizing voice commands and enables hands-free operation of the system while you are driving your car.

Not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.


There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
3. Voice recognition automatically ends if:
 - 1) A call is incoming or outgoing
 - 2) A media device (USB or iPod, etc.) is connected or disconnected
 - 3) The rear view camera is operated
 - 4) The car engine starts or stops
 - 5) A system key, such as **RADIO** key or **MEDIA** key is selected
4. The microphone used for the voice recognition system is located in the headliner directly above the driver's head. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
5. Speaking naturally and clearly will ensure better recognition of your voice commands.
6. In the following cases voice recognition will be affected by ambient noise.
 - 1) The sound of the wind if any window or the sun roof is open.
 - 2) High speed blower from the air vents. Set climate control to blow lower than level 3.
 - 3) Vibrations from passing through a tunnel.
 - 4) Vibrations from driving on an uneven road.
 - 5) Storms and heavy rain.


Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the  key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition.




Ending Voice Recognition

1. Select "Exit" to the left of the bottom to end voice recognition.
2. Press and hold (more than 0.8 seconds) the  key on the steering wheel control to end voice recognition.




Combining Voice Recognition with On-Screen Commands

After pressing the  key, say a command after the beep. The voice recognition system will execute the desired operation after understanding the command. Alternatively, you may touch any of the corresponding Commands on the screen while the Voice Recognition system is in operation.

Combining voice recognition with available on-screen commands is useful when the system is taking longer than expected or the voice command did not execute as desired.




Extending the Listening Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the  key (shorter than 0.8 seconds), then the beep will sound again and standby mode will restart.

When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command again.



Skipping Prompt Messages

When you hear the prompt message, press the  key on the steering wheel remote control to skip the message and go directly to listening mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

Information

- Refer to Part 8 for instructions on how to change the Voice Recognition Settings.
-



Adjusting Voice Recognition Volume

During voice recognition, rotate the volume knob to adjust the message volume.



Voice Recognition Screen Overview

Start Screen



Name	Description
1 Representative Commands	Displays the representative commands.
2 Not available command	Displays commands that are not available due to a failure in meeting the conditions for using them and thus need additional settings. The conditions required for using them will be described briefly under each command.

Name	Description
3 Voice recognition status icons	Standby Voice guidance Voice command process
4 Recognized results	Displays the voice recognition result.
5 User's speaking volume being recognized	Displays the voice command volume in real time.
6 Help	Displays all available help commands in a tree format.
7 Exit	Ends the voice recognition.

Help Display



Name	Description
1 Command list	<ul style="list-style-type: none"> Shows the available commands. Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

Instructions for Using Voice Recognition



i Information

- In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you can not view it while driving for safety precautions.
-

Name	Description
1 Detail instruction	This section describes how to use voice recognition in detail.
2 Close button	Closes the screen and restarts voice recognition.

Voice Commands

Types of Commands

Voice recognition commands are classified as “Global Commands” and “Local Commands”.

1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
2. Local Commands (○): Commands that can be used when a multimedia or Bluetooth function is running, or displayed on the screen, after activating voice recognition.

Call Commands

* Check the following before using call commands:

1. Voice commands related to phone calls can be used after connecting a Bluetooth device.
2. To call a person, for example “Call <John Smith>” whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see “Part 3. Using Bluetooth > Chapter 3. Bluetooth Phone > 3.10 Contacts”.
3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time it takes to convert voice data may vary depending on the number of Contacts downloaded on the phone.

Command		Operation
●	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
●	Call <Name>	You can directly call a person by <Name> in the downloaded Contacts.
●	Call <Name> on Mobile	You can call a person <name> directly to the number that is saved as “Mobile” in the downloaded Contacts. e.g.) Call “John Smith” on Mobile
●	Call <Name> at Work	You can call a person <name> directly to the number that is saved as “Work” in the downloaded Contacts. e.g.) Call “John Smith” at Work
●	Call <Name> at Home	You can call a person <name> directly to the number that is saved as “Home” in the downloaded Contacts. e.g.) Call “John Smith” at Home
●	Call <Name> on Other	You can call a person <name> directly to the number that is saved as “Other” than “Mobile, Home, or Office” in the downloaded Contacts. e.g.) Call “John Smith” on Other
●	Dial Number	Displays a screen where you can say a phone number to dial.
●	Dial <Phone #>	You can directly say the number to call. e.g.) Dial 111 555 1234
●	Redial	Directly calls at the number that you last dialed.
●	Call History	Displays your Call History, where you can say the list number to make a call.

Radio Commands

Command		Operation
●	Radio	Plays the most recent radio channels from FM, AM, and SiriusXM™.
●	FM	Plays FM radio.
●	FM <87.5~107.9>	Tunes to FM <Frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five
●	SiriusXM	Plays SiriusXM™ radio.
●	SiriusXM <0~999>	Tunes to SiriusXM™ Channel <Channel Number> according to what you say. e.g.) SiriusXM 23: SiriusXM Twenty three
●	AM	Plays AM radio.
●	AM <530~1710>	Tunes to AM <Frequency> according to what you say. e.g.) AM 530: AM Five Thirty
○	Preset <1~40>	Tunes to your preset stations (1 to 40).
○	Channel <0~999>	In SiriusXM™ Radio mode, turns on the <Channel Number> that you say.

Media Commands

* Check the following before you use media commands.

1. If no media is connected or if no playable files exist at the time when you use these commands, a voice message will tell you that this is not available.
2. If you say the name of the media that is currently playing again, then that media will continue playing.
e.g.) Saying “USB” while USB content is playing.

Command		Operation
●	Music	Continues the last media you played.
●	iPod	Plays the iPod currently connected. This will work the same when an iPhone is connected. If a USB is connected, then it will be played instead of the iPod.
●	USB	Plays the music on the USB currently connected. If an iPod is connected, then the iPod will be played instead of the USB.
●	Bluetooth Audio	Plays the music on the Bluetooth phone currently connected. This may not be supported depending on the Bluetooth connection status.
●	AUX	Plays external devices that are currently connected.
●	My Music	Plays My Music files stored in the system.
●	Pandora Radio	Plays Pandora Radio that is currently connected.

1. USB Music/iPod/My Music Command

Command		Operation
<input type="radio"/>	Play	Plays a selected file. Maintains the current settings during playback.
<input type="radio"/>	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
<input type="radio"/>	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.
<input type="radio"/>	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
<input type="radio"/>	Repeat	Plays the current track or file repeatedly. Maintains the current settings during repeat playback.
<input type="radio"/>	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

2. Pandora Radio command

Command		Operation
<input type="radio"/>	Skip	Moves to the next track.
<input type="radio"/>	Thumbs up	If you like the genre of the music currently playing, say “Thumbs up” so that more similar music will play.
<input type="radio"/>	Thumbs down	If you don’t like the music currently playing, say “Thumbs down” to minimize the number of playbacks of similar genre music.
<input type="radio"/>	Play	Plays a selected file. Maintains the current settings during playback.
<input type="radio"/>	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
<input type="radio"/>	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.

3. Bluetooth audio/AUX command

For Bluetooth audio and external devices (AUX), local commands are unavailable, including Play, Pause, Repeat and Shuffle.

Other Commands List (Commands used in List/Help)


Command		Operation
<input checked="" type="radio"/>	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
<input type="radio"/>	Line 1~4 (One~Four)	When you cannot select a certain name, such as in Call History, you can select it using numbers. Simple numbers can be recognized, such as "One" or "Two".
<input type="radio"/>	Yes / No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
<input type="radio"/>	Previous/Next	When four or more searched items are listed, you can move to the previous or next page using a voice command.
<input type="radio"/>	Manual Input	When Dial entry results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.
<input type="radio"/>	Go Back	Moves to the previous screen.
<input checked="" type="radio"/>	Exit	Ends the voice recognition.

Siri Eyes Free



How to start Siri

If you want to use Siri, you have to connect your iOS device to the Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding  key on the steering wheel.

How to use Siri

When you access the Siri screen while pressing and holding  key on the steering wheel, you can press  button and then you can speak what you want. Note that the Multimedia system only supports “Phone” related functions. Other functions will be performed in your iOS device. If you press voice key quickly, Siri would re-start. If you hold down voice key, Siri would be terminated and the screen would go back to the previous screen. Eyes-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking brake on, Eyes-Free mode would be deactivated automatically.



Information

- Functions and feedbacks from voice commands via Siri are executed in the iOS device. If the iOS version is changed, the functions and response may be different according to the iOS device and the latest version.
-

MEMO

Apps/Info

Start up

Pandora®

SiriusXM™ Data

SoundHound

Apps/Info

Start Up

Press the **APPS/INFO** key on the head unit to move to the information screen. The screen is composed of:

 
- Pandora®: To listen to Pandora® Radio by connecting a smart phone
- Quick Guide: To provide information about how to controls and major functions
- SiriusXM Data: To show weather, sports, stock, fuel prices and movie information provided by SiriusXM™ Travel Link.
- Voice Commands: To provide information about available voice command list to use voice recognition.

Pandora®

Press the “Pandora” icon after selecting All Menus or the **APPS/②** key to enter Pandora®.

Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission. Pandora is only available in certain countries. Please visit <http://www.pandora.com/legal> for more information.

Pandora® Screen Controls

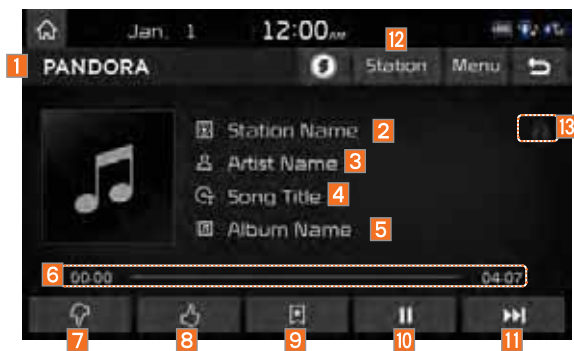


Name	Description
1 Mode	Displays the current operating mode.
2 Station Name	Shows the station name current playing.
3 Artist Name	Shows the artist/title information current playing.

Name	Description
4 Song Title	Shows the song title current playing.
5 Album Name	Shows the album name current playing.
6 Play Time	Displays the current play time.
7 Thumbs Down	If you don't like the music currently playing, press this button to move to the next song and to minimize the number of playbacks of similar genre music. i You can move to next song up to specific times which Pandora® allows
8 Thumbs Up	If you like the genre of the music Thumbs Up, press this button to send a “Thumbs Up” signal to Pandora® so that more similar music will play. i This function can not be reset once setting is chosen.
9 Bookmark Track	Add the music current playing to the bookmarks list. i You can view your bookmarked songs from your Pandora® profile online. Go to pandora.com, then click on the “Your profile” button above the player. That will bring up a page with your stations, bookmarked songs. i This function can not be reset once setting is chosen.
10 Play/Pause	Plays/pauses the current song
11 Skip	Moves to the next track i You can move to next song up to specific times which Pandora® allows
12 Station	Moves to the station list screen.
13 Shared Station Icon	Indicates that the station is already shared. i Thumbs Up/Down in not available for shared stations.



Name	Description
14 Menu	<ul style="list-style-type: none"> • Sound Settings Moves to the sound settings screen. • Quit Exit current Pandora® mode and then move to previous AV mode. <p>i You can view your bookmarked artists and songs from your Pandora® profile online. Go to pandora.com, then click on the “Your Profile” button above the player. That will bring up a page with your stations, bookmarked artists, and bookmarked songs.</p>
15 SoundHound	Moves to the SoundHound searching music application.
16 SEEK/TRACK	Press briefly to play the next song.
17 TUNE	Rotate the TUNE knob to search for a station. Press the TUNE knob to play the station when you find the name that you want.

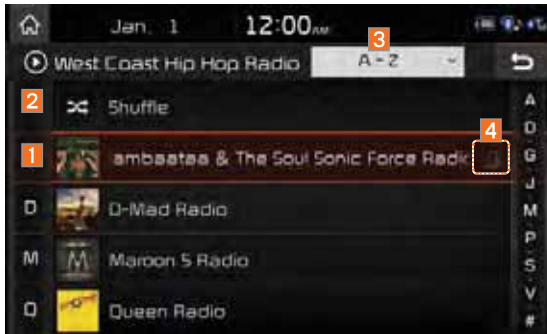 

Name	Description
1 Current Station	Shows the name of the station current displayed.
2 Shuffle	Shuffling your stations provides a more diverse mix of music by randomly playing songs from the stations in your list.
3 Search Menu	Sorts stations by the items in the menu. <ul style="list-style-type: none"> • A-Z: Sorts stations in alphabetical order. • By Date: Sorts stations in the order they were generated.
4 Shared Station Icon	Indicates that the station is already shared.
5 SEEK/TRACK	Press briefly to play the next song.
6 TUNE	Rotate the TUNE knob to move to the previous/next list. Press the TUNE knob to play a selected file.

SiriusXM™ Data

About SiriusXM™ Data Service

The SiriusXM™ Data Service is a paid membership satellite radio service that provides users with information such as Weather, Sports, Stocks, Fuel Prices and Movies.

However, weather information is not supported for vehicles purchased in Canada.

Accessing SiriusXM™ Data

Select the “SiriusXM Data” icon after selecting All Menus icon or the **APPS/?** key to enter the SiriusXM™ Data mode.



SiriusXM™ Weather Announcement

At the “SiriusXM Data” screen, select the **Weather** icon to enter the Weather Announcement mode.

Weather Forecast

This service provides current weather information and weather forecasts for the next five days in your region. To change the region, select the **Other City** button and select the desired region.



Warnings and Advisories

This service provides weather warnings and advisories, such as tornado, storm, flood, etc.



SiriusXM™ Sports Information

Select the **Sports** icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.



My Teams

 
You can save teams which you are interested in as part of My teams to easily view related scores and schedules.

Select the My Teams menu and then select the **Add** button to search for and register your favorite teams.




Search for your favorite teams and select the **☆** button on the right to add it to the “My Teams” list.



You can always check the list of teams that you added in the “My Teams” menu. Select the **☆** button on the right side of the team name to delete the team from “My Teams” or select the **Add** button to add other teams.

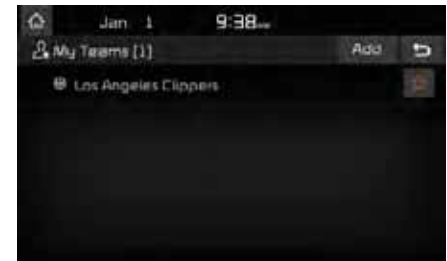

   Select the team name to check daily results and recent schedules for that team.

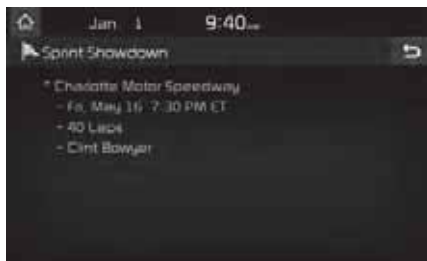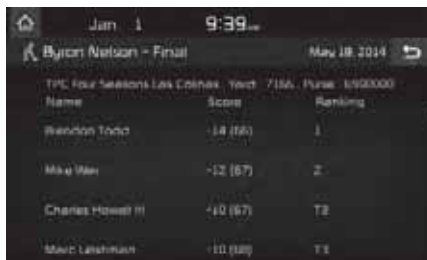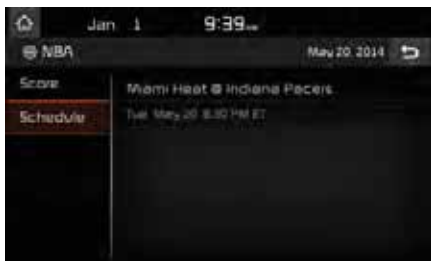

SiriusXM™ Stock Information

In the “SiriusXM Data” screen, select the

 
Stocks icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.

For symbols which you are interested in, select the icon to save the symbol as a part of the “Saved” symbols which can be viewed from the “My Favorites” button on the Stocks Main screen.

My Favorites


My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Select the **Add** button to move to the stock search screen.

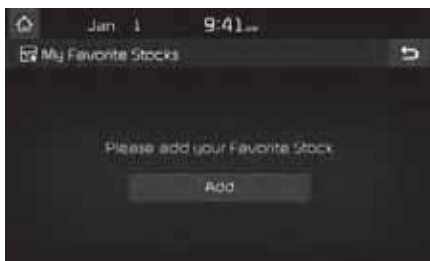

Stock Search

Use the Stock Search menu to search for specific stocks.

 Select the **☆** button after searching for your favorite stocks to save them in “My Favorites”.

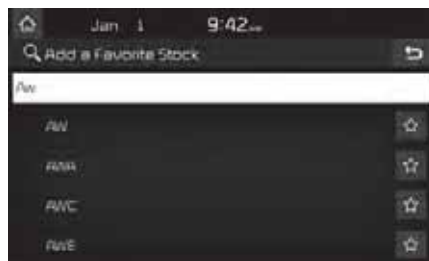


In the My Favorites screen, you can find the selected stock information that you registered.



SiriusXM™ Fuel Price Information

 At the “SiriusXM Data” screen, select the **Fuel Prices** icon to enter the Fuel Prices Information mode.

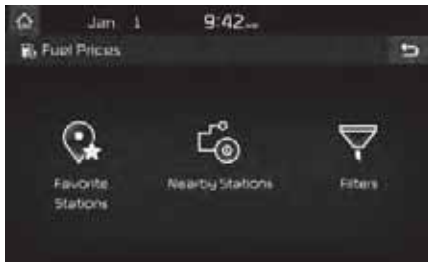


Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the “Nearby Stations” menu.

It shows station locations, starting from the nearest one, and select “Nearest” menu on the top right side to further sort them by price or brand name.



 Select the **☆** button to the right of the list to register key locations as a Favorite Station so that you can go there again with the “Favorite Stations” menu.

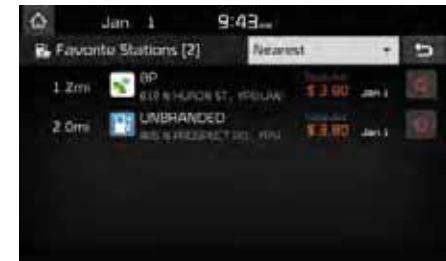

My Fuel Type Settings

With the “Filters” menu, you can select fuel types and favorite brands.

When searching for Nearby Stations, the results will reflect selected fuel types and brand information.



SiriusXM™ Movie Information

Select the **Movies** icon to enter the Movie mode.

 
 
You can check recent movies and nearby theaters, and also register your favorite theater locations.



Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.

In the “Nearby Theaters” menu, you can search for any nearby theaters.

It shows theaters, starting from the nearest one, and selecting the “Nearest” menu at the top right side will sort them by name.

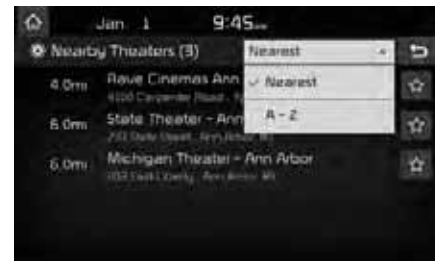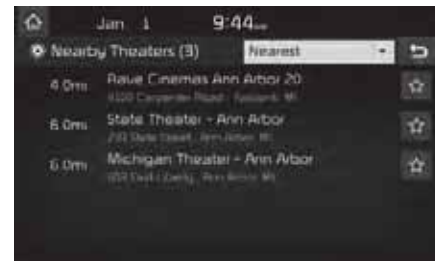

Select the ☆ button to the right of the list to register your favorite theater so that you can always check it again using the “Favorite Theaters” menu and selecting the ⓘ button to view the current movie information for that theater.



In the “Top Movies” menu, you can check for any movies that are currently popular. Press ⓘ button to the right of a movie title to view the plot summary and any other detailed information.





SoundHound

SoundHound is a music search engine. It enables users to identify music by playing or singing a song. It is also possible to search by typing the name of the artist, song, album or lyrics.

 
The head unit should be connected to the Internet in order to use SoundHound. (ex. Wi-Fi)

Accessing SoundHound

1. From the Home screen, select All Menus then select SoundHound  button.
2. Select SoundHound  button on Radio modes (AM, FM and SiriusXM) or Media modes (Bluetooth Audio, iPod, USB, My Music, AUX and Pandora).




SoundHound Main Screen

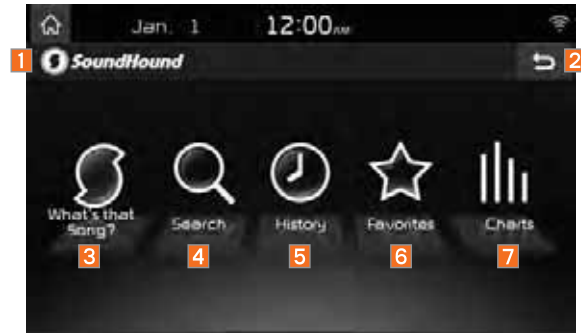


Name	Description
1 Mode	Displays the current operating mode.
2 Back button	Goes back to previous mode.
3 What's that Song?	Starts the song recognition process. After this process is complete, it goes to Song screen.
4 Search	Goes to Search screen.
5 History	Goes to History screen.
6 Favorites	Goes to Favorites screen.
7 Charts	Goes to Charts screen.

Recognizing Music

After selecting SoundHound  button, the song recognition process is activated, the system will match the currently playing song with the SoundHound music database.

 Music from Smartphones and MP3 players that are not connected to the head unit can also be recognized.

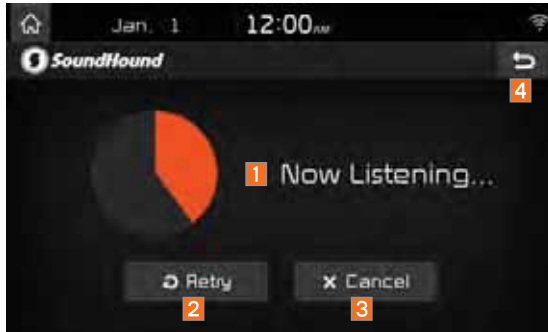

Name	Description
1 Now Listening...	Message displayed while SoundHound is processing the music.
2 Retry	Starts over the song recognition process.
3 Cancel	Cancels song recognition process and Exits SoundHound.
4 Back button	Goes back to previous screen.

Searching Music

Music can also be searched by selecting the Search option in SoundHound main screen and typing a song, artist, album or lyrics into the search field.



Name	Description
1 Search	Displays the current operating mode.
2 Back button	Goes back to SoundHound main screen.
3 Search field	Displays search field. Once text is typed, recommended song, artist, album or lyrics information that might match the search criteria is displayed in the scroll menu.
4 Search icon	Starts the searching process.

Song Main Screen



Name	Description
1 Back button	Goes back to previous screen.
2 Song, Artist and Album information	Displays song, artist and album information of currently playing song.
3 Album Image	If album image is selected, the detailed information of the album is displayed.
4 Artist Image	If artist image is selected, the detailed information of the artist is displayed.
5 Favorite	It saves current playing song into Favorites by tapping on the star icon. Star icon will be highlighted when song has been saved into Favorites. To delete song from Favorites, select the star icon again or go to Favorites menu screen.
6 Lyrics	Displays current playing song's lyrics.
7 Recommended Songs	Displays a list of recommended songs by SoundHound.
8 Similar Artists	Displays list of similar artists to currently playing artist.
9 Song's Album Appearances	Displays list of albums on which currently playing song appears.



Other Features

Camera

Other Features

Camera

⚠ WARNING

- Backing Up & Using Camera

- Never rely solely on the rear view camera when backing up. Prior to entering your vehicle always do a visual check of the area behind your vehicle, and before backing up be aware of your surroundings and supplement the rear view camera by looking over your shoulders and checking your rear view mirrors. Due to the difficulty of ensuring that the area behind you remains clear, always back up slowly and stop immediately if you even suspect that a person, and especially a child, might be behind you.

i Information

- A separate chipset is used for the camera screen while booting up, so it may be different after booting up.

Steering-linked camera

- This device is connected to a rear detection camera to see behind the car for safe reversing.
- The Rear View Camera turns on automatically if you shift the gear to R when the power is on or the engine has started.
- While the device boots up, shift the gear to "R" to activate the rear detection cameras. Shift the gear to another position to deactivate the rear detection camera.

🔧 NOTICE

- A wide-angle lens is installed as the rear detection camera to get a wider view, so there may be some difference between the actual distance and the distance that appears on-screen. For safety, make sure to view the back, right, and left sides of the car for yourself.
- The color of the parking guidelines displayed in the picture may differ from the actual screen.
- When booted up, blinking may occur when you switch to a UI screen.



Name	Description
1 Red Line	About 0.5m from the rear bumper
2 Yellow Line 1	About 1m from the rear bumper
3 Yellow Line 2	About 3m from the rear bumper
4 Yellow Line 3	Trajectory of the wheel on the driver's side
5 Yellow Line 4	Trajectory of the wheel on the passenger side
6 Blue Line	Neutral steering trajectory

As you reverse your car and monitor the area behind your car, the steering-linked driving trajectory and the neutral driving trajectory are both displayed.



Setup

 
- Setup
- Sound Settings
- Display Settings
- Bluetooth Settings
- UVO eServices Settings (For UVO Model)
- Home Screen Settings
- Wi-Fi Settings
- Clock Settings
- Voice Recognition Settings
- Language Settings
- Keyboard Settings
- Screen Saver Settings
- System Info

Setup

Setup

Setup is the screen to control Audio system settings.

To enter the screen, press the **SETUP** key or the **Setup** icon in All Menus.

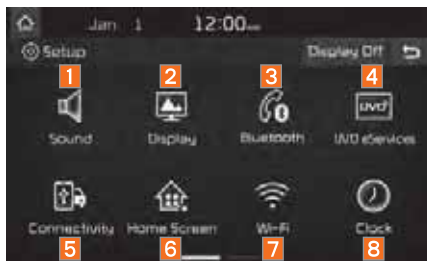


Features	Description
1 Sound	Provides the sound control options for Position, Bass, Mid, Treble, Volume and Advanced settings.
2 Display	Provides the Mode/Illumination settings.
3 Bluetooth	Provides the Bluetooth Connection/Auto Connection Priority/Bluetooth System Information settings.
4 UVO eServices	Provides the 911 Connect/Parking Minder/My Car Zone/ Scheduled Diagnostics/Trip Info Sync Reminder Settings. (For UVO Model)
5 Connectivity	For more details, refer to Connectivity guide.
6 Home Screen	Provides the function to customize the three menu items at the bottom of the Home Screen.



Features	Description
7 Wi-Fi	Provides the Wi-Fi On and Network Connection settings.
8 Clock	Provides the Time and View settings.
9 Voice Recognition	Provides the Guidance and Priority settings.
10 Language	Provides the Change Language settings.
11 Keyboard	Provides settings to switch keyboard layouts.
12 Screen Saver	Provides the Clock/None settings.
13 System Info	Provides software and storage space information.
14 Display Off	Provides the Display Off (touch activation) function.

Sound Settings

 Adjusts the sound effects for the whole system.

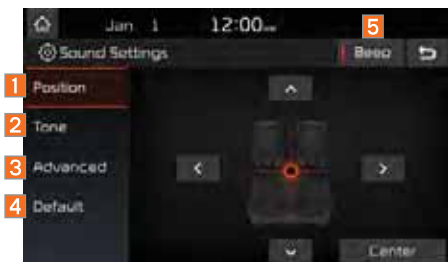

Features	Description
1 Position	Select the Up/Down/Left/Right button to control sound positioning. Select Center to concentrate the sound on the center of vehicle.
2 Tone	Drag the slide bar to control bass/mid/treble settings. Select Center to initialize the settings.


Features	Description
3 Advanced	Select additional audio options such as “Speed Dependent Volume Control” that automatically controls Audio volume according to vehicle speed as well as “Variable EQ”.
4 Default	Resets the sound to factory default settings.
5 Beep	Select to activate a beep when pressing buttons.

i Information

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

Display Settings

 Adjusts the level of illumination for the entire system.

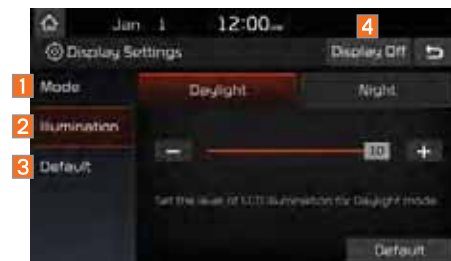


Features	Description
1 Mode	Select any of LCD illumination change modes: Automatic (changes the level automatically), Daylight, and Night.
2 Illumination	Set the levels of illumination for day and night. Select Default to initialize the settings.
3 Default	Resets the display to factory default settings
4 Display Off	Provides the Display Off (touch activation) function.

Bluetooth Settings

Changes Bluetooth phone settings.

Bluetooth Settings

 
Press the **SETUP** key ► Select **Bluetooth** icon.

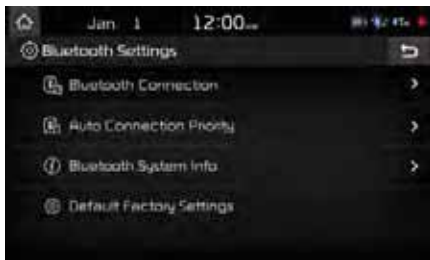

Bluetooth Connection Settings

Press the **SETUP** key ► Select **Bluetooth**

 ► Select **Bluetooth Connection**

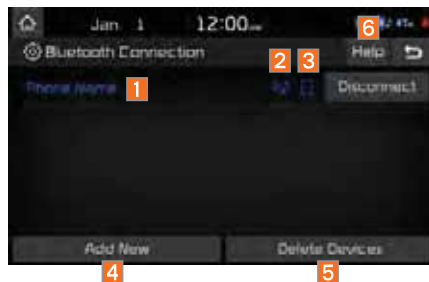


Features	Description
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected.
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth Hands-free connection.
4 Add New	Register a new Bluetooth device.
5 Delete Devices	Select and delete a paired device.
6 Help	Switches to the Bluetooth Connection Help screen.

i Information

- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.
- For Default Factory Settings, the bluetooth settings are reset to factory settings
- Press the **SETUP** key ▶ Select **Bluetooth** ▶ Select **Default Factory Settings**

Auto Connection Priority

 Press the **SETUP** key ▶ Select **Bluetooth** ▶ Select **Auto Connection Priority** .

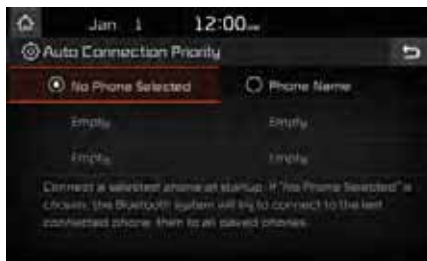


When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

Bluetooth System Information

 Press the **SETUP** key ▶ Select **Bluetooth** ▶ Select **Bluetooth System Info** .

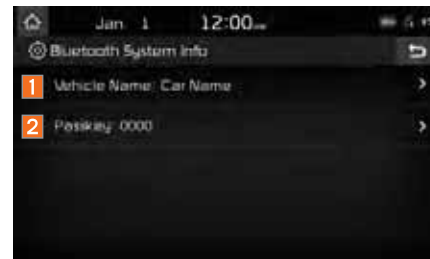

Features	Description
1 Vehicle Name	You can change the Bluetooth device name of the vehicle.
2 Passkey	You can change the passkey used for Bluetooth device authentication. The initial passkey is 0000.

i Information

- The vehicle name above is an example. Check the actual information on the product.

Default Factory Settings

 
You can delete all paired devices and restore the Default Bluetooth Settings. For Default Factory Settings, all paired devices are deleted, and the system is reset to factory settings.

UVO eServices Settings (For UVO Model)

Within the eServices Settings screen, UVO eServices related features can be set, such as activating 911 Connect, Parking Minder and setting the My Car Zone.

For safety reasons, My Car Zone Settings can not be adjusted while driving. Park the vehicle before making any changes to your settings.

Press the **SETUP** key ► **UVO eServices**

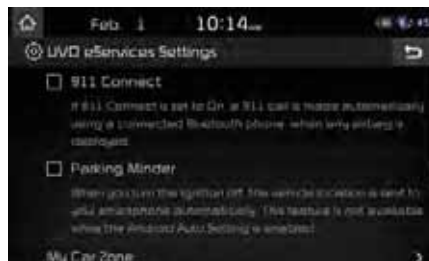


911 Connect

This feature is used to turn on or off the 911 Connect feature.




When enabling this feature, you must first agree to the 911 Connect terms of use.

 After reading the terms of use, press the **Agree** button on the touch screen to accept.

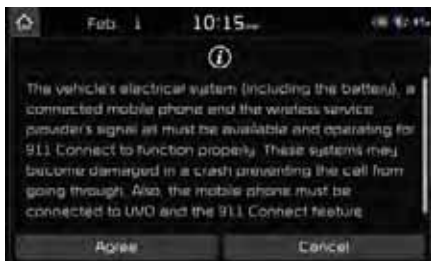

Parking Minder

 If you want to send vehicle location to your smartphone automatically when you turn the ignition off, turn the Parking Minder feature On.

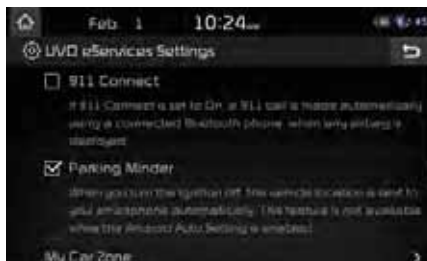

My Car Zone

This feature is used to set My Car Zone (Curfew Limit, Speed) alert conditions.

My Car Zone Settings is unavailable when UVO eServices has not been activated.

 
 
Press the **SETUP** key ▶ **UVO eServices** ▶ **My Car Zone**.

The PIN must be entered to use My Car Zone Settings.



This screen is used to set Curfew Limit and Speed Alert features.

Set the alert conditions On ► **Settings**.

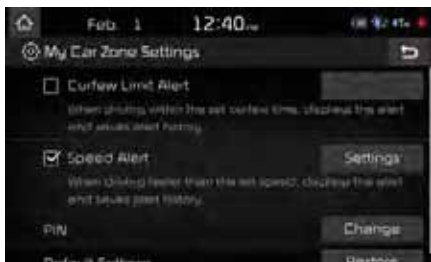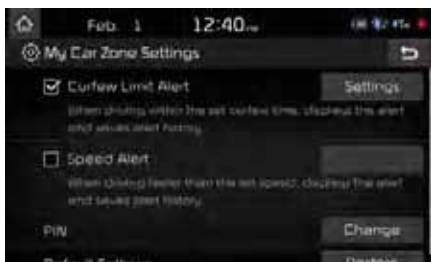

Curfew Limit Alert Settings

Within Curfew Limit Alert Settings, you can set the Curfew Limit Alert Start and End Time. You can also set the Alert Interval of alerts upon Curfew Limit.



Speed Alert Settings

Within Speed Alert Settings, you can set the vehicle speed limit and Alert Interval of alerts upon overspeeding.



PIN

This feature is used to change the PIN to enter My Car Zone Settings.



NOTICE

 
- Before pressing **Done**, ensure your smartphone is connected to UVO eServices system via USB cable.

Press the **Done** button to transmit the new PIN to your My UVO com account.



Restore Factory Settings

This feature is used to restore all My Car Zone alert history and settings back to default state.

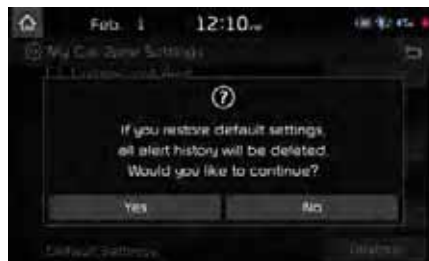

Scheduled Diagnostics

This feature is for setting when scheduled diagnostics alerts display.

Press **SETUP** key ▶ **UVO eServices** ▶
Set the Scheduled Diagnostics On ▶ **Settings**



NOTICE

- For months without the corresponding day, the last day of the month will automatically be set as the scheduled diagnostics date.

Trip Info Sync Reminder

Trip Info is a feature used to set whether system displays alert when trip info(Driving Distance, Driving Speed, Driving Time, etc). reaches 90% of memory.

UVO eServices must be activated to use this feature.

Press **SETUP** key ▶ **UVO eServices** ▶

Set Trip Info Sync Reminder On



Home Screen Settings

You can customize the three menu items at the bottom right of the Home Screen into the ones you want.

On the Home Screen Settings screen, drag the menu items on the right to the area marked in blue in the screen below.

 


i Information

- You can select the **Default** button to reset to the factory default settings.

Wi-Fi Settings

You can share a digital-device network with the vehicle device through Wi-Fi.

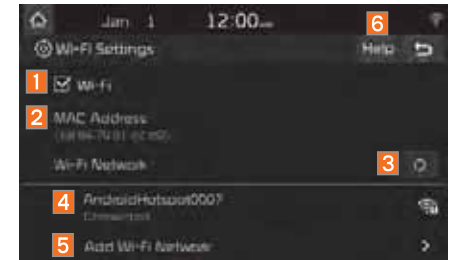


Features	Description
1 Wi-Fi	Turn on/off Wi-Fi.
2 MAC Address	Displays the MAC address.
3 Refresh	Searches available networks near the vehicle.
4 Network Name	Displays available network AP (Access Point) names.
5 Add Wi-Fi Network	Enter the network ID/ password to connect to a hidden network AP (Access Point).
6 Help	Shows the Wi-Fi setup guide.

How to Connect to a Network

1. In the Wi-Fi settings of a digital device, activate Internet sharing (Hotspot).
2. In the vehicle network list, select the desired device to connect to. Enter the password to connect, if any.

Clock Settings

 
Configure the settings for time and date. Using the arrow buttons, you can change the values. Clock settings do not automatically change when crossing into different time zones. The time must be changed manually on this screen.

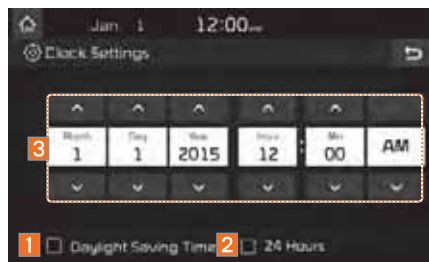

Features	Description
1 Daylight Saving Time	The daylight saving time (DST) is applied.
2 24 Hours	The time display is set in 24-hour format.
3 Direct entry	If you tap any value, you can directly enter the number in the following screen.

Voice Recognition Settings

 Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

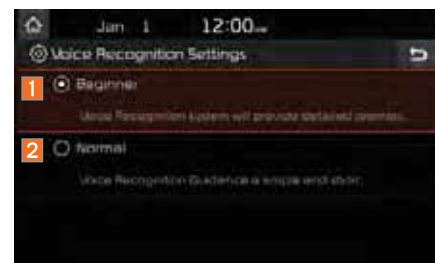

Features	Description
1 Beginner	For beginners, the voice recognition system provides voice prompts.
2 Normal	For normal users, the voice recognition system provides simple and short voice guidances.

Language Settings

You can configure the displayed system language.



When the language is changed, the system language is automatically changed.

Unique data including MP3 file name is not changed and voice recognition does not support some languages.

Keyboard Settings

You can configure the keyboard layout for each language.



You can configure ABCD or QWERTY keyboards for the system.

i Information

- Configured keyboard layouts are applied to all input modes.

Screen Saver Settings

 
You can select any of the following screen formats to be displayed when the screen or power is turned off (Press and hold the Power button).

- Digital clock and date
- Analog clock and date
- None



System Info

At the System Info screen, software version information, updates, and storage status details are available.

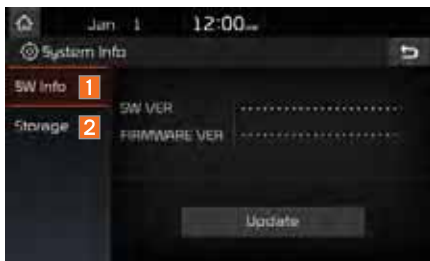

Features	Description
1 SW Info	System version information and update details are available. Select the Update button to update the system. After update is complete, the system will reboot automatically.
2 Storage	Displays the memory space available for media storage.

System Update

At the System Info screen, insert the USB memory with the latest file downloaded, and then select the **Update** button to begin updating. The system will then reboot automatically.

i Information

- This product needs supplemented software updates and additional functions, which collectively may take some time to complete, depending on the amount of data.

⚠ CAUTION

- If the power is disconnected or the USB is removed during an update, the data might be damaged. Please do not turn off the vehicle while an update is in progress.

MEMO

Appendix

Product Specification

Troubleshooting

FAQ

Appendix

Product Specification

TFT-LCD

Screen Size	7 inch(152.4 X 91.44mm)
Resolution	384,000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom: ALL 89°
Internal Lighting	LED

Radio

Channels	FM: 87.5 MHz ~ 107.9 MHz(Step: 200 kHz)
	AM: 530 kHz ~ 1710 kHz(Step: 10 kHz)
Sensitivity	FM: Under 10dBu/AM: Under 35dBu
Distortion Factor	Within 2%

Common

Name	Car TFT LCD Display Audio Unit		
Power Supply	DC 14.4V	Operating Power	DC 9V ~ DC 16V
Current Consumption	2.5A	Sleep Current	1mA (Head Unit Only)
Operating Temperature	-20 ~ +70°C (-4 ~ +158°F)	Storage Temperature	-30 ~ +80°C (-22 ~ +176°F)
Dimensions	208 X 147.3 X 175mm (Main BOX)		
Weight	1.9kg		

Wi-Fi Details

Frequency	2412 ~ 2462MHz, 5180 ~ 5825MHz
Specification	IEEE802.11 a/b/g/n/ac
Operating Temperature	-20 ~ +70°C (-4 ~ +158°F)
Supported Bandwidth	20/40/80MHz

Bluetooth® Wireless Technology

Frequency Range	2402 ~ 2480 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.6), A2DP(1.2), AVRCP(1.4), PBAP(1.0)		
Output	-6~-4dBm (Power Class2, Conducted)		
Number of Channels	79 channels		

CAUTION

- The producer and installer cannot provide services related to life safety as the concerned radio equipment is liable to radio interference.

Troubleshooting

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your Kia dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	<ul style="list-style-type: none"> • Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	<ul style="list-style-type: none"> • Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	<ul style="list-style-type: none"> • Has the volume been set to a low level? • Has the volume been muted?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none"> • The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction • If the screen is very dark, contact your nearest Kia dealer for assistance
Sound is working from only one speaker	<ul style="list-style-type: none"> • Are the positions of Fader or Balance sound controls adjusted to only one side?

Problem	Possible Cause
Sound does not work in AUX mode	<ul style="list-style-type: none"> • Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	<ul style="list-style-type: none"> • Is the external device connected with a standard connector cable?
Upon turning power on, the most recent mode screen is not displayed	<p>Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth[®] streaming mode, the most recently played mode screen prior to turning off power may not properly load</p> <ul style="list-style-type: none"> • If the corresponding device is not connected, the mode operated prior to the most recent mode will operate • If the previous mode still cannot be properly played, the mode operated prior to that will operate

Problem	Possible Cause	Countermeasure
The power does not turn on	The fuse is disconnected	<ul style="list-style-type: none"> • Replace with a suitable fuse • If the fuse is disconnected again, please contact your point of purchase or Kia dealer
	Device is not properly connected	<ul style="list-style-type: none"> • Check to see that the device has been properly connected
The system does not play	The vehicle battery is low	<ul style="list-style-type: none"> • Charge the battery If the problem persists, contact your point of purchase or Kia dealer

Problem	Possible Cause	Countermeasure
The image color/tone quality is low	<ul style="list-style-type: none"> • The brightness, saturation, hue, and contrast levels are not set properly 	<ul style="list-style-type: none"> • Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup
Sound does not work	<ul style="list-style-type: none"> • The volume level is set to the lowest level • The connection is not proper • The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode 	<ul style="list-style-type: none"> • Adjust the volume level • Check to see that the device has been properly connected • The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode
	The sound or image quality is low	<ul style="list-style-type: none"> • Vibration is occurring from where the conversion switch has been installed • Image color/tone quality is low

Problem	Possible Cause	Countermeasure
The USB does not work	<ul style="list-style-type: none"> • USB memory is damaged • USB memory has been contaminated • A separately purchased USB HUB is being used • A USB extension cable is being used • A USB which is not a Metal Cover Type USB Memory is being used • An HDD type, CF, SD Memory is being used • There are no music files which can be played 	<ul style="list-style-type: none"> • Please use the USB after formatting it. • Remove any foreign substances on the contact surface of the USB memory and multimedia terminal • Directly connect the USB memory with the multimedia terminal on the vehicle • Directly connect the USB memory with the multimedia terminal on the vehicle • Use standard USB Memory • Use standard USB Memory • Only MP3, WMA file formats are supported. Please use only the supported music file formats
The iPod is not recognized even though it has been connected	<ul style="list-style-type: none"> • There are no titles which can be played • The iPod firmware version has not been properly updated • The iPod device does not recognize downloads 	<ul style="list-style-type: none"> • Use iTunes to download and save MP3 files into the iPod • Use iTunes to update the firmware version and reconnect the iPod with the device • Reset the iPod and reconnect with the device

Problem	Possible Cause	Countermeasure
Bluetooth does not work or its limited functions are available	<ul style="list-style-type: none"> • Bluetooth on your mobile phone is set to OFF • The Bluetooth connection is not made 	<ul style="list-style-type: none"> • Set it to ON • Make the connection active

i Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (over 1 second). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?


A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with **SETUP** ►

Bluetooth ► **Bluetooth System Info** ► **Passkey** menu options.


About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the **Accept** button on the screen or the  key on the steering remote controller.

To reject the call, select the **Reject** button on the screen or press the  key on the steering wheel control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (more than 0.8 seconds) the  key on the steering remote controller or select the **Use Private** button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth*[®] Wireless Technology/ Head Unit Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Important Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Multimedia system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body.

This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.