

Product Name: Tablet PC

Model: U800

Trade mark: Ceibal,Ibirapita

Keys explained



Key	Function
1) Volume Keys	Press or hold to turn the volume up or down.
2) Power Key	<ul style="list-style-type: none">• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.• Press to switch your device to Sleep mode.• Press to wake up your device.
3) Headphones jack	Earphones / headphones port.
4) Reset	Press and hold for 6 seconds to reset the device.
5) Micro USB / Power jack	<ul style="list-style-type: none">• Connect USB cable with charger to charge.• Connect with PC to charge and transfer data.
6) HDMI	Micro HDMI port

Installing memory card

Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.

Inserting memory card:



Setting Up Your Device for the First Time

When you first power on your device or after you reset it to factory settings the Setup Wizard guides you to setup some essential settings like system language, access to the internet, basic accounts, date & time, etc.

Getting around your device

▶▶ Touch Control

You can use finger gestures to control your device. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap buttons or icons to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

NOTE: You can view the device screen in portrait or landscape












orientation simply by holding it upright or turning it on its side. Not all the screens are viewable in landscape mode.

▶▶ **Home screen**

In the Home screen, besides the shortcut icons, you can set your own wallpaper or add widgets. You can do that from the options that appear by holding your finger on the screen for 2 seconds. You can remove any of these if you hold and drag them at the top of the screen.

▶▶ **Status and notification icons**

On the top of the screen, you can find the notification bar, which displays a series of useful status and notification icons. Here's what they mean:

	USB Connected		USB debugging connected
	Airplane Mode		New Wi-Fi network detected
	Battery charge		Bluetooth icon
	Meeting mode		Wi-Fi network
	Alarm set		Earphone
	Total Silence		

Getting connected to the internet

Your device's impressive networking capabilities allow you to access the Internet or your corporate network with ease.



You can use default connection settings to connect to the Internet via your Wi-Fi.

▶▶ **Turning on Wi-Fi**

Wi-Fi provides wireless Internet access over distances of up to about 90 meters.


1. Press **Home key** > tap  >  **Settings** > **Wi-Fi**.
2. Click  next to the Wi-Fi menu to turn it on. Click  to turn off the Wi-Fi function.

▶▶ Connecting to a Wi-Fi network

1. Press **Home key** > tap  >  **Settings** > **Wi-Fi**.
2. When the Wi-Fi is on, the Wi-Fi access points or hotspots that your device has detected are displayed with their names and security settings.
3. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

▶▶ Checking the Wi-Fi network status

When connected you can check the Wi-Fi network by looking at the  icon in the status bar.

Browsing the internet

You can use your device to get on the Internet via a network or Wi-Fi connection.




Press **Home Key** > tap  >  **Browser**.

Tap the address bar to enter the website you want to browse.

Then tap  on the touch keyboard.

Taking pictures with your camera



Your device has camera function.

1. Open it by pressing **Home Key** > tap  >  **Camera**.
2. Tap  to take a picture.
3. To view it, just tap the picture in the bottom right corner of the screen.

Playing your music

You can play digital audio files from your device's memory card

in **Music**.

1. Press **Home Key** > tap  >  **Music** to open the Music Screen.
2. Choose music files among the category labels to start playing.
3. Adjust the volume with **Volume Keys**.



Opening your gallery

You can use **Gallery** to view pictures and play videos. You can also do some basic editing, set them as wallpaper or contact photo and share them with your friends.

Press **Home Key** > tap  >  **Gallery**.

Sorting out your device settings

▶▶ **Setting Date and Time**

1. Press **Home key** > tap  >  **Settings** > **Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself. Select Use network-provided time to auto configure the time and date through internet.
3. Set date, time and change the other options.

▶▶ **Display settings**

Press **Home key** > tap  >  **Settings** > **Display**.

You can adjust the display settings as you like:

- **Brightness:** Adjust brightness of the screen.
- **When device is rotated:** Rotate the screen display as you rotate the device or stays in portrait mode.
- **Sleep:** Set the delay for the screen to automatically turn off.
- **Wallpaper:** Set the wallpaper of the device.

▶▶ Audio profiles settings

Press **Home Key** > tap  >  **Settings** > **Sound & notification**.

When you choose the General mode, you can adjust the sound settings, such as ringtones, volume or vibrate.

You can also choose among Silent, Meeting or Outdoor mode.

▶▶ Language settings

You can change the language of your device system in two simple steps.

1. Press **Home key** > tap  >  **Settings** > **Language & input** > **Language**.
2. Select a language from the given list.


Bluetooth

▶▶ Make device discoverable

You must pair your device with a BT device before you can connect to it. Once you pair your tablet with a device, they stay paired unless you unpair them.

1. Press **Home key** > tap  >  **Settings** > **Bluetooth**.
2. Tap  near Bluetooth to turn on it.

▶▶ Scan and pair with bluetooth devices

1. Press **Home key** > tap  >  **Settings** > **Bluetooth**.
2. Tap  on the top right corner. Select Refresh.

After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and is discoverable.

1. Tap the name of an available Bluetooth device to pair with.
2. In the popup "Bluetooth pairing request" dialog, type the appropriate PIN.

To extend battery life, turn Bluetooth power off when not in use.

Security settings

Protect your device from unauthorized use.

▶▶ Protecting your device with a pattern

Press **Home key** > tap  >  **Settings** > **Security** > **Screen lock** > **Pattern**.


1. Drag your finger to connect at least four dots, draw the pattern.
2. Touch **Continue**.
3. Redraw your pattern to confirm.

▶▶ Unlocking the screen with your pattern

1. Press **Power Key** to wake up the screen.
 2. Draw the pattern you have set to unlock the screen.
- If you make a mistake, your device will ask you to try again.

Applications

▶▶ Opening applications

Tap , then select an application icon to launch.

▶▶ Open recently-used applications

Hold **Home Key** from any screen. The device will display the applications you used recently. Tap the application you want to open or slide if you want to close it.

Press **Home Key** > tap  >  **Settings** > **Apps**, to see all the installed applications.

▶▶ Installing an application

To download and install an application you must use Play Store.

1. Press **Home key** > tap  >  **Play Store**. Play Store