

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

 
Main Features

- Wi-Fi connectivity
- 7.0" Touch Screen
- 3rd Party Apps Support
- Built-in Webcam
- Built-in G-sensor
- Media Player

Box Content

- Main Unit
- Instruction Manual
- USB cable
- OTG cable
- Warranty Card
- Adapter
- Certification card

Product Overview

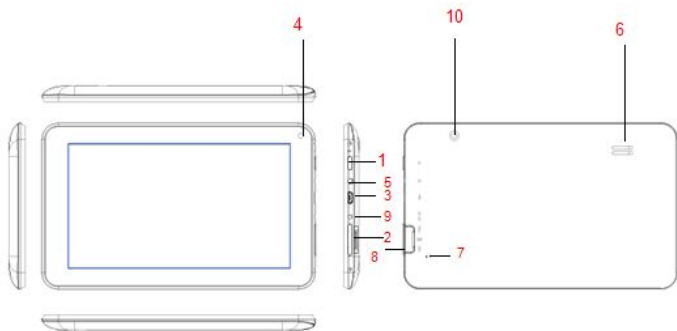

- 1. Power** – Press and hold to turn on or off the unit; briefly press to lock or unlock the screen
- 2. VOL+:** Increase the volume / **VOL-:** Decrease the volume
- 3. Micro USB port** – Connects to PC via USB cable / Connects to USB memory device, keyboard/mouse
Microphone – The microphone is located near the USB port inside the cabinet
- 4. Camera** – Built-in Webcam
- 5. Earphone Socket** – Connects to stereo earphones
- 6. Speaker**
- 7. Reset Pin Hole** – Reset your device if the device freezes
- 8. Micro SD Card Slot**
- 9. DC-IN Port** – Connects to the provided AC adapter
- 10. Camera** – Built-in Rear camera


Before operation

Power On/ Off the Device

To turn on the device, press and hold the **Power** button on the unit and release it when you see the boot-up screen. It may take one or two minutes to start up the system, please be patient before you proceed.

To turn off the device, press and hold the **Power** button to bring up the "Power Off" option, then tap on "Power Off" and "OK".

Unlock the Screen Display

The screen display will be locked when the device is idle for a few seconds. You need to unlock the screen by dragging the lock icon  right ward before you continue to use the device.



Charge the Battery

Charge the device when it indicates low battery. To charge the battery, connect the device to any standard wall outlet via the DC-IN port using the power adapter. It takes about 5 hours to fully charge the battery.



Install Memory Card

To install a memory card, find the card slot on the device and then insert the memory card into the slot in the correct orientation.

Transfer Files from PC


You may need to transfer media files from a computer to the device.





- (1) Connect the device to a computer with the supplied USB cable.
- (2) Once the connection is done, an icon of mobile phone (internal memory) will appear on your computer.
- (3) Copy files from the PC to the internal memory or the memory card.

Reset the Device

- (1) If the device freezes, you can force the device to shut down by holding the **Power** button for seconds. then the device will reboot.
- (2) If the above operation does not work, use a pin to penetrate into the "pinhole reset" button.

General Touch Actions

 
- During playback of music or video, you can tap on the progress bar to change the playback progress. 
- In different browsers (e.g. File, Music etc.), you can slide your finger on the screen up and down to scroll the file list.

- In some browsers (File, Music, Video, Web etc.), you may hold your finger on an item to display options.
- Tap on  button to get back to previous operation interface; tap on  button to go to the Home Screen; tap on  button to display the menu options; tap on  button to check the recently opened apps.




Basic Operation

Home Screen

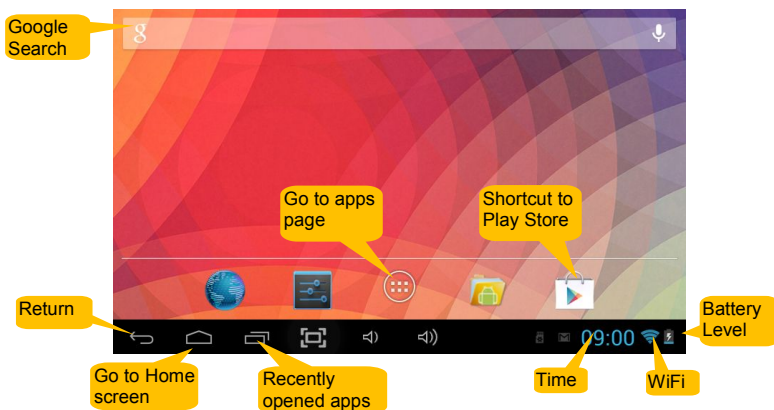


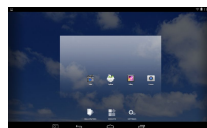 
System Settings

Tap the Setting icon  on the Home Screen to open the system setting menu. Here you can setup the working environment for the device, e.g. Language, Display, WiFi, Sound, Apps etc..




Display all Applications and Widgets

 
The device has many useful pre-installed applications/widgets. You can tap the Application Tab  to display applications. You can tap the homepage until pop up the interface as the left picture. Then tap the **WIDGETS** to display the widgets



Customizing Home Screen Items

- To add a Home Screen item (shortcut), you can tap the application icon  to display all applications or you can tap the homepage to enter the WIDGETS and display the widgets. Then hold your tap on an item to place it on the home page.

Note: If current page of the Home Screen has no enough room for a shortcut or widget, you will be prompted that there is no more room.

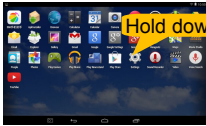

- To move a Home Screen item, hold your finger onto it to highlight it, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it to highlight it, drag it to the recycle bin "X Remove" and then release your finger.





- To change the wallpaper, hold your tap on the Home screen till a menu appears, then tap on "Wallpaper" to set the desktop wallpaper.



Make Wi-Fi Connection

Before launching the web browser, you first need to activate the Wi-Fi and configure a Wi-Fi network.

- Tap tap the Apps Tab  to display all apps.
- Tap the Setting icon  on the apps screen.
- Slide the WIFI toggle switch to "ON" to turn on WIFI.
- The device will scan automatically for available WiFi networks and display them.
- Choose a network from the list and then tap "Connect" to connect.



Bluetooth Connection

Bluetooth functions:

You can exchange files between 2 Bluetooth devices. You can exchange files with other mobile phone call, pad, and so on.

You can connect to mobile phone call, pad, and notebook PC that support Bluetooth.

Use Bluetooth functions :

 
Setting steps for entering Bluetooth: Settings -> Bluetooth , open Bluetooth device.

Device name: Click Settings option, choose Rename Tablet PC.

Detectability: Click the place at the name of Bluetooth device, and this function can be opened, which indicates your MID Bluetooth can be searched by other Bluetooth devices. The default time of this opening is 120 seconds.

Scan to search for device: By using this function, you can detect the device you want to connect.

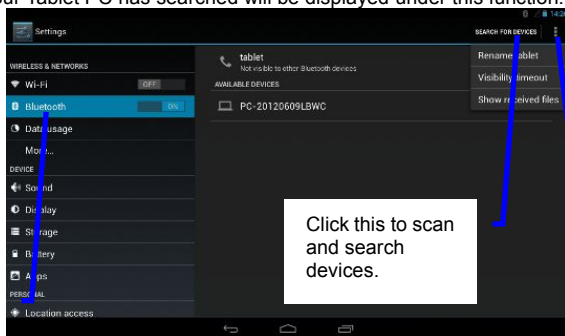

Bluetooth devices: After you have scanned to search for the device, the Bluetooth devices your Tablet PC has searched will be displayed under this function.



Click this to open and detect function.

Settings

 
Launching the Web browser

To launch the Web browser, you can tap the Application Tab  and then the Browser icon  in the Home screen.



Playing Music

- (1) Tap the Music icon in the application page to launch the music player.
- (2) Navigate through the music library.
- (3) Select a file and tap it to enjoy the music.

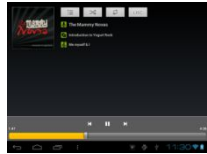



Playing Videos

- (1) Tap the Video icon in the Home Screen to launch the video player.
- (2) Navigate through the video files if available.
- (3) Tap on a video file to start playing it.



Viewing photos

  
- (1) Tap the Gallery icon in the application page to launch the Photo Gallery.
- (2) Browse photos listed in thumbnail.
- (3) Tap a photo thumbnail to view the photo in full screen.
- (4) To display the previous/next picture, slide your finger on the screen horizontally.
- (5) To zoom in or out the picture, pinch your finger on the picture.

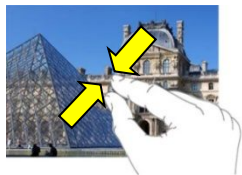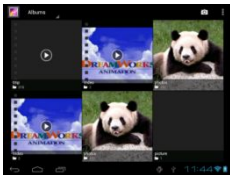

Managing the Files

You can check or manage your files with Explorer application.

 - (1) Tap the Explorer icon in the apps page to open this mode.
- (2) In this mode, you can look through all your file resources.
- (3) You can also manage your file resources by bringing up the menu.



Receiving and Sending Emails

You can receive and send emails with this device if internet access is available.

Setup your Email Account

- (1) Start up the email application by tapping the **Email** application icon.
- (2) Input your email address and login password.

- (3) Tap “Manual Setup” to set the email server information.
- (4) Click “Next” to continue. Your tablet will check the server settings. When it prompts you that “Your account is set up, and email is on its way”, your account is set up successfully.
- (5) Input your name and then tap on “Done” to finish.

Managing apps and tasks

There are number of useful apps pre-installed in the device as it is produced at the factory, and you can copy, download or purchase some 3rd apps from other resources (e.g. the Internet).

●Download or purchase apps

With your device, you can visit an apps store or E-market website (e.g. SlideMe) that offers you plenty of free or paid apps to download.

●Install apps

- (1) Open the Explorer application, then find the app you want to install.
- (2) Tap the app to start installation. However, for the sake of security, the installation may be blocked if the device is not sure of the source of the app. In this case, you shall have to check the “Unknown sources” in the pop-up setting menu before you go on with the installation.
- (3) Once the installation finishes, you can find the icon of the app in the apps screen. It is available for you now.

●Uninstall 3rd party apps


- (1) Tap the Settings icon to display setting menus.
- (2) Select “Apps”.
- (3) Tap on the application that you want to uninstall.
- (4) Tap on “Uninstall” to uninstall the application.
- (5) You can simply tap and hold on an app icon to jump to the Home Screen, then drag it to the dustbin icon to uninstall it.

 
 
Note:

- *You cannot uninstall the pre-installed applications, but you can deactivate or stop them; Only the 3rd party apps you installed can be uninstalled.*
 - *Make sure all apps you have copied or downloaded to your device are in the .apk format.*
-

●Managing tasks

You can handle multiple tasks at the same time with this device. For example, you can view photos while listening to music.


- (1) To remove the apps used recently, you can tap  button to display them, then hold your tap on the app that you want to stop, and finally select “Remove from list”.

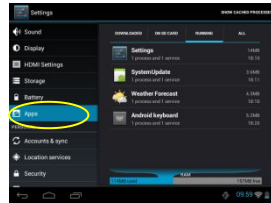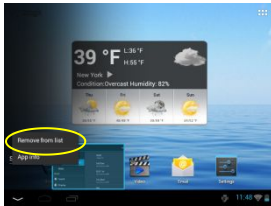

- (2) You can also run the application Advanced Task Killer (if available) to kill your tasks.
- (3) You can open the Settings menu and select Apps to stop the tasks.

Security

 
Unknown sources: Set the device to install applications downloaded from any source. If you do not select this option, you can install only applications downloaded from Play Store.

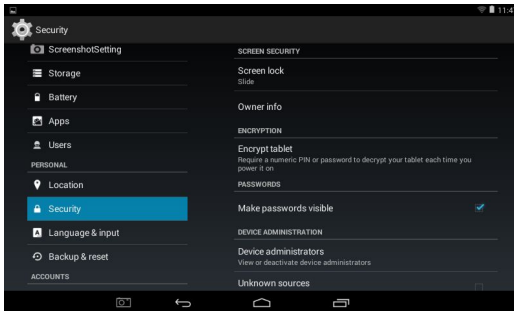

Storage

View memory information for your device and memory card. You can also format the memory card.

 - Formatting a memory card will permanently delete all data from the memory location.
- The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory.

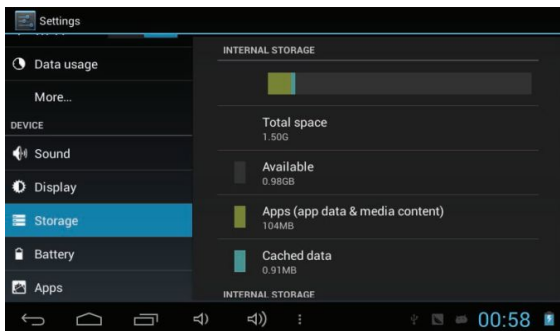


Language and input

Change the settings for languages and text input.

Language: Select a display language.

 
Keyboard & input methods: Select a text input method.

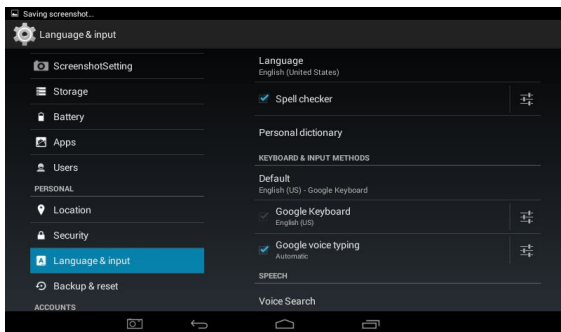

Date and time


Change the settings to control how time and date appears on your device

 - Automatic date and time: Set to receive time information from the network and update the time and date automatically.
- Set date: Set the current date manually.
- Set time: Set the current time manually.
- Automatic time zone: Set to receive time zone information from the network when you move across time zones.
- Select time zone: Select a time zone.
- Use 24-hour format: Set to show the time in 24-hour format or 12-hour format.
- Select date format: Select a date format.

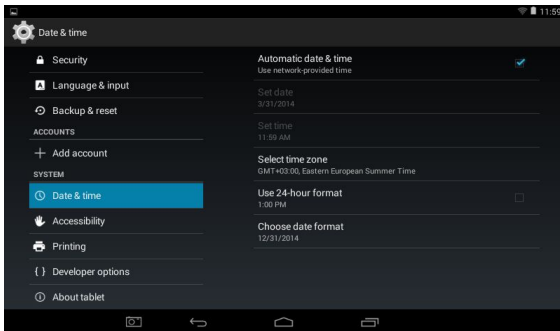

About tablet

 
View information about your device, such as model number and version.

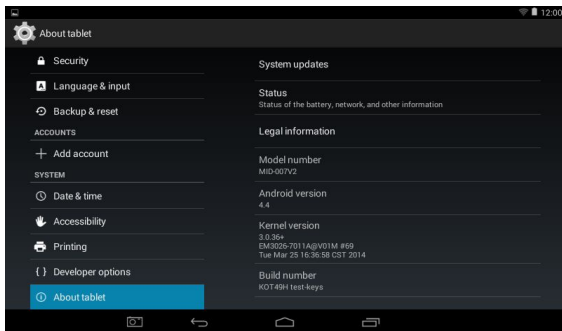

Back up and reset

Change the settings for managing settings and data.

 
- **Back up my data:** Set to back up your settings and application data to the Google server.
- **Backup account:** Set up or edit your Google backup account.
- **Automatic restore:** Set to restore your settings and application data when you must reinstall an application.
- **Factory data reset:** Reset your settings to the factory defaults and delete all your data.

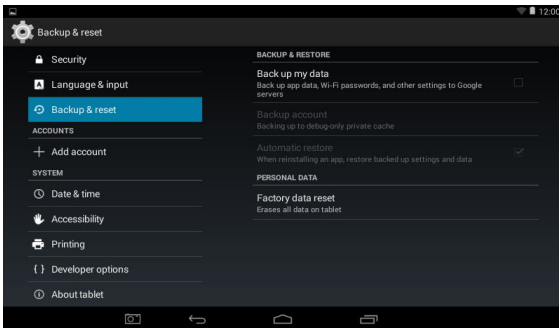

Doing factory reset by Recovery Mode

- While the tablet is powered off, press and hold "power" and "Vol+" buttons at the same time for 10 seconds.
- Use Vol+ / Vol- to move the highlight to "wipe data/factory reset".
- Press "power" button to select.
- Use Vol+ / Vol- to move the highlight to "Yes -- delete all user data".
- Press "power" button to select

 WARNING: Your tablet will be reset to factory default and all data will be deleted.

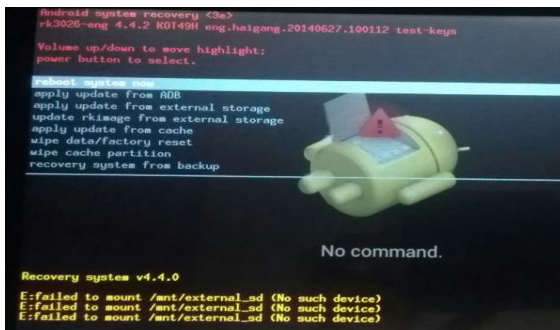

Specifications

System Physical Standard Configuration:		
Type	Details	Descriptions
LCD	Screen Size	7"
	Screen Resolution	1024*600
TP	Touch Module	capacitive
Battery	Type	Lithium-ion polymer battery
	Capacity	3000mAh/3.7V,
System hardware configuration:		
Type	Details	Descriptions
CPU	Type	RK3026 Dual Core Cortex-A9
	Speed	1.0 GHz
GPU	Type	Mali-400MP2
	Speed	400MHz
RAM	Capacity	1G
ROM Flash	Capacity	8G
Camera	Front Facing	0.3MP
	Rear Facing	2.0MP
Speaker	Size	Built-in 8Ω/1W speaker x 1
G-sensor	Built-in	Gravity acceleration sensor
Network Connections:		
Type	Details	Descriptions
WIFI	WIFI module	WIFI 802.11b/g/n
Bluetooth	BT module	BT 4.0

Interface Configuration:		
Type	Details	Descriptions
Memory card socket	External memory	Support SDHC/SDXC
USB interface	Data transfer supportive	USB OTG
Headphone jack	Music output	§ 3.5mm standard headphone jack
DC connector	Power	§ 2.5MM power connector
Keyboard	Input device	Wired / Wireless Supportive
Mouse	Input device	Wired / Wireless Supportive
Necessary Accessories:		
Type	Details	Descriptions
Power adaptor	Standard Configuration	DC 5V/2A
USB data cable	Standard Configuration	Connect to PC
USB patch cord	Standard Configuration	OTG to HOST
Software Configuration:		
Type	Details	Descriptions
Operating System	Operating system version	Andriod 4.4
	Language	Multi-language supportive
	HTML5	Supportive