

Haier



Haier Y11B
Quick Start Guide

Introduction

Thank you for your choosing the new tablet pc.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

Contents

Accessories List	01
Technical Specifications	01
Precautions before Use	03
Key Layout and Definitions	04
Key Descriptions and Applications	06
Introduction to Desktop	08
1. Windows8.1 Start Screen.....	08
2. Image Slide Application.....	09
3. Introduction to app Interface.....	10
4. Charm Menu Column.....	12
5. Double Screen Application.....	13
Basic Operations	14
1. Dormancy, Restart, and Power off.....	14
2. Security Management	15
Troubleshooting	16
Important Statements	17

Accessories List

- Tablet pc (1)
- User Manual (1)
- Power Adapter (1)
- Driver Disk (1)
- Keyboard (1)
- Warranty Card (1)

Note: specific accessory in accordance with actual.


Technical Specifications

Project	Description
CPU	Intel® Core™ M-5Y10c
DDR-RAM	4GB
SSD	32GB
HDD	500G
Operating system	Windows 8.1
Wi-Fi	Supports 802.11 b/g/n
Bluetooth	Bluetooth 4.0
G-sensor	Built-in
Microphone	Built-in
USB port	Micro USB
Audio port	3.5mm earphone jack
Camera	Front Camera, 2 Mega Pixel Rear Camera, 2 Mega Pixel

 
Project	Description
Standard battery	Lithium-ion polymer battery 9200mAh
Power adapter	Input: 100-240VAC, 50-60 Hz Output: DC 12V $\overline{=}$ 2.5A
Micro SD card	64G max.
Main screen	11.6 inches high resolution 1366×768 widescreen
Product size	tablet: 301×186×10.4mm keyboard: 301×201.7×14.8mm

Disclaimer: These specifications are for reference only and shall not constitute any commitment in any way. Concerning the product improvement, we shall reserve the right to change the product specifications without further notice.

Precautions before Use

1. This production is suitable for use in non-tropic areas below 2,000 meters, and the mark  in the nameplate indicates the product is suitable for use in non-tropic areas.
2. Prevent the tablet pc from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<math><35^{\circ}\text{C}</math>), too humid or with too much dust. Do not expose the tablet pc to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the tablet pc, close it immediately and do not use it until it dries out.
6. Do not clean the tablet pc with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the tablet pc by yourself; otherwise you will lose the right to warranty.
10. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

Key Layout and Definitions

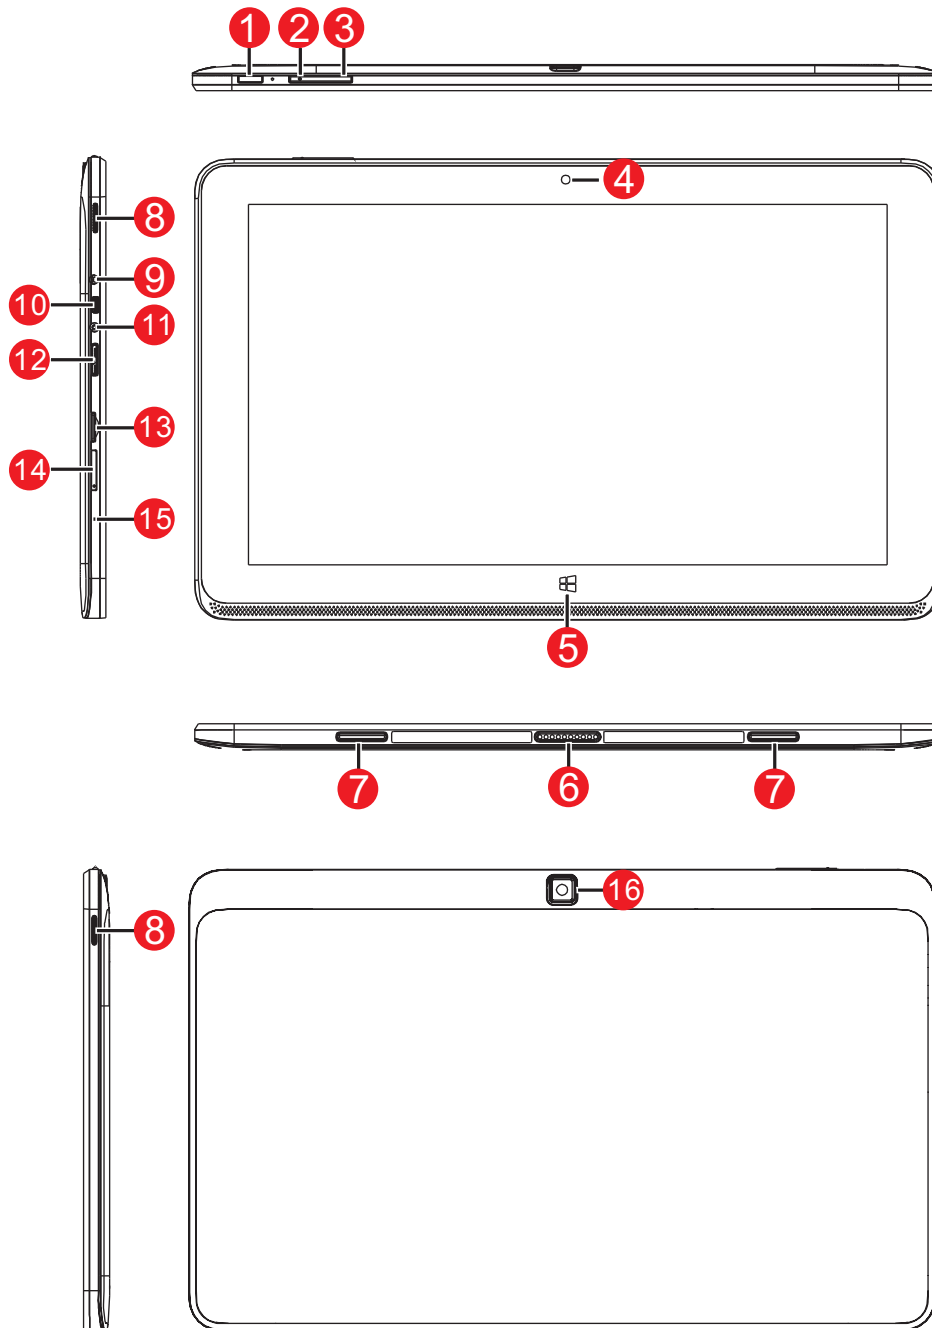


- ① Power button: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.
- ②/③ Sound-/sound+: Lower/raise volume
- ④ Front CCD camera: take photos, and record pictures
- ⑤ Windows key: Press this button to return to the Start screen.
- ⑥ Pogpin interface: Detachable dock linking the table pc and the keyboard.
- ⑦ Keyboard and tablet interface: keyboard and tablet to link.
- ⑧ Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to linking additional device.
- ⑨ Socket for earphone and microphone: This socket can transmit the audio signals of tablet pc to loudspeaker or earphone.
- ⑩ Power DC Interface: Recharge your tablet pc through DC interface.
- ⑪ Micro USB Interface: You can read the data through USB.
- ⑫ MicroSD& MicroSDHC Format Micro SD card slot: The built-in storage card reader slot supports MicroSD and MicroSDHC format.
- ⑬ Microphone connector outlet

⑭ Back CCD camera: take photos, and record pictures
DC indicator:during charge is in red, full charge is in blue.

Key Descriptions and Applications

 Attention: Keyboard is optional, and configure the product according to the specific type of the tablet pc you have bought.

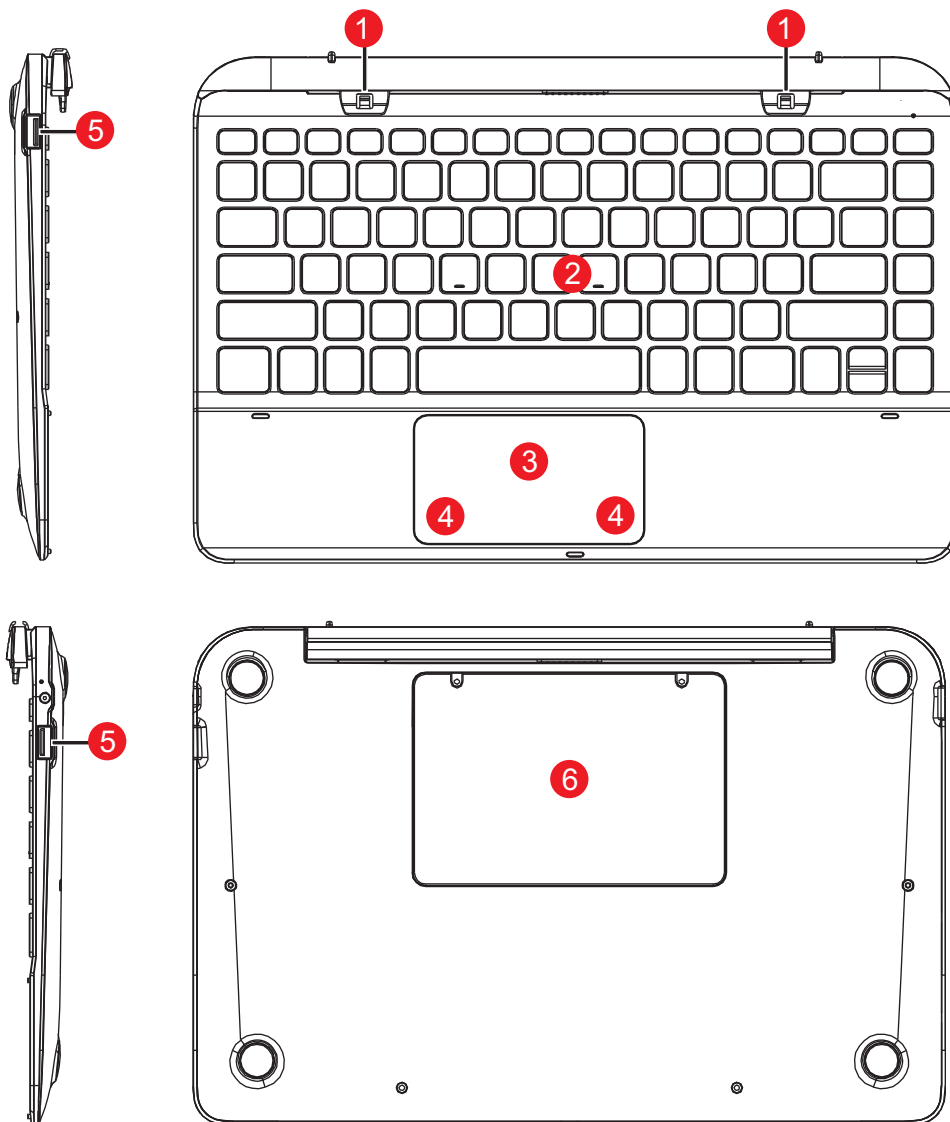

- ① Keyboard Booth: Detachable dock linking the table pc and the keyboard.
- ② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfortability.
- ③ Keyboard Touch: Used to control the cursor on the tablet pc, with the same function as a mouse.
- ④ Keyboard left key and right key.
- ⑤ Full Size USB
- ⑥ Detachable Disk 500GB

Use of tablet and keyboard.



Attach the tablet to the keyboard to function as a laptop.



Detach the tablet by lifting one corner to release it from the keyboard to function as a tablet.



Introduction to Desktop

1. Windows 8.1 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.



2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.

Reduce



On the touch screen, narrow two fingers to reduce the image.

Enlarge



On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs.

Slide with finger



In start screen, slide finger right and left to move the image.

Slide upward



 
In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3.Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the tablet pc.



If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

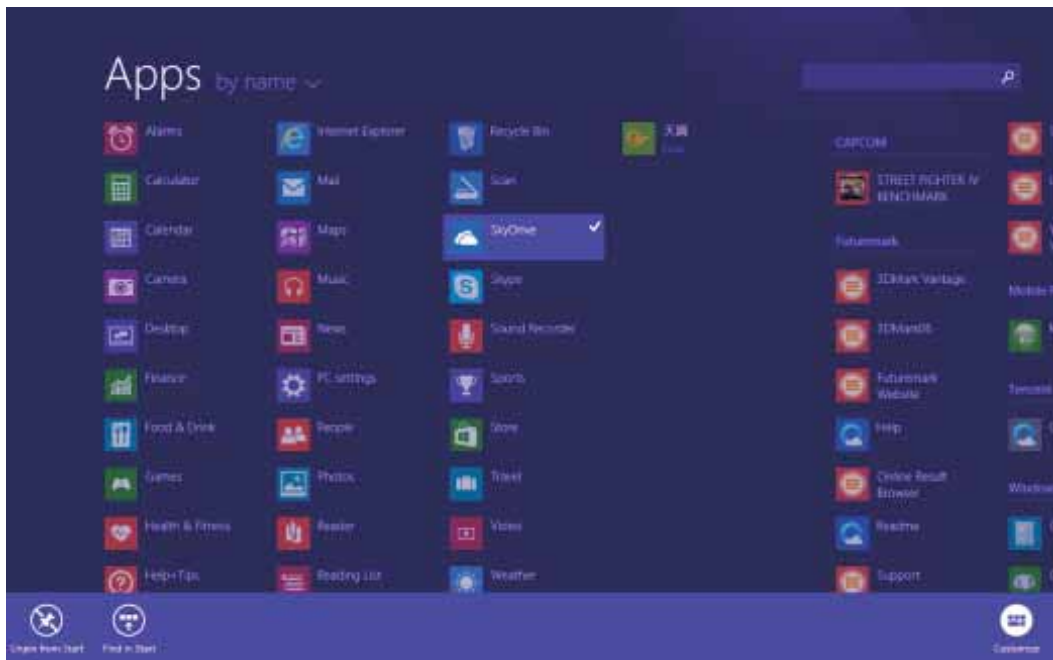

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.



4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the tablet pc.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.



Can let you read, write and share files, connect external screen or printer with the device connected to the tablet pc.



Can let you set up the table pc.

Search menu



Share menu



Device Menu



Set up Menu



5. Dual-Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.




(Figure 1)




(Figure 2)

Basic Operations

 1. Dormancy, restart and power off

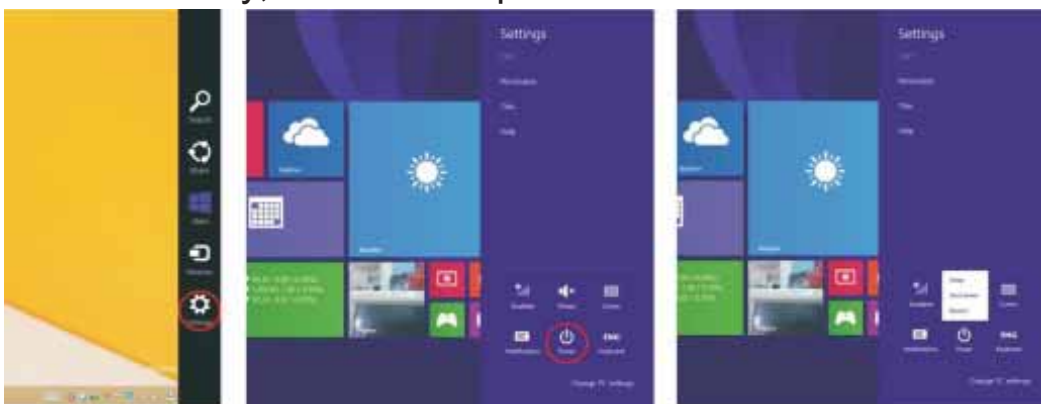

 2. Security Management User and password setup

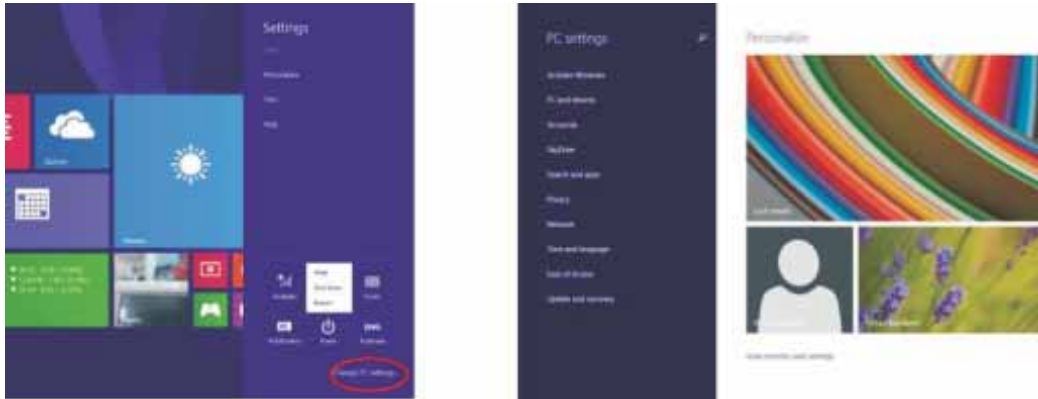

Method for quick setup:

Click the "Setup" button in "Charm" setup, and select "Change computer setup". Select "User" on the left and click "Create local account" in "Your account" on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

Troubleshooting

■ Your device can not be turned on.

The battery power is used up. Please fully charge your device.

■ Your device can not access to the Internet via Wi-Fi.

1. Check whether your device can receive any Wi-Fi signal.

2. Check whether the wireless router supports DHCP. If not, please configure a static IP address.

3. Check whether the wireless router has been connected to the Internet.

■ Your device responds to operations slowly.

1. Check whether too many applications are running in the backstage.

2. Check whether any incompatible-version application has been installed.

3. Use the antivirus software to scan and kill the malicious programs (if any).

■ Your device gets warm in use.

It is normal that your device gets warm in a long-time use or in charging.

■ Your device crashes and its keys do not work.

Press and hold the power button for 8 seconds, and the system will turn off and then press the power button to start the device.

■ The total memory is smaller than the theoretical memory.

A certain space has been used to store the system files and install user applications, so it appears that the total

memory is smaller than the theoretical memory.

■ **Some video files can not be played.**

Your device supports most of the common audio and video file formats, except a few special formats. We suggest that you download a third-party player to play those exceptional files.

Important Statements

All contents and services obtained through your device shall belong to a third party under the protection of copyright, patent, trademark or other intellectual properties, and shall be used for your personal non-commercial purposes only. You are not allowed to use any content or service in any way without the authorization of the content or service provider.

In no case shall we be held liable for any direct, indirect or accidental loss or damage caused by your accessing any content, service, information or third-party software through your device.

Third-party services are subject to change, deletion or may stop without prior notice. We shall not imply or assure that all services and contents will be kept available at all time.

We shall not be responsible for providing any related customer service for any third-party service or content. Please refer your questions and service requests directly to the relevant content or service provider.

Please remember to backup the data when using your device. We shall not be held liable for any personal data loss or damage caused by software or hardware

misoperation, product repair, battery replacement or any other unexpected situations, or for any other indirect loss arising thereof. Any misunderstandings in relation to this Manual shall be beyond our control. Consequently, we shall not bear any liability for any accidental loss caused by the use of this Manual or for any third-party claim caused by the use of your device.

CE Statement

Notices for the use of pad

Your pad is a product of superior design and craftsmanship and should be treated with care. The following suggestions can help you comply with the terms of repair kits, to extend the life of your pad.

1) Place the mobile pad and its parts and components out of reach of small children.

2) Keep the pad dry. Rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.

3) Don't touch the pad with wet hands when charging, it will cause electric shock or damage the pad.

4) Avoid placing the device in high temperature environment. High temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. Avoid placing the device in significantly low temperature environments. When the temperature rises, the pad will produce water vapor that may damage electronic circuit.

5) Avoid placing the pad in dusty or dirty places, otherwise parts may be damaged.

6) To avoid damage to the pad, do not place it near a lit cigarette, an open flame or any other heat source.

7) Do not open the device, non-professional approach will cause damage to the pad.

8) Do not shake the pad or throw it from high places. handling the pad roughly can damage internal circuit boards.

9) Do not paint the pad, as paint will block headphones, microphones or other removable parts, and cause the

part or the device to stop working.

10) Use clean, soft, dry cloth to clean the camera and light sensor lenses. Do not use of harmful chemicals, cleaning agents or cleaning fluids to clean the pad.

11) If mobile pad, battery, charger, or mobile pad accessories are defective, send to the nearest qualified service center for inspection.

12) If necessary, Service Centre staff will assist you and will arrange for pad repairs.

13) To prevent possible hearing damage, do not listen at high volume levels for long periods

Caution:

Use the Mobile pad in an environment with temperature between -5°C and 35°C , For the following equipment: Mobile pad is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The earphones should be used carefully. Excessive sound pressure from earphones and headphones can cause hearing loss.



The product shall only be connected to a USB interface of version USB 2.0 or higher. The connection to a power USB is prohibited.

Adapter shall be installed near the equipment and shall be easily accessible.

The device complies with RF specifications when the device used at 0 mm form your body.

Risk of explosion if battery Is replaced by an incorrect type.

Dispose of used batteries according to the instructions. The plug considered a disconnect device of adapter.

FCC Warning

1. Labelling requirements:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. Information to user:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

3. Specific Absorption Rate (SAR) information for intel Z3735F program .

This pad meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Y11B (FCC ID: 2ACZD-Y11B) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical body-worn operations with the back of the handset kept 5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.