

**Copyright©2008 Haier Technologies Co., Ltd**

### All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.










### Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

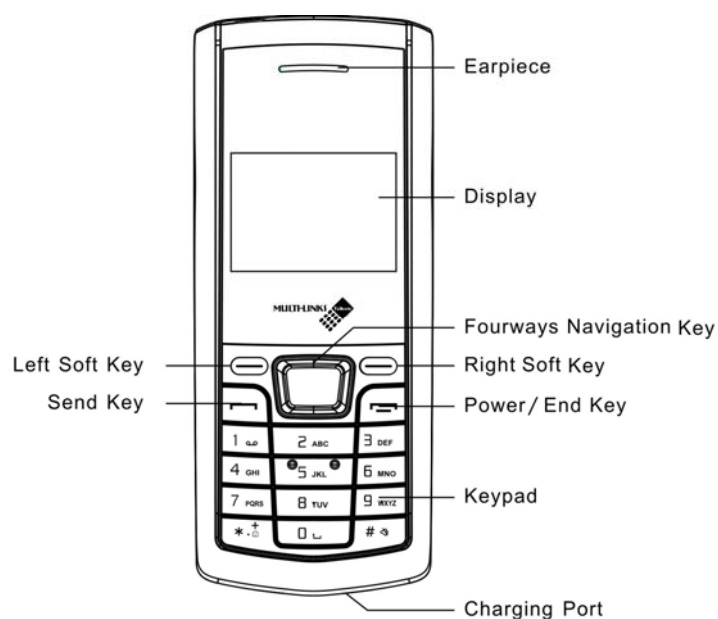 
Haier Technologies Company reserves the right to revise this document or withdraw it at any time without prior notice.

## Safety Precautions








Please read these simple guidelines. Not following them may be dangerous or illegal.

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

## Phone appearance



## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>• Enter the recent call list in idle mode.</li> <li>• Dial or answer a call.</li> </ul>
	<ul style="list-style-type: none"> <li>• Press and hold to switch your phone on/off.</li> <li>• End a call during a phone call.</li> <li>• Reject an incoming call.</li> <li>• Return to standby.</li> </ul>
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> <li>• Quick into Radio, Profiles, Messages menu and Names list</li> <li>• Control the cursor directions</li> <li>• Increase or decrease the volume during a call.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter numbers and characters.</li> <li>• Press and hold the 1-9 keys to dial speed-dial phone numbers.</li> <li>• Press 1-99 keys followed by '#' key and then press the send key to dial speed-dial phone numbers.</li> <li>• Select a submenu item labeled with the corresponding number.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter the * symbol.</li> <li>• Press and hold to lock the keypad in idle mode, and press 123 to</li> </ul>

unlock.

- Activate symbol mode.



- Enter the # symbol.

- Press and hold to enable or disable the **Silent** profile.

- Press to switch between different input method in writing mode.

## Screen Icons

Icon	Description	Icon	Description
	Network signal strength		Battery power level
	New message received		Memory for messages full
	Alarm clock on		Scheduler enabled
	No signal		Call connected
	Ringer mode		Silence mode
	One beep mode		Headset profile

## Installing the Battery

1. Place the battery in the battery compartment.
2. Close the battery cover by sliding the cover upwards.



Installing the battery

## Removing the Battery

1. Turn off your phone.
2. Remove the battery cover by sliding the cover downwards.
3. Use your fingernail to gently lift the upper edge of the battery outwards.
4. Take out the battery.








Remove the battery



## Charging the Battery

1. Plug the charger transformer into a standard outlet.
2. Insert the charger output into charging port of the bottom of the phone
3. The rolling of the electric quantity bar indicates that the phone begins to charge.
4. When the battery level full and stop rolled, the phone will display 'Battery full'.
5. After charging is complete, switch off the electric supply and pull out the charger's jack.




## Using the Function Menu

1. In idle mode, press  to display the **Menu** interface.
2. Press  to scroll to a menu item.
3. Press  to display the menu.
4. Display the submenu in either of the ways:
  - Press  to scroll to a submenu item and press  to display the submenu.



- Press the number key corresponding to the number of a submenu to display it.
5. Press  to return to the previous menu or quit the function menu.  
Press  to return to the idle screen.

## Making a call

### 1. Dialing

Select a desired entry from the names list or directly type in the phone number in idle mode, press  key to dial.


### 2. Making an international call



- Press  key several times until "+" appears on screen.
- Enter the country code, area code (without prefix zero) and phone number.
- Press  key to dial.

### 3. Ending a call

You can end a call by pressing  key.

## Receiving a call

1. Press  key or any key (need setting) to answer the call.

Or press  [Silence] key once to close incoming ringer, then press  [Accept] key again to receive the incoming call.

2. Press  [Ignore] key or  key to reject the incoming call.

## Phone Lock

The phone lock code is used to protect your phone from unauthorized use.



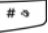
It can be set automatically to lock your phone each time it is switched on or when in idle mode. In this condition, you can only dial emergency call.

Emergency call number is: 911.

When phone is locked, to unlock user must enter the preset security code (The default code is 000000).

## Radio

With this feature, you can use your phone to tune, save channels, and listen to FM radio stations when headset is plugged into your phone.

In radio main interface, you can use the  key to switch FM sound on/off and use the  key to switch between earphone pattern and speaker pattern, and you also can use the  key to switch between common mode and prestore mode.

By default, the radio is in common mode. Here in radio main interface press up/down navigation key to adjust the volume and press left/right navigation key to move 0.1 MHz forwards/backwards along the current FM band. You can select 'Search up/down' option to search an available channel forwards/backwards along the current FM band.


When there are radio channels saved in channel list, phone allows you to set radio to prestore mode. Here in radio main interface press up/down navigation key to adjust the volume and press left/right navigation key to search the next frequency which is saved in channel list.

## Changing the Text Input Method

Your phone provides eZi input method. You can enter alphanumeric characters when working with the names or when you are using the message service, etc.

Under the text-editing mode, press the  key to switch the input method.

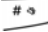
## Entering Character (Abc/abc/ABC)

By pressing the  key and choosing 'Abc', 'abc' or 'ABC', you can enter uppercase and lowercase letters, and you can also press and hold the numeric keys to input numbers directly.

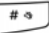
- 1) The 'Abc' option allows you to type the first letter of each sentence in uppercase. When you have typed the first letter, 'Abc' will be changed to 'abc' automatically.
- 2) The 'abc' option allows you to type in lowercase letters.
- 3) The 'ABC' option allows you to type in uppercase letters.

You can press desired numeric key, once to input a character, twice to display the second character, by analogy to finish the text.

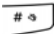
## Entering Character (en/En)

By pressing the  key and choosing 'en' or 'En', you can create a word without having to type in all the characters of that word.


- 1) The 'en' option allows you to type predictive text in English with the first letter of each sentence in lowercase.
- 2) The 'En' option allows you to type predictive text in English with the first letter of each sentence in uppercase. When you have typed the first word, 'En' will be changed to 'en' automatically.

Associated words should be displayed after you have to type in a single letter or first few letters of the word you want to input. Then you can insert the desired word by pressing the  key or 4-ways navigation keys and single pressing corresponding numeric key.

## Entering Number (123)

1. In text-editing mode, press the  key several times until '123' is displayed at the top-right corner of the screen.
2. Press the numeric keys to input numbers.

## Entering Symbols

1. Press the  key to enter the special character library.
2. Press 4-ways navigation keys to view the symbol you need.
3. Press the corresponding numeric key to select.

## **Annex I: RF Exposure Information**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device (FCC ID: SG70901HC-D2100) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.311 W/kg and when properly worn on the body is 0.502 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.