

=Copyright©2010 Haier Technologies Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.










Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

 
Haier Technologies Company reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

| | |
|---|--|
|  | Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger. |
|  | Do not place your phone and its accessories in containers with strong electromagnetic field. |
|  | Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. |
|  | Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force. |
|  | Do not use the phone at a refueling point. Do not use near fuel or chemicals. |
|  | Follow any restrictions. Wireless devices can cause interference in aircraft. |
|  | Keep the phone and all its parts, including accessories, out of the reach of small children. |
|  | Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life. |
|  | Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device. |

Phone appearance

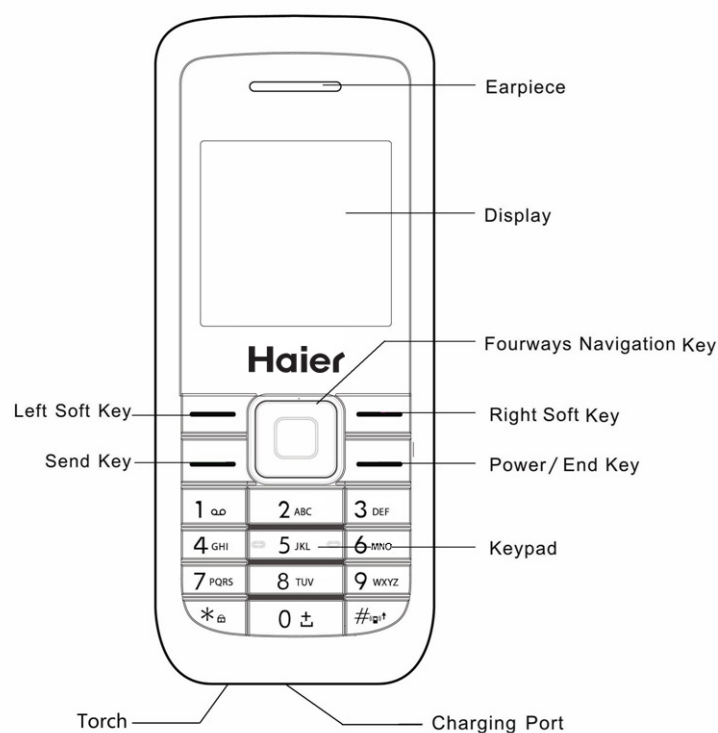









Keys and Functions

| Press... | To... |
|-----------------|---|
| Send key | Making or answering a call. In standby mode, press this key to access the All calls screen. |
| End (Power) key | End calls or reject calls. Long press: Power on, power off. |
| Left soft key | Select the option displayed on the lower left corner of the screen. |
| Right soft key | Select the option displayed on the lower right corner of the screen. |
| Navigation key | Quick into Best tone, QQ, All contacts and Messages menu. Increase or decrease the volume during a call. |
| Number keys | Enter numbers and characters. Press and hold the 1-9 keys to dial speed-dial phone numbers. |
| * key | <ul style="list-style-type: none"> • Enter the * symbol. • Press and hold to lock the keypad in idle mode • Press twice to enter '+' in idle mode. • Press three times to enter 'P' in idle mode. |


- Press four times to enter 'T' in idle mode.
 - Activate symbol mode.
-
- # key
- Enter the # symbol.
 - Press and hold to enable or disable the vibrator .
 - Press to switch between different input method in writing mode.

Screen Icons

| Icon | Description | Icon | Description |
|---|-------------------------|---|---------------------|
|  | Network signal strength |  | Battery power level |
|  | New message received |  | Ringer mode |
|  | Alarm clock on |  | Silence mode |
|  | Roaming service mode |  | Vibrator enable |


Installing the Battery

 1. Place the battery in the battery compartment.
2. Close the battery cover by sliding the cover upwards.

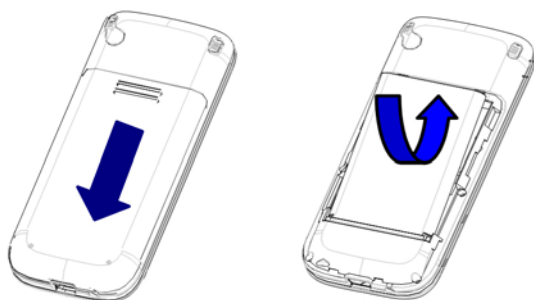


Removing the Battery

  1. Turn off your phone.
2. Remove the battery cover by sliding the cover downwards.
3. Use your fingernail to gently lift the upper edge of the battery outwards.
4. Take out the battery.

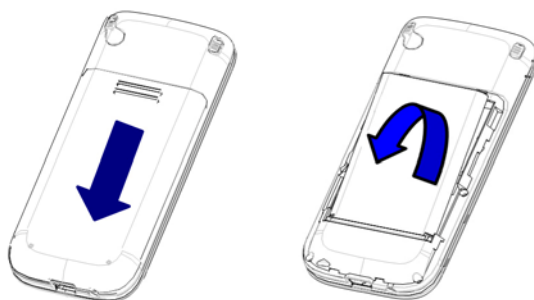





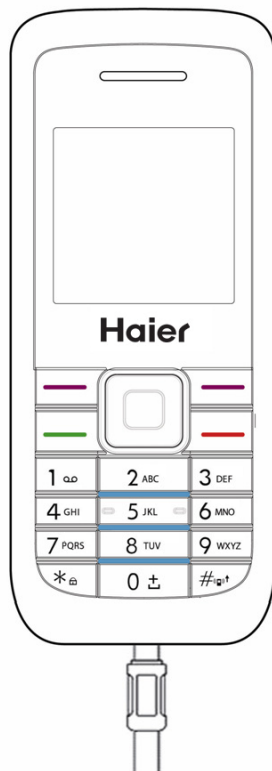


Charging the Battery

1. Plug the charger transformer into a standard outlet.
2. Insert the charger output into charging port of the bottom of the phone
3. The rolling of the electric quantity bar indicates that the phone begins to charge.
4. When the battery level full and stop rolled, the phone will display 'Battery full'.
5. After charging is complete, switch off the electric supply and pull out the charger's jack.




Using the Function Menu


1. In idle mode, press  key to display the **Menu** interface.
2. Press  key to scroll to a menu item.
3. Press  key to display the menu.
4. Display the submenu in either of the ways:
 - Press  key to scroll to a submenu item and press  key to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  key to return to the previous menu or quit the function menu.
Press  key to return to the idle screen.

Making a call

1. Dialing

Select a desired entry from the names list or directly type in the phone number in idle mode, then press  key to dial.


2. Making an international call



- Press double times the * key until "+" appears on screen.
- Enter the country code, area code (without prefix zero) and phone number.
- Press  key to dial.

3. Ending a call

Press  key to end a call.

Receiving a call

1. Press  key or any key (need setting) to answer the call.

Or press  [Silence] key once to close incoming ringer, then press  [Answer] key again to receive the incoming call.

2. Press  [Ignore] key or  key to reject the incoming call.

Phone Lock

The phone lock code is used to protect your phone from unauthorized use.

It can be set automatically to lock your phone each time it is switched on or when in idle mode. In this condition, you can only dial emergency call.

Emergency call number is: **110, 112, 911, 999.**

When phone is locked, to unlock user must enter the preset security code (The default code is 0000).

Keypad lock

The keypad lock can prevent you from accidental calls.

If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically gets locked again.

When the keypad is locked, calls may be possible to the official emergency number programmed in your phone.

Press Disabel and then press * to unlock the keypad.




Text input method

1. Your phone provides following text input methods:

- English input method: input English characters.
- Numeric input method: input numeric characters.
- Chinese input method: input Chinese.

| Input method | Icon | Letter case |
|--------------|--------|--|
| Multi-tap | Abc/En | Word/sentence case text, only available at the beginning of a word/sentence. |
| | ABC/EN | Upper case |
| | abc/en | Lower case |
| Numeric | 123 | - |
| Chinese | 拼/笔 | Chinese |

2. Change the input method

- Short press  to enter symbol list;
- Press  to switch between Multi-tap, Numeric mode and Chinese.
- Press  to insert common symbol under the multi-tap mode.

RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. The model (FCC ID: SG71008HC-C1100) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.210 W/kg and when properly worn on the body is 0.525 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.