

• **Copyright©2012 Haier Technologies Co., Ltd**

**All Rights Reserved**

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.







**Statement**




The contents of this manual maybe different with the cell phone please according to the cell phone.

Haier reserves the right to revise this document or withdraw it at any time without prior notice.

**Safety Precautions**

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of "Warnings and Precautions".

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.

	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.



## Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
<b>2 Getting Started.....</b>	<b>6</b>
<b>3 Basic Functions .....</b>	<b>8</b>
<b>4 Text Entry .....</b>	<b>11</b>
<b>5 Contacts .....</b>	<b>12</b>
<b>6 Messages .....</b>	<b>15</b>
<b>7 Call History .....</b>	<b>18</b>
<b>8 Profiles .....</b>	<b>19</b>
<b>9 Alarm .....</b>	<b>19</b>
<b>10 Tools .....</b>	<b>20</b>
<b>11 Settings.....</b>	<b>22</b>
<b>12 My Data .....</b>	<b>27</b>

<b>13 Extras.....</b>	<b>27</b>
<b>14 Care And Maintain .....</b>	<b>28</b>
<b>15 Safe Information .....</b>	<b>31</b>

## 1 Getting to Know Your Phone

### Basic specification

Size: 108.5\*45.8\*12.9 (mm)

Standby Time: about 360 hours

Talking Time: about 410 Minutes

---

 Notice:

Standby time is the handset continuous working time without making phone calls. Standby time and talking time are both depending on mobile phone using situations, network situations and environments.

---

### Mobile phone appearance

#### Mobile phone view






















### The appearance of the mobile phone and introductions

<b>Name</b>	<b>Description</b>
(1) Left soft key	In standby mode, press left soft key to the main menu.
(2) Right soft key	In standby mode, press right soft key to enter contacts.
(3) Send key	Making or answering a call. In standby mode, press this key to enter the all calls screen.
(4) End (power) key	End calls or reject calls. Long press: power on, power off.
(5) Up key	In standby mode, short press up key to Message Menu.
(5) Down key	In standby status, press down key to Contacts Menu.
(5) Left key	In standby mode, press left key to enter FM Radio.
(5) Right key	In standby mode, press right key to enter Alarm.
(5) Center key	In standby mode, short press Center key to enter Main menu.
(6) Number keys	Number keys.

- (7) Charger connector                      Plug the travel adapter into the charger connector.
- (7) Headset connector                    Before using headset, pull in the headset to this port.
- (8) Electric torch                         In standby mode, Long press the down key will on/off the flashlight.

**Icon bar**

Icon	Description
	Indicates signal strength.
	Indicates call in progress.
	Indicating the mobile phone is under roaming service mode.
	Indicating the keypad is locked.
	Indicating the phone is locked.
	One or several new text messages.
	One or several new voice mails.
	Playing the FM radio function.

Icon	Description
	Connect the earphone.
	You have set the alarm clock.
	You have set the scheduler.
	You have set the general mode.
	You have set the outdoor mode.
	You have set the meeting mode.
	You have set the silence mode.
	You have set the mute mode.
	Indicating battery power level.
1X	1X data flow.

## 2 Getting Started

### Install and charge the phone

1. Remove the back casing



2. Insert the RUIM card



3. Insert the battery



4. Insert the back casing



### 3 Basic Functions

#### Switching On/Off

In the power off status, long press the **Power Key** to switch on the phone.  
In the power on status, long press the **Power Key** to switch off the phone.

#### Making phone call

##### Making phone call by dialing number

1. In the standby mode, enter the phone number you want to dial, and press the **Send Key** to make the call.
2. To end the call, press the **End Key**.

##### Making phone call using contacts

1. In the standby mode, short press **Center key** to access the **Main menu > Contacts**.
2. Select **List** to view the contacts list, and press **Up/Down key** to choose one contact, or select **Search** to out the contact you want to call.
3. Press the **Send Key** to make the phone call.

##### Making phone call using call history number

1. In the standby mode, press the **Send Key** to display the last 60 numbers in call history.

2. Select the number or name you want to redial, and press the **Send Key**.

#### **Making phone call using speed dial**

In standby mode, press and hold one number key [2-9] to make phone call.

#### **Making a conference call**

Conference call is network services that allow taking part in a conference call with other participants.

1. Make a call to the first participant.
2. Enter another number of the second participant; or get the number from your Contacts.
3. Press the **Send Key**, the first participant will be hold on.
4. When the second participant picks up, press the **Send Key** to connect the call.
5. To end the conference call, press the **End Key**.

#### **Answering the call**

##### **Answer or silence an incoming call**

1. To answer the call, press the **Send Key** or select <Accept>. Press <Silence> to mute the ringing tone before you answer the call.
2. To reject the call, press the **End Key** or select <Reject>.

### **Adjust the receiver volume**

Press the navigation key of your phone to adjust the volume of the receiver during a call. When adjusting the volume, a bar chart appears in the display indicating the volume level.

### **Answer a call with the keypad locked**

To answer a call while the keypad is locked, press the **Send Key**.

During the call, the option menu still can be used. When you end or reject the call, the keypad automatically re-locks.

### **Operations during a call**

During a call press <Options> and one of the following options: **Contact, Messages, Speaker Off (On), DTMF Off(On),New Call, Mute On (off),Continuous DTMF, Voice Privacy, Notepad.**

### **Keypad lock**

To prevent the keys from being accidentally pressed, you can lock the keypad. Press "LSK" then press "\*" to Unlock keypad.



## 4 Text Entry

### Text input method

Your phone provides following text input methods:

English input method: input English characters;

Numeric input method: input Numeric characters;

Arabic input method: input Arabic characters;

Input method	Icon	Letter case
<b>Predictive</b>	ar	Arabic case
	EN	Intelligent English Upper case
	en	Intelligent English Lower case
	En	Intelligent English Captain case
<b>Multi-tap</b>	Abc	Captain case

	ABC	Upper case
	abc	Lower case
<b>Numeric</b>	123	number characters


#### Change the input method

Press [\*] to enter symbol list.

Press [#] to switch between input methods modes.

Press [0] to select text and automatically add a space in predictive mode or Multi-tap mode.

---

 Notice:

Press [1] to insert common symbol under the Predictive mode or Multi-tap mode.

---

## 5 Contacts

You can store names and phone numbers (contacts) in the phone and the RUIM card memory.

In the standby mode, press **Center Key** to the **Main menu > Contacts**.

#### List

**All:** Display contacts stored in phone and RUIM.

**Phone:** Display contacts stored in phone.

**RUIM:** Display contacts stored in RUIM.

**Groups:** You can add members into groups from the phone contacts.

**Speed Dial:** You can set 8 speed dial numbers. In standby screen, you can press and hold one number key [2-9] to make a call with the set speed dial number.

#### Option

In contacts list > Select Options menu to do the below operations:

**Search:** You can find contacts by Name, Number or Location.

**Add New:** You can add new contacts to phone or RUIM.

**Call:** You can call this contact.

**Send Message:** You can edit message and send it to the contact.

**Delete:** You can delete the selected contacts.

**Copy:** You can copy the selected contacts between phone and RUIM.

**Edit before Call:** You can change the number to be dialed.

**Sort:** You can sort the contacts list by name or location.

**Mark Several:** You can mark several contacts for deleting or copying them.

**My Number:** You can edit the own number.

**Memory status:** You can view the memory status in phone and RUIM.

#### Groups settings

1. In the standby screen, press Center Key to access the **Main menu > Contacts > Groups**;

2. Select one group and press <Options> to operate the below options:

**Add Member:** Add members to group from the contacts list of phone.

**Send Message:** Send messages to group members.

**Set Group Ringtone:** Set special ring to the group.

**Rename:** Edit the group's name.

**Remove:** Remove the group members.

#### Speed Dial

Use this menu to assign a speed dial number (2 to 9 items).

In Idle mode, press and hold one number key to dial the speed dial entry.

1. In the standby mode, press Center Key to access the **Main menu > Contacts > Speed Dial**.
2. Select one empty entry, and set the number you want to dial, press < Search > and select **number from contact or edit speed dial number**.
3. Enter the number, and press <OK>.

## 6 Messages

Your phone is capable of creating, sending and receiving text messages.

### Write messages

1. In the standby mode, press **Center Key** to access the **Main menu > Messages > SMS> Write Message**.
2. Enter your message.
3. Press <Options> and select **Send**.

While composing a message, press <Options> to access the following options: **Send, Insert symbol, Insert expression, Priority, Validity, Deferred delivery, Delivery report, Insert templates, Insert business card, Save to drafts, Mark text, Copy, Paste, Cut**.

### Inbox

1. In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Inbox**.
2. While viewing a message list, press <Options> to access the following options: **Reply, Forward, Delete, Delete all, Call, Edit before call, Move to favorite, Use details, Copy, Mark several, Search**.

### Outbox

1. In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Outbox**.
2. While viewing a message list, press <Options> to access the following options: **Resend, Forward, Delete, Delete All, Call, Move to Favorites, Mark several**.

### Drafts

1. In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Drafts**.
2. **Press <Options> to access the following options: Send, Delete, Delete all, Move to favorite, Mark several**.

### **Favorites**

1. In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Favorites**.

Press <Options> to access the following options: **Forward, Delete, Delete all, Lock, Mark several**.

### **Templates**

1. In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Templates**.

2. Select the template message you want to use.

### **Delete messages**

In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Delete messages** and one of the following options: **Inbox, Outbox, Drafts, Favorites, Delete all**.

### **Settings**

In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Settings** and one of the following options: **Save location, Priority, Auto save, Delivery**

report, Deferred delivery, Validity period, Auto delete, Call back number, Signature, Auto Scroll, SMS on call reject, Input setting, LMS Option, Message counter.

#### Memory status

In the standby mode, press Center Key to access the **Main menu > Messages > SMS > Memory Status**.

View the amount of memory currently in use for messages.

#### Voicemail

In the standby mode, press Center Key to access the **Main menu > Messages > Voice Mail**.

The voice mailbox is a network service and you may need to subscribe to it.

## 7 Call History

Call history stores information about the missed, received, or dialled calls.

In the standby mode, press **Center Key** to the **Main menu > Call History**.



## 8 Profiles

In the standby mode, press **Center Key** to access the **Main menu > Profiles** and one of the following options: **General, Meeting, Outdoor, Silence, My Profile 1, My Profile 2.**

There are two options:

### **Activate**

Activate the selected profile.

### **Personalize**

Change the profile settings.

## 9 Alarm

In the standby mode, press **Center Key** to the **Main menu > Tools > Alarm.**

Use this menu to set alarms.

## 10 Tools

In the standby mode, press **Center Key** to the **Main menu > Tools**.

### Games

In the standby mode, press **Center Key** to the **Main menu > Tools > Games**.

The phone supports one game: Brick attack.

### Alarm

In the standby mode, press **Center Key** to the **Main menu > Tools > Alarm**.

Use this menu to set alarms.

### Scheduler

In the standby mode, press **Center Key** to the **Main menu > Tools > Scheduler**.

Use this menu to keep track of reminders. It can even sound an alarm.

### Calculator

In the standby mode, press **Center Key** to the **Main menu > Tools > Calculator**.

Use this menu to perform basic arithmetic functions, such as addition, subtraction,

multiplication, and division.

#### **World Time**

In the standby mode, press **Center Key** to the **Main menu > Tools > World Time**.  
You can preview the time of world's major cities.

#### **Stopwatch**

In the standby mode, press Center Key to access the **Main menu > Tools > Stopwatch**.  
Use this menu to time according to your needs.

#### **Notepad**

In the standby mode, press **Center Key** to the **Main menu > Tools > Notepad**.  
Use this menu to store simple text message.

#### **Radio**

To use the radio, please plug in your headphones.

#### **Currency Converter**

In the standby mode, press **Center Key** to the **Main menu > Tools > Currency Converter**.

Using this menu, you can make currency conversions.

## 11 Settings

The settings menu provides you with various setting options to customize the phone to your preferences and needs.

In the standby mode, press **Center Key** to the **Main menu > Settings**.

### Display

In the standby mode, press **Center Key** to the **Main menu > Settings > Display**.

**Wallpaper:** You can select different wallpapers.

**Banner:** Use this menu to choose whether the display shows a customized banner under the operation logo, when the phone is in the standby mode.

**Backlight:** You can control the time-out of the backlight on your phone.

**Brightness:** You can adjust the contrast of the display for varying lighting conditions.

**Greeting Message:** You can set the message that will show when power on.

**Operator Logo:** You can enable it to show operator logo or not.

#### **Phone setting**

In the standby mode, press **Center Key** to the **Main menu > Settings > Phone Setting**.

**Language:** The phone supports two Languages: Arabic and English. You can select language as per you setting.

**Auto Keypad Lock:** Use this menu to set the keypad of your phone to lock.

**Input Setting:** Access this menu; you can set the phone's default input method.

**Power off Time:** Use this menu to set the phone what time power off.

#### **Time/Date settings**

Time Format:

Use this menu to choose the display shows the time which 12 mode or 24 mode, when the phone is in the standby mode.

Date Format:

Use this menu to choose the display shows the time which YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY mode, when the phone is in the standby mode.

Time/Date Display:

Use this menu to choose whether the display Time/Date.

### **Call Setting**

In the standby mode, press **Center Key** to the **Main menu > Settings > Call Setting**.

**Answer call:** Use this menu to set the method of answer call.

**Auto answer:** Set the phone to answer the incoming call automatically after 5 sec.

**Call forward:** This network service reroutes incoming calls to a phone number that you specified.

**Call waiting:** Call if your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call.

**International prefix:** International prefix setting.

**Voice privacy:** Use this menu to protect your voice content during a call.

## Firewall

In the standby mode, press **Center Key** to the **Main menu > Settings > Firewall**.

To access Firewall, you must enter the preset code. By default, the code is 0000.

**Call Firewall:** Use this menu to block or allow some numbers for incoming calls.

**Private Firewall:** Use this menu to protect your content of phonebook, messages and call history for accessing by other person. To access the menu, you must enter the preset lock code. By default, the preset lock code is 0000.

**SMS Firewall:** Use this menu to block some numbers for incoming messages.

### Security

In the standby mode, press **Center Key** to the **Main menu > Settings > Security**.

To access security, you must enter the preset security code. By default, the code is 0000.

**Phone lock:** The phone lock feature protects your phone from unauthorized outgoing calls or unauthorized accessing to information stored in the phone.

**PIN Management:** Enable, Disable, and PIN change.

**Change Security Code:** By default, the preset lock code is 0000.

**Factory Reset:** Use this menu to reset the settings to factory settings.

### Phone info

In the standby mode, press **Center Key** to the **Main menu > Settings > Phone Info**.

You can get SW version and PRL version and HW version.



## 12 My Data

In my data menu, you can manage your data folders.

In the standby mode, press **Center Key** to access the **Main menu > My Data**.

## 13 Extras

Your RUIM card may provide additional services.

In the standby mode, press **Center Key** to the **Main menu > Extras**.

### UTK

In the standby mode, press **Center Key** to the **Main menu > Extras > UTK**.

You can use card operators to provide you with a variety of information services.

## 14 Care And Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge.	Please check if the charger is properly connects to the phone and the power source jack.
Can not power on.	Please check if the battery level is too low. Please check if the batter is properly loaded. Please press Power Key enough time.
Insert the R-UIM card but can not read the information in the R-UIM card.	Please check if properly inserted the R-UIM card. Please check if your R-UIM card is valid.
The mobile phone displays "Input PUK Code".	Please communicate with the service provider to get the PUK code and use it to unlock.
Can not make phone call.	Please check if the phone number is valid. Please check if you are in service area.

Common problems	Check item
Weak talk quality.	Please check if the phone signal is strong enough; If you are in the building, please move the phone or move near the window.
The contact can not get your voice when making phone call.	Please check if your mic has blocked by fittings or other blocks.
Receiver sound is too low.	Please check if your receiver volume has been adjusted to the maximum.
The mobile phone has a weak receive signal or usually drop in the phone call.	Please check if the phone has a strong signal. If no signal, please use it in a strong signal place.

Common problems	Check item
The screen display the information such as "No Service" or: Searching..."	Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry. Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.

## **15 Safe Information**

### **Electronic Device**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your Mobile Phone. Consult the manufacturer to discuss alternatives.

### **Hospital**

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where it is prohibited to use mobile phones.
- When you use your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not influence the person.

### **Storage Environment**

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in

bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

**Children Safety**

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.

- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

#### **Operating Environment**

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

#### **Care and Maintenance**

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.

- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.



- When the phone or battery gets wet, the label of indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

#### **Emergency Call**

You can use your phone for emergency calls. However, connections in call conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

#### **Battery**

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.

If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.

Select  
Back

- If left unused, a fully charged battery will discharge itself over time.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

### RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HC-C330(FCC ID: SG71204HC-C330) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.731 W/kg and when properly worn on the body is 0.682 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its

assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help