

Copyright©2012 Haier Technologies Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.







Statement




The contents of this manual maybe different with the cell phone please according to the cell phone.

Haier reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of "Warnings and Precautions".

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.

	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Contents

1 Getting to Know Your Phone	1
Basic specification	1
Mobile phone appearance	1
2 Getting Started	10
Install and charge the phone.....	10
3 Basic Functions	11
Switching On/Off.....	11
Making phone call.....	11
Answering the call.....	13
Operations during a call.....	14
Keypad lock	15
4 Text Entry	15
Text input method	15
Change the input method	16
5 Contacts	16

List	17
View	17
Edit	17
Option	17
Groups settings.....	18
Speed Dial	19
6 Messages	19
SMS	20
Voice Mail	23
7 Call History	23
All Calls.....	23
Missed Calls	23
Received Calls.....	24
Dialed Calls.....	24
8 Facebook.....	25
9 Twitter.....	25

10 Nimbuzz	25
11 UC Browser	25
12 Premium Services	25
13 MP3 Player	26
14 Camera	26
15 FM Radio	27
16 Games	28
17 Multimedia	28
Video Player	28
Voice Record	28
Camcorder	28
18 File Manager	29
Phone memory	29
Memory card.....	29
Memory status	29

Format memory card	29
19 Organiser	30
Alarm	30
Scheduler	30
Calculator	30
World Clock	30
Stopwatch	30
Countdown.....	31
Notepad.....	31
Currency Converter	31
UTK	31
20 Java	31
21 Profiles	32
22 Settings.....	32
Display	32
Phone setting.....	33

Call Setting	34
Network Settings.....	35
Connectivity	35
Security.....	37
Firewall	38
23 Care And Maintain	39
24 Safe Information	42

1 Getting to Know Your Phone

Basic specification

Mobile Phone Type: CG300 Dual mode (CDMA + GSM)

Size: 111×62.6×13.2 (mm)

Battery Capacitance: 1000mAh

Note: The GSM900/ PCS1800 band is used for EU market. These bands couldn't be used for US market. Please be noticed.

Mobile phone appearance

Mobile phone view

Name	Description
(1) Left soft key	In standby mode, press the left soft to enter Facebook.

	In the menu interface, Press the left soft to enter next menu.
(2) Right soft key	In standby mode, press the right soft to enter Contacts. In the menu interface, Press the right soft for the return.
(3) Send1 key	Making a call of CDMA. In standby mode, press this key to enter the all calls screen.
(4) End (power) key	End calls. Long press: power on, power off.


(5) Up key	In standby mode, press the up key to UC Browser. In the menu interface, Press the up key to enter an option above
(5) Down key	In standby mode, press the down key to Scheduler. In the menu interface, Press the down key to enter an option below.
(5) Left key	In standby mode, press the left key to enter FM.
(5) Right key	In standby mode, press the right key to enter Camera.

(5) Center key	In standby mode, short press Center key to enter Main menu. In the menu interface, Press the left soft option key.
(6) Keyboard	Enter letters/numbers/symbols
(7) Send2 key	Making a call of GSM. In standby mode, press this key to enter the all calls screen.
(8) home key	In standby mode, press this key to enter to the main menu interface
(9) message key	In standby mode, press this key to enter the message

(10) Music Player key	In standby mode, press this key to enter the Music Player
(11) Earphone	Insert 3.5mm earphone
(12) USB/Charger connector	Plug the data cable into the charger connector
(13) Camera	Take photos
(14) Mic	Mic








 











 
 

 
The appearance of the mobile phone and introductions





 Notice:

Long press means pressing key more than or equal 2 seconds; short press means pressing key less than 2 seconds.

Icon bar

Icon	Description
	CDMA Indicates signal strength.
	GSM Indicates signal strength.
	Indicates call in progress.
	No network signals.
	Indicating the mobile phone is under roaming service mode.
	Indicating the keypad is locked or the phone locked.
	One or several new text messages.
	One or several new voice mails.
	Playing the FM radio function.

Icon	Description
	Connect the earphone.
	You have set the scheduler or the alarm clock.
	You have set the general mode.
	You have set the vibration mode.
	You have set the outdoor mode.
	You have set the meeting mode.
	You have set the silence mode.
	Connected to the computer used the USB line.
	Data Flow.
	Data flow dormant.
	Playing Music.
	Pausing Music.

Icon	Description
	The memory card.
	Open Bluetooth.
	Paired Bluetooth headset.
	Bluetooth data connection has been established.

 
2 Getting Started

Install and charge the phone

1. Install / Remove the rear cover



2. Insert/ Remove the RUIM/SIM card

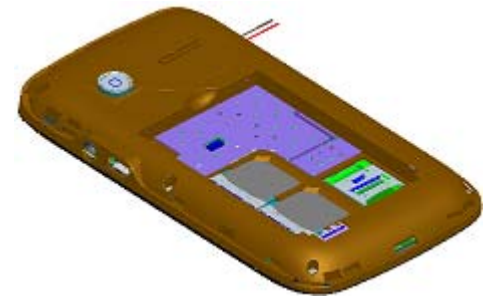

3. Insert/ Remove the memory card

4. Insert / Remove the battery



3 Basic Functions

Switching On/Off

- In the power off status, long press the Power Key to switch on the phone.
- In the power on status, long press the Power Key to switch off the phone.

Making phone call

Making phone call by dialing number

1. In the standby mode, enter the phone number using the numeric keypad, and press the Send Key.
2. To end the call, press the Right Soft Key or Power Key.

Making phone call using contacts

1. In the standby mode, short press Center key to access the Main menu > Contacts;
2. Select List to view the contacts list, and press Up/Down key to choose one contact, or select Search to search out the contact you want to call.
3. Press the Send Key.

Making phone call using call history number

1. In the standby mode, press the Send Key to display the all call numbers.
2. Select the number or name you want to dial, and press the Send Key.

Making phone call using speed dial

In standby mode, press and hold one number key [2-9] to make phone call. See chapter 4 for more information about setting speed dial.

Making a conference call using CDMA network

1. Make a call to the first participant.
2. Enter another number of the second participant.
3. Press the Send Key, the first participant will be holding on.
4. To press send1, direct exhaled.

5. After the second participant is Activate, then dials '3' with send key to make a conference call.

6. To end the conference call, press the Power Key.

Making a conference call using GSM network

1. Make a call to the first participant.


2. Enter another number of the second participant.

3. Press the Send Key, select via GSM, the first participant will be holding on.

4. To press send2, direct exhaled.

5. Go to option select Conference.

6. To end the conference call, press the Power Key.

 Notice:

The conference call services according to local network provider. Please confirm and contact network provider firstly.

Answering the call

Answer or silence an incoming call

1. To answer the call, press the Send Key or Left soft key to select <Accept>. Press <Silence> to make a call muted.

2. To reject the call, press the Power Key or Right soft key to select <Reject>.

Adjust the receiver volume

Press Up/Down key to adjust the volume of the receiver during a call.

Answer a call with the keypad locked

While the keypad is locked, press the Send Key to answer a call.

When you end the call, the keypad automatically re-locks.

Operations during a call

Call the EXT: After hear each other, you can directly input extension number.

Adjust the call volume: You can press Up/Down key to adjust Volume.

Options

Contacts: Enter Contacts list.

Messages: Enter the SMS menu.

Speaker on: Open the loud speaker.

New call: Make the second call.

Mute on/off: Being mute can temporarily turn off the calling voice. At this point you can hear the voice of the other; the other one cannot hear your voice, return the normal call after close mute.

Notepad: Enter the Notepad.

Keypad lock

To prevent the keys from being accidentally pressed, you can lock the keypad. When the keypad is locked, only emergency numbers can be dialed. Press left soft key and press the Center key to Unlock keypad.

4 Text Entry

Text input method

Your phone provides following text input methods:

- English input method: input English characters.
- Numeric input method: input numeric characters.
- Hindi input method: input Hindi characters.

Input method	Icon	Letter case
Multi-tap	hi	Hindi case

	abc	Lower case
Numeric	123	number characters

Change the input method

Press [sym] to enter symbol list.

Press [ctrl] to switch between input method mode.

 Notice:

Press [1] to insert common symbol under the Predictive mode or Multi-tap mode.

5 Contacts

You can store names and phone numbers (contacts) in the phone and the RUIM / SIM card. Such as the mobile number, and Home number, Email, address...etc. You also can select the contact to send message or make a call in Contacts.

In the standby mode, press Center Key to the Main menu > Contact.

List

All: Display contacts stored in Phone, RUIM, SIM.

Phone: Display contacts stored in phone.

RUIM: Display contacts stored in RUIM card.

SIM: Display contacts store in SIM card.

Groups: You can add members into groups from the phone contacts. You can also send messages, make calls or set incoming call ringer by groups.

Speed Dial: You can set 8 speed dial numbers. In standby screen, you can long press and hold one number key [2-9] to make a call with the set speed dial number.

View

Display the details of the selected contact.

Edit

In the contact details screen, you can edit the fields of the current contact.

Option

In contacts list, Select Options menu operations can be done about:

Search: You can find contact by Name、 Number and Location quickly.

Add New: You can add new contacts to Phone ,RUIM card or SIM card.

Call: You can call through CDMA and GSM or Edit Before Call.

Send: You can edit message, send it to the contacts, and send vCard by BT.

Delete: You can delete the contact.

Copy: Copy contact to RUIM card, SIM card or phone.

Sort: Can be sorted by name or location.

Mark Several: Can mark the contacts what you want to delete.

My Number: Edit the phone numbers of RUIM card and SIM card.

T Card Backup: Can backup all contacts to T-Flash card, and can restore the contact from T-Flash. The format of backup file is CSV.

Memory Status: You can view the memory status in Phone, RUIM card and SIM card.

Groups settings

Add Member: Add members to group from the contacts list of phone.

Send Message: send messages from group members.

Group Icon: Set special icon to the group.

Set Group Ringtone: Set special ringtone to the group.

Rename: Edit the group's name.

Remove: Remove the group members.

Speed Dial

Use this menu to assign a speed dial number (2 to 9 items).

In Idle mode, long press and hold one number key to dial the speed dial entry.

1. In the standby mode, press Center Key to access the Main menu > Contacts > Speed Dial.
2. Select one empty entry, and set the number you want to dial, press < Search > and select number from contact or edit speed dial number.
3. Enter the number, and press < Left soft key >.

6 Messages

Your phone is capable of creating, sending and receiving text messages.

In the standby mode, press Center Key to the Main menu > Messages.

SMS

Write messages

1. In the standby mode, press Center Key to access the Main menu > Messages > SMS> Write Message.
2. Enter your message.
3. On message edit screen, you can press send to go into address edit screen, after that, you can chose to send from CDMA or GSM.

Inbox

1. In the standby mode, press Center Key to access the Main menu > Messages > SMS > Inbox.
2. While viewing a message list, press <Options> to access the following options: Reply, Forward, Delete, Delete All, Call, Edit Before Call, Use Details, Copy, Mark Several, Search.

Outbox

1. In the standby mode, press Center Key to access the Main menu > Messages > SMS > Outbox.
2. While viewing a message list, press <Options> to access the following options: Resend , Forward, Delete, Delete All, Call, Mark Several.

Drafts

1. In the standby mode, press Center Key to access the Main menu > Messages > SMS > Drafts.
2. Press <Options> to access the following options: Send, Delete, Delete All, Mark Several.

Templates

1. In the standby mode, press Center Key to access the Main menu > Messages > SMS > Templates.
2. Press <Options> to access the following options: Edit, Delete, Send.

Delete messages

In the standby mode, press Center Key to access the Main menu > Messages > SMS > Delete messages and one of the following options: Inbox, Outbox, Drafts, Delete All.

Settings

CDMA settings

In the standby mode, press Center Key to access the Main menu > Messages > SMS > Settings > CDMA settings and one of the following options: Save Location, Priority, Auto Save, Delivery Report, Deferred Delivery, Validity Period

GSM settings

In the standby mode, press Center Key to access the Main menu > Messages > SMS > Settings > GSM settings and one of the following options: SMS Center, Save Location, Auto

Save, Delivery Report, Validity Period

Auto Delete

Inbox is full, turn on automatic delete function, if the received information will be automatically deleted most long-read information in the inbox.

Auto Scroll

Set auto scroll bit open, when you read messages when the phone screen will automatically scroll.

Signature

In the standby mode, press Center Key to access the Main menu > Messages > SMS > Settings >Signature and one of the following options: Enable, Disable.

Message Counter

Count of message sent and received.

Memory status

In the standby mode, press Center Key to access the Main menu > Messages > SMS > Memory Status

Show memory status on Phone, RUIM card and SIM card.

Voice Mail

In the standby mode, press Center Key to access the Main menu > Messages > Voice Mail
The voice mailbox is a network service and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

7 Call History

Call history stores information about last missed, received, or dialed calls. CDMA and GSM call history has distinguished with different small icons.

In the standby mode, press Center Key to the Main menu > Call History

All Calls

You can view all call history. CDMA and GSM call history has distinguished with different small icons.

Missed Calls

You can view the last missed calls. CDMA and GSM call history has distinguished with different small icons.

Received Calls

You can view the last received calls. CDMA and GSM call history are distinguished with different small icons.

Dialed Calls

You can view the last dialed calls. CDMA and GSM call history are distinguished with different small icons.

Options

In call history list, you can select the following options.

Call: You can call via CDMA and GSM and Edit before call..

Send Message: You can edit message, send it to the contacts, and send vCard by BT.

Save Number: You can add the number in new contacts, locating in the phone, RUIM cards, SIM cards or the existing.

Delete: Delete the select contact record.

Call Duration: Display the time of the lasted, received, dialed and all calls.

Mark Several: Select or cancel one or more records

8 Facebook

You can go to facebook java application by selecting this icon.

9 Twitter

You can go to Twitter webpage by selecting this icon.

10 Nimbuzz

Nimbuzz support some chat tools, for example, MSN, Yahoo, GTalk etc

11 UC Browser

You can go to UC Browser webpage by selecting this icon.

12 Premium Services

User can get premium service in this function.

13 MP3 Player

You can play the music with this application. In the music library interface select "Options/Refresh music library", then it will search music from the music folder in phone memory and memory card, and add them to the library.

Please select the music from the artists, albums, playlists, all songs, and genres to play.

 **Notice:**

Listen to music at a moderate level. Listening to musics with high volume may damage your hearing.

14 Camera

With the built-in camera, you can take pictures anytime, anywhere, and save the photos to your memory card.

Select camera icon into the preview interface.

Press the up/down keys to adjust the camera focal length; press the left soft key "option" open the function menu, you can operated as follows:

Camcorder: switch to camcorder mode.

Self Timer: Set the camera's delay time taking pictures.

Brightness: Set the brightness.

Contrast: Set the contrast.

Effect: Set special effects.

White Balance: Set white balance.

Settings: Set the image quality, size, snapshot tone, the photo's file name.

To File Manager: View the photo files stored on the phone card.

In the camera preview interface, press "OK" to take photo, then press "OK" key to save the current picture; you can delete or rename the photo files use options menu. And view the photos in [File Manager - memory card - File Manager - my Photos].

15 FM Radio

Use this menu you can listen to broadcast by the local network. It can save 20 channels in your phone. Please make sure the headset is inserted in the phone firstly. The frequency channels are found according local signal strength.

16 Games

The phone supports one game: Brick Attack.

17 Multimedia

Video Player

The video player can play video files stored in memory card with mp4 and 3gp format which supported size is 144X176 and below.

Voice Record

Use this menu to record your voice.

Camcorder

In the main menu, select multimedia ->camcorder into the preview interface.

The operate of camcorder is same as camera. Please reference camera. The record files stored at [File Manager - memory card –File Manager – my Videos].

18 File Manager

In File Manager menu you can manage your resource files.

In the standby mode, press Center Key to access the Main menu > File Manager

Phone memory

Resource files stored on the phone memory, For example: record, music, ringer, image, photo , etc.

Memory card

Resource files stored on the phone memory card, For example: record, music, ringer, image, photo, etc.

Memory status

Show phone and memory card store status information.

Format memory card

All data will be lost after format memory card.

19 Organiser

Alarm

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings.

Scheduler

Use this menu to enable you to keep track of reminders. It can even sound an alarm for any of these events.

Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

World Clock

You can preview the time of world's major cities.

Stopwatch

Use this menu to time according to your needs.

Countdown

Use this menu to time according to your needs.

Notepad

Use this menu to store simple text message.

Currency Converter

Using this menu, you can convert national currency.

UTK

You can use card operators to provide you with a variety of information services.

20 Java

Our phone supports JAVA application environment.

21 Profiles

In the standby mode, press Center Key to access the Main menu >Profiles >, and one of the following options:General, Meeting, Outdoor, Silence, Airplane Mode, My Profile 1, My Profile 2.

It is have two options:

Activate

Activate the selected profile.

Personalize

Change the profile settings.

22 Settings

The settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default status.

Display

Wallpaper: You can select different wallpapers as per you want it.

Banner: Use this menu to choose whether the display shows a customized banner under the

operation logo, when the phone is in the standby mode.

Backlight: You can control the time-out of the backlight on your phone.

Brightness: You can adjust the contrast of the display for varying lighting conditions.

Phone setting

Language: The phone supports two Languages, Hindi and English. You can select language as per you setting.

Auto Keypad Lock: Use this menu to set the keypad of your phone to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used.

Input Setting: Access this menu, you can set the phone's default input method

Time/Date settings

Set Time: Use this menu to set time.

Set Date: Use this menu to set date.

Time Format: Use this menu to choose the display shows the time which 12 mode or 24 mode, when the phone is in the standby mode.

Date Format: Use this menu to choose the display shows the time which YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY mode, when the phone is in the standby mode.

Time/Date Display: Use this menu to choose whether the display Time/Date.

.Phone Info

View phone SW / PRL/ HW Version.

Call Setting

CDMA Call Setting

Auto Answer: Set the phone to answer the incoming call automatically after 5 sec or Close the auto answer. It will only work when you inserted handset in the phone.

Call Forward: This network service reroutes incoming calls to a phone number that you specified.

Call Waiting: Call if your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can accept, reject, or ignore the incoming call.

International Prefix: International prefix setting.

GSM Call Setting

Auto Answer: Set the phone to answer the incoming call automatically after 5 sec or Close the auto answer. It will only work when you inserted handset in the phone.

Call Forward: This network service reroutes incoming calls to a phone number that you specified.

Call Waiting: Call if your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can accept, reject, or ignore the incoming call.

Call Restriction: Use this menu you can enable/disable received/dial call.

Network Settings

Network Mode

Set the current standby mode: Dual mode, CDMA, GSM.

Power On Mode

Set the current standby mode: Dual mode, CDMA Only, GSM Only and Ask When Power On.

GSM Network Choice

Set the current standby mode: Manual and Automatic.

Connectivity

Bluetooth

The mobile supports Bluetooth Specification 2.1 + EDR and supports the following profiles: Object Push Profile, File Transfer Profile (Server only), Hands-Free Profile. Please refer to user guide of your Bluetooth headset.

Bluetooth settings:

Bluetooth: Switch Bluetooth on or off.

My phone's visibility: To determine mobile can be searched by another Bluetooth devices or not.

My phone's name: Rename the Bluetooth device.

Save location: Set the storage location of received files which stored in the "Other" Directory who under the phone memory or memory card.

Paired devices: list the paired devices. Select the device and press the "Options" to operate as follow.

Pair new devices: Pair with the existing or search for a new device to pair.

Assign short name: Modify the paired device's name to your fancy name.

Delete: Remove the device.

Delete all: Delete all devices.

 **Notice:**

The Connection maybe interfere by distance and obstructions or other electronic devices. So ensure the devices not blocked.

USB Data Cable

Use the USB data cable between the phone and a compatible PC to transfer data.

Security

To access security, you must enter the preset security code. By default, the code is 0000. If none of this works, contact your wireless service provider for help.

Phone lock : The phone lock feature protects your phone from unauthorized outgoing calls or unauthorized accessing to information stored in the phone. When phone is locked, to unlock, user must enter the preset security code. When the device is locked, you can still call the official emergency number programmed into your phone.

RUIM PIN Management: In the standby mode, press Center key to access the Main menu >Settings > Security> RUIM PIN management and one of the following menus: Enable , Disable, PIN Change.

SIM PIN management : In the standby mode, press Left key to access the Main

menu >Settings > Security> SIM PIN management and one of the following menus: Enable , Disable PIN Change.

Change Security Code: By default, the preset lock code is 0000.

Factory Reset: Use this menu to reset the settings to factory settings and clear memory of the phone.

Firewall

To access Firewall, you must enter the preset code. By default, the code is 0000. If none of this works, contact your wireless service provider for help.

Call Firewall: Use this menu to block or allow some numbers for incoming calls. To use this facility please go to settings in menu > Firewall > Call firewall.

Blacklist: If you add any number under Black listed menu then it will reject the phone call automatically to Black listed number.

Whitelist: If you add any number under White listed menu then it will reject the all phone calls automatically except to White listed number.

Settings: By settings you can disable and enable the functionality of White listed and black listed number as per your choice.

Privacy Firewall: Use this menu to protect your content of phonebook, messages and call history for accessing by other person. To access the menu, you must enter the preset lock code. By default, the preset lock code is 0000.

SMS Firewall: Use this menu to block some numbers for incoming messages.

23 Care And Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge	Please check if the charger is properly connects to the phone and the power source jack.
Can not power on	Please check if the battery level is too low; Please check if the batter is properly loaded; Please press Power Key enough time.
Insert the R-UIM card but can not read the information in the R-UIM card	Please check if properly inserted the R-UIM card; Please check if your R-UIM card is valid.
The mobile phone displays "Input PUK Code"	Please communicate with the service provider to get the PUK code and use it to unlock.

Common problems	Check item
Can not make phone call	Please check if the phone number is valid. Please check if you are in service area.
Weak talk quality	Please check if the phone signal is strong enough; If you are in the building, please move the phone or move near the window.
The contact can not get your voice when making phone call	Please check if your mic has blocked by fittings or other blocks.
Receiver sound is too low	Please check if your receiver volume has been adjusted to the maximum.
The mobile phone has a weak receive signal or usually drop in the phone call	Please check if the phone has a strong signal. If no signal, please use it in a strong signal place.

Common problems	Check item
The screen display the information such as "No Service" or: Searching..."	<p>Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry.</p> <p>Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.</p>

24 Safe Information

Electronic Device

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your Mobile Phone. Consult the manufacturer to discuss alternatives.

Hospital

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where it is prohibited to use mobile phones.
- When you use your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not influence the person.

Storage Environment

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users

are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's

guide for detailed safety instructions. Do not connect incompatible products. As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Care and Maintenance

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

Emergency Call

You can use your phone for emergency calls. However, connections in call conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.

If you use the phone near the network's base station, it uses less power. Talk and

standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

Select
Back

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types 1301HC-CG300 (FCC ID: SG71301HC-CG300) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.793 W/kg and when properly worn on the body is 0.899W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's

authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.