

Music Cell Phone

User Manual

Model: U10

Read this manual carefully before operation.

Table of Contents

-----	0
-----	0
User Manual -----	0
Table of Contents -----	1
Safety and Maintenance -----	3
Basic Knowledge -----	7
Your Cell Phone -----	8
1.1 APPEARANCE	8
1.2 KEY DESCRIPTION	8
1.3 SCREEN BACKGROUND LIGHT	9
Instructions before Use -----	10
2.1 INSTALLING THE SIM CARD AND THE BATTERY	10
2.2 CHARGE BATTERY.....	10
2.3 POWER ON/OFF	10
2.4 SECURITY PASSWORD	11
2.4.1 PIN code	11
2.4.2 PUK code	11
Basic Functions -----	12
3.1 DIAL PHONE	12
3.2 ANSWER INCOMING CALL.....	12
3.3 TERMINATE CALL	13
3.4 MAKE EMERGENCY CALL	13
3.5 MAKE INTERNATIONAL LONG-DISTANCE CALL.....	13
3.6 TALK OPTIONS.....	13
3.7 TEXT INPUT	14
3.8 SCREEN LOCK	14
Menu Functions -----	15
4.1 PHONEBOOK	15
4.2 CALL CENTER	15
4.3 SETTINGS	15

4.4 ORGANIZER	17
4.5 MESSAGING	17
4.6 MULTIMEDIA	17
4.7 PORTAL	18
4.8 STK	18
4.9 SERVICES	18
4.10 FUN	18
4.11 EXTRA	19
FAQ -----	20
T-Flash Card Introduction -----	22
T-FLASH CARD INSTALL/REMOVE	22
T-FLASH CARD USE	22

Safety and Maintenance

While using the cell phone, please observe following points:

- Before use, please read instruction manual carefully.
- Do not power on the cell phone when use of cell phone is prohibited or it may cause interruption or danger.
- Please keep your cell phone off when you are on a plane. If functions that will automatically power on your cell phone, such as alarm clock or calendar, are setup, please check and cancel the configuration before boarding the plane.
- While using the cell phone, please keep away from heat source and high voltage environment, such as electric appliances or electric cooking devices. Please use the cell phone under normal temperature. Use it under temperature above 55°C or below -10°C may damage the phone.
- Pay attention to fire prevention. Power off the phone while near flammable materials, such as gas-filling station and fuel storage.
- Do not hold the cell phone in your hand while driving. Do not put the phone above air bag or within reach of airbag so as to prevent damage when airbag is inflated.
- Please use Standard battery, charger and accessories provided by us. We are not responsible for any consequence caused by use of third party accessories.
- Cell phone may cause interference to nearby electronic devices, so keep it away from electronic devices such as radio, PC, pacemaker and hearing aid, etc. Do not place the cell phone near credit card or magnetic field. Please power off your cell phone in hospital and other special places according to specific regulations there.
- Keep the cell phone away from mechanic vibration or shaking. Do not hit the screen of your phone with sharp tool.
- If plastic cover or case is used for cell phone, surface coating may be damaged.
- Do not disassemble the cell phone boldly.
- Do not use benzene, thinner or alcohol to clean the cover of your cell phone. Keep your cell phone away from corrosive chemicals such as detergent. Use clean and soft cloth instead and wipe gently.
- Prevent your cell phone from insulation or places with excessive smoke or dust.

- Your cell phone is not water-proof, so please keep it dry. Do not use it in damp environment, such as bathroom. Keep it away from rain and moisture.
- If your cell phone has external antenna, do not touch the antenna when it is not necessary. Use original antenna only, for use of unauthorized antenna may cause damage to the phone.
- When you are to pull the charger away from your cell phone or cut off power supply of charger, please hold the connector tightly and then pull out. Do not drag the power cable.
- Do not rely on cell phone only as communication device for emergency, such as medical rescue.
- Keep the cell phone out of reach of children so as to avoid danger.

While using battery, please observe following points:

- Before use, please read instructions for use and as well as label on the surface of battery.
- Please charge the battery in a cool and well-ventilated room. Otherwise, high environment temperature may lead to overheat, smoking, burning, distortion or even explosion of battery.
- There are special protection circuits and devices inside battery, so do not open the battery; Otherwise it may lead to short circuit or electrolyte leak. If electrolyte enters eyes, there is danger of blindness. In such case, immediately wash eyes with clean water (Do remember not to rub the eyes with hands) and then go to hospital for treatment.
- Do not squeeze the battery and keep it away from mechanical vibration and shaking. Do not short connect the battery, for this may damage the battery and components connected to it. Short circuit may be caused by coin or clip directly connecting anode and cathode of the battery, so do not put the battery together with metal objects.
- Please keep the metal contact points and battery clean.
- Do not use damaged or depleted battery.
- The battery should be replaced when it can not meet the requirement for performance. Battery can be charged hundreds of times before it should be

replaced. Battery belongs to consumables. Though it can be charged hundreds of times, its quantity of electric charge may decrease gradually. When service time (talk time and standby time) is found to have decreased, the battery shall be replaced.

- Prevent the battery from exposure to the sun or places with excessive smoke or dust. Do not use it in damp environment, such as bathroom. The battery is not waterproof; so keep it away from rain and moisture.
- Do not put the battery in places that are too hot or too cold. Temperature above 55°C or below -10°C may affect performance of the battery.
- Do not put the battery in fire so as to avoid explosion.
- Do not put the battery in water so as to avoid short circuit inside, resulting in battery overheat, smoking, distortion, damage or even explosion.
- Treat battery according to local regulations (for example, recycling). Do not treat battery as domestic garbage so as to avoid explosion and pollution.
- Special charger should be used for this battery for charging, and charging time should not exceed 12 hours.
- Keep battery out of reach of children to avoid danger.
- **Do not place the battery in fire; follow local laws and ordinances in disposing used battery.**

Check the model number of the charger before using it to charge the mobile. Only use approved battery, charger and accessories applicable to the specific mobile model. Using other types of battery, charger and accessories may violate the certification or warranty terms of equipment and may result in danger.

Return waste and used batteries to the supplier or specified recovery site.

CAUTION!

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

While using battery charger, please observe following points:

- Before use, please read instructions for use and as well as label on the surface of the charger.

- Do not disassemble or modify the charger or use it when power cable is damaged; otherwise there will be electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquid, immediately cut off the power supply.
- Do not short connect the charger and keep it away from mechanical vibration or shaking and direct sun shine. Do not use it in damp environment, such as bathroom. The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as TV set and radio.
- When to pull out the plug, hold the charger instead of dragging the power cable so as to avoid damage of power cable.
- Keep the charger out of reach of children so as to avoid danger.

Basic Knowledge

Thank you for choosing the GPRS/WCDMA function cell phone. You will know how to use this phone roundly after reading the manual.

Design this cell phone is aim at WCDMA/GPRS network environment, except the call function, there are basic English input mode, contacts, individuated ringtone/image, MP3 ringtone, short message, multimedia message, camera, media player, alarm, calculator, auto on/off, calendar, world clock, stopwatch, E-book, T-Flash, keyboard lock, video recorder, etc. This cell phone interface is individuated, the function of design is perfect. It can satisfy your deferent demand.

Your Cell Phone

1.1 Appearance



1.2 Key description

Key	Description
Left soft key	In IDLE, press the key to enter main menu. Determine the operations and enter the selected menu.
Right soft key	In the menu, press back to the previous page. In IDLE, press the key to Phonebook.
Send key	SIM card call. Press the key to enter SIM card dialed calls interface.
End key	Press to return to the IDLE. Long press to power on/off.
OK key	Determine the operations and enter the selected menu.
Left key	In main menu, move the cursor right.

	In IDLE,press the key to enter profiles 。
Right key	In main menu, move the cursor left. In IDLE,press the key to enter write message 。
Up key	In main menu, move the cursor up. In IDLE,press the key to enter music 。
Down key	In main menu, move the cursor down . In IDLE,press the key to enter alarm 。
Num key	Enter numbers, letters and special characters. In the menu window can be used as a shortcut to select and enter keys. In standby mode, long press 0 key to turn on/off torch.
# key	Press enter # and to switch the input method status. In IDLE, long press to turn on and off silent mode.
* key	Enter all special characters, punctuation marks; Press to switch the interface with dial-up *, +, P, W.

1.3 Screen background light

Background light can illuminate the screen. When you power on your cell phone, background light will turn on for a certain period. If no key is pressed within the period, the background light will turn off automatically so as to save battery. Setup back ground light brightness in [Settings] – [Display] — [LCD backlight].

Instructions before Use

2.1 Installing the SIM card and the battery

You need to insert the SIM card and charge the battery before using the phone.

- Keep all miniature SIM cards out of the reach of little children.
- Be careful to handle, insert or remove the SIM card since the SIM card and the contacts inside can easily be damaged by scratching or bending.

Before installing/removing the SIM card, always make sure that the phone is switched off.

1. Remove the back cover and lift the battery away.
2. Insert the SIM card, install the battery and attach the battery cover.

Note: make sure that the metallic contacts of the battery are facing the metallic contacts in the battery slot.

2.2 Charge battery

Hold buttons at the two sides of the battery charger and then plug the charger to the charging socket at the bottom of cell phone.

Note: Please handle carefully. Do not pull out charging plug by force. This may damage your cell phone or charger.

- Before use, battery supplied with your cell phone should be completely charged.
- While charging, do not remove the battery or SIM card.
- Once battery is used up, the cell phone will shutdown automatically.

2.3 Power on/off

Ensure battery is properly installed.

Power on and hold [End key] button until boot screen appears.

Some SIM cards have PIN code protection. If there is prompt for input your PIN code, input your PIN code and then press [OK].

Default PIN code is 1234.

After power on, if SIM card inserted is valid, your cell phone will automatically search available network; If not, it will prompt: No SIM card is available.

To power off, hold [End key] until Sliding interface shutdown appears, then sliding shutdown.

2.4 Security password

You can use access password to avoid unauthorized use of your SIM card.

2.4.1 PIN code

PIN code is used to prevent illegal use of user's SIM card. If your cell phone has enabled PIN code protection, there will be prompt for entering PIN code. If wrong PIN code is entered for three times, SIM card will be automatically locked. You have to enter PUK code so as to unlock it. PIN code is related to SIM card instead of the cell phone, and is provided by network service operator.

2.4.2 PUK code

PUK code, referring to personal unlock code, is used to unlock SIM card that is locked because of wrong input of PIN code. If wrong input of PUK code amounts to ten times, SIM card will lose efficacy. PUK code is provided by network service operator.

Basic Functions

3.1 Dial phone

3.1.1 Direct dial

In standby state, click virtual keyboard by the number keys to enter your phone number to call. To delete wrong input, press [Delete soft key] to delete a number before the cursor. To delete all numbers, please click [Delete softkey] until all numbers are deleted or click [Hang-on] softkey to return to standby interface directly. Once phone number to dial has been input, click [GSM softkey].

If the phone number being dialed out can be recognized by phonebook, name and icon of contact person will be displayed on dialing screen, and calling animation is displayed at the same time.

Click End call key to end a call.

3.1.2 Quick dial from contacts list

Enter the phonebook function

Select **List** to view the contacts list, and Slide the scroll bar to choose a contact, or select **Search** to search out the contact you want to call, either by name or by number, press [send key] to dial out the number.

3.1.3 Quick dial from dialed phone number list

Click Call history key to enter dialed phone number record page.

Slide the scroll bar to select the person you want to call or the number you want to dial.

Press send key to dial out the number.

3.2 Answer incoming call

When there is an incoming call, incoming call animation will be displayed together with special ringtone or vibration. If phone number of the caller can be recognized, the number will be displayed on incoming call screen. If information about the number is stored in contacts, caller's name and icon will also be displayed. At the same time, specified ringtone will be played or play music or vibrate according to current settings. If caller hides his/her number or the network bans call indication, the incoming call is displayed as *****.

Press [Send key] to answer calls. When you want to reject the incoming call, press [End soft key] directly.

3.3 Terminate call

When there is an incoming call, press **End key** to reject the call.

During the call, press **End key** to terminate current call.

Call that has just been dialed can be cancelled by pressing End key.

3.4 Make emergency call

As long as you are within coverage of network, you can make emergency call even you have not registered to local network or do not have SIM card. Enter 112 and then press [GSM soft key] to make an emergency call, or enter 110 and then press [soft key] to make an emergency call

3.5 Make international long-distance call

Press [*] key until “+” sign appears before international phone number can be dialed. “+” sign tells the network you are making an international call.

Input country code, area code (without 0) and phone number and then press [GSM soft key].

Note: Some networks do not allow “+” for dialing international numbers.

3.6 Talk options

The cell phone provides some talk control functions in the process of GSM talk.

Click [option] to access the talk control functions in the process of talk.

*Click up or down key to control volume during talking

Hold/release talk state

If network supports, you can hold current talk.

Click [Options soft key] and select Hold option in the menu.

To activate held talk, Click [Options soft key] and select Hold option in the menu.

Dial second number

When you are making a call, you can dial another number.

Enter the second number or press [Contacts] option in [Options soft key] to select in phonebook and then click GSM soft key. When the second number is put through, the first call will be held automatically.

Answer second incoming call

If there is a second incoming call in the process of talk, the screen will display a second call is waiting. Call wait function is only available when the network supports this service and you have set to Enabled in Call wait menu.

Click [Answer softkey] to answer second call. When the second call is put through, the first call will be switched to hold state.

Click [End key] to terminate the second call.

By pressing the up and down keys, adjust the volume during talking.

Note: It is not all networks provides the multi-party service.

3.7 Text input

In function to allow the importation of English, Spanish characters in use in mobile phones allow the writing prompt to write the place. Depart under the center of the screen with press #key to switch input methods.

3.8 Screen lock

You can select time for automatic keyboard lock [Settings] → [Security settings] → [Auto keypad lock], so that your cell phone can automatically locks the keyboard.

Menu Functions

You can press left soft key in standby state to enter the main menu.

Once you have entered the main menu, you can select corresponding options by Arrow keys move the cursor through then pressing ok key to enter it through direction key.

Press [Right soft key] or [End key] to return to standby mode.

4.1 Phonebook

This phone can store 1000 phone numbers.

4.2 Call center

Call history

◆ Missed Calls / Dialed Calls/ Received Calls/ Delete call logs/Call timers

You can view a list of the above.

Call settings

■ SIM Call settings

Call waiting/ Call divert/ Call barring.

You can browse a list of above.

■ Advanced settings

Through this function, you can set Auto redial, Call time display, Call time reminder, Auto quick end, Reject by SMS, Connect notice and Answer mode, etc.

4.3 Settings

4.3.1 User Profiles

It provides five profiles: General、 Silent、 Meeting、 Outdoor and My style.

Press [options] to set the followings:

Activate: Activate the profile.

Customize: It contains six options: Tone settings, Volume, Alert type, Ring type, Extra tone, Answer mode.

4.3.2 Phone settings

1. Time and Data

Set home city, time/data, format and on or off Update with time zone.

2. Schedule Power On/Off

Schedule power on/off from here

3. Language

This allows you to switch between 2 different languages and to select a language

for the display texts.

4. Preferred input method

Choose preferred input method.

5. Encoding

Choose different encodings

6. Delicated keys

You can set the function of delicated key

7. Auto update of date and time

Choose on/off.

8. Flight mode

Set on/off.

4.3.3 Display

1. Wallpaper: You can select the wallpaper you like and then press [OK] key from system, user define, picture download.

2. Screen saver: select a screen saver for the phone.

3. Power on display: you select a picture for the power on.

4. Power off display: select a picture for the power off.

5. LCD backlight: set the time and Brightness of the LCD Backlight.

4.3.4 Network settings

Network Setup helps you in Network Selection, selection of Preferred Network.

4.3.5 Security settings

1. SIM security setup: use the menu to open or close the SIM lock, and change the password of SIM PIN/PIN2. The default PIN code is 1234.

2. Phone security: use the menu to set the phone lock. The default password is 0000.

3. Auto keypad lock: open the mode, and then choose the waiting time.

4.3.6 Connectivity

1. Bluetooth

Enter the menu to set the followings: Power, Visibility, My device, Search audio device, My name, Advanced.

2. Connection management

View the phone's connection information.

3. Date account:

GPRS: Add or edit the GPRS account.

4. Internet tethering

Set the data account of internet tethering.

5. Data service

Set on/off.

4.3.7 Restore Factory Settings

Enter the password then the phone will restore factory setting.

4.4 Organizer

1. Torch

On/Off

2. File manager

You can restore or delete the file where contain open, create or format the file.

3. Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.

4. Tasks

In the sub-menu, select the memorandum, the memorandum can be edited.

Article storage capacity is based on mobile phone set.

5. Alarm

On the handset may establish five alarm clocks, about the navigation keys may open and close the alarm clock, the motion high and low cursor input alarm clock time.

6. World clock

Press arrow key may choose various countries the time, may open or close other urban start summertime according to the option.

7. Notes

Add or Delect Notes, Article storage capacity is based on mobile phone set.

4.5 Messaging

You can send and receive text message or multimedia message. If the short message memory is full, a blinking message icon appears on the top of the screen. While entering the Messaging interface, you will see the following menu options: Write message, Inbox, Drafts, Outbox, Sent Messages, Templates and SMS settings.

4.6 Multimedia

■ Camera

Use this function to capture pictures.

■ Image viewer

You can view the pictures or images through this function.

■ Video recorder

Press OK to make a video.

■ Video player

Play the video, Press [*] [#] to adjust the volume.

■ Audio player

Playing all songs, Press [*] [#] to adjust the volume.

■ Sound recorder

Use this function to record audio files. The phone supports AWB format.

■ FM radio

Once you have entered this function, you must insert the earphone firstly.

[Option soft key]: Following functions are provided for use:

Press [*][#] to adjust the FM volume.

Channel List: Channel the new FM form the list.

Manual Input: You can manual the FM

Auto Search: Preset the FM by auto search.

Settings:

Background Play: This cell phone supports background play mode. When you selected "On", you can do other operation when FM is working.

Lound Speaker: you can select On/Off.

4.7 Portal

Link the portal.

4.8 STK

This function provides by the network supplier.

4.9 Services

This phone supports the service function .The specific items are depended by SIM card and network.

4.10 Fun

The phone supports JAVA function and some games.

4.11 Extra

1. Calculator

In this menu, you can do basic calculations of addition, subtraction, multiplication and division.

2. Unit Convert

Your phone provides you with a unit conversion functions, facilitate the conversion. Including weight and length units.

3. Currency Converter

You input the rate first and then press OK to enter the window of input currency.

4. Stopwatch

You can use Typical stopwatch and nWay stopwatch, and save the timing record for future reference.

5. Ebook reader

choose the book you saved, press[options] to operate the followings: Open E-Book, Clean up bookshelf, Global settings, Book info, Delete, Delete all files, Sort by, Apply global settings, Help

FAQ

If any problems are encountered while using the cell phone, please solve them with reference to following items. If the problems still exist, please contact dealers or service provider immediately.

“Enter PIN code” appears on the screen:

Enter valid PIN code of your SIM card. Please contact network service operator immediately if you do not know the code.

“Enter PUK code” appears on the screen:

Your SIM card will be locked if you enter wrong PIN code for three times. To unlock your SIM card, you have to enter PUK code. Please contact network service operator immediately.

“Insert SIM card” appears on the screen:

Make sure SIM card is correctly installed. Check if SIM card works properly. It may have defects or faults. If so, hand it over to network service operator.

“Not in service area. Network failure.” is displayed.

Check signal intensity indicator. If there is no signal, you may be in the basement or network blind area in a building. Please move to other locations to receive signal. Another situation is that you are not covered by network. You can ask your network service operator to provide network coverage.

Poor sound quality, echo or noise makes communication difficult:

Hang-up your phone and dial again. Network service operator may connect you to a line with better communication quality.

Standby time declines:

Signal at your location is weak so that the cell phone has to search signal for a long time. When you don't want to answer any call, please power off for a time being. It is also possible that the battery has been used for a long time and approaches its life-span. In this case, please replace the battery.

Cell phone fails to boot:

Check battery volume or charge the battery. Try to power on while charging. If your cell phone is put off for a long time, the battery is likely to discharge excessively. You cannot power on it in this case, and the phone will give no

response for quite a long time. The phone cannot be powered on until battery is restored.

Cannot send short message:

Please check your service center number option to see if you have set up service center number or if the number is correct. Perhaps you have not open SMS service, or recipient of short message is invalid, or network service operator of your region does not support this service.

Cannot charge:

There are three possibilities: 1. Charger of your cell phone does not work properly. You can contact nearest service provider or dealer; 2. Ambient temperature is not appropriate. Please change charging environment; 3. Poor contact. Please check plug of your charger.

Can not add entries into phonebook:

Phonebook is full. Please delete some useless entries.

Can not select some functions:

The service is not available or network service operator of your location does not support this service. Please contact service provider or dealer or network service operator immediately.

T-Flash Card Introduction

The cell phone support T-Flash card to enlarge the storage . Operations as follows:

T-Flash card install/remove

Take out battery first if you install the T-Flash card, move the sheet metal downwards,put the T-Flash card on it, then close the sheet metal,that is ok. If you remove it, operate as contrary operations of installing.

T-Flash card use

T-Flash as one of the memorizer of cell phone, format it when you first use, operations as follows:

1. Ensure you already installed the T-Flash card properly.
2. Press OK key into main menu, then into Documents, T-Flash , select T-Flash Format option, press OK key. Later on, restar the phone, then you can use the T-Flash card normally.

You can use T-Flash card connect with computer by the commutator, and then, can copy data from the computer.

User can check-up whether there are catalogs in the root, the catalog like these: AUDIO,VIDEO, PHOTO, SMS, BOOK, PHONEBOOK. you can create them. These directories only to keep the document, he should not show the save.

For example:

AUDIO can save these format files: mid, mp3.

BOOK can save the format file: txt.

PHONEBOOK can save the contacts what exported from the cell phone.

PHOTO can save these format files: bmp, gif, jpg.

SMS can save the messages what exported from the cell phone.

VIDEO can save these format files: 3gp.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall

not be used. Body-worn accessories

that cannot maintain 1cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld

wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: SG720151029U10 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.