

Haier

MobilePhone **UserManual**



Model:
G7
HM-G552-FL



Haier Europe Trading SRL
3-5 Rue des Gravieres, 92200, Neuilly-sur-Seine, France
<http://www.haier.com>

Content :

1. Appearance and Keypad Operations.....	3
2. Using Memory Card as Default Stor.....	4
3. WIFI.....	5
4. Bluetooth.....	6
5. Dialling.....	7
6. Messaging.....	8
7. Contacts.....	9
8. Browser.....	10
9. Sound Recorder.....	11
10.Clock.....	12
11.Camera.....	13
12. Gallery.....	14
13. Music.....	15
14. Settings.....	16
15. Precautions.....	18

1. Appearance and Keypad Operations



 
Keys	Functions
1. Home	<ul style="list-style-type: none"> Press this button to return home from any application or interface. Press it to open recently opened application window.
2. Recent	<ul style="list-style-type: none"> Press it to open a list of recent applications.
3. Back	<ul style="list-style-type: none"> Press it to return to the previous interface, or to close dialog box , options' menu、 notification panel or the keypad.
4. Power	<ul style="list-style-type: none"> Press it to open the phone's menu, then you could choose to lock the screen、 turn off the phone.
5. Up	<ul style="list-style-type: none"> Press it to increase the volume Press it to turn the phone to vibration mode from the silent mode.
6. Down	<ul style="list-style-type: none"> Press it to decrease the volume. Long press to Camera when screen locked
7. Back Camera	<ul style="list-style-type: none"> Entering the camera interface
8. Front Camera	<ul style="list-style-type: none"> Entering the camera interface, switched to the front camera can photo yourself.
9. TP	<ul style="list-style-type: none"> Double touch screen unlock, default off

2. Using Memory Card as Default Storage

If you want to send music, pictures or other files to the phone's memory card from the computer, you should set memory card as u disk first.

2.1 To transfer data from computer

- 1) Connect the phone to the computer with USB cable. The notification icon will appear in the status box.
- 2) In the notification panel, touch USB is connected ,then touch "Media device"

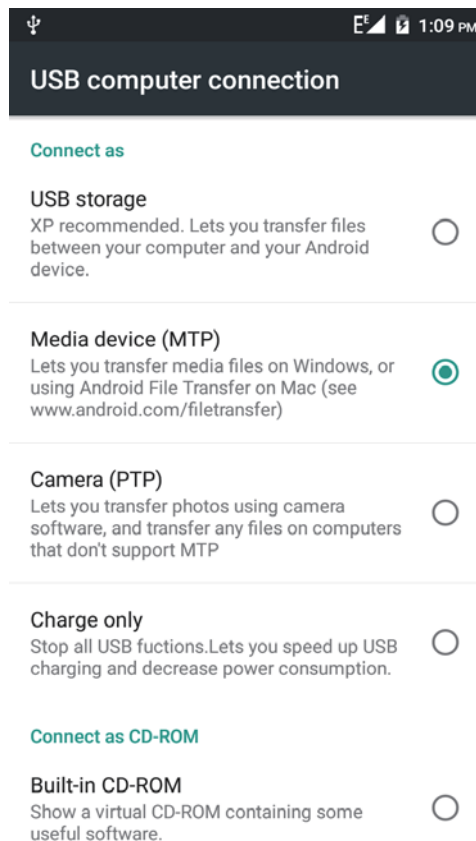

3. WIFI


Wi-Fi provides as far as 300 feet (100M) range of wireless network access. If you want to use internet you should connect to wireless access point or hotspot.

Notices: The availability and coverage of Wi-Fi signal depend on wireless router.

3.1 Open Wi-fi and to connect to the wireless network

1) Press home>menu, then touch System settings>Network(WIRELESS&NETWORKS)>Wi-Fi.

 
2) Select the wi-fi box to open Wi-Fi. Phone will automatically scan for available wireless networks.

3) Touch Wi-Fi settings. Then a list of Wi-Fi network will show the founded network name and security settings. (open network or WEP、 WPA/WPA2 with password).If you enable the notification in Wi-Fi settings, The status box will show this icon () when open available wireless network founded.

4) Touch one of the Wi-Fi choices to connect the network. When you choose open network, phone will connect to it automatically. If you choose WEP、 WPA/WPA2 with password, you should type the password first, then touch to connect it.


3.2 Notices :when the phone is connected to the wireless network,


The status box will show this Wi-Fi icon, and the approximate signal strengthen (the number of lit bars).

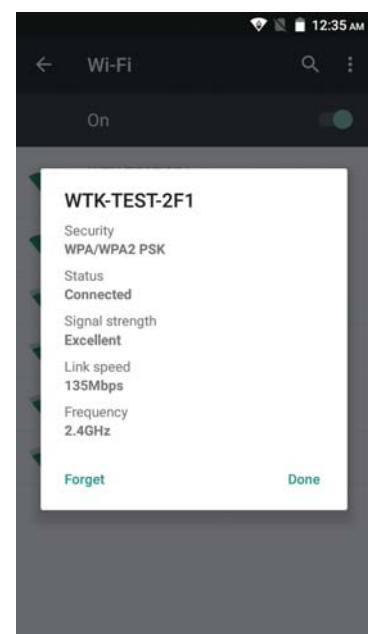

4. Bluetooth

4.1 Turn on Bluetooth so it can be detected by other available devices.

 - 1) Press menu, the touch system settings then Bluetooth.
- 2) Touch Network (wireless and networks), then choose Bluetooth box to open the Bluetooth function. After started, the status box will show this icon (). Touch "scan for devices" in the setting then it starts to scan for all devices within range.
- 3) All the devices founded will display in the list of available devices.

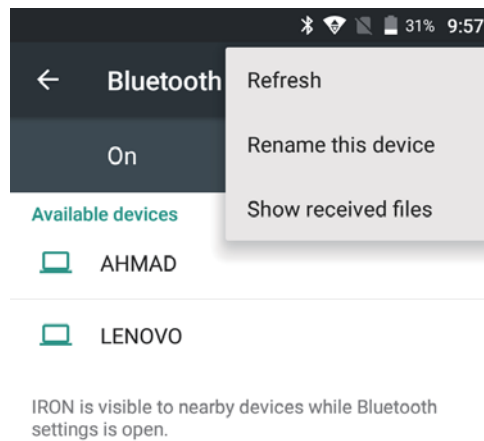


5. Dialling

Using this function, you could dial or receive calls. The signal bar on the top right corner show the strength of network signal.

5.1 Start dialing

 Open application's main menu>dial. You could choose SIM to do the dialing.

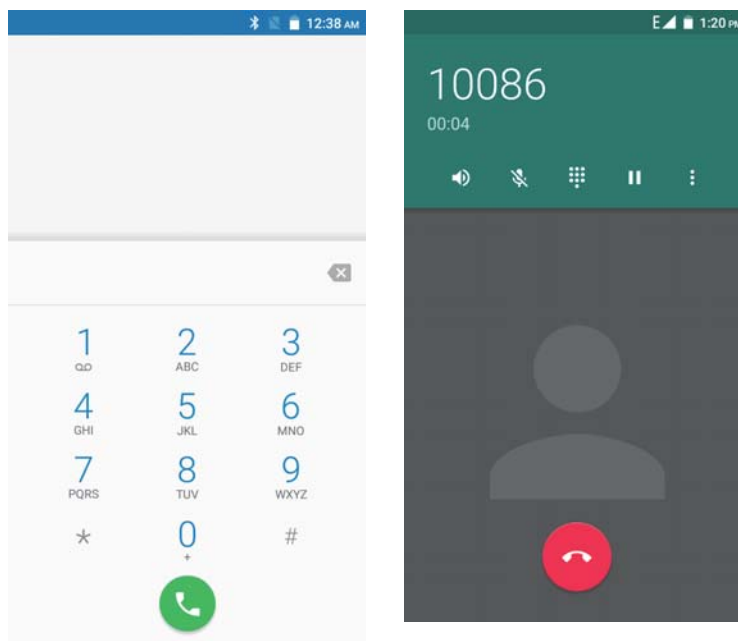

5.2 Dialing

At the dialing Keypad, enter the phone number, and then click the dialing key, after that, you should choose one SIM card if 2 SIM cards are available in phone.

5.3 Phone calls in the call log

Every telephone number dialed and received will be saved in phone's menu of call log. All numbers in the call log can be dialed by clicking the button "dial" on the screen. When number list appearing, click it to catch details, you can also edit, delete, save the number or do other operations.

5.4 Receive calls

 
When call comes press "Answer" to receive call.

6. Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones.

6.1 Sending a message

- 1). Touch message icon on the home screen and touch new message icon to edit a new message.
- 2) Enter a contact's name or call number in the field. As the information is entered, all matching contacts appear. Touch a suggested contact or multiple contacts as message recipient(s)
- 3). Touch Enter message to compose your message.
- 4). After completing the message, touch Send icon to send your message.

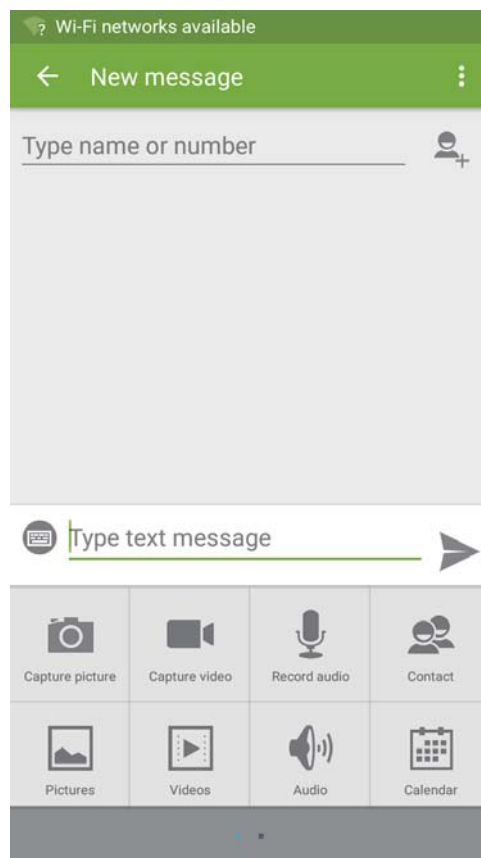

7. Contacts

7.1 Add contact

To add contacts Click "Add Contact" Icons, to create New Contacts. Select save contacts to phone or a SIM card.

You can also perform the following operations:

- 1) Delete contact: you can delete one or multiple contacts from here.
- 2) Contacts to display: you can select the contacts on different group to display.
- 3) Import/export: you can import/export the contacts form SIM card or storage; you can also share the visible contacts.
- 4) Accounts: you can sync with your account.
- 5) Settings: you can set the display options in this interface.
- 6) Groups: you can edit or delete a groups
- 7) Share Visible Contacts: you can share contacts from here.

8. Browser

You can use Browser to view web pages and search for information on the web. When you open Browser, your home page opens. The web address (URL) of the current page is displayed at the top of the window. Touch the URL box at the top of the Browser screen. Enter the address (URL) of a webpage

 


9. Sound Recorder

Recorder can record voice, and send it quickly via Bluetooth or MMS as well as make it as ring tone.



Notices: recorder can save the audio files as 3GPP and ogg format.

- 1) Click the recorder application.
- 2) Keep the phone's microphone near the voice source.
- 3) Click recorder to record voices, and click to stop.

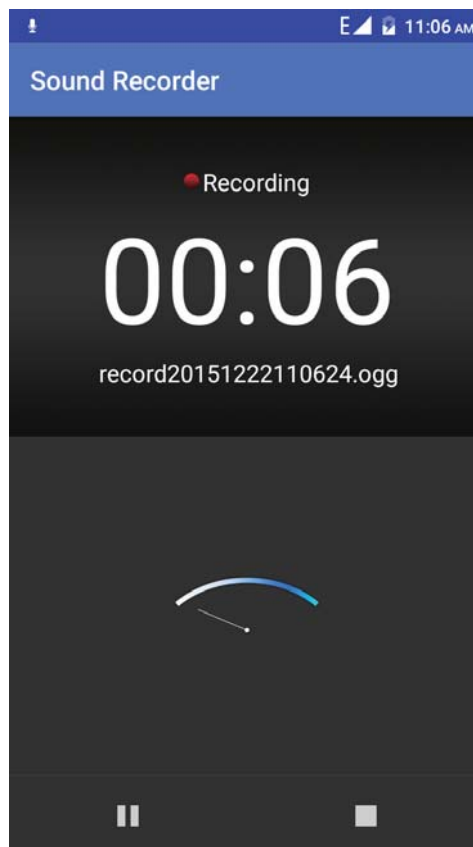

10. Clock

  
Touch the Clock icon on the Home screen or in the main menu interface. You can set an alarm by modifying an existing alarm or by adding a new one. You also can use world time, Timer and Stopwatch.

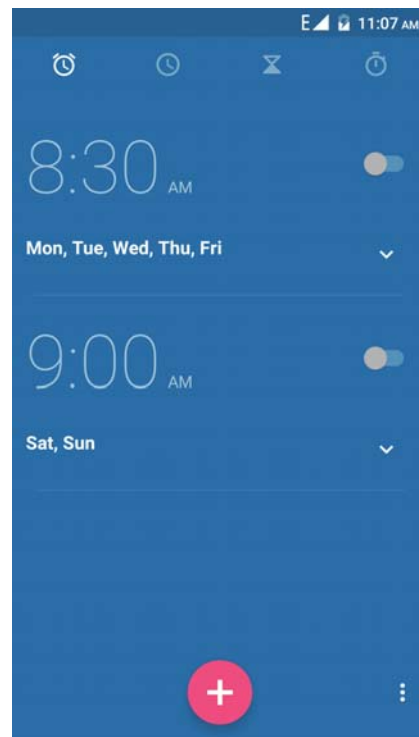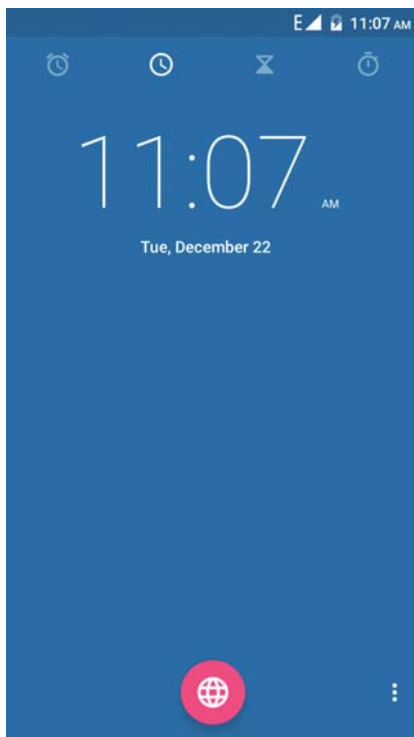

11. Camera

11.1 Taking pictures and videos

 Touch  to enter the camera.

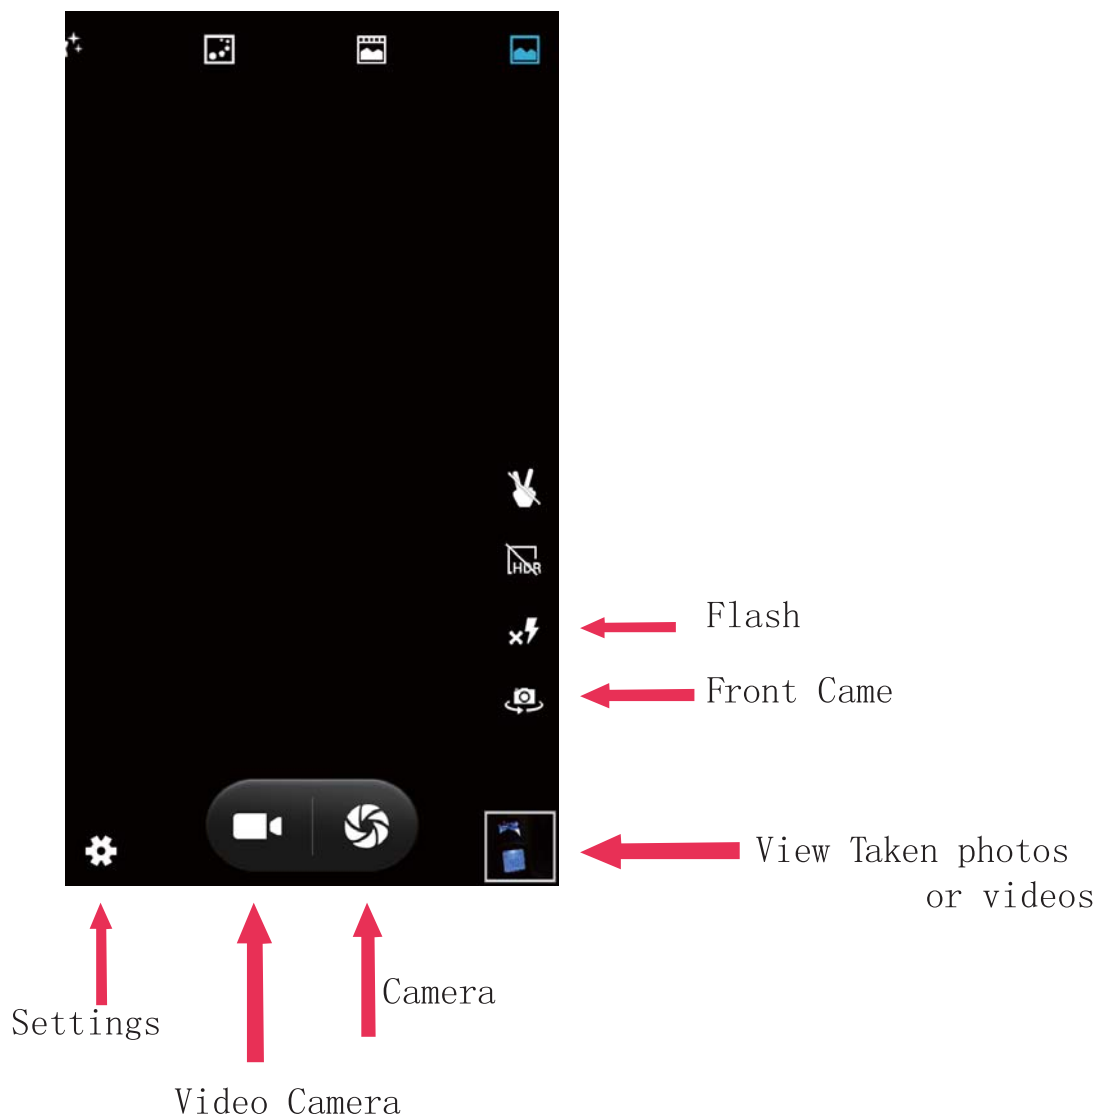

12. Gallery

Both pictures and videos taken by camera or stored in SD card can be viewed through this function.

12.1 Open Gallery

Press home>touch gallery> touch Photo's/Video's in gallery to view or play.

You can perform following functions;

- 1) Share: Using this function you can share your photos/Videos.
- 2) Delete: You can delete one or multiple photos/Videos here.
- 3) Details: You can check details about files here.

13. Music

 
 
The phone can play digital audio files in memory card. The following formats are available :3GPP、 AMR、 MIDI、 MP3、 WAV

13.1 Open Music

Press home, touch the label of applications, touch music. Then the interface of Music Media appears.

13.2 Music Media

Your music files are classified according to the following four categories :Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

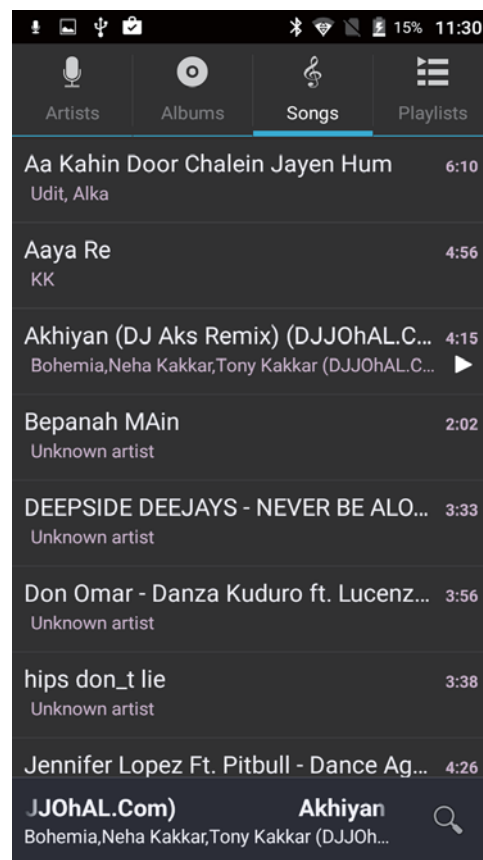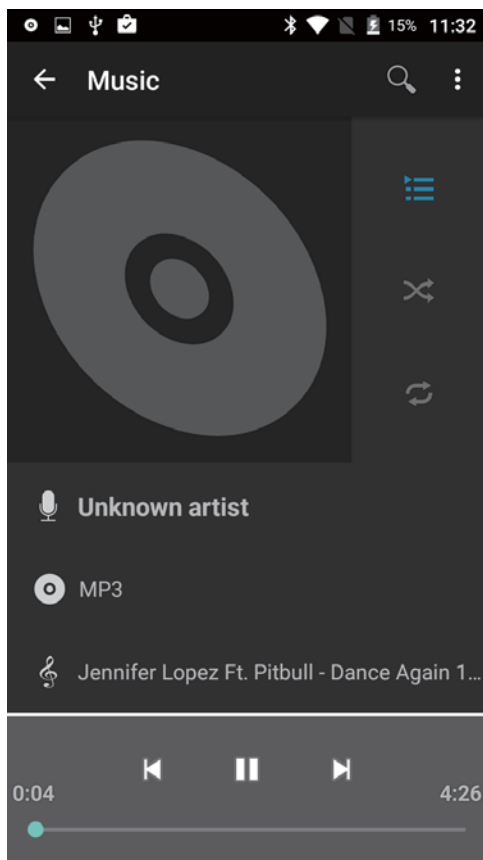

14. Settings

The Settings application contains most of the tools for customizing and configuring your phone.

14.1 Wireless and Networks

1) you can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You also can set Bluetooth, data usage, airplane mode, Default SMS app, tethering & portable hotspot, VPN and mobile networks in this interface

14.2 DEVICE

Display

1) You can set Brightness, Wallpaper, Auto-rotate screen, Sleep, Daydream, Font size and Font in this interface

Prompt & notification

1) You can make settings about the notification of call and messages etc.

Storage

1) Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your Memory card.

Battery

1) You can view your battery status, battery level and battery use in this interface.

Apps

1) You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, and to view the storage used by applications, etc. You can view the uninstal able application, you also can uninstall them.

14.3 PERSONAL

Location

1) You can turn on/off location and select High accuracy, Battery saving or Device only through this function.

Security

1) You can set the parameters about security through this function.

Accounts

1) You should add account first before using this function.

Language & input

1) Use the Language & input settings to select the language for the text on your phone and for configuring the input method.

By default English, Urdu and Persian are available in phone.

Factory data reset

1) You can backup your data and reset your phone in this interface.

14.4 SYSTEM

Quick Gesture Entry:

There are three Main types of gesture available and have more sub options:

Settings > Quick gesture Entry > all gestures available on this path.

- a. Gesture Motion
- b. Smart Motion
- c. Gesture Wake

Date & time

You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network,

 
15. Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- 1) Keep the mobile phone and all its fittings beyond children's reach.
- 2) Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- 3) Do not use or store the mobile phone in dusty places; lest that active parts of the mobile phone be damaged.
- 4) Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- 5) Do not store the mobile phone in a cool place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- 6) Do not throw the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

Getting started

Please insert the SIM card by following below instructions. Then press and hold the power button to turn your phone on or off.

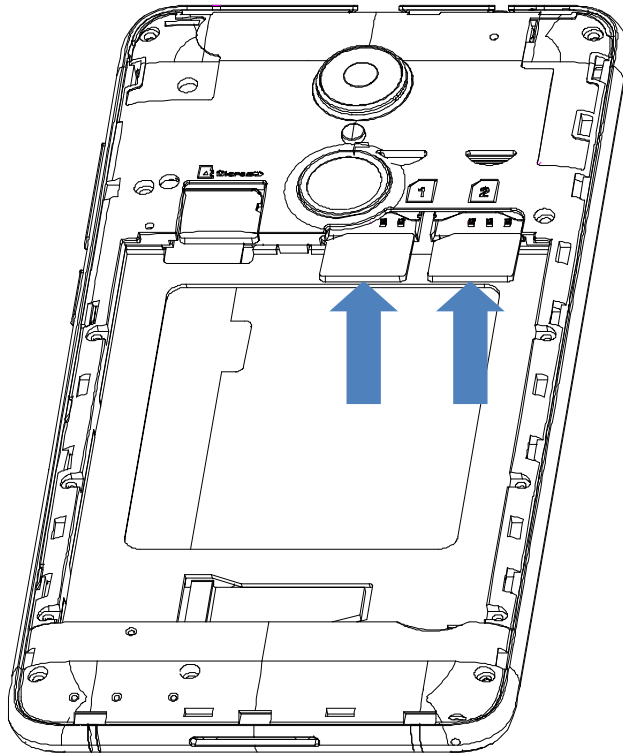

Please visit www.haier.com to get full user guide.

Charging your device

A rechargeable battery is used to power your phone. Charge the battery using the USB cable (power cord) and the charger (power outlet adapter) included with your phone. Make sure to fully charge the battery before using your phone for the first time.

WARNING! If the touchscreen won't function while the phone is in the process of charging, this may be due to an unstable power supply. If this occurs, disconnect the USB cable from the phone or unplug the charger from the power outlet.

Connect the USB cable to the travel adapter and insert the other end of the USB cable into the USB/Charging port.

Troubleshooting

No applications can be set	
Requested function is not supported by your service provider or registration is required.	Contact your service provider.
Charging error	
The battery is not charged.	Charge the battery.
The outside temperature is too hot or too cold.	Charge the tablet in a location that is within the recommended temperature range (32oF~113oF)
The battery has a contact problem.	Check the charger and its connection to the phone.
No voltage detected.	Plug the charger into a different power outlet.
The charger is defective.	Replace the charger.
Using the wrong charger.	Use only genuine Haier accessories.
Impossible to receive / send photos	
Tablet internal memory is full.	Delete some images in your phone.
Files do not open	
Unsupported file format.	Check the supported file formats.
No sound	
The tablet is set to silent mode or vibration mode.	Check the Sound Profile in the Sound menu to make sure that the tablet is not set to Silent mode or Vibration mode.
Hangs up or freezes	
Intermittent software problem.	Try to perform a software update via the website.

Legal Notice:

This document, whether in part or whole, shall not be reproduced or transmitted in any way, shape, or form without the prior written consent of Haier.

Haier is a trademark of Haier Europe Trading SRL
Haier reserves the right to modify the information contained in this guide at any time.

Disclaimer

THIRD PARTY SERVICES AND CONTENT ARE DELIVERED «AS IS». HAIER DOES NOT GUARANTEE THE CONTENT AND SERVICES SO DELIVERED, EITHER EXPRESS LY OR IMPLICITLY, FOR ANY PURPOSE WHATSOEVER AS WELL AS WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HAIER DOES NOT GUARANTEE THE ACCURACY, VALIDITY, LEGALITY OR EXHAUSTIVENESS OF THE CONTENT OR SERVICES PROVIDED BY THIS DEVICE. HAIER SHALL NOT BE LIABLE FOR NEGLIGENCE, WHETHER IN CONTRACT OR IN TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL OR SPECIAL DAMAGES, LEGAL FEES, EXPENSES OR ANY OTHER DAMAGE ARISING FROM USE OF THE CONTENT OR SERVICES BY YOURSELF OR BY A THIRD PARTY EVEN IF HAIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH INCONVENIENCES. AS SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTY OR LIMITATIONS ON THE LEGAL RIGHTS OF CONSUMERS, IT IS POSSIBLE THAT THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

Safety Cautions:

Please read this safety information carefully to ensure safe and proper use.



Driving

Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws regarding the use of cell phones whilst driving.



Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers and electronic implants, as it could cause them to malfunction. Your phone may cause interference with TV, radio, fire detectors, and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.



Flying

Your phone can cause interference with aircraft equipment. So please turn your phone off when flying.



Hospitals

Your phone may interfere with the operation of medical equipment. You must observe and follow any instructions or warnings in hospitals and treatment centers.



At Petrol Stations

Don't use your phone in petrol stations. In fact, it's suggested to be switched off near any fuels, chemicals or explosives.



Contact with liquid

Keep your phone away from water (or any other liquid). Any damage caused by liquid may be irreparable.



Making Repairs

Never take your phone apart. Please handle the repairs with the professionals. Any unauthorized repairs would break warranty terms.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. The use of unauthorized accessories may damage your phone or cause a safety risk.



Near Explosives and Fire hazard

Turn off your phone in or near explosive materials or heat sources such as radiators or cookers. Always obey local regulations and laws. Turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between -20 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause malfunction.



Backup

Always make a backup or keep a written record of all important data in your mobile phone.

Warning Notice:



- Use cell phone when the signal is good. Keep your calls short, use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.
- Caution: risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- For pluggable equipments, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- This device is not to be used with re-establishment timers T314 and T315 (or equivalents thereof) as defined in TS 25.331 which are greater than zero and different from each other.

Information about the meaning of Logo WEEE (Waste Electrical and Electronic Equipment):



The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment.

Radio Frequency Exposure:

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Proof of compliance with international standards (ICNIRP) or with European Directive 2014/53/EU (RED) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: HM-G552-FL (FCC ID: SG7201710G552) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.035W/kg and when properly worn on the body is 1.192W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components.

Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.



Haier Europe Trading SRL
3-5 Rue des Gravieres, 92200, Neuilly-sur-Seine, France
<http://www.haier.com>