


HAIER CHROMEBOOK 11

User Manual

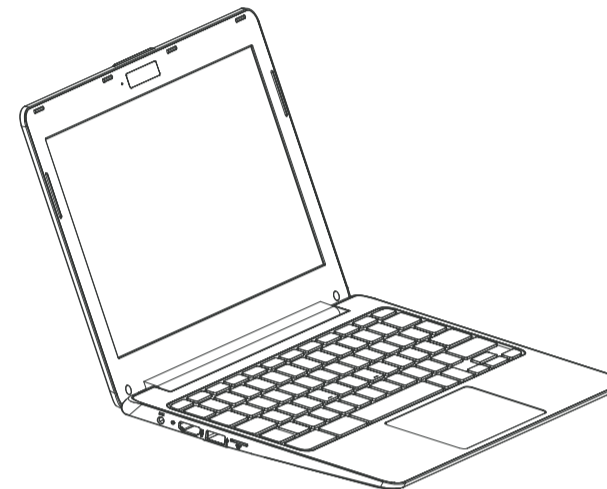


Please read carefully before use.

1. Getting started


1.1 Turn on your Chromebook

Connect the power adapter and turn on your Chromebook. The power button is located at the upper-right corner of the keyboard.

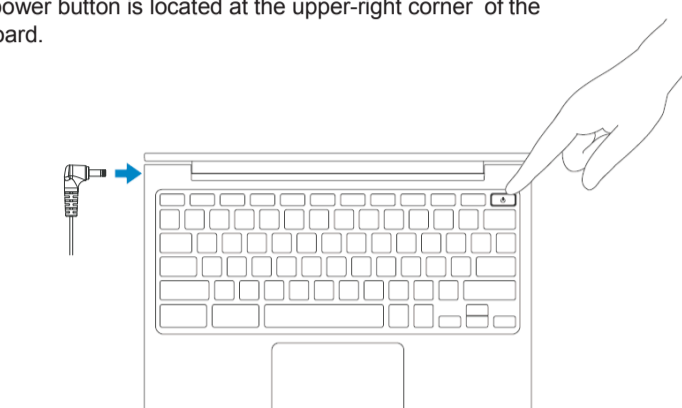


1.2 Connect to your network

Select your wireless network from the "Select a network" list to connect to the Internet. If your network access is protected, you will need to input the password to connect.

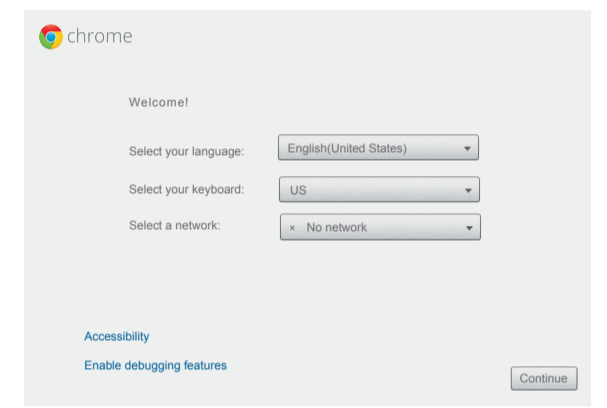


1.3 Wait for update to finish

Once connected to the internet, accept the Terms of Service. Your Chromebook will then download any available system updates, so you automatically get the latest Chrome OS features.

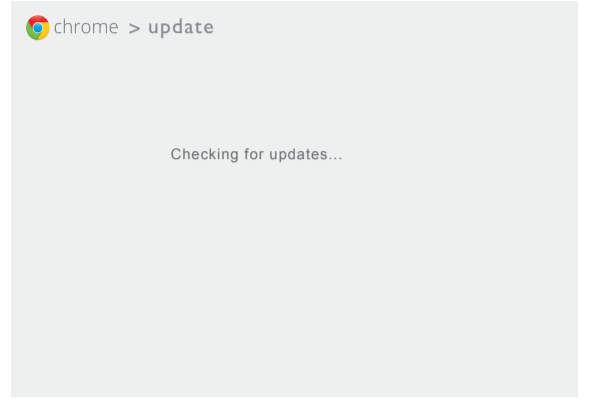

1.4 Sign in to your Google account or create a new account

If you already have a Google Account, enter your username and password to sign in. If you don't already have one, Click **Create a Google Account** on the right to set up a new account. A Google Account gives you access to useful web services developed by Google, such as Gmail, Google Docs, and Google Calendar.

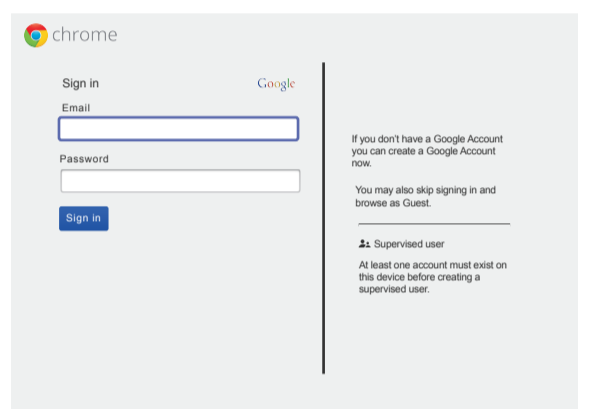


Important: Sign in with your primary Google Account. This account will be set as the owner and is the only account that will be able to change certain Chrome settings.

2. Your Chromebook tour


Now that you are done setting it up, let us show you around your new Chromebook.

Front view

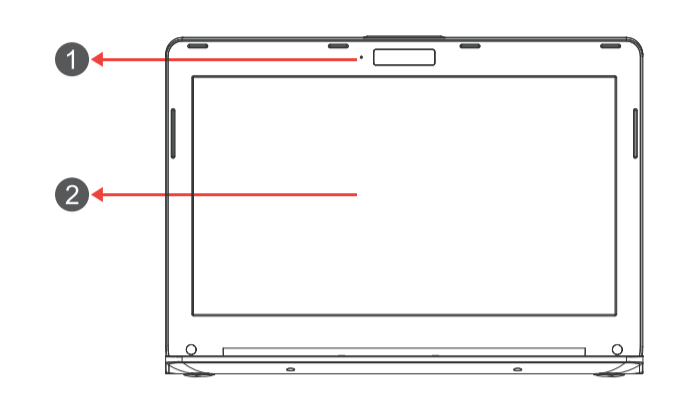

#	Item	Description
	Microphone	Internal microphone.
1	Webcam	Web camera for video communication. A light next to the webcam indicates that the webcam is active.
2	Screen	Displays computer output.

Keyboard view

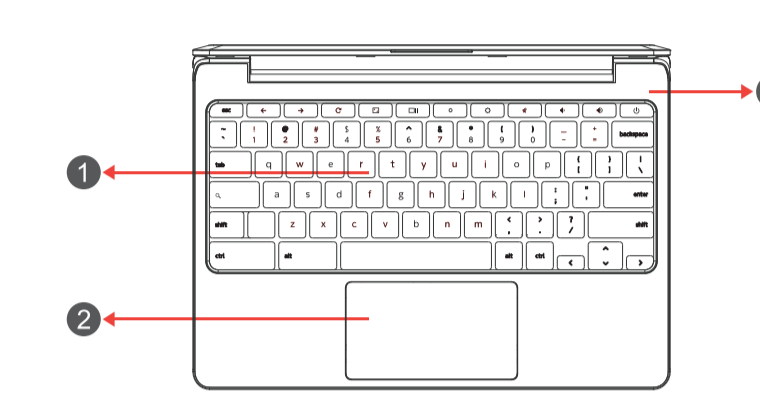

#	Item	Description
1	Keyboard	For entering data into your computer.
2	Touchpad / click button	Touch-sensitive pointing device which functions like a computer mouse. Pressing down anywhere on the pad functions like the left button of a mouse. Pressing down anywhere with two fingers functions like the right button of a mouse.
3	Power key	Turns the computer on and off.

Shortcut keys

To help you find things quickly, your Chromebook keyboard has special shortcut keys, including a dedicated search key. The shortcut keys make it easy to get around online and control your Chromebook, and the search key lets you search your apps and the web at the same time.

Some special keys sit along the top of Chromebook keyboards. If you're using a Windows keyboard with your Chromebook, the F keys at the top of the keyboard will work just like the keys below.

- Go to the previous page in your browser history (F1)
- Go to the next page in your browser history (F2)
- Reload your current page (F3)
- Enter Immersive mode, which hides the tabs and launcher (F4)
- Enter Overview mode, which shows all windows (F5)
- Decrease screen brightness (F6)
- Increase screen brightness (F7)
- Mute (F8)
- Decrease the volume (F9)
- Increase the volume (F10)
- Search your apps and the web at the same time. On a Chromebook, this key is located on the side, where you'd normally find the Caps Lock key. If you're using a regular keyboard, the Windows key in between Ctrl and Alt will work as the search key.

Tip: To turn Caps lock on temporarily, press Alt + the search key.


正面

Touchpad

When you're using a Chromebook, use the touchpad to move the pointer and select items on the screen. Here are some gestures and actions supported by the touchpad:


- Move the pointer:** Simply move your finger across the touchpad.
- Click:** Press down on the lower half of the touchpad. Since tap-to-click is on by default, you can quickly tap the touchpad to click.
- Right-click:** Click the touchpad with two fingers, or hold **Alt** while doing a single click.
- Middle-click:** Click the touchpad with three fingers.
- Scroll:** Place two fingers on the touchpad and move them up and down to scroll vertically, left and right to scroll horizontally.
If you have Australian scrolling enabled, move two fingers up to scroll down. (It works in the same way as say, your smartphone or tablet.) If you have multiple browser tabs open, you can also swipe left and right with three fingers to quickly move between tabs.
- Swipe:** Quickly move two fingers left or right to go backward or forward on web pages or while using apps. You can also swipe up with three fingers to see all of your open windows.
- Drag and drop:** Click the item you want to move with one finger. With a second finger, move the item. Release both fingers to drop the item at its new location.

Left side view

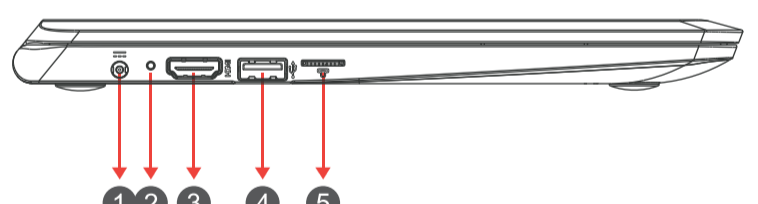


#	Item	Description
1	DC-in	Connects to the charger.
2	LED lights	Indicates the Chromebook's power/charger.
3	HDMI port	Supports high-definition video connections.
4	USB port	Connects to USB devices.
5	TF card	Accepts Micro Secure Digital (TF) cards.
6	Audio jack	Connects to audio devices (e.g., speakers, headphones), or a headset with microphone.

Right side view

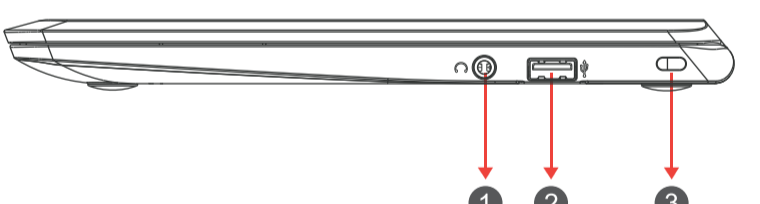

#	Item	Description
1	USB port	Connects to USB devices.
2	Kensington lock slot	Connects to a Kensington-compatible computer security lock.

Bottom view

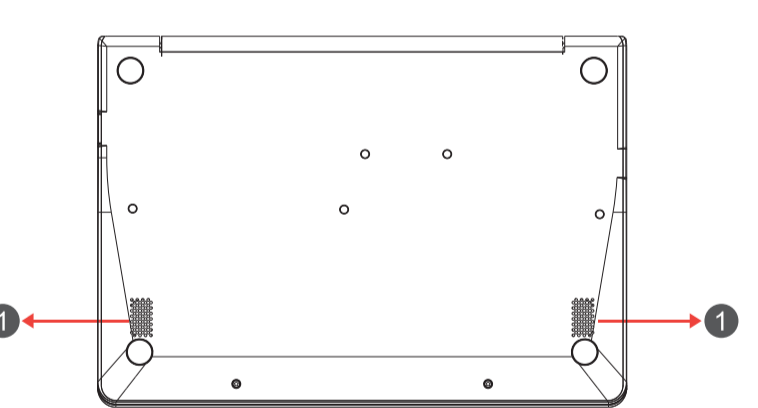

#	Item	Description
1	Speakers	Left and right speakers deliver stereo audio output.
2	Battery lock	Slide to remove the battery. <i>Note: when you reload the battery, you need to connect the charger first to power on your Chromebook.</i>

3. Specification

LCD	11.6" HD (1366*768) LCD
Platform	ARM based Quad-Core, up to 1.8GHz
Video	ARM Mali-T764 GPU
Audio	Two internal speakers One microphone on the camera 3.5mm Audio combo jack (Headphone & Microphone)
Memory	2GB DDR3L
Storage	16GB eMMC
I/O Ports	Two USB 2.0 ports One HDMI port One 2-in-1 memory card reader (SD/MMC) One Audio jack (Headphone-out & Microphone-in) One DC-in jack for power adapter connection
Camera	720p HD resolution camera
Wireless	WiFi dual band with integrated bluetooth 4.0 802.11 a/b/g/n/ac 2*2
Battery	31WH Lithium battery
Power	12V 2A
OS	Chrome OS
Dimensions	293*210*24mm
Weight	1.16kg

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: To comply with the limits for an FCC Class B computing device, always use the signal cord and power cord supplied with this unit.

The Federal communications Commission warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

European Notice
Products with the CE marking comply with both the EMC Directive (89/336/EEC), (93/88/EEC) and the Low Voltage Directive (72/23/EEC) issued by the Commission of the European Community.

The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out 'wheeled bin' symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Li-Polymer Battery Warning

This Chromebook contains a Li-polymer battery to power the clock and calendar circuitry.

Caution: Danger of explosion if battery is replaced incorrectly. Only qualified service technicians should replace and discard the battery. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Travel Notice

WARNING
To reduce the risk of electric shock, fire or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.

背面