

Haier

HRZ-241

REFRIGERATOR



USER'S INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

These warnings are provided for your safety. Please make sure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings, contact the customer Service Department.

Installation

- This appliance is heavy. Please take care when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cord is damaged, it must be replaced by a special Cord available from your local Service Centre.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.

Caution: The appliance must be well ventilated at all times, see Ventilation instructions for correct air clearances.

Child Safety

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only.

Maintenance and Cleaning

- Switch off, and unplug the appliance before carrying out any cleaning or maintenance work.

- Do not use sharp instruments to scrape off frost or ice.

Caution: Do not use any mechanical equipment to speed up the defrosting process.

Do not damage the refrigerant circuit.

Do not use any electrical appliance inside the appliance except those that are recommended by the manufacturer.

Servicing

- This product should be serviced by an authorised engineer, and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre.

At the End of the Appliance Life

NOTE: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Ensure that the door cannot jam (removing it is best), regardless of whether or not it can be pushed open from inside.

AN OLD APPLIANCE CAN BE A DEADLY PLAYTHING FOR CHILDREN!

 
CAUTION: Your appliance contains R600a refrigerant and inflammable gas in the insulating foam.



Please read this instruction book carefully before use and retain for future reference.

1.Name of parts

PARTS AND FEATURES

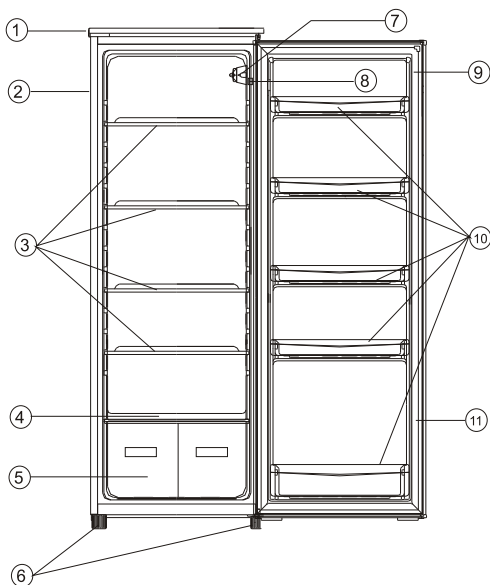


- ① Worktop
- ② Cabinet
- ③ Shelves
- ④ Crisper Cover
- ⑤ Crisper Box
- ⑥ Adjustable Foot
- ⑦ Thermostat
- ⑧ Door Switch
- ⑨ Door Assembly
- ⑩ Door Balcony
- ⑪ Door Gasket

2. Correctly positioning


Ventilation

 It is necessary to have good ventilation around the refrigerator for heat dissipation, high efficiency and low power consumption. For this purpose, it is necessary to leave enough clear space around the refrigerator. The clearance at the back must be at least 100mm, both sides must be at least 100mm and the top at least 200mm. A clear space should also be left on the hinge side to enable the doors to open 160 degrees wide.

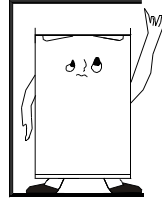


Power Supply

 The refrigerator is designed to operate with a power supply of single phase alternating current of (220-240)V~ /50Hz). The refrigerator must be plugged in to its own power socket instead of common one with other electrical appliances. Do not use extension cords and double adaptors. Ensure the appliance is properly earthed.

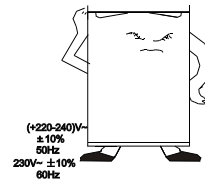

Supply Cord

 The cord should be neither lengthened nor folded into a coil during operation. Moreover, it is forbidden that cord be kept close to the compressor at the back of the refrigerator, the surface temperature of which is very high during operating. Touching it could damage the insulation or cause leakage of electricity.

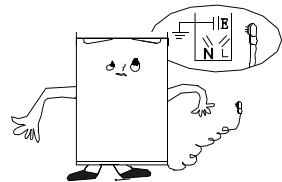

Protection from Moisture

Do not keep the refrigerator in a place where there is heavy moisture as this may cause rust to form on the metal parts. Also, the refrigerator should not be sprayed directly by water as this may cause poor insulation and current leakage.



2. Correctly Positioning

 
Protection from Heat

The refrigerator should be far away from any heat source or direct sunshine.




Fixing Stable

Floor on which refrigerator will be placed must be flat and solid. It should not be laid on any soft material such as foam plastic, etc. If the refrigerator is not on the same level, adjust the screws suitably. The refrigerator should not be placed near anything which may echo.

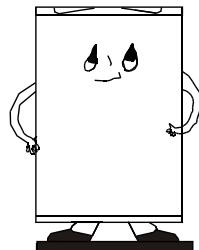


Keep Away from Danger

 It is inadvisable that the refrigerator is placed near any volatilizable or combustible such as gas, petrol, alcohol, lacquer and banana oil, etc. The above-mentioned objects can not be stored in the refrigerator.

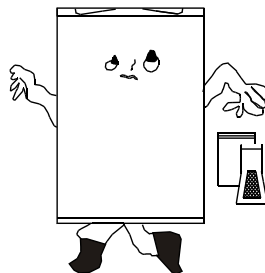

Moving

 When fixed or moved, the refrigerator can not be set horizontally or declined to more than 45° or upside-down.

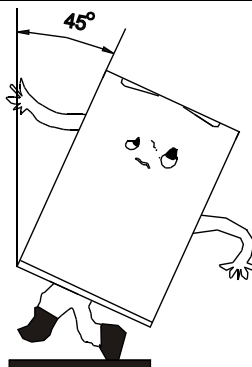

3.Cautions

- ★ It must be checked that the voltage used should be the same as the rated voltage before the refrigerator is used.
- ★ Water contained in food or getting into air inside the refrigerator by opening doors may form a layer of frost inside, It will weaken the refrigerator when the frost is thick, The refrigerator can defrost automatically. The defrost water flow into the water collection pan through the drain port and evaporate by the heat of compressor.
- ★ If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.
- ★ It is dangerous to alter the specifications or attempt to modify this products in any way.
- ★ When you change the light bulb or when the refrigerator is not in use for long periods, disconnect it from the electricity supply.
- ★ Wait for 5 minutes before restart the unit after the power supply blackout.

4.Changing the reversible door

Reversing the door

 
The side at which the door opens can be changed from the right side (as supplied) to the left side, if the installation site requires.

Warning! When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.

Tilt the appliance slightly towards the rear and prop it securely.

Unscrew the door hinge screws and remove the hinge pin bracket .


Open the door a little way and take it out downwards.

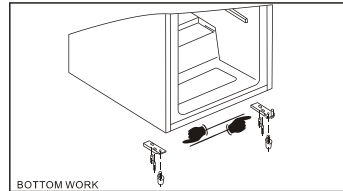

Unscrew the upper pin and screw it into place on the opposite side.


Fit the door into the upper pin and close it.

 Screw the hinge pin bracket securely into place on the opposite side using the screws.

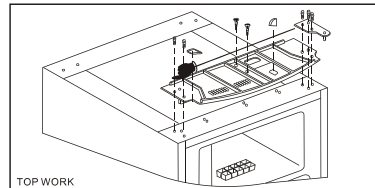

Changing the light bulb

 1. Remove the water drip tray.
2. Hold the lamp cover and push toward inside of the cabinet.
3. Remove the lamp cover.
4. Unscrew the bulb and screw in a new 10W bulb.
5. Hold the lamp cover and put the hook of the lamp cover to click into the thermostat box.
6. Pull the lamp cover forward to click into the thermostat box.
7. Replace the water tray.

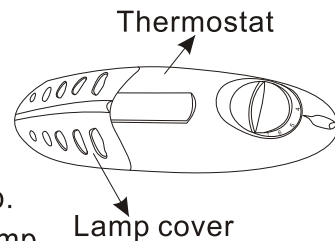

5.Maintenance

- ★ The refrigerator should be cleaned and maintained once a month.
- ★ When performing maintenance, make absolutely sure that the power plug is first disconnected from the power outlet.
- ★ Wipe the inner and outer surface of the refrigerator and its accessories with wet cloth. If they are too dirty, scrub them with neutral detergent, and then clean them with water and dry them with clean cloth.
- ★ For cleaning, don't use hot water, diluent, petrol, alcohol, kerosene, washing powder, cleanser, alkalinous detergent, acid, Chemical cloth, etc. So as not to damage the lacquer coat and plastics. It is forbidden that the refrigerator is directly sprayed with water. Otherwise, it could cause rust or weaken the insulation.
- ★ Keep the rubber seal around the doors clean.
- ★ If the plastic parts in refrigerator remain contaminated for a long time by oil (animal or vegetable), they will be easily aged and possibly cracked. The drain pan gets dirty very easily if it is not cleaned regularly, bad odours will be produced, get into the habit of cleaning this pan regularly.

6. Troubleshooting

1. When the refrigerator does not work.
 - Check if there is a power failure.
 - Check if the power plug is plugged into the power outlet.
 - Check that the fuse has not blown.
2. When the refrigerator is cooling excessively.
 - The temperature control dial may be set too high.
 - If you place foodstuffs containing a lot of moisture directly under the cool air outlets, they will freeze easily. This does not indicate a malfunction.
3. When the refrigerator is not cooling sufficiently.
 - The food may be packed too tightly together which will block the flow of cool air. You may have put something hot or a lot of foodstuffs into the refrigerator.
 - The door may not have been closed properly.
 - The door gaskets may be damaged.
 - The refrigerator may not be ventilated.
 - There may be insufficient clearance between the refrigerator and other surfaces. Immediately both sides and above.
 - The temperature control dial may not be set properly.
4. When the defrosting water overflows inside the refrigerator and onto the floor.
 - Check that the drain pipe and the drain hose are not clogged.
 - Check that the drain pan is housed properly.
5. When condensation form on the outside of the refrigerator.
 - Condensation may form on the outside when the humidity is high such as during a wet season. This is the same result as the condensation formed when chilled water is poured into a glass. It does not, therefore, indicate a failure, wipe dry with a dry cloth.
6. When you hear a sound like water flowing .
 - A sound like water flowing is the refrigerant flowing. It does not Indicate a malfunction.
7. When the cabinet's side panel heats up.
 - The side panel of the cabinet will heat up when the door is opened or closed frequently, when starting the unit and when the unit operates in summer with high ambient outside temperature, In such case, do not touch the panel, it results from the dissipation of the heat from inside the cabinet, and it does not mean that something is wrong with the refrigerator.

7. Technical specifications

*For the detailed technical specifications, please refer to the nameplate at the back of the refrigerator.

*Specifications are subject to change without prior notice.

Warnings

- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- * Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- * Do not damage the refrigerant circuit
- * Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

IMPORTANT DISPOSAL INSTRUCTIONS



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for your product and packaging materials, This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components and sometimes batteries, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life.

Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling.

Some collection points accept free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

