



















# 充电仓电池容量: 3.7V/300mAh 请勿自行拆卸耳机及充电仓,否则保修立即失效。

产品参数

## 为何出现声音断续的现象?

常见问题

 
蓝牙耳机是以无线方式连接,容易受到环境中电磁辐射干扰 或是信号阻隔物的影响,可以换一个位置试试,如此情况是 持续的,请与我们联系。

耳机重置后为什么不能播放歌曲?


耳机重置后需要重新和手机配对,请将手机蓝牙菜单上的已连接设备中的"S12"都删除后再重新搜索配对,之后就可以正常使用了。

为什么在耳机上调好了音量,但下次使用时音量却变了? 通过耳机调节音量,对某些手机来说可能无法同步,下次使用 时会恢复为按照手机音量或耳机默认音量进行播放。遇到这种 情况,建议使用手机来调节音量,在下次使用时就会保持最后 调节的音量大小。

# **TWS SI2**



Package Contents

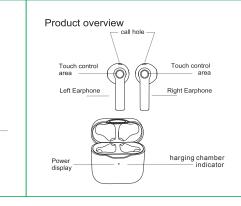

1. For the first time use, be sure to put the headset into the charging box, close the charging chamber cover for 5 seconds to activate

to activate

2. For daily use, it is recommended not to open and close the charging chamber cover frequently. 3. For daily use, it is recommended to turn on the Bluetooth mobile phone first, and then take out the headset.

 First time using When the headset is used for the first time, put it into the charging box, close the cover of the charging box for 5 seconds, open the cover of the charging box, and the main and auxiliary headphones will enter the automatic pairing state, and enter the pairing state with the Bluetooth of the mobile phone

paining state with the Billetooth of the mobile phone (or Bluetooth device) and search for Bluetooth devices. Find "\$12" in the list of Bluetooth devices. Find "\$12" in the list of Bluetooth devices and click to start connecting (Figure 1). If the connection is successful, you can use it (Figure 2)

3. Use the Bluetooth headset again, open the charging box cover, pair automatically, and connect the last connected mobile phone (or Bluetooth device) automatically



2. Disconnect the Bluetooth connection of the headset, and the headset will turn off automatically after 5 minutes.

3 RESET

1. Open the Bluetooth list and delete "\$12"

 
2. The earphone is in the charging chamber. Open the cover of the charging chamber and press the key of the charging chamber for 6 seconds. The earphone is restored to the factory setting successfully.

 
3. Mobile phone Bluetooth search "\$12" click to start connection, and you can use it after successful connection. and you can use it after successful connection.

 


 Charging instructions
 Low power in charging chamber, red light flashing.
 When charging in the charging his the charging his 2. When charging in the charging bin, the red light When the charging bin is fully charged, the indicator light will go out after it is on. Wiew the current power of charging chamber









## 8 Headset control

Play / pause Music: click (Figure 7) on the headset touch area Switch to the next song: double click in the music (Figure 8) ight ear touch area Switch to the previous song: double click the left ear touch area

in music
Answer a call: click the headset touch area when calling Answer a call: click the headset touch area when calling Hang up: click the headset touch area when calling Refuse to answer a call: press the headset touch area for a long time Adjust the volume: when playing music or answering the phone, long press the left ear touch area to decrease the volume, long press the right ear touch area to increase the volume.

### Activate voice assistant

After the headset is connected to the mobile phone, the user can normally start the voice assistant by 3 clicks on the left or right headset touch area, and then exit after 3 clicks.

## Product Spec

Charging time: about 1 hour

warning

harging time of earphone box; about 1.5 hours Support system: all Bluetooth devices and mobile phones Earphone battery capacity: 3.7v/30mah

Battery capacity of charging chamber: 3.7v/300mah

Do not disassemble the earphones or charging compartment by yourself, otherwise the warranty will be invalidated immediately

The earphones are waterproof to a certain extent, but they are not suitable for swimming and should not be exposed to hot water

Earphone talk time (excluding charging box): about 4 hour Headset play time (excluding charging box): about 4 hours
Earphone talk time (including charging box): about 12 hours
Headphone playback time (including charging box): about 12 hours

FAQ

Why can't I play songs after earphone reset? why can't play songs atter earphone reset?
After the earphone reset, it needs to be paired with the phone again. Please delete all "\$12" in the connected devices in the Bluetooth menu of the phone, and then search for pairing again, then it can be used normally.

Adjusting the volume through the earphones may not be synchronized for some mobile phones. it will be restored to play according to the phone volume or the default earphone volume when next time use, in this case, it is recommended to adjust the volume on mobile phone, but the volume will be maintained as the last adjusted volume when next time you use it.

# Bluetooth version: 5.1 Support protocol: A2DP / AVRCP / HFP / HSP Frequency range: 2402mhz ~ 2480mhz Transmission distance: ≥10

耳机具有一定得防水能力,但不适于游泳,也不可接触热水。

Why is the sound intermittent?
Bluetooth earphone are connected wirelessly, which are susceptible to electromagnetic radiation interference or signal barriers in the environment. You can try another location to try again. If this situation is continuous, please contact us.

Why the volume on the earphone has been adjusted , but it is still changed when next time use?

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.