

Users Manual

Product: Atlantis

Model No.: 201702hxtatwg

Important Declaration

Atlantis 201702hxatwg

1. Before using the tablet PC, please read all information provided by us first so that you can use this product correctly. Please make sure that you have read this manual carefully before using this product.

2. Our company reserves the copyright of this manual, any random duplication or interpretation of the full or partial manual is forbidden in commercial activities.

3. The information covered in this manual is all based on the latest information when compiling the manual, and products are subject to change without notice for further improvement. We are not committed to any mistakes or incidences caused by the manual. For additional product information, visit the company's web site.


Appearance and Buttons:




- | | |
|-----------------------|----------------------------|
| 1. Earphone Jack | 6. Home button(silk print) |
| 2. Micro USB Port: | 7. MIC port |
| 3. HDMI port | 8. Power Button |
| 4. Front 0.3MP camera | 9. “V+”: Volume up; |
| 5. TF Card slot | 10. “V-”: Volume down; |
| 3 | |

1.Quick Start:

1-1. Power On/Off

At the status of power off, long press “” for three seconds to turn on. It will take some time to power on, please wait.

Power Off: At the status of using, press “” for 5 seconds, the screen will show power off option. Select “Power off” option, confirm your choice and system will automatically turn off. Select “Cancel” to cancel power off operation.

1-2. Computer Connection & File Transfer

 
Connecting the product to the computer with USB cable, Reeder M8 will pop up.

Open drop-down menu, select USB function you prefer. Charging device ,file transfer USB storage etc as photo.



1-3. BT connection

Settings---Bluetooth--- Search the device you would like to pair and transfer the files after these two devices paired.

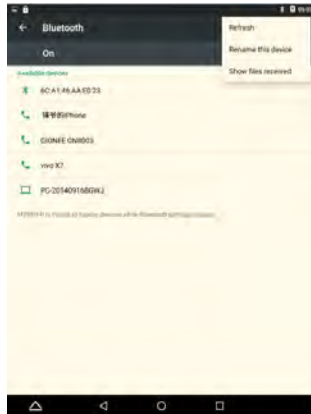
 










2.The function of the Main Interface & Icon Usage

2.1 The introduction of the main interface

 
Long press power button, after startup, the screen is locked.
Slide up the unlock icon to enter into the main interface as the following pics shows. In this interface, you can view the state, open the program and so on.



| icon | Function description | icon | Function description |
|---|--|---|---|
|  | Google search |  | Setting |
|  | Back |  | Function Menu |
|  | Battery icon |  | Camera |
|  | system time |  | Wifi signal Display |
|  | Return to the main page at any interface |  | The recent implemented application window |

2-2. Short-cut Key


 
Press the icon
to enter into the a
fully functional menu as
following:

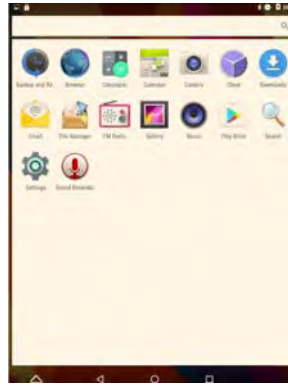

All the functional icon can be displayed within the window.
Pressing any icon can enter into the relative function interface.
Setting

3. Network Setting

  Click the shortcut in the main interface, choose "Setting/Wireless and Network" to enter network setting interface:

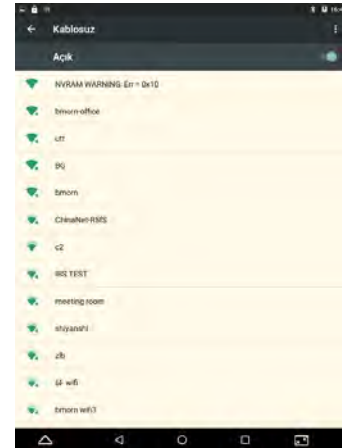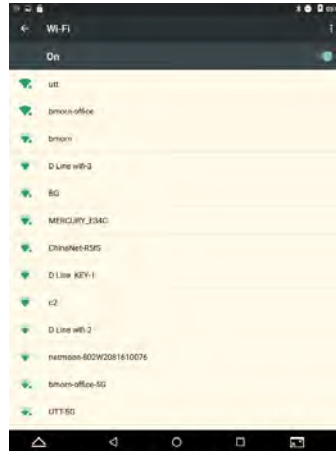

4. Operating Details of Main Interface

4-1. Music, video




Click the icon of "Play music", select the music you prefer to listen or go to SD card to list your stored music already.




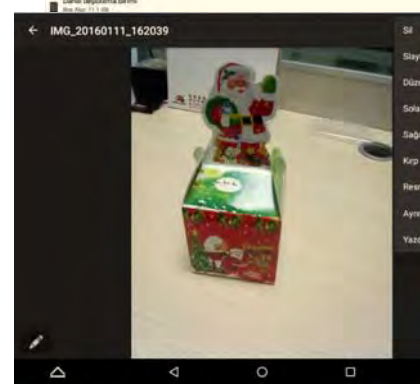 
4-2. Video

Watch video online or from “Gallery” or go to select some preferred video in your SD card etc.

4-3. Photo browser

Click the icon  in the main interface in to the photo browser list, long press video files to pop up a  in the video list, and click  to delete the video files.

 
Click “cancel” to cancel the option. Select a picture file, view the interface in full-screen picture, click on the upper right corner of the screen brings up the Settings menu. Click  bring up sub-menu: slide show, edit, rotate Left, rotate Right, crop, set picture as ,details.







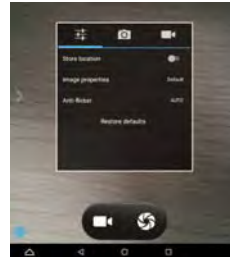

4-4. Camera

Select camera icon, enter camera mode or video mode

 
 


4-5. Recording

Click the recording icon to enter recording interface.


Click  to start recording. After recording, click  again and pop out to select whether to keep this recording or not; at the same time, you can click  to play and click  to stop playing. Select "Save" to keep this file or select "Cancel" not to save.

Recording files will be saved in Files Manager.

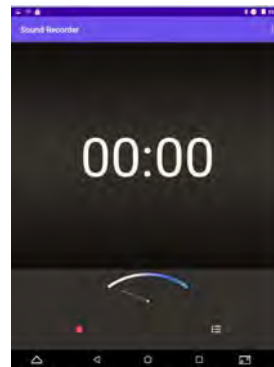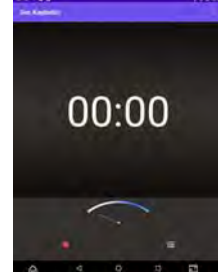

4-6. File Manager



In main interface, click file manager icon , select [TF Card] or [Local Disk], [Mobile Disk] to expand the drop-down folders and related files. Here you can copy, move, paste or rename files. Long press a single folder or file, the Edit dialog box will pop up with choices to delete, rename, copy, paste and send E-Mail.

5. Usage of TF Card

This product comes with TF card slot. It supports reading the files in TF card. When using, inset the TF card to the product. To drag out the TF card, push the TF card inside a little and release; TF card will pop out automatically and you can take it out.

Tips:

- A. Please insert TF card to the card slot on the right correctly.
- B. When TF card is working (such as reading, copying, etc.), please do not pull out the card or it will lead to data errors.
- C. Avoid using the memory card in high temperature or high

humidity environment.

D. Keep the memory card away from liquid or corrosive material.

Note: If you cannot take out the memory card, or it's stuck with other material or smudged and so on, you can use tweezers or other tools to pull it out slowly and carefully.


6. Basic Setting

Click setting Icon to enter menu setting: Wireless & Networks, Sound, Display, Storage, Battery, Applications, Accounts & sync, Location services, Security, Language & input, Backup & reset, Date & time, Accessibility, Developer options, about tablet. Press and hold the screen up or down to turn pages.



6-1. Sound Setting

 Click "sound¬ification" in Settings Menu to enter the setting interface (as follows):

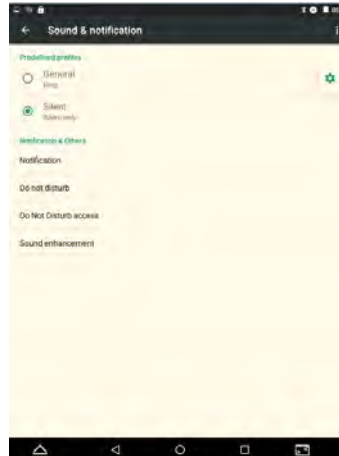

A: Volumes: Click here for all the volume settings.

B: default Ringtone setting.

C: System: Click here to set touch sound, screen lock sound.

6-2. Display

Click Display in Settings menu to enter the setting interface (as follows)



 
A. Brightness: click here to adjust the brightness of this product.

B. Wallpaper: Click here to set Live Wallpaper, Super-HD Player, Wallpapers.

- C. Screen Auto-rotation: Click here to open or close screen auto-rotation function.
- D. Sleep: Click here to adjust the time for automatic screen lock with choices of 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes.
- E. Font size: Click here to adjust the font size for the player.
- F. Accelerometer coordinate system: Click here to set a special coordinate for some games.

6-3. Language & Input

Set up languages & input keyboard

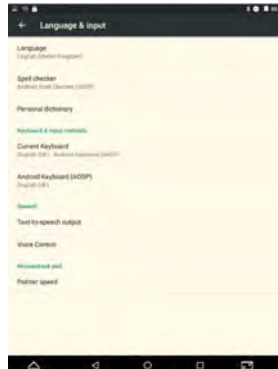

6-4. About Tablet

You can check legal information, model number, Android version, Baseband version.



7. Specification

| | | |
|---------------|------------------------------|------------------------------|
| Display | 7.85inch 768*1024IPS | |
| Configuration | CPU | MT8163B |
| | Memory | 16GB |
| | TF card | 1GB~64GB (optional) |
| | OS | Android 6.0 |
| Network | Wifi | IEEE802.11a/b/g/n |
| Battery | Internal | Lithium battery 3.7V |
| Power | output | USB 5V, 2A |
| Audio | Max.earphone output | (L) 7mW+ (R) 7mW (32 ohm) |
| | MP3 bit rate | 32K bps – 320K bps |
| | WMA bit rate | 16K bps –320K bps |
| | Frequency response | 20Hz to 20KHz +/-3dB |
| | SNR | >=85dB |
| | Distortion degree | <0.6% |
| Music Format | MP3,AAC,MIDI,AMRetc | |
| Video format | 3GP,MPEG4,H.263, H.264 etc | |
| Image | JPG, JPEG, GIF, BMP, PNG etc | |
| Temperature | -5 to 40°C | |

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: **2AEJL-ATLANTIS**