

Intel Quad Core 8" Windows Tablet

User Manual



Introduction


Thank you for your choosing the Intel QuadCore 8" Window Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

Contents

 
I . Precautions before Use	03
II . Key Layout and Definitions	04
III. Introduction to Desktop	05
1. Windows8.1 Start Screen	05
2. Image Slide Application	05
3. Introduction to apps Introduction	06
4. Charm Menu Column	07
5. Double Screen Application	09
IV. Basic Operations	10
1. Dormancy, Restart, and Power off	10
2. Security Management	10
V. Media Function	11
1. Camera	11
2. Browser	11
VI. Specification	13

I . Precautions before Use

This production is suitable for use in non-tropic areas below 2,000 meters, and the mark  in the nameplate indicates the product is suitable for use in non-tropic areas.

2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<35 °C), too humid or with too much dust. Do not expose the Tablet PC to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.
6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.
10. Quick Use Guide and the relevant software shall be updated at any time. For updated software version, visit <http://www.3nod.com.cn> for downloading by yourself, and no notice shall be given other wise. If any anything is found to be inconsistent with the Quick Use Guide, the material object shall prevail.
11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II .Key Layout and Definitions

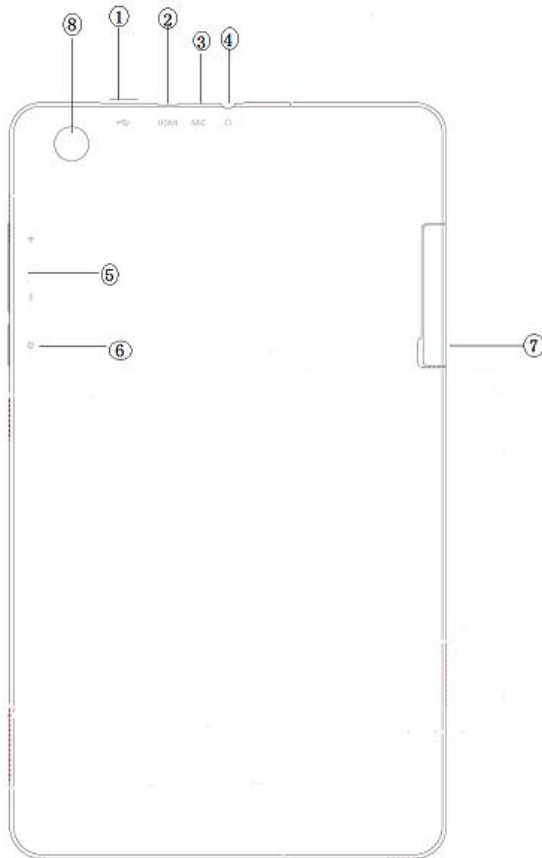


- ① Micro USB Interface: You can read the data through USB or Recharge the device.
- ② HDMI
- ③ Microphone connector outlet
- ④ Socket for earphone: This socket can transmit the audio signals of Tablet PC to earphone.
- ⑤ Volume +/- : adjustment volume
- ⑥ Power Key: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.
- ⑦ MicroSD& MicroSDHC Format Micro SD card slot: The built-in storage card reader slot supports MicroSD and MicroSDHC format.
- ⑧ Camera: take photos, and record pictures

III. Introduction to Desktop

1. Windows 8.1 start image: On the start screen, you can see many programs fixed in the image.

These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

 You need to log on your Microsoft account before the application program completely runs.

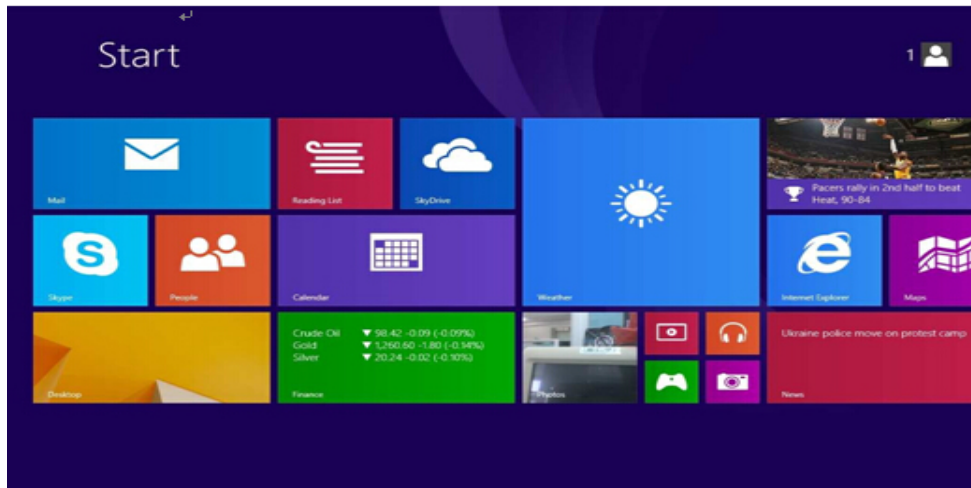

2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column

Reduce



On the touch screen, narrow two fingers to reduce the image.

Slide with finger



In start screen, slide finger right and left to move the image.

Enlarge



On the touch screen, widen two fingers to enlarge the image.

 
Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3.Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.

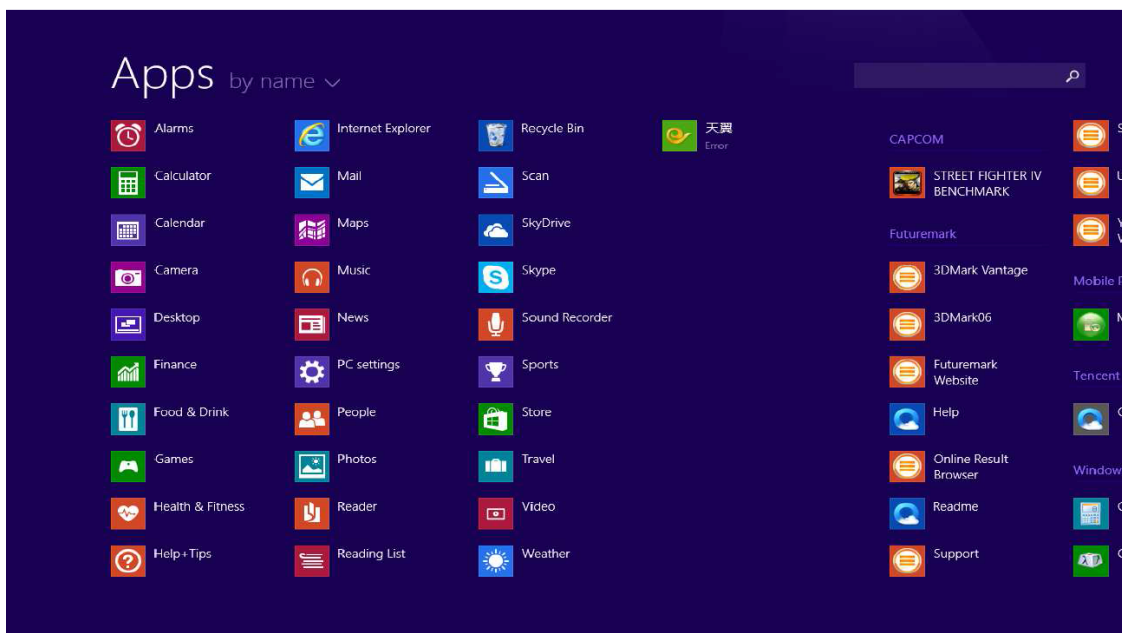

 If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

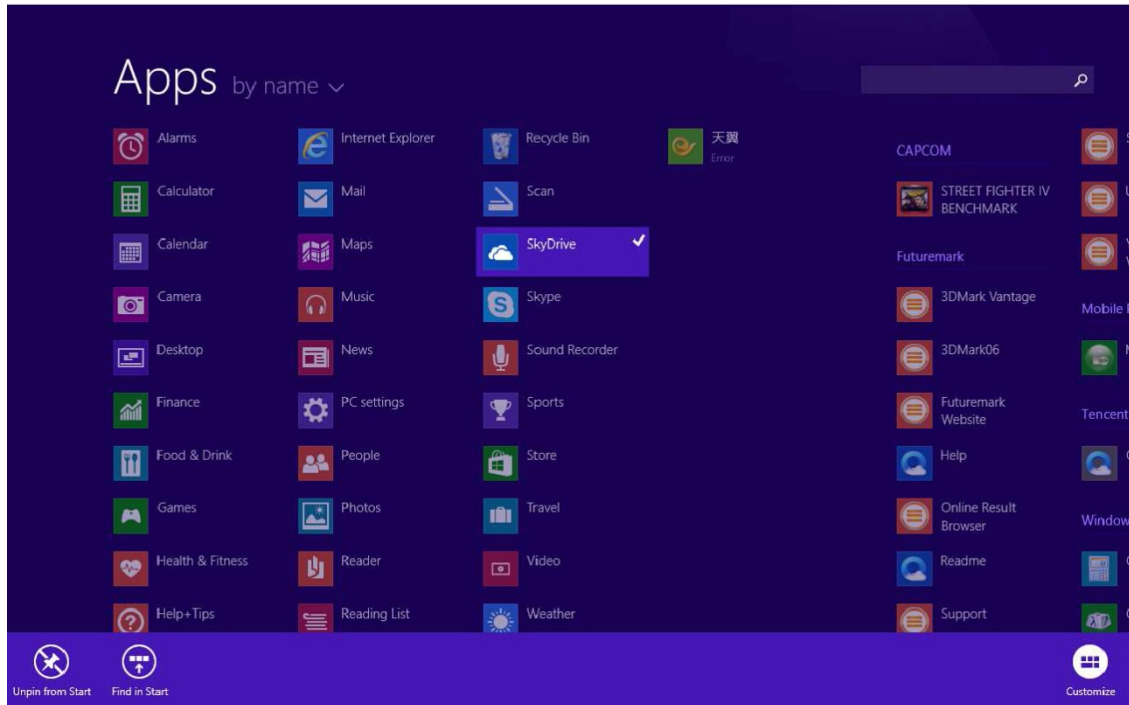


Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.



4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start,

 Device, Setup, Share, and Search Program.

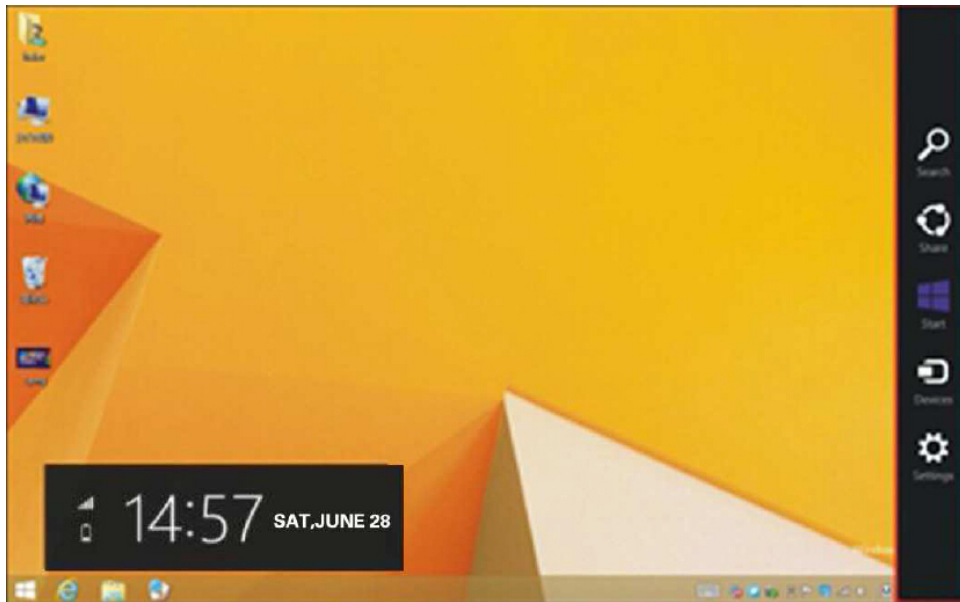

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the Tablet PC.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.



Can let you read, write and share files, connect external screen or printer with the device connected to the Tablet PC.



 
Can let you set up the Table PC.

Search menu



Device Menu

Share menu

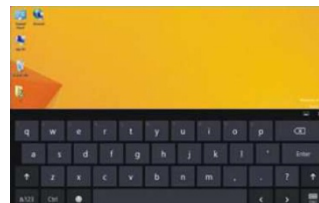

Set up Menu




5. Dual-Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.



 
(Figure 1)

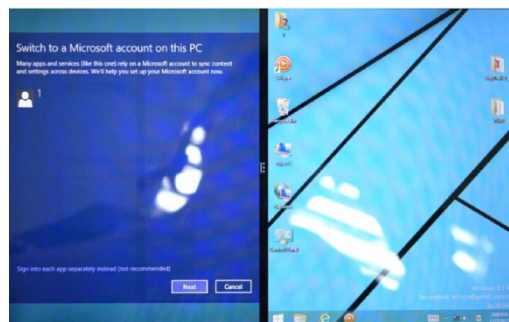

(Figure 2)


IV. Basic Operations

 1. Dormancy, restart and power off

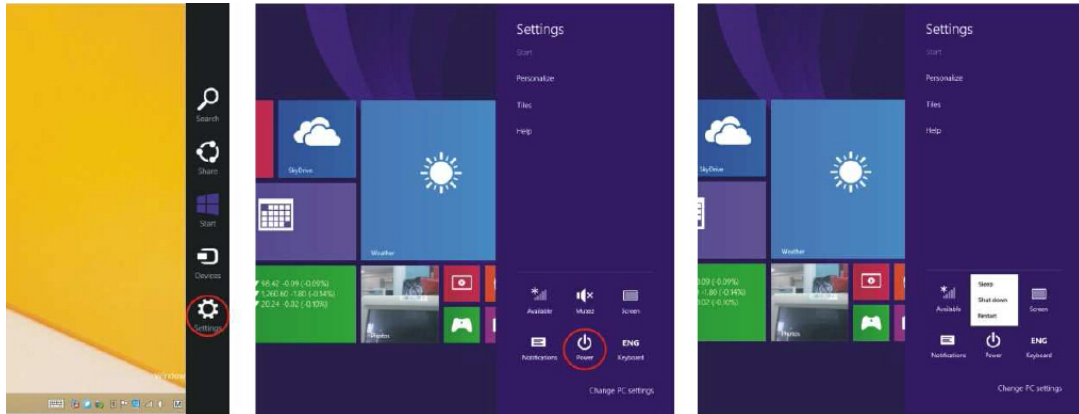

2. Security Management

 User and password setup

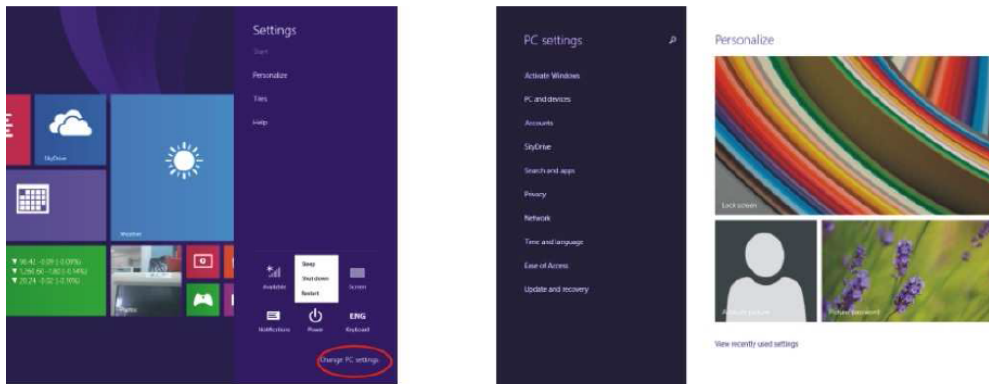

Method for quick setup:

Click the “Setup” button in “Charm” setup, and select “Change computer setup”. Select “User” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

V. Media Function



1. In the star screen, click camera application procedure , enter into camera

Operation of camera



Operation of camera

- ①. Camera Roll: to check the photo or video you are shoot
- ②. Change camera: change front and back camera
- ③. Timer: you can choose 3 second, 10 second, or off. Its support to take photo by time-lapse
- ④. Exposure: adjustment exposure
- ⑤. Video shooting
- ⑥. Click it to take photo

2. Browser

In case of Wi-Fi internet is connected well click IE browser

Type the website you want to visit then you can enjoy the internet browser

Browser address bar: <http://www.msn.com/?ocid=iehp>

msn | bing | web search | Sign in

THE RETURNED

BASED ON THE INTERNATIONAL EMMY AWARD-WINNING SERIES
new series MARCH 9 10/9c
FOLLOWING BATES MOTEL
A&E BE ORIGINAL

SHENZHEN / 63°F | NEWS | ENTERTAINMENT | SPORTS | MONEY | LIFESTYLE | HEALTH & FITNESS | FOOD & DRINK | TRAVEL | AUTOS | VIDEO

20 tips for saving money in your 20s
GoBankingRates

Star recruit decommits from Oklahoma over racist video
Scout.com

A pilot, a missing plane and a ring returned after 70 years
Reuters

An alleged murder mystery shocks the dog show world

The Average American Retires at This Age. Will You?

6:01 2015/2/8

VI. Specification

Specifications:	
Product	7" Intel Quad Core Table With Windows 8.1
Processor	Intel Baytrail-T 1.8Ghz(Quad Core)(Z3735G)
Operating System	Windows 8.1 Preloaded
Memory	16 GB Built-In Memory
Expansion	microSD Card Slot Built-in(Support Max Upto 64GB)
Display Size	7" 1024×600 Screen
Resolution	Display 1024×600 dpi(High Resolution)
RAM Memory	1GB DDR3 Built-in(eMMC Fast Memory)For Faster Apps Run
Screen	7" Capacitive Multi-Touch Super Sensitive Screen
WiFi	IEEE 802.11 b/g/n
USB	Micro USB 2.0 Port For USB Drives&Charging
Bluetooth	Built-in Latest Bluetooth V4.0 EDR
Office	MS Office 365 Personal(Word,Excel,PowerPoint,OneNote&Outlook for 1 Year
Audio Output Jack	3.5mm Headphone Jack
Dual Camera	Back 2.0M Pixels&Front 0.3M Pixels
Speaker/Mic	Built-in Stereo Speaker&Micophone
G-Sensor	360°Gravity Induction For All side Easy View
Flash Player/Language	Support Flash Player 10.2&Above/Support Multiple Language
Power Adapter	Power Adapter AC100-240V(DC 5V,2A),USB Charge Capable
Battery	Rechargeable Li-ion Polymer Big Capacity Battery 2800 mAh/3.7V mah
Playback/Standby	Music:Up to 8 Hrs(Depends On Vol Select)
	Video:Up to 4 Hrs(Depends On Brightness Select)
	Web Browsing:Up To 5Hrs(Depends On Wi-Fi Signals)
Audio Files	WAV,MP3,MP2,AAC,AMR-NB,AMR-WB,MIDI,Vorbis,APE)
Video Files	Support 1080P,MEPG 1/2/4 H.263/H.264,RMVB,WMV/VC-1,MVC,AVS,MJPEG
Photo Files	JPEG,BMP,GIF,PNG(Support Upto 2592×1944 dpi pics size

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.