USB2.0 XDRUM / STICK

Model : HSD329TN





Hanbit Electronics Co., Ltd http://www.hbe.co.kr

Contents

1.	Package Contains	 Page 3
2,	Locations and Function	 Page 3
3,	XDRUM N Stick	 Page 4
	* Key lock	 Page 6
4,	Windows98 Install	 Page 7
5,	Utility program	 Page 9
	* Password Set and Change	 Page 11
	* Boot Up function	 Page 13
6,	USB2.0 XDRUM // Stick	 Page 16
7,	Important Notice	 Page 17
8,	A/S and Cautions	 Page 18
9.	Guarantee	 Page 19



How to Use the USB2.0 XDRUM N Stick

You can use the USB2.0 XDRUM N Stick right away simply by inserting it in the USB port of your PC. (WindowsME/2000/XP and beyond, excluding Windows98/SE, will automatically recognize the USB2.0 XDRUM N Stick) For users with Windows98/SE O/S, the Windows98/SE driver must first be installed. Please refer to page 7 for driver installation. Should you wish to use the security or partition functions, install the USB2.0

Should you wish to use the security or partition functions, install the USB2.0 XDRUM N Stick.EXE program. Please refer to page 9.

For more information about USB, visit http://www.usb.org.faq/.

■ How to Use the USB2.0 XDRUM N Stick with Windows

When you insert the USB2.0 XDRUM N Stick in your USB port, Windows will automatically



recognize it as a "portable storage device" and designate the drive accordingly. Go to "My Computer", and the [portable disk] icon will appear.

When the [safe hardware removal] icon is displayed on the [task bar], you can double-click it to remove the device safely.

000	🔇 🕏 🐌 12:31 PM
	1

To confirm whether the device is installed properly, choose "Start-> Settings->

Control Panel-> System-> Hardware", then double-click on the device manager to display the [Universal Serial Bus] icon. Double-click that icon to see if the "USB mass storage device" is installed.



It is recommended to use USB2.0 XDRUM N Stick compatibly with "Hi-Speed USB 2.0". If you connect the USB2.0 XDRUM N Stick to a



Safely Remove Hardware

"non Hi-Speed USB 2.0 Hub", Windows will display a warning message as shown below. You may use the device without changing any settings, but reading/writing speed will slow down.



Rev.5.0, 2003-09-03

www.hbe.co.kr

2

Note: Whenever you remove a device without executing safe removal, a warning message that the "computer may stop responding, or you may lose data" will be displayed. Do not remove the device when the LED is flashing since this indicates that reading or writing is active. Remove the device safely after the LED turns off.

👂 Unsa	fe Removal of Device			<u>?</u> ×
To safe	You have unplugged or eje Unplugging or ejecting dev often cause your computer ly unplug or eject any of the the Castol Revel to sten b	cted a device witho ices without first stop to crash and lose va ollowing devices, firs	ut stopping it. iping them ca aluable data. it use the Har	in rdware
Ce US	B Mass Storage Device	e device.		_
Ge	neric volume			
If you fr on the t this opti	equently need to unplug this askbar to quickly unplug or e on, check the following:	device, Windows ca ject your device. If y	n give you ar ou would like	to use
🔽 Sho	w Unplug/Eject jcon on the	askbar.		
		Į.		
Ŋ		3	2:01 PM	

Write-Protect Function

- Write-protect tab is located at the lower part of XDRUM N Stick.
- Open (when tab is slid up): you can freely read and write.
- Locked (when tab is pushed down): you can read, but cannot write.

Note: If you change the setting of the tab when the device is not connected to the computer, it may cause the loss of data.

How to Install the USB2.0 XDRUM N Stick with Windows98

1) Double-click and execute "XDRUM N Stick Win98 Driver2.0. EXE" from the CD, and then choose "Next" when the "Installation Manager" file appears as follows.

 When given options to make a new directory during installation, choose "Yes" and click "Next".



After the UBS XDRUM N
 Stick is installed, click
 "OK" to finish installation.



4) When the UBS N Stick is connected to a UBS port, the computer will automatically locate software for the new device. Simply find the drive where your UBS N Stick is connected and use it.



How to Use the XDRUM N Stick Utility Program

The XDRUM N Stick provides functions such as password protection, partitioning, and booting setup alteration.

How to Install the XDRUM N Stick Utility Program

Follow the installation guide:

- Execute "XDRUM N Stick.EXE" from the driver CD enclosed with the product.
- When the Installation Wizard appears, click [Next>].
- 3. Installation Wizard begins to copy and install required files and programs. Click "Yes", and then "Next".



4. Clicking on "OK", to completes installation of the utility program.

5. Check if the [XDRUM N Stick] folder is displayed in the [program] folder of the [Start] menu.



Note: When the "XDRUM N Stick" is inserted into the USB port, a key-shaped program execution icon will appear in the lower right corner of the startup screen. Click that icon to execute the utility program.



How to Use the XDRUM N Stick Utility Program

Set/Check Password

The XDRUM N Stick allows the setting or alteration of a [password]. In order to set a password for the first time, choose "resize" as displayed in the following picture. If a password is already set, a message will appear advising you to enter that password. If you want to alter the password, follow this procedure.

1. Double-click the key-shaped icon on the tray bar in the lower right corner of the startup screen to execute the XDRUM N Stick utility.



2. To enter secure mode, select "Public Area + Security Area", enter the password you wish to use in the "New Password" box, then click "OK".

Function Utility	Function Utility
Raciza	Resize
© Public Area Only	Login Public Area Security Area
Logout	Logott New Passward:
Change Password	Change Pessword Hint:

- When you connect the "XDRUM N Stick" with a password set, a key shape will be displayed in red on the tray bar.
- 4. To use the XDRUM N Stick after setting the password, enter the appropriate password in the "password" box, and clock "OK". (To quit using secure mode, click "logout", then "OK", to go to the public area.)

Change Password

A function of altering the XDRUM N Stick password. First, enter the existing password, and then a new one. For confirmation, enter the new password two times.



Function	Utility
Resize	Welcome to USB Mass Storage Disk
Login	Password: Hint
Logout	🗖 Don't pop up this window automatically next time
Change Password	

unction	Utility	
Resize	Current Password	
Login	New Password : Confirm Password:	
Logout	Password Hint:	
Change Password		- Andrew Contraction

How to Use the Boot Up Function [Copy System File]

This function is used to enable you to boot your computer with the USB disk. Choose [Utility], and the following window will pop up. USB Flash Disk supports USB FDD, ZIP or HDD booting functions. However, you can use this function only when your PC's mainboard supports it.

Utility Fun	ction	
BootUp		
	C USB HDD	O USB ZIP

How to Make a Boot Up Floppy for Win XP [Copy System File]

1. Click 3.5 Floppy disk (A:) in the Win XP "My Computer" menu, choose "Format", then "Make DOS Starting Disk", and click "Start".

Format 3½ Floppy (A:)	? 🔀
Capacity:	
3.5", 1.44MB, 512 bytes/sector	×
File system	
FAT	1
Allocation unit size	
Default allocation size	~
Volume label	
Format options Quick Format Enable Compression V Greate an MS-DOS startup disk	ose

2. Create a new XP_Bootable folder within the C Drive (System Disk), copy all files from 3.5 Floppy disk (A:), and paste them in the new XP_Bootable folder.

Note: To copy the system file from 3.5 Floppy disk (A:), set all files and system file as "view" using folder options as the following picture shows, and then click "OK".



Ider Options			?
General View	File Types		
- Folder views			
1000	You can apply the view (such as Details or Tiles) tha	at
	you are using for this fold	er to all folders.	
	Apply to All Folders	Reset All Folders	
Advanced sett	tings:		
Autor	matically search for netwo	ork folders and printers	~
🗹 Displ	ay file size information in f	older tips	
Displ	lay simple folder view in E	plorer's Folders list	
Dien	ay the contents of system law the full nath in the add	folders ress bar	
Displ	lay the full path in the title	bar	
Don	iot cache thumbnails		
Hidd	en files and folders		
O C	Do not show hidden files a	ind folders	
	show hidden mes and rold	ers huppes	
Hide	protected operation syste	m files (Becommended)	~
	protococo op		-
		Bestore Default	1
			_

3. Choose the [Utility] index from the XDRUM N Stick utility, and click "USB ZIP", then "OK".

XDRUM N	Stick 2.3	
Utility	Function	
BootUp		
	C USB HDD C USB ZIP	
		Ball F.
Hanbit	HANBIT Electronics Co., Ltd. OK Cance www.hbe.co.kr	

- Note: This function may not be supported depending on the O/S that you use. When your O/S does not support this function, utility index window wont be activated. (available only on Win98/XP)
- *Note:* To use this booting function on Win XP, BootDisk folder should be located at C Drive.
- Note: This function is not supported in Windows ME or Windows 2000.
- Note: Not all computers support the USB Flash Disk. When your computer does not support it, contact the PC or mainboard manufacturer. In this case, you should set a proper [boot sequence] compatible with your USB Flash Drive in the mainboard BIOS Setup.

USB XDRUM N Stick Specification

Capacity	16, 32, 64, 128, 256, 512MB
Read Performance	56Mbit/sec(Depend on PC mainboard type)
Write Performance	48Mbit/sec(Depend on PC mainboard type)
Available PC	IBM PC/MacPC System with USB Port
Available O/S	Windows 98 / ME / 2000 / XP / Linux 2.4 or higher, Mac OS 9.0 or Higher
Drive Support	Windows98/SE Install driver
Power Supply	USB power supply
LED 1 (LED State)	LED fast mode for Transmitting and Receiving data
LED 2 (LED State)	Power State
USB Interface	USB2.0 and USB1.1 Compatible
Suspend Current	< 350µA (Max :<500µA)
Operating Current	< 31mA
Operating Temperature	0°C to 70°C
Storage Temperature	−10°C to 125°C
Dimention	18.5(W) × 42.55(H) × 4(T)mm(Without CAP)
Security Function and 6type of Software	GUI software installed Password function & E-mail, PC-Lock, File-Lock, AutoRun, Time-Lock Soft Ware supported
Booting Disk Function	Usable as Booting Disk
	•

Rev.5.0, 2003-09-03



X Customer Service

- Website : http://www.hbe.co.kr / e-mail : support@hbe.co.kr
- Address: 414-5 Woncheon-Dong, Paldal-Gu, Suwon-City, Kyoungki-Do, Korea Hanbit Electronics Customer Service team
- Telephone: +82 31 218 1900 / Fax: +82 31 217 1926

★ Caution

- To use your Data safely, Please make back-up file. Because NAND Flash memory chip has a feature which can write data within 300,000 times.
- All the information in this document is subject to change without prior notice. The manufacturer does not make any representations or any warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any other commercial damage, including but not limited to special, incidenal, consequential, or other damages.
- No part of this document may be reproduced or transmitted in any form by any means without the express written permission of the manufacturer.
- All brand names and product names used in this document are trademarks or registered trademarks of their respective holders.

Regulatory Information

FCC Compliance Statement

Caution : Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different
 from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) this device may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may cause undesired operation.

CE Marking and European Union Compliance

Products intended for sale within the European Union are marked with the CE Mark which indicates compliance to applicable Directives and European Normes (EN), as follows. Amendments to these Directives or

Ens are included:

Applicable Directives

Electromagnetic Compatibility Directive 89/336/EEC

Applicable Standards

 EN 55022:1998, Limits and Methods of Measurement of Radio Interference Characteristics of

Information technology Equipment

EN 55024:1998: Information technology equipment-Immunity characteristics Limits and methods

of measurement.

	Customer	Card	1Voor		
Product Name:	Model:		Limited		
Purchasing Data:	Custor	ner:	Warrenty		
E-mail:	Teleph	one:	1111		
Address:					
	Warranty C	Card			
The product purchased is warr and conform to the published s Malfunction in the conditions a	anted and tested to be free f pecifications. Hanbit Electro s below.	rom defects in material and onics Co.,Ltd will offer a s	nd Workmanship service for product		
 Limited Quality Warranty For a period of one year fit HANBIT Elec. Co., Ltd will occurred by improper word The target of no compens The target of no compens The target of no compens The strate the tectronics Co., La a mistake, repair and rebu Duration of no compens	 Limited Quality Warranty For a period of one year from the date of purchase. HANBIT Elec. Co., Ltd will repair or replace your product with a comparable product for an defect occurred by improper workmanship or materials within the warranty period. The target of no compensation service: The output proved not to pass a period of one year from the date of purchase. Hanbit Electronics Co., Ltd will repair get the output of the pass a period of one year from the date of purchase. Hanbit Electronics Co., Ltd will charge the cost for maturity on the service; The target of no compensation service: In the output of the pass of the pass of the pass of the pass of the provide the pass of the pa				
 Compensation / No compensation Service No compensation Service A. Content of compensation for damage (within 1 year from purchasing date) : 					
※ Note : Exhibit the customer	card in order to get the serv	ice, This card is not reiss	ued again.		
HANBtT Electronics Co.,Ltd.	Tel)+82-31-218-1900	Fax)+82-31-217-1926	URL: www.hbe.co.kr		

	(5
		•
DECLARATION OF CONFORMITY		
With regard to the essential requirement of The Council Directive 89/336/EEC		
We,	HANBit Electronics Co., Ltd.	
of	414-5, Woncheon-Dong, Paldal-Gu, Suwon-City, Kyoungki-Do, Korea	
declare under our role reeponsibility that the product -		
Product	: USB Storage Device	
Madal		
Model	: H3D3291N	
To which this declaration relates is in conformity with the following standards or other normative		
Documents;		
EMC Specification: EX 55022:1008 (Class D)		
	IT Equipment Immunity EN 55022-1998 (class B)	
	rr Equipment minumey Exc.55	524.1996
Signed on behalf of HANBit Electronics Co., Ltd.		
	Charlie Jung	
	(name)	-
	Senior Managing Director	
	(title)	_
	1 1 1	
	Charlie Thy	
	(instance Conductor Instance)	November, 03, 2003
	(signature of authorized person)	(date)

Company Registered



HANBiT Electronics Co.,Ltd

Address : 414-5 Woncheon-Dong, Paldal-Gu, Suwon-City, Kyungki-Do, Korea (ZIP 442-823) Telephone : +82 (31) - 218 - 1900 / Facsimile : +82 (31) - 217 -1926 E-mail : support@hbe.co.kr URL : www.hbe.co.kr