



	Troubleshooting	Troubleshooting
eiving antenna.		
ween the equipment and receiver. a n outlet on a circuit different from that ected.	1. The headphones is not comfortable to wear, feel pain , easy to fall ?	5.Frequent disconnection and noise
perienced radio/TV technician for help.	 Please choose the suitable earbuds . 	Please check if the headphones or the device already low power;
	 Make sure the left and right earbuds assemble correctly. 	 Ensure the distance between your device and the headphones
expressly approved by the party		is within 33 feet/10 meters.
ould void the user's authority to operate	2.Can not turn the headphones ON	 Ensure nothing is blocking the signal between your device and
	 Please make sure the headphones are charged. If not , 	your Bluetooth headphones.
rt 15 of the FCC Rules. Operation is subject	charge them, and try again.	
s:		6.The headphones cannot reconnect automatically
harmful interference, and	3.Can not connect the headphones to your device	Ensure the distance between your device and the headphones
y interference received,	 Make sure the headphones are fully charged. 	is within 33 feet/10 meters.
ay cause undesired operation.	 Go to your device's Bluetooth menu and delete all saved 	Please simultaneously long press button "volume +" and "volume-" until the
	devices from the list by clicking "Forget this device".	red and blue light flash 3 times alternately, then reconnect the headphones.
	Turn OFF bluetooth, then turn ON.	
	 Enter the headphones into the pairing mode and follow 	7. Can not charge the headphones
	instructions for connecting.	 It takes about 20 minutes for charging to be activated
		to realize normal charging;
	4.Do not have sound	The internal components of the headphones or the phone
	 Please check if the headphones connected with the device, 	have been damaged, we advise to replace the other device.
	if connected, adjusting volume of device or headphones volume.	
09	10	11
	· ·	