

DARK GOLD PRINT


PMS 873 C C:20.27, M:38.97, Y: 82.46, K:23




DARK GRAY PRINT

PMS 447 C C:0, M:0, Y:0, K:85


QUICK START GUIDE: SIDE A (155 x 620 mm folded in 4 accordion style) PAPER: SMOOTH MEDIUM WEIGHT CARDSTOCK

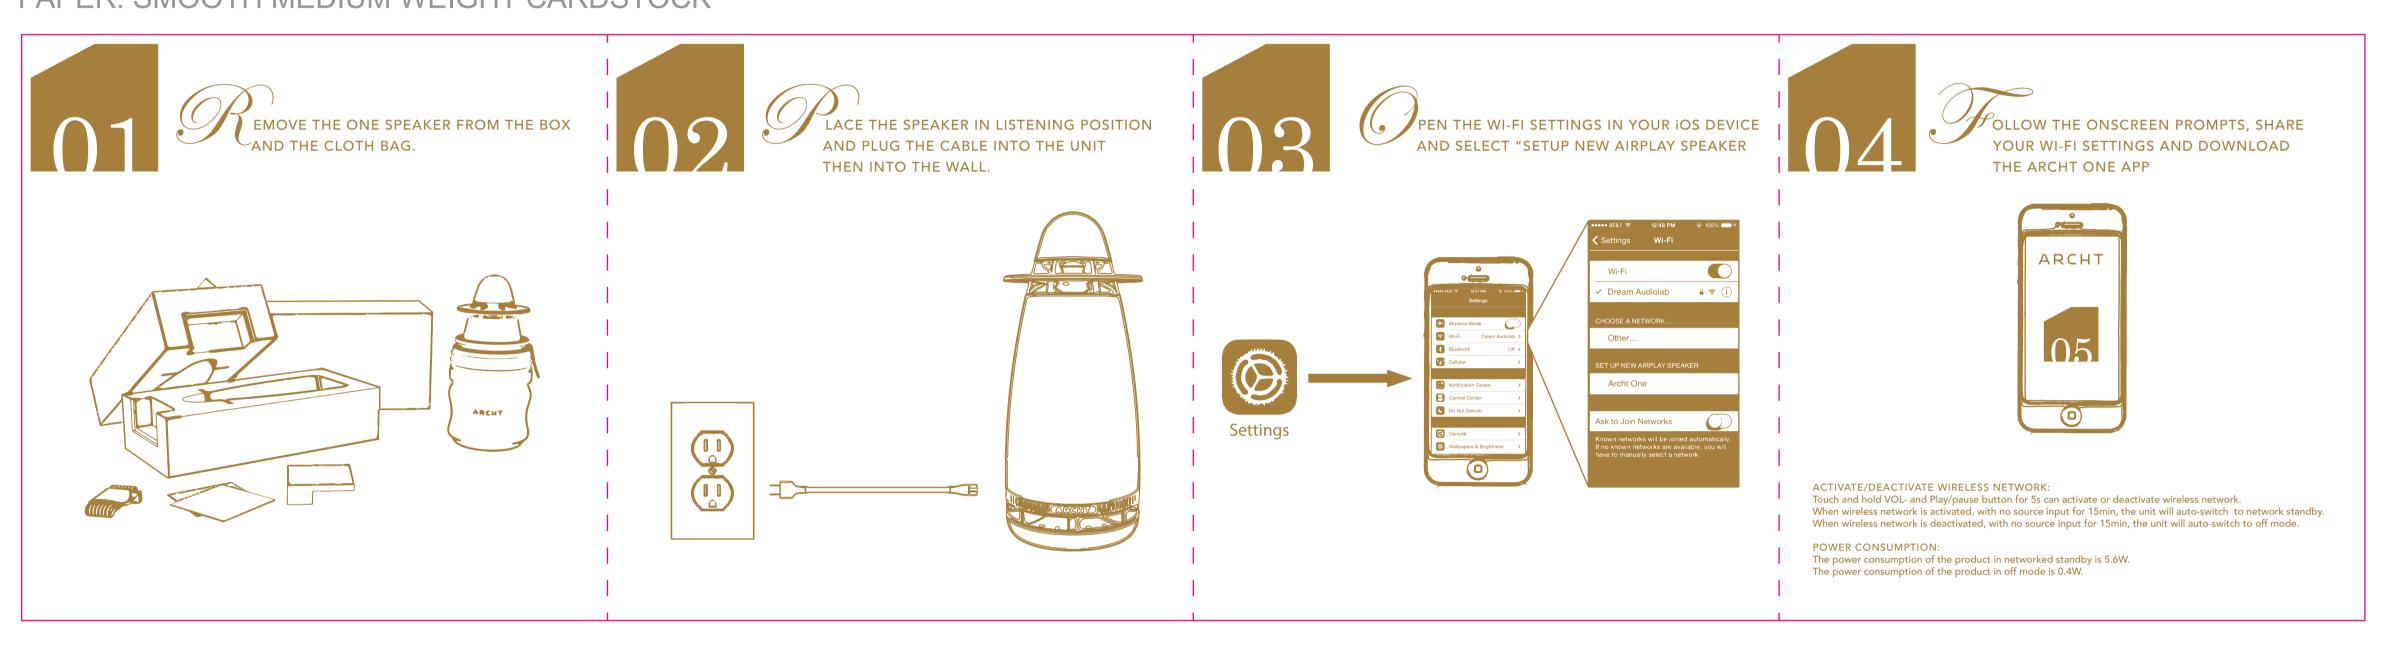


QUICK START GUIDE: SIDE B (155 x 620 mm folded in 4 accordion style) PAPER: SMOOTH MEDIUM WEIGHT CARDSTOCK

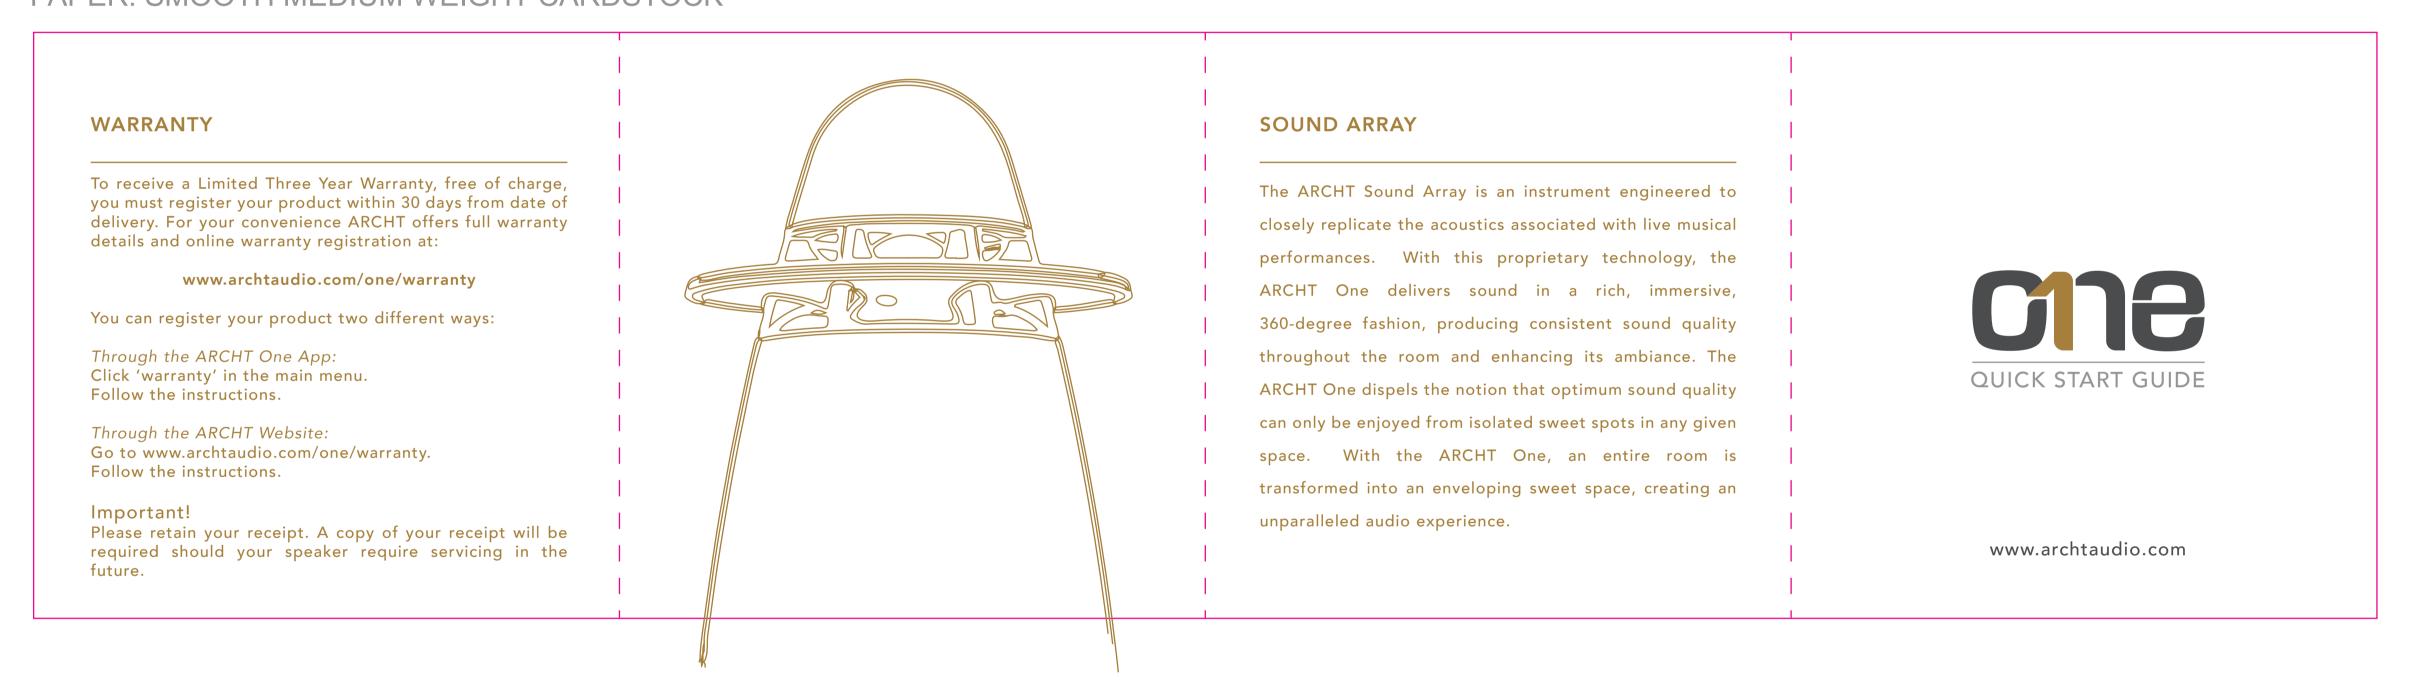

MARKINGS: SIDE A (155 x 310 mm folded in 2) PAPER: SMOOTH WHITE PAPER

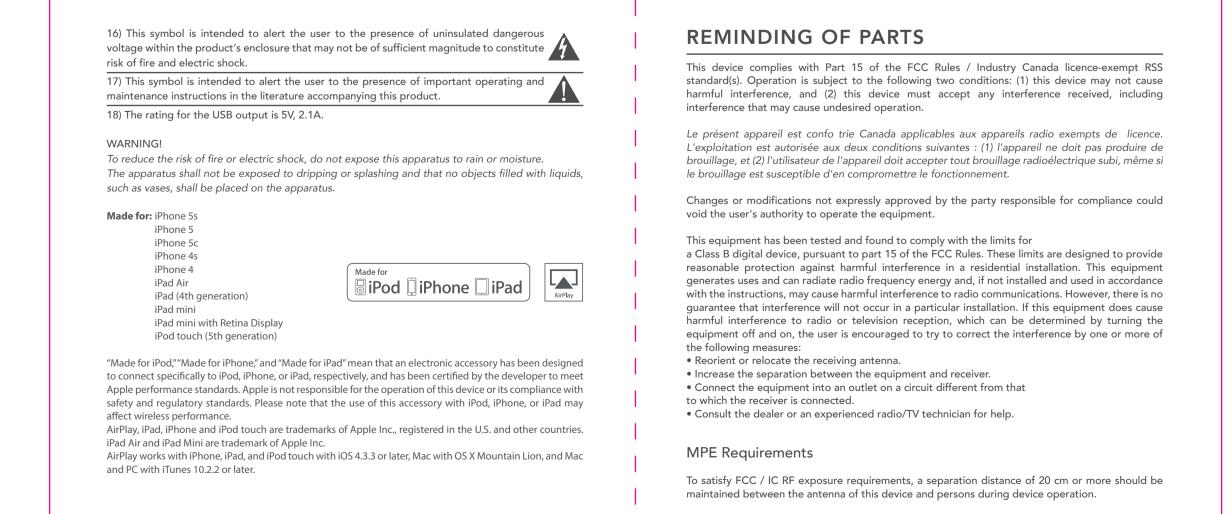

MARKINGS: SIDE B (155 x 310 mm folded in 2) PAPER: SMOOTH WHITE PAPER

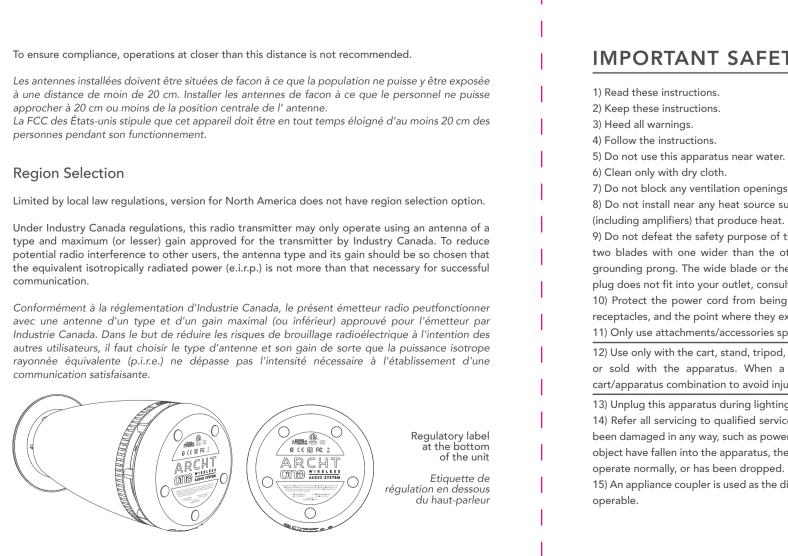

IMPORTANT SAFETY INFORMATION

5) Do not use this apparatus near water. 7) Do not block any ventilation openings. Install in accordance with manufacturer's instructions. 8) Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience

receptacles, and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer. 12) Use only with the cart, stand, tripod, bracked, or table specified by the manufacturer,

or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 13) Unplug this apparatus during lighting storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cold or plug is damaged, liquid has been spilled or object have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15) An appliance coupler is used as the disconnect device, the disconnect device shall remain readily