

Item
69285

HIGH-VOLUME 12VDC AIR COMPRESSOR START UP GUIDE



Failure to follow proper operating sequence will result in blown fuse or product malfunction.

Turn unit on *before* connecting to tire valve.
This will prevent blowing of fuse.

CAUTION

To prevent compressor damage:
IF COMPRESSOR SHUTS OFF
AUTOMATICALLY, allow to cool for
30 minutes before restarting.
Compressor shuts off to prevent
overheating damage.