

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.



1.5 cu. ft. Digital Floor Safe



Batteries sold separately.

To ensure security of your safe, Bunker Hill Security does NOT provide replacement keys.

Visit our website at: <http://www.harborfreight.com>

REV 14h

Email our technical support at: productsupport@harborfreight.com

ITEM 91006

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2004 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

Overall Dimensions	22.82"H x 14.17"W x 13"D
Inside Dimensions	18.25"H x 12.75"W x 11.25"D
Capacity	1.5 cubic foot
Construction	9 ga. steel plate housing 6 ga. steel plate door frame 5 ga. steel door
Keypad Features	0 - 9, A & B key code set Green LED code "OPEN" Red LED code "Battery Change" Yellow LED code "Change Accepted"
Emergency Keys	2 emergency override keys
Interior	Padded floor Adjustable shelf
Placement, Mounting	4 Removable wheels; Can be wall mounted
Finish	Dark gray powder coat
Weight	76.5 lbs.
Batteries	4 "C"

IMPORTANT SAFETY INFORMATION

Installation Precautions

1. Verify that installation surface has no hidden utility lines before drilling or driving screws.
2. Wear ANSI-approved safety goggles during installation.
3. Mount securely before use.
4. Install only according to these instructions. Improper installation can create hazards.
5. Keep installation area clean and well lit.
6. Keep bystanders out of the area during installation.
7. Do not install when tired or when under the influence of alcohol, drugs or medication.
8. At least two people are needed to move this product.
9. Place the Safe on correct surface. Only use this Safe on a stable, level, clean and dry surface that is capable of sustaining the load.

Use Precautions

1. **Keep closed and locked whenever unattended. RISK OF CHILD ENTRAPMENT AND SUFFOCATION. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children.**
2. Keep clear of door when closing.
3. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.
6. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
7. Do not store Keys inside of the Safe. **Place the emergency keys in a location outside of the safe making sure they are in a secure location that you can find.**

8. **WARNING:** The brass components of this product contain lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. (California Health & Safety Code § 25249.5, *et seq.*)

9. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

10. The Safe is not fireproof.

NOTE: Harbor Freight Tools is not responsible for the loss of any property stored within this safe due to theft, fire, or any other circumstance.

Installation Instructions




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

This safe may be used as a roll-about with the included casters, or may be bolted to the wall for more permanent installation.

Wheel Assembly:

1. Place the Safe on its side for easy access to the bottom of the Safe.
2. Assemble each wheel using the included wheel axles.
3. Secure each wheel in place using Cotter Pin.

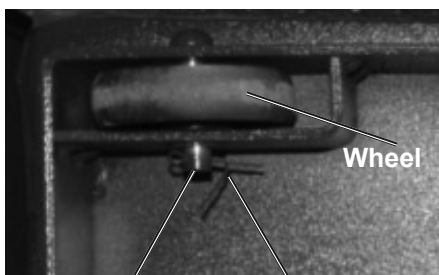

4. The Safe may be bolted to a wall or a floor to deter theft and prevent tipping. There are mounting holes in the back wall and bottom of the safe. See Figure A below.

Mounting Holes

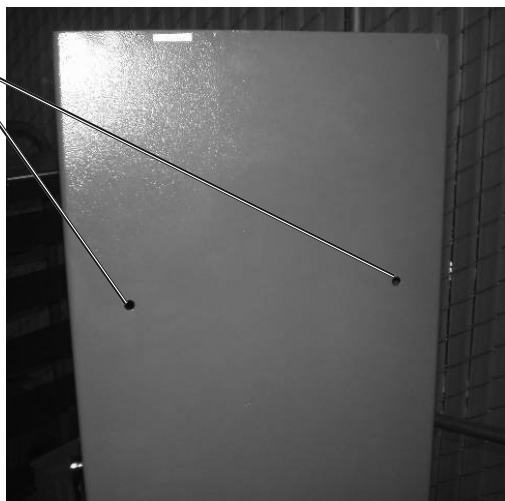


Figure A: Rear Mounting Hole Locations

5. Use Anchor Bolts, or seek a bonded professional for installation of the Safe into cement.

Note: For floor or wall mounting, use bolts of a suitable size (not included) to bolt into wall studs or floor joists.

6. Using the back of or bottom of the Safe as a template, mark the location of the mounting holes on the concrete surface using a pencil or other marker.
7. Move the Safe aside, and drill four suitable pilot holes in the mounting surface. Make certain that the drilling path is clear and free of obstacles such as wires, cables and electrical lines. Drill holes should be the diameter of the Anchor Bolt sleeves.
8. Insert the Anchor Bolts into each drilled hole and tap Bolts into concrete. Remove washer and nut from each bolt. The Safe now has to be lifted into position to fit over the four anchor bolts. Because of the heavy weight of the Safe, this task should only be done by several capable workmen. With the Safe in position, add washers and nuts to Anchor Bolts. By tightening the nuts in place, the sleeve around each bolt will expand, and secure each bolt into the concrete to secure the Safe in place.

Operation



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Opening with Code

Note: The Safe comes preset with a code of **1 5 9**

1. Press the numbers **1 5 9** on the Key Pad, then press either the **A** or **B** Key.

Note: The Yellow Light will illuminate each time a key is pressed. If it does not, open the safe with the key, see below, and replace the batteries, see page 7.

2. Once the Green light is on:
 - a. turn the Knob clockwise,
 - b. turn the Handle clockwise, and
 - c. pull the Door open.

Note: The Knob and Handle remain unlocked only for several seconds after inputting numbers.

Note: Three wrong entries will sound an alarm and disable the Key Pad for **20 seconds**.

Three additional wrong entries will sound an alarm and disable the Key Pad for **5 minutes**.

To stop the alarm: Open the safe with the key and temporarily remove a battery.

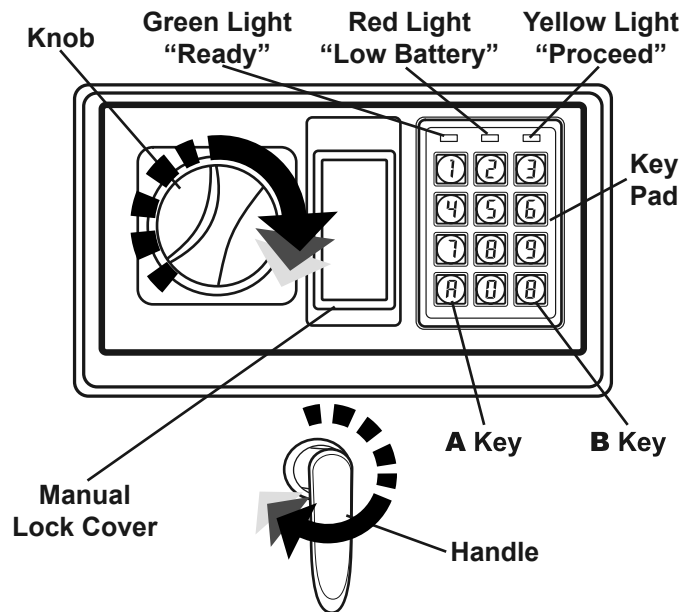


Figure B: Key Pad Controls

Opening with Key

Note: The Key is used to open the safe.
DO NOT STORE KEYS IN SAFE!

1. Gently remove the Manual Lock Cover.
2. Insert Key into the lock and turn counterclockwise. Then:
 - a. turn the Knob clockwise,
 - b. turn the Handle clockwise, and
 - c. pull the Door open.

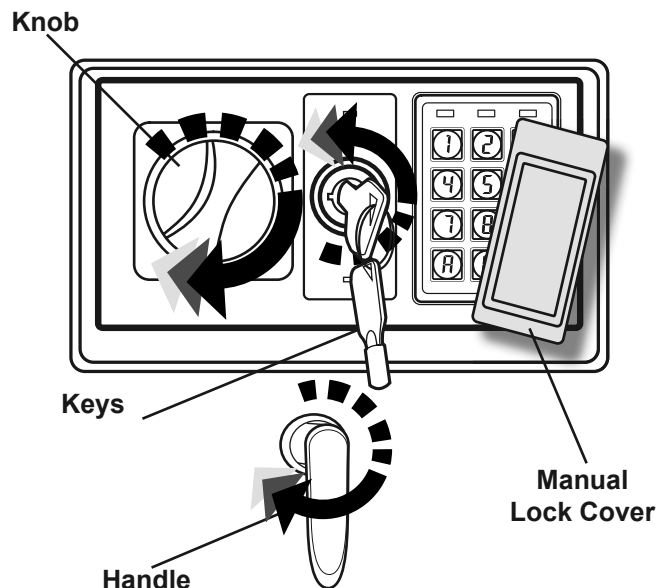


Figure C: Manual Lock

Changing the Code

Note: The Safe comes preset with a code of **1 5 9**

1. Follow the instructions for opening the Safe to open the door.
2. Make sure that the Key is available before changing the code.
3. **Keep door open during the entire procedure of changing the code.**
On the inside of the Door near the hinge, there is the small, red, Code Reset Button. **See Figure D.**

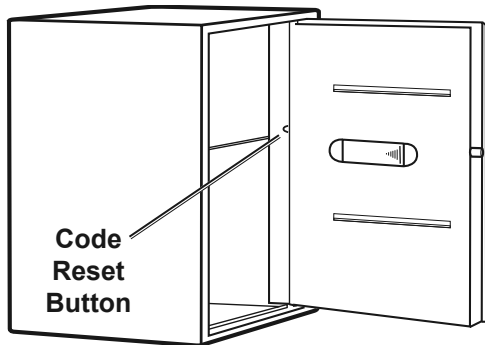


Figure D: Code Reset Button

4. **USER CODE:**
 - a. Press the Code Reset Button until the Yellow Light on the Front Control Panel lights up.
 - b. Input your new Code (3 to 8 digits) into the Key Pad, followed by either the **A** or **B** Key.
 - c. The Safe will beep twice to confirm that the Code has been changed.

Important: If the Safe beeps three times, the code has not been accepted. Repeat the steps above.

- d. **Leave the door open until the code has been tested,** see below.

5. **MASTER CODE:**

- a. Press **0 0** on the Key Pad and press the Code Reset Button until the Yellow Light on the Front Control Panel lights up.
- b. Input your new Code (3 to 8 digits) into the Key Pad, followed by either the **A** or **B** Key.
- c. The Safe will beep twice to confirm that the Code has been changed.

Important: If the Safe beeps three times, the code has not been accepted. Repeat the steps above.

- d. **Leave the door open until the code has been tested,** see below.

6. With the door still open, **TEST** the new code:

- a. First extend the door lock latch to the locked position by turning Handle counterclockwise and then turning Knob clockwise.
- b. Once the latch is in the locked position, use the new code to open the latch and ensure that it works.

Note: If desired, make a note of the new Code and store it in a safe place.

Closing

⚠ WARNING

**Keep closed and locked whenever unattended.
RISK OF CHILD ENTRAPMENT AND SUFFOCATION.
Check inside before closing.
Do not allow children to play with or near safe.
Keep keys and codes away from children.**

1. Close the door and turn the Handle counterclockwise.
2. Turn the Knob counterclockwise.
3. Pull on the door to make certain it is properly locked.

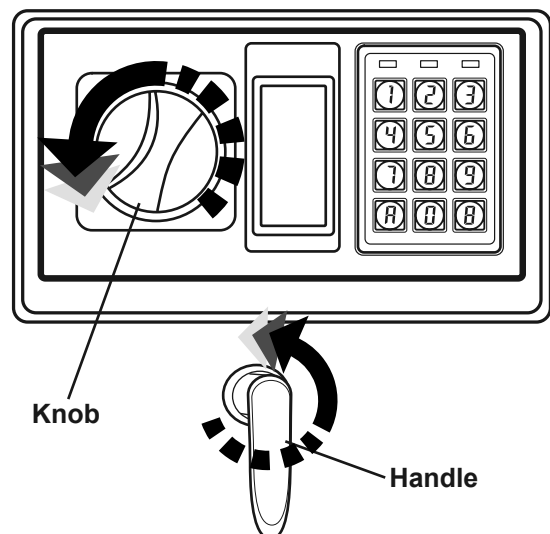


Figure E: Closing

Maintenance



Procedures not specifically explained in this manual must be performed only by a qualified technician.

1. **Low battery power warning:** The red LED light on the keypad will light when the batteries wear down. When you observe the red LED light on, immediately replace the batteries.
2. **Protect the safe from moist or wet conditions.** This may cause electronic fault in the keypad, or corrosion of the steel construction.
3. **Occasionally wipe the safe and keypad** with a soft dry cloth or brush to remove dust.
4. **Occasionally apply a small amount of light oil** or lock lubricant to the mechanical lock mechanism. Be careful not to get any oil or other liquids on or near the electronic mechanism.
5. **Occasionally apply a small amount of oil** to the wheel axles.
6. **Occasionally vacuum or brush dust** from the carpet lining of the safe.



Replacing the Batteries

1. If the Red Light illuminates the Batteries need to be changed.
2. Follow the instructions for opening the Safe.
3. The Battery Compartment is located on the inside of the Door. Gently slide the Battery Cover off the Battery Compartment.
4. Remove used batteries.
- Dispose of them properly or recycle them.
5. Insert four new "C" Batteries. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
6. Reinstall battery cover by placing it low against the Battery Compartment and sliding it into place.

7. After changing the batteries, test the Code and change it as needed before closing the Door.

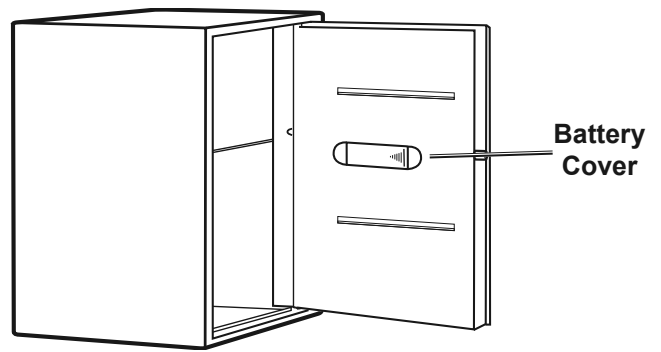


Figure F: Battery Compartment

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



3491 Mission Oaks Blvd. • PO Box 6009 • Camarillo, CA 93011 • 1-888-866-5797