
Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

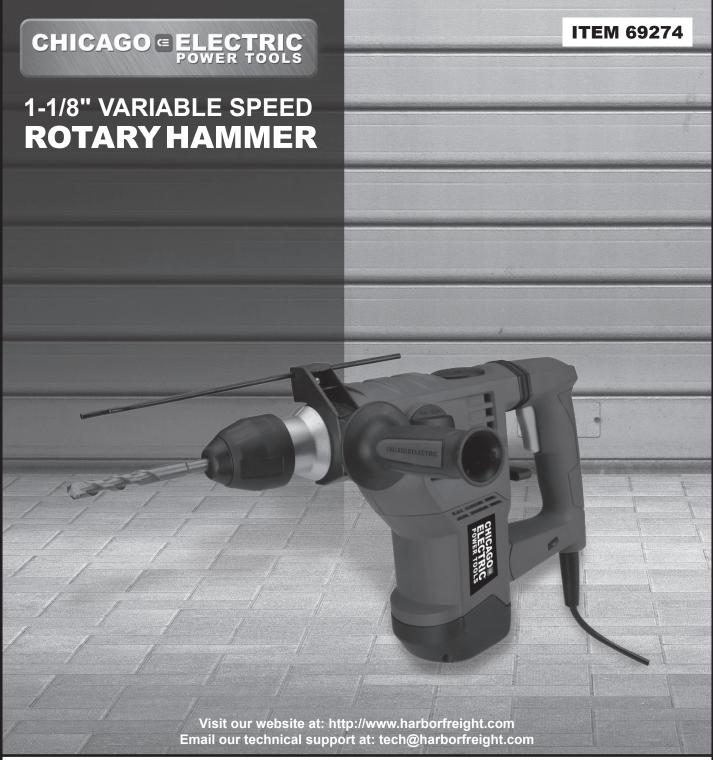

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright[©] 2011 by Harbor Freight Tools[®]. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Table of Contents

Safety	2	Maintenance	11
Specifications		Parts List and Diagram	14
Setup		Warranty	16
Operation	9		

CHICAGO ELECTRIC® POWER TOOLS

WARNING SYMBOLS AND DEFINITIONS			
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.		
	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.		
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.		
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.		
NOTICE CAUTION	Addresses practices not related to personal injury.		

MAINTENANCE

IMPORTANT SAFETY INFORMATION

General Power Tool Safety Warnings

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool.

Work area safety

- Keep work area clean and well lit. 1. Cluttered or dark areas invite accidents.
- 2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- 3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- 1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- 2. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- 3. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- 4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- 5. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- 6. If operating a power tool in a damp location is unavoidable, use a Ground Fault Circuit Interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- 2. Use personal protective equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- 3. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- 4. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- 5. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- 6. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- 7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust-related hazards.
- 8. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.

Power tool use and care

- 1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- 2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- 3. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- 4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. *This will ensure that the safety of the power tool is maintained.*

Rotary Hammer Safety Warnings

- 1. Wear ear protectors with rotary hammers. *Exposure to noise can cause hearing loss.*
- 2. Use auxiliary handles supplied with the tool. *Loss of control can cause personal injury.*
- 3. Hold power tools by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
- Let bit cool before touching, changing or adjusting it. Bits heat up dramatically while in use, and can burn you.
- 5. If the drill bit jams, release the trigger immediately; drill torque can cause injury or break bit.
- 6. Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 7. **Avoid unintentional starting.** Prepare to begin work before turning on the tool.

- 5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. *Many accidents are caused by poorly maintained power tools.*
- 6. **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- 7. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

- 8. Do not lay the tool down until it has come to a complete stop. Moving parts can grab the surface and pull the tool out of your control.
- 9. When using a handheld power tool, maintain a firm grip on the tool with both hands to resist starting torque.
- 10. Do not leave the tool unattended when it is plugged into an electrical outlet. Turn off the tool, and unplug it from its electrical outlet before leaving.
- 11. **This product is not a toy.** Keep it out of reach of children.
- People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. In addition, people with pacemakers should:
 Avoid operating alone.
 - Do not use with power switch locked on.
 - Properly maintain and inspect to avoid electrical shock.

• Any power cord must be properly grounded. Ground Fault Circuit Interrupter (GFCI) should also be implemented – it prevents sustained electrical shock.

Rotary Hammer Safety Warnings (cont.)

- 13. WARNING: Some dust created by power sanding, sawing, grinding, drilling, and other construction activities, contains chemicals known [to the State of California] to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:
 - · Lead from lead-based paints
 - Crystalline silica from bricks and cement or
 - other masonry products

• Arsenic and chromium from

chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

(California Health & Safety Code § 25249.5, et seq.)

Vibration Safety

This tool vibrates during use.

Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

 Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible. 14. WARNING: Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.

(California Health & Safety Code § 25249.5, et seq.)

15. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

- 2. **Do not smoke during use.** Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
- 3. Wear suitable gloves to reduce the vibration effects on the user.
- 4. Use tools with the lowest vibration when there is a choice.
- 5. Include vibration-free periods each day of work.
- 6. Grip tool as lightly as possible (while still keeping safe control of it). Let the tool do the work.
- 7. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.


SAVE THESE INSTRUCTIONS.



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING WIRE CONNECTION:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the tool. Never remove the grounding prong from the plug. Do not use the tool if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.


Grounded Tools: Tools with Three Prong Plugs

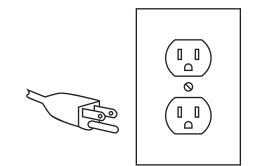

3-Prong Plug and Outlet

- 1. Tools marked with "Grounding Required" have a three wire cord and three prong grounding plug. The plug must be connected to a properly grounded outlet. If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock. (See 3-Prong Plug and Outlet.)
- 2. The grounding prong in the plug is connected through the green wire inside the cord to the grounding system in the tool. The green wire in the cord must be the only wire connected to the tool's grounding system and must never be attached to an electrically "live" terminal. (See 3-Prong Plug and Outlet.)
- The tool must be plugged into an appropriate outlet, properly installed and grounded in accordance with all codes and ordinances. The plug and outlet should look like those in the preceding illustration. (See 3-Prong Plug and Outlet.)

Double Insulated Tools: Tools with Two Prong Plugs

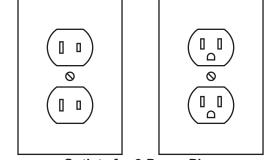

Outlets for 2-Prong Plug

- Tools marked "Double Insulated" do not require grounding. They have a special double insulation system which satisfies OSHA requirements and complies with the applicable standards of Underwriters Laboratories, Inc., the Canadian Standard Association, and the National Electrical Code.
- Double insulated tools may be used in either of the 120 volt outlets shown in the preceding illustration. (See Outlets for 2-Prong Plug.)

Extension Cords

- Grounded tools require a three wire extension cord. Double Insulated tools can use either a two or three wire extension cord.
- As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. (See Table A on page 7.)
- 3. The smaller the gauge number of the wire, the greater the capacity of the cord. For example, a 14 gauge cord can carry a higher current than a 16 gauge cord. (See Table A.)
- 4. When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required. (See Table A.)
- 5. If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size. (See Table A.)
- If you are using an extension cord outdoors, make sure it is marked with the suffix "W-A" ("W" in Canada) to indicate it is acceptable for outdoor use.

- Make sure the extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
- 8. Protect the extension cords from sharp objects, excessive heat, and damp or wet areas.

TABLE A: RECOMMENDED MINIMUM WIREGAUGE FOR EXTENSION CORDS* (120/240 VOLT)					
NAMEPLATE AMPERES	EXTENSION CORD LENGTH				
(at full load)	25 ′	50 ′	75´	100´	150´
0 - 2.0	18	18	18	18	16
2.1 – 3.4	18	18	18	16	14
3.5 – 5.0	18	18	16	14	12
5.1 – 7.0	18	16	14	12	12
7.1 – 12.0	18	14	12	10	-
12.1 – 16.0	14	12	10	-	-
16.1 – 20.0	12	10	-	-	-
* Based on limiting the line voltage drop to five volts at 150% of the rated amperes.					

Symbology

	Double Insulated	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.
	Canadian Standards Association	Read the manual before set-up and/or use.
(UL) V~	Volts Alternating Current	WARNING marking concerning Risk of Hearing Loss. Wear hearing protection.
A	Amperes	WARNING marking concerning Risk of Fire. Do not cover ventilation ducts. Keep flammable objects away.
n ₀ xxxx/min.	No Load Revolutions per Minute (RPM)	WARNING marking concerning Risk of Electric Shock. Properly connect power cord to appropriate outlet.

CHICAGO ELECTRIC POWER TOOLS

Page 7

Specifications

Electrical Rating	120V~ / 60Hz / 10A
Rotational Speed	0-800 RPM
Impact Rate	0-3900 BPM
Wood Capacity	1-1/2" (40 mm)
Concrete Capacity	1-1/4" (32 mm)
Steel Capacity	1/2" (13 mm)
Shank Style	SDS Plus

Note: This tool includes an internal safety clutch that helps prevent tool damage and injury but disengaging the drill function if the bit locks in place.




Setup - Before Use:

Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Release the Trigger and unplug the tool from its electrical outlet before assembling or making any adjustments to the tool.

Note: For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 14.

Functions

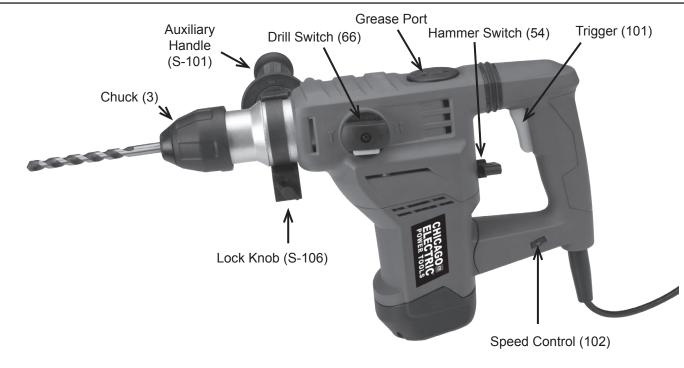

Operating Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Tool Set Up

AWARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Release the Trigger and unplug the tool from its electrical outlet before adjusting the tool or installing accessories.

Adjusting the Auxiliary Handle

The Auxiliary Handle can be placed in a variety of positions.

To adjust the Auxiliary Handle, turn the Handle counterclockwise to loosen the band. Slide the Handle to the desired position then turn the Handle clockwise to secure it in place.

Using the Depth Gauge

The Depth Gauge can be positioned on either side or on the top of the Rotary Hammer. The body of the Hammer will interfere with the Depth Gauge if the Handle is in the bottom position.

- 1. Turn the Lock Knob to open the Depth Gauge Slot and slide the Depth Gauge through the Depth Gauge Slot on the Auxiliary Handle.
- 2. Position the Depth Gauge as needed, then turn the Lock Knob to secure the Depth Gauge in place.

Note: the Drilling depth is the distance from the tip of the drill bit to the tip of the Depth Gauge.

Adjusting the Functions

Adjust the Drill Switch and Hammer Switch before using the Rotary Hammer. To adjust the Drill Switch, press the Release Button on the Drill Switch and rotate the Switch until it clicks in place at one of the two positions. To adjust the Hammer Switch, rotate the Switch until it is horizontal, pointed toward the right or left side of the tool.


<u>CAUTION</u>: Move the Switches only when the Motor is stopped. Attempting to move the Switches while the Motor is engaged will result in abrupt bit rotation and can cause property damage.

<u>CAUTION</u>: When moving the Switches, make sure they click into the desired position. If not actively engaged, a Switch could slip out of position resulting in tool damage.

To Drill: Rotate the Drill Switch to the Drill ON setting. Rotate the Hammer Switch to the Hammer OFF Setting. The Rotary Hammer will revolve when powered.

To Hammer/Drill: Rotate the Drill Switch to the Drill ON setting. Rotate the Hammer Switch to the Hammer ON setting. The Rotary Hammer will revolve and hammer when powered.

To Chisel: Rotate the Drill Switch to the Drill OFF setting. Rotate the Hammer Switch to the Hammer ON setting. The Rotary Hammer will hammer when powered.

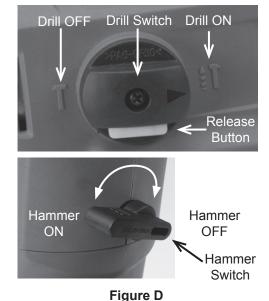


Depth Gauge Slot

Auxiliary Handle



Bracket

Lock Knob

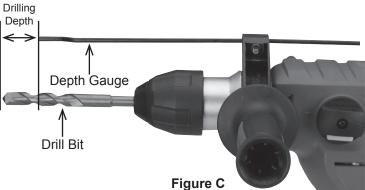

AFET

Page 9

Changing Drill Bits

<u>CAUTION!</u> Wear heavy-duty work gloves to provide protection when inserting and removing drill bits. Drill bits become very hot during use. Do not remove drill bits until the bit has cooled. Do not strike stuck bits with a hammer.

1. Pull back on the Chuck and insert or remove the Drill Bit. If inserting the Drill Bit, make sure it slides all the way into the opening.

Work Piece and Work Area Set Up

- 1. Designate a work area that is clean and welllit. The work area must not allow access by children or pets to prevent distraction and injury.
- Route the power cord along a safe route to reach the work area without creating a tripping hazard or exposing the power cord to possible damage. The power cord must reach the work area with enough extra length to allow free movement while working.

General Operating Instructions

- 1. Install the Drill Bit.
- 2. Adjust the Auxiliary Handle and the Depth Gauge as needed.
- 3. Set the Function by adjusting the Drill Switch and Hammer Switch to the desired setting.
- 4. Set the speed by rotating the Speed Control.
- 5. Plug in the Power Cord.

- 2. Release the Chuck.
- 3. Check that the Drill Bit is secured in place. It should not be able to be pulled out of the Chuck.

Note: When drilling a hole larger than 1-1/4" diameter, use a Drill Bit with four cutting edges.

- 3. Secure loose work pieces using a vise or clamps (not included) to prevent movement while working.
- 4. There must not be objects, such as utility lines, nearby that will present a hazard while working.

- 6. Squeeze and hold the Trigger to turn on the Rotary Hammer.
- 7. Allow the Rotary Hammer to reach full speed before contacting the work surface.
- 8. When finished, to prevent accidents, turn off the tool and disconnect its power supply after use. Allow the bit to cool then remove it from the Chuck. Clean, then store the tool indoors out of children's reach.

CHICAGO ELECTRIC POWER TOOLS

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Release the Trigger and unplug the tool from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for loose hardware, misalignment or binding of moving parts, cracked or broken parts, damaged electrical wiring, and any other condition that may affect its safe operation.



Figure E: Grease Port

2. Monthly, open the Grease Port, clean out old grease, and replace with new grease.

<u>CAUTION</u>: Warranty void if grease maintenance is not maintained.

- 3. **AFTER USE**, wipe external surfaces of the tool with clean cloth.
- 4. **A**WARNING! If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.

Item 69274

SAFETY

Troubleshooting

Problem	Possible Causes	Likely Solutions
Tool will not start.	1. Cord not connected.	1. Check that cord is plugged in.
	2. No power at outlet.	 Check power at outlet. If outlet is unpowered, turn off tool and check circuit breaker. If breaker is tripped, make sure circuit is right capacity for tool and circuit has no other loads.
	 Tool's thermal reset breaker tripped (if equipped). 	 Turn off tool and allow to cool. Press reset button on tool.
	 Internal damage or wear. (Carbon brushes or switch, for example.) 	4. Have technician service tool.
Tool operates slowly.	Extension cord too long or cord diameter too small.	Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load. See <i>Extension Cords</i> in <i>Grounding</i> section on page 6.
Performance	1. Accessory dull or damaged.	1. Keep cutting accessories sharp. Replace as needed
decreases over time.	 Carbon brushes worn or damaged. 	2. Have qualified technician replace brushes.
Excessive noise or rattling.	Internal damage or wear. (Carbon brushes or bearings, for example.)	Have technician service tool.
Overheating.	1. Forcing tool to work too fast.	1. Allow tool to work at its own rate.
	2. Accessory misaligned.	2. Check and correct accessory alignment.
		3. Keep cutting accessories sharp. Replace as needed
	3. Accessory dull or damaged.	4. Wear ANSI-approved safety goggles and
	4. Blocked motor housing vents.	NIOSH-approved dust mask/respirator while blowing dust out of motor using compressed air.
	 Motor being strained by long or small diameter extension cord. 	5. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load. See <i>Extension Cords</i> in <i>Grounding</i> section on page 6.

ŏ

supply before service.

SAFETY

SETUP

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

AFET


CHICAGO ELECTRIC[®] POWER TOOLS

Parts List and Diagram

Parts List

Part	Description	Qty
1	Front Cover	1
2	Clip Ring 18X2	1
3	Chuck Sleeve	1
4	Spring	1
5	Head Cover	1
6	Oil Seal	1
7	Washer	1
8	Clip Ring 35	1
9	Bearing 61907	1
10	Bushing	1
11	Spacer	1
12	O Ring 53.5X2	1
13	Steel Ball 7.14	5
14	Turning Cover	1
15	O Ring 19.8X2	2
16	Impact Hammer	1
17	O Ring 11X2	3
18	Steel Ball 7.938	3
19	Piston	1
20	Flat Key A3x3x18	2
21	Big Spring	1
22	Hammer	1
23	O Ring 18X3.05	2
24	Pin 6X23	1
25	Aluminium Piston	1
26	Big Gear 10:35	
<u>27</u> 28	Retaining Ring 26.7X1.6 Oil Bearing	2
29	Shaft	1
30	Small Oil Bearing	1
31	Gear Box	1
32	Grease Port Cover	1
32-1	Cover Insert	1
33	O-Ring	1
34	Spindle	1
35	Flat Key A5x5x22	1
36	Right Gearbox Cover	1
37	Flat Washer	1
37-1	Damping Rubber Sleeve	1
38	Spring	1
39	Washer	1
40	Screw St3.9x16f	19
41	Screw	1
42	Bearing 6003-2Z	1
43	Clip Ring 35	1
44	Clip Ring 17	1
45	Impact Hammer Spring	1
46	Primary Gear	1
47	Hammer	1 1
48	Gear Cover	1
<u>49</u> 50	Needle Bearing Hk1210 Bearing 6001-2Z	1
<u> </u>	Middle Cover Seal Ring	1
52	Rubber Pin	1
53	Steel Ball 4	1
<u> </u>	Hammer Switch	1
0.7		

55 Middle Cover 1 56 Rotor 1 57 Cover 1 58 Stator 1 59 Bearing Cover 1 60 Bearing Cover 1 61 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Bearing Washer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring	Part	Description	Qty
57 Cover 1 58 Stator 1 58 Stator 1 59 Bearing 608-2Z 1 60 Bearing Cover 1 61 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch Axle 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed	55		
58 Stator 1 59 Bearing 608-2Z 1 60 Bearing Cover 1 61 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Bearing Washer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Novable Plate 1 80 Clip Ring 12.5X1 1 81 </td <td>56</td> <td>Rotor</td> <td>1</td>	56	Rotor	1
59 Bearing 608-2Z 1 60 Bearing Cover 1 61 Release Button 1 62 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch Axle 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Bearing Washer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1	57	Cover	1
60 Bearing Cover 1 61 Release Button 1 62 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch Axle 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Inside Spring 1 83 Safety Clutch Spring Base 1 <t< td=""><td>58</td><td>Stator</td><td>1</td></t<>	58	Stator	1
60 Bearing Cover 1 61 Release Button 1 62 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 9 66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 <td>59</td> <td>Bearing 608-2Z</td> <td>1</td>	59	Bearing 608-2Z	1
61 Release Button 1 62 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch Axle 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Bearing Washer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8	60		1
62 Release Button Spring 2 63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch 1 166 Drill Switch Axle 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Spacer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 <	61		1
63 Screw M5x12 1 64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 1			2
64 Spring Washer 5 9 65 Flat Washer 5 1 66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring Base 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1<			1
65 Flat Washer 5 1 66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear Spacer 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Outside Spring 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1			9
66 Drill Switch 1 67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring Base 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z			
67 Drill Switch Axle 1 68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring Base 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 98 Raight Handle			1
68 Spring Washer 4 1 69 Screw M4x10 1 70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 90 Carbon Brush Holder			
69Screw M4x10170Flat Washer 4171Left Gearbox Cover172Socket Head Screw M5x22473Screw St5x45f474Small Gear 10:35 Safety Clutch175Small Gear Spacer176Bearing 16002177Small Gear Bearing Washer178No.2 Gear179Safety Clutch Fixed Plate180Clip Ring 12.5X1181Steel Ball 5882Safety Clutch Movable Plate183Safety Clutch Clutch Movable Plate184Safety Clutch Movable Spring185Safety Clutch Movable Spring186Clip Ring 8.8X1187Bearing 607-2Z188Right Handle189Carbon Brush Holder290Carbon Brush Contact Plate291Carbon Brush Contact Plate292Housing193Inductor194Bottom Cover195Power Cord196Power Cord Jacket197Cable Clamp198Rating Label199Left Handle1100Capacitor 0.33µ1101Trigger1102Speed Control1S-104Clamp Ring1S-105Nut M61S-106Lock Knob			
70 Flat Washer 4 1 71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Spring 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush 2 91 Carbon Brush			
71 Left Gearbox Cover 1 72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1			
72 Socket Head Screw M5x22 4 73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Spring Base 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 90 Carbon Brush Holder 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover			
73 Screw St5x45f 4 74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover <			
74 Small Gear 10:35 Safety Clutch 1 75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 <td< td=""><td></td><td></td><td></td></td<>			
75 Small Gear Spacer 1 76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 <t< td=""><td></td><td></td><td>1</td></t<>			1
76 Bearing 16002 1 77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1			
77 Small Gear Bearing Washer 1 78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 1 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 100 Capacitor 0.33µ			
78 No.2 Gear 1 79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 100 Capacitor 0.33µ 1 101 Trigger 1			
79 Safety Clutch Fixed Plate 1 80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-103 Screw M8x4			
80 Clip Ring 12.5X1 1 81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-			
81 Steel Ball 5 8 82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 <tr< td=""><td></td><td></td><td></td></tr<>			
82 Safety Clutch Movable Plate 1 83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord Jacket 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1			
83 Safety Clutch Inside Spring 1 84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-104 Clamp Ring 1 S-105 Nut M6 1<			
84 Safety Clutch Outside Spring 1 85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-104 Clamp Ring 1 S-105			
85 Safety Clutch Spring Base 1 86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1 <td></td> <td></td> <td></td>			
86 Clip Ring 8.8X1 1 87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush Contact Plate 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob <t< td=""><td></td><td></td><td></td></t<>			
87 Bearing 607-2Z 1 88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
88 Right Handle 1 89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
89 Carbon Brush Holder 2 90 Carbon Brush Contact Plate 2 91 Carbon Brush 2 92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			2
92 Housing 1 93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			2
93 Inductor 1 94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33μ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
94 Bottom Cover 1 95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
95 Power Cord 1 96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
96 Power Cord Jacket 1 97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
97 Cable Clamp 1 98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
98 Rating Label 1 99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
99 Left Handle 1 100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
100 Capacitor 0.33µ 1 101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
101 Trigger 1 102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
102 Speed Control 1 S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
S-101 Auxiliary Handle 1 S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
S-102 Bracket 1 S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
S-103 Screw M8x40 1 S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
S-104 Clamp Ring 1 S-105 Nut M6 1 S-106 Lock Knob 1			
S-105 Nut M6 1 S-106 Lock Knob 1			
S-106 Lock Knob 1			
		Lock Knob	1
S-107 Depth Gauge 1	S-107	Depth Gauge	1

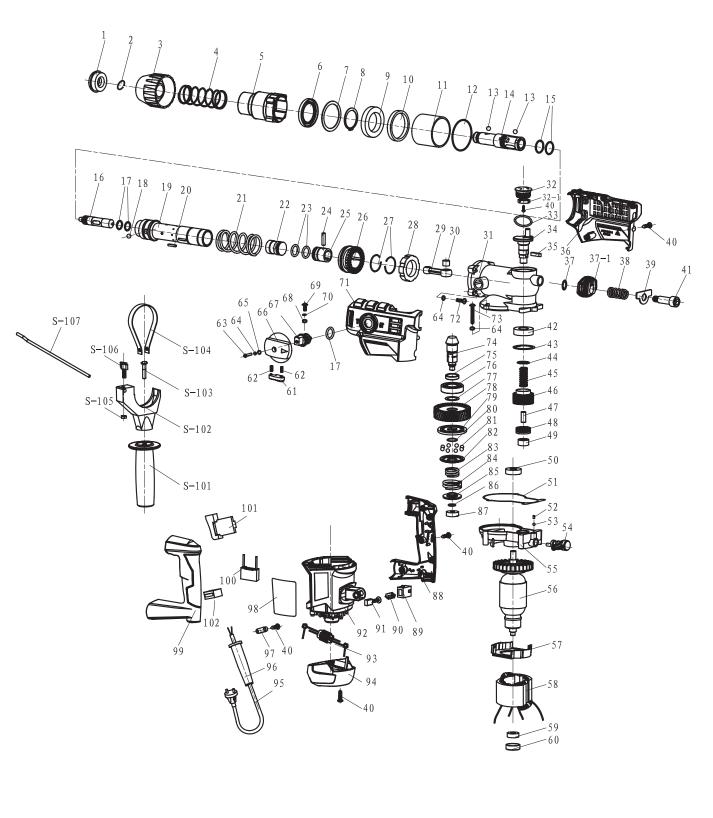

SAFETY

Record Product's Serial Number Here:

<u>Note:</u> If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

CHICAGO ELECTRIC POWER TOOLS