

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, operating, inspection, maintenance and cleaning procedures. Keep this manual and the receipt in a safe and dry place for future reference.

CORDLESS THREE HEAD RECHARGEABLE SHAVER



REV 14h

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

ITEM 60420

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2012 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

Charging Power Source	120VAC / 60Hz
Charging Time	about 12 hr.
Internal Battery	NiCd

Important Safety Information

- To reduce risk of death or injury by electric shock, do not reach for a plugged in Shaver that has fallen into water.** Unplug immediately. Some electrical parts inside the Shaver are electrically live, even with the Switch "off".
- Keep children away from product usage area. Do not allow children to handle this product.
- Do not use this Shaver if under the influence of alcohol or drugs. Read warning labels on prescriptions to determine if your judgement or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to use this Shaver.
- Check for damaged parts. Before using this Shaver, carefully check that it will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
- Do not use while bathing or in a shower.
- When servicing, use only identical replacement parts. Only use accessories intended for use with this Shaver.
- Do not place or store Shaver where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Unplug this Shaver from the electrical outlet immediately after charging.
- Unplug this Shaver before cleaning.
- Close supervision is necessary when this Shaver is used by, on, or near children or invalids.
- Use as intended only.
- Do not operate if damage is done to cord or plug, or if the Shaver has been dropped or damaged.
- Do not operate with a damaged or broken blade, or without blade guard.
- Before use, make certain blades are aligned properly.
- People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
- The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- WARNING:** The cord of this product contains lead and/or di (2-ethylhexyl) phthalate (DEHP), chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (California Health & Safety Code § 25249.5, *et seq.*)



SAVE THESE INSTRUCTIONS.

Charging

1. Turn the switch off.
2. Attach Power Cord to Base of Shaver and to electrical outlet. The Charge Indicator will light during charging.

3. Charging takes about 12 hours. When charge is complete, disconnect power cord.

CAUTION! To prevent damage, do not charge longer than 12 hours.

Operation

Shaving

1. Take off Clear Cap and turn switch on.
2. Using a soft touch to your skin, move Shaver in the opposite direction of hair growth.
3. Stretching the skin gives a closer shave.
4. Once shaving is done, turn switch off and replace Clear Cap.

Trimming

1. Press up on the Slider on back of Shaver to flip up the Trimmer.
2. Turn switch on.
3. At a right-angle, softly touch your skin where you want to trim. Work slowly.
4. When finished trimming, turn switch off and close Trimmer.



Cleaning

CAUTION! Be careful not to pinch or cut fingers when cleaning cutting heads.

1. Remove Cover and open Trimmer.
2. Clean Cutting Heads and Trimmer with Brush.
3. Replace Cover and close Trimmer after cleaning.

Disposal Instructions

Note: CONTAINS NICKEL-CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. Do not dispose of this item without first removing the NiCd battery for proper disposal/recycling. Removing the battery will destroy the Shaver and should only be done prior to disposal.

1. Flip up the Trimmer and remove all screws from the Shaver's housing.
2. Swing the back housing of the Shaver up from the rear forward.
3. Using wire cutters (not included), clip the two tabs that are soldered to the battery.
4. Ni-Cd BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.