

USER AGREEMENT

End User License Agreement NAVTEQ

PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY BEFORE USING THE NAVTEQ DATABASE

NOTICE TO THE USER

THIS IS A LICENSE AGREEMENT - AND NOT AN AGREEMENT FOR SALE – BETWEEN YOU AND NAVTEQ B.V. FOR YOUR COPY OF THE NAVTEQ NAVIGABLE MAP DATA-BASE, INCLUDING ASSOCIATED COMPUTER SOFTWARE, MEDIA AND EXPLANATORY PRINTED DOCUMENTATION PUBLISHED BY NAVTEQ (JOINTLY "THE DATABASE"). BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT ("AGREEMENT"). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE DATABASE, ALONG WITH ALL OTHER ACCOMPANYING ITEMS, TO YOUR SUPPLIER FOR A REFUND.

OWNERSHIP

The Database and the copyrights and intellectual property or neighboring rights therein are owned by NAVTEQ or its licensors. Ownership of the media on which the Database is contained is retained by NAVTEQ and/or your supplier until after you have paid in full any amounts due to NAVTEQ and/or your supplier pursuant to this Agreement or similar agreement(s) under which goods are provided to you.

LICENSE GRANT

NAVTEQ grants you a non-exclusive license to use the Database for your personal use or, if applicable, for use in your business' internal operations. This license does not include the right to grant sub-licenses.

LIMITATIONS ON USE

The Database is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws (e.g. national laws based on the European Software Directive (91/250) and the Database Directive (96/9)), you may not extract or reutilize substantial parts of the contents of the Database nor reproduce, copy, modify, adapt, translate, disassemble, decompile, reverse engineer any portion of the Database. If you wish to obtain interoperability information as meant in (the national laws based on) the European Software Directive, you shall grant NAVTEQ reasonable opportunity to provide said information on reasonable terms, including costs, to be determined by NAVTEQ.

TRANSFER OF LICENSE

You may not transfer the Database to third parties, except when installed in the system for which it was created or when you do not retain any copy of the Database, and provided that the transferee agrees to all terms and conditions of this Agreement and confirms this in writing to NAVTEQ. Multi-disc sets may only be transferred or sold as a complete set as provided by NAVTEQ and not as subset thereof.

USER AGREEMENT

LIMITED WARRANTY

NAVTEQ warrants that, subject to the warnings set out below, for a period of 12 months after acquisition of your copy of the Database, it will perform substantially in accordance with NAVTEQ's Criteria for Accuracy and Completeness existing on the date you acquired the Database; these criteria are available from NAVTEQ at your request. If the Database does not perform in accordance with this limited warranty, NAVTEQ will use reasonable efforts to repair or replace your non-conforming copy of the Database. If these efforts do not lead to performance of the Database in accordance with the warranties set out herein, you will have the option to either receive a reasonable refund of the price you paid for the Database or to rescind this Agreement. This shall be NAVTEQ's entire liability and your sole remedy against NAVTEQ. Except as expressly provided in this section, NAVTEQ does not warrant nor make any representations regarding the use of results of the use of the Database in terms of its correctness, accuracy, reliability, or otherwise. NAVTEQ does not warrant that the Database is or will be error free. No oral or written information or advice provided by NAVTEQ, your supplier or any other person shall create a warranty or in any way increase the scope of the limited warranty described above. The limited warranty set forth in this Agreement does not affect or prejudice any statutory legal rights that you may have under the legal warranty against hidden defects.

If you did not acquire the Database from NAVTEQ directly, you may have statutory rights against the person from whom you have acquired the Database in addition to the rights granted by NAVTEQ hereunder according to the law of your jurisdiction. The above warranty of NAVTEQ shall

not affect such statutory rights and you may assert such rights in addition to the warranty rights granted herein.

LIMITATION OF LIABILITY

The price of the Database does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the Database. Accordingly, in no event shall NAVTEQ be liable for any consequential or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the Database, whether in an action in contract or tort or based on a warranty, even if NAVTEQ has been advised of the possibility of such damages. In any event NAVTEQ's liability for direct damages is limited to the price of your copy of the Database.

THE LIMITED WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

WARNINGS

The Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results. The Database does not include or reflect information

on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNING LAW

This Agreement shall be governed by the laws of the jurisdiction, in which you reside at the date of acquisition of the Database. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Database shall apply. In all other cases, or if the jurisdiction where you acquired the Database cannot be defined, the laws of the Netherlands shall apply. The courts competent at your place of residence at the time you acquired the Database shall have jurisdiction over any dispute arising out of, or relating to this Agreement, without prejudice to NAVTEQ's right to bring claims at your then current place of residence.

USER AGREEMENT

End-User License Agreement Gracenote

USE OF THIS PRODUCT IMPLIES ACCEPTANCE OF THE TERMS BELOW.

Gracenote® MusicID® Terms of Use

This device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to do online disc identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers (“Gracenote Servers”) and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc.

may enforce its rights under this Agreement against you directly in its own name.

The Gracenote MusicID Service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote MusicID service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote MusicID Service.

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.” Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its online services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCI-

DENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote 2006 Version 2.2

CD and music-related data from Gracenote, Inc., copyright © 2000-2006 Gracenote. Gracenote Software, copyright © 2000-2006 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523. Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

TABLE OF CONTENTS

Table of Contents

<i>Safety Guidelines</i>	1
Introduction	
<i>Warnings</i>	2
<i>Safety References</i>	2
<i>Intended Use</i>	2
<i>System Care</i>	2
<i>Software Update</i>	2
<i>Safe Usage of the Radio Navigation System</i>	2
<i>Connections</i>	3
<i>Touch Screen</i>	3
<i>CD/DVD Drive</i>	4
<i>GPS Navigation Antenna</i>	4
<i>Satellite Radio Antenna</i>	4
<i>Other Electronic Devices</i>	4

General Handling

<i>User Interface Elements</i>	5
<i>Soft-Keys</i>	5
<i>Hard-Keys</i>	5
<i>Electronic Vehicle Information Center (EVIC)</i>	7
<i>Steering Wheel Mounted Controls</i>	7
<i>AM/FM/SAT Operation</i>	8
<i>HDD/Disc/Jukebox Operation</i>	8
<i>Vehicle Entertainment System™ Operation</i>	8
<i>Audio Settings</i>	8
<i>Volume</i>	8
<i>Audio Control Menu</i>	9

Getting Started

<i>Disclaimer for Navigation Radio</i>	10
<i>Change the Language</i>	10
<i>Set the Time</i>	11
<i>Store Radio Presets</i>	12
<i>Connect Bluetooth Phone</i>	13

TABLE OF CONTENTS

<i>Set Default Country</i>	14
<i>Set Default State</i>	15
<i>Enter Home Address</i>	15
<i>Speech Dialogue System Tutorial</i>	17
<i>UConnect™ Tutorial</i>	17

Radio

Radio Mode	18
<i>Overview</i>	18
<i>Satellite Radio Mode</i>	18
<i>Station Presets</i>	19
<i>Change a Channel or Frequency</i>	19
<i>RBDS (Radio Broadcasting Data System)</i>	19
<i>Radio Text Information</i>	19
<i>MUSIC TYPE (Program Type Filter)</i>	20
<i>RBDS (FM) Program Types</i>	20
<i>Sirius Satellite Radio Program Types</i>	20
Radio Settings	21
<i>AM / FM MENU</i>	21

<i>SAT MENU</i>	21
<i>Channel vs. Preset List Selection</i>	21
<i>Re-Subscribe to Sirius Satellite Radio</i>	21
<i>Display Settings</i>	22
<i>Screen-saver</i>	23
<i>View Settings</i>	23

Media

Disc Mode	24
<i>Overview</i>	24
<i>Disc Requirements</i>	24
<i>Inserting a Disc</i>	25
<i>Removing a Disc</i>	25
<i>Selecting Disc Mode</i>	25
<i>Scan Search</i>	26
<i>Next Track</i>	26
<i>Previous Track</i>	26
<i>Fast Forward Track</i>	26
<i>Rewind Track</i>	26
<i>Displaying the Elapsed Title Time</i>	26

TABLE OF CONTENTS

<i>Select Title from list</i>	26	<i>Next Track</i>	38
<i>Disc Info</i>	27	<i>Previous Track</i>	38
<i>Gracenote Music Recognition Technology</i>	27	<i>Fast Forward Track</i>	39
<i>Copy Disc to Hard-Drive</i>	27	<i>Rewind Track</i>	39
<i>Disc Menu</i>	27	<i>Displaying the Elapsed Title Time</i>	39
<i>Playing a MP3/WMA Disc</i>	28	<i>Jukebox Menu</i>	39
<i>Playing a Video DVD</i>	29	<i>Random Playback</i>	39
<i>DVD MENU Controls</i>	29	<i>Repeat Track</i>	39
<i>DVD Playback Controls</i>	30	<i>Edit Jukebox</i>	40
<i>DVD Video Menu</i>	31	Hard Disk Drive Mode (HDD)	41
<i>Disc Skipping</i>	32	<i>Copy Audio Disc to Hard-Drive</i>	41
<i>Temperature Protection</i>	32	<i>Copy WMA/MP3 Files to Hard-Drive</i>	42
Jukebox Mode (JB)	33	<i>Copying complete Disc</i>	43
<i>Overview</i>	33	<i>Selective Song Copying from disc</i>	44
<i>Selecting Jukebox Mode (JB)</i>	33	<i>Copying from USB</i>	47
<i>Fill a Jukebox Album from Audio Disc</i>	34	<i>Playing Audio Files from the Hard Disk Drive</i>	48
<i>Fill a Jukebox Album from HDD Playlist</i>	35	<i>Next Track</i>	50
<i>Clear a Jukebox Album Slot</i>	36	<i>Previous Track</i>	50
<i>Selecting a Track</i>	38	<i>Fast Forward Track</i>	50

TABLE OF CONTENTS

<i>Rewind Track</i>	50
<i>Displaying the Elapsed Title Time</i>	50
<i>HDD Menu</i>	51
<i>Random Playback</i>	51
<i>Repeat Track</i>	51
<i>Editing Playlists on the Hard Disk Drive</i>	51
<i>Deleting All Playlists from the Hard Disk Drive</i>	56
<i>Importing Pictures</i>	56

Remote Devices

Vehicle Entertainment System™(VES)	62
<i>Receiving audio/video from the VES</i>	62
<i>Sending audio/video and controlling the VES</i>	63
<i>VES LOCK</i>	67
<i>VES UNLOCK</i>	67
<i>Playing a Video DVD for the rear VES</i>	68
USB Connector	70
<i>Compatible devices</i>	70
<i>How to open the cover</i>	70

<i>How to close the cover</i>	71
-------------------------------	----

AUX Mode 73

Speech Dialogue System

<i>Voice Recognition System (VR)</i>	74
<i>Display Menu</i>	75
<i>Commands</i>	75
<i>Changing the volume</i>	75
<i>Main Menu</i>	75
<i>Radio Menu</i>	76
<i>Radio AM</i>	76
<i>Radio FM</i>	76
<i>Satellite Radio</i>	76
<i>Disc</i>	76
<i>Hard Drive</i>	77
<i>VES</i>	77
<i>Memo</i>	77
<i>Navigation</i>	77
<i>System Setup</i>	78
<i>Voice Training</i>	79

TABLE OF CONTENTS

Hands Free Cellular Telephone

<i>UConnect™ Overview</i>	80
<i>Compatible Phones</i>	80
<i>Bluetooth</i>	81
<i>UConnect™ microphone</i>	81
<i>Operations</i>	82
<i>UConnect™ hard-key</i>	82
<i>Barge In – Overriding Prompts</i>	82
<i>Help Command</i>	82
<i>Cancel Command</i>	82
<i>Dial by Saying a Number</i>	84
<i>Call by Saying a Name</i>	84
<i>Phone Book</i>	85
<i>Add Names to Phonebook</i>	85
<i>Voice Tags</i>	85
<i>Edit Phonebook Entries</i>	86
<i>Delete Phonebook Entry</i>	86
<i>Delete/Eraser “All” Phonebook Entries</i>	87
<i>List All Phonebook Names</i>	87

<i>Phone Call Features</i>	87
<i>Answer or Reject an Incoming Call</i>	87
<i>Make a Second Call</i>	88
<i>Place / Retrieve a Call from Hold</i>	88
<i>Toggle between Calls</i>	88
<i>Conference Call</i>	88
<i>Three-Way Call</i>	88
<i>Call Termination</i>	89
<i>Redial</i>	89
<i>Call Continuation</i>	89
<i>Emergency Assistance</i>	90
<i>Towing Assistance</i>	90
<i>Paging</i>	90
<i>Voice Mail Calling</i>	90
<i>Working with Automated Systems</i>	91
<i>Turning Confirmation Prompts On/Off</i>	91
<i>Phone and Network Status Indicators</i>	91
<i>Dial Using the Cellular Phone Keypad</i>	92
<i>Mute/Un-mute (Mute off)</i>	92

TABLE OF CONTENTS

<i>Advanced Phone Connectivity</i>	92
<i>Transfer Call to Cellular Phone</i>	92
<i>Transfer Call to UConnect™ System</i>	92
<i>Automatic Transfer Call to UConnect™ System</i>	93
<i>List All Paired Cellular Phone Names</i>	93
<i>Select another Cellular Phone</i>	93
<i>Delete UConnect™ Paired Cellular Phones</i>	94
<i>Things You Should Know About</i>	94
<i>Voice Recognition (VR)</i>	94
<i>Far End Audio Performance</i>	95
<i>Bluetooth Communication Link</i>	95
<i>Power-Up</i>	95
<i>Voice Tree - Main Menu</i>	96

Navigation

General Notes	97
<i>System Overview</i>	97
<i>Navigation Software</i>	97
<i>Software Updates</i>	97
<i>Navigation Database</i>	97

<i>System Limitations</i>	98
Navigation Main Menu	98
<i>Selecting NAV Main Menu</i>	98
<i>Inputting Information</i>	100
Destination Input	101
<i>Overview Destination Entry Screen</i>	101
<i>Destination Input by Street Address</i>	102
<i>Changing State/Province and/or Country</i>	103
<i>Destination Input by Intersection</i>	105
<i>Destination by Point of Interest</i>	108
<i>POI Local Area</i>	108
<i>POI Nearby Destination</i>	110
<i>POI in Map Area</i>	111
<i>Destination Input by Point on Map</i>	112
<i>Destination Input by Geo Coordinate</i>	113
<i>Destination Input by Recent Destinations</i>	113
<i>Destination Input by Address Book</i>	114
<i>Destination Input by Saved Locations</i>	114
<i>Destination Input by Voice</i>	116

TABLE OF CONTENTS

<i>Guide Me Home</i>	117	<i>GPS Information</i>	134
<i>Where Am I Now?</i>	117	<i>Guidance Prompts</i>	134
<i>Emergency Info</i>	118	Map Viewer	135
<i>Record New Trail</i>	118	<i>Map Zoom Level</i>	135
Route Guidance	121	<i>Map Orientation</i>	135
<i>Navigation View Settings</i>	121	<i>3D Map Viewer</i>	136
<i>Map Items</i>	122	Stop Over	136
<i>Repeat Navigation Announcement</i>	123	Trip Planner	137
<i>Automatic Re-Routing</i>	123	TMC by Sirius Satellite Radio	142
<i>Route Options</i>	124	<i>Display Traffic Messages</i>	142
<i>Canceling Route Guidance</i>	125	<i>TMC Legend</i>	144
<i>Unverified Navigation Database Area</i>	125	Address Book	146
<i>Notes on Route Guidance</i>	126	<i>Overview</i>	146
Navigation Options	129	<i>Entering/Editing/Deleting an Address</i>	147
<i>Options before activating the route guidance</i>	129	<i>Search a Contact in the Address Book</i>	152
<i>Options During Route Guidance</i>	132	System Information	
Navigation Default Settings	133	<i>User Data Backup</i>	154
<i>Set Measurement Metric/US</i>	133	<i>Software and Database Updates</i>	154
<i>Set Default Routing Method</i>	133		

Troubleshooting

<i>Radio</i>	155
<i>Disc</i>	155
<i>Navigation</i>	155
<i>Voice Recognition</i>	155
<i>UConnect™</i>	155

Glossary of Terms

SAFETY GUIDELINES

Safety Guidelines

Ensure that all persons read this manual carefully before using the navigation system. It contains instructions on how to use the system in a safe and effective manner.

Warning: Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- When using the navigation system to route you to an emergency facility, contact the facility to verify its location.
 - Not all emergency service locations are contained in the database. Please use your own judgement and ask for directions in such situations.
 - Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary pull over at a safe location.
 - Road conditions and regulations take precedence over information contained on the map display. Observe actual traffic restrictions and circumstances when driving.
 - Stop use immediately if problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized DaimlerChrysler dealer to repair.
- There may be situations where the navigation system erroneously displays the vehicle's location. Use your own driving judgement in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should automatically correct the vehicle position within a few minutes.
 - Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
 - The map database is designed to provide you with route suggestions and does not take into account the relative safety of suggested route or factors that may affect the time required to reach your destination. Use your own personal judgement if the navigation system is unable to provide you with an alternative route.

Introduction

Warnings

This manual contains WARNINGS against operating procedures that could result in an accident or bodily injury. If you do not read the entire manual you may miss important information. Observe all warnings!

The information given in this manual is subject to change.

Safety References

Before operating this navigation system for the first time, please read this manual carefully. Note the safety precautions described in this manual. If you have any questions, please contact the vehicle manufacturer.

Intended Use

Generally recognized rules of navigation technology were maintained during the development and manufacture of the RER radio navigation system. When using this product, be aware of

state-specific norms and guidelines.

Visit <http://www.chrysler.com/mygig/> for updates, additional information, compatible phones, etc.

System Care

Software Update

Both navigation data and Gracenote® data are software updatable. Visit <http://www.chrysler.com/mygig/> or contact your DaimlerChrysler Dealership for the latest available software.

Safe Usage of the Radio Navigation System

Read all instructions in this manual carefully before using your radio system to ensure proper usage!

Your radio is not a toy. Do not let young children use your radio unsupervised.

Permanent hearing loss may occur if you play your music at the highest volumes. Exercise caution when setting the volume on your radio.

INTRODUCTION

Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your radio.

Note: Many features of this radio are speed dependent. For your own safety it is not possible to use the press screen keyboard to enter a name (e.g., street name), while the vehicle is in motion.

Keep drinks, rain, and other sources of moisture away from your radio. Besides damage to your radio, moisture can cause electric shocks with any electronic device.

Note: In a convertible vehicle, the system performance may be compromised with roof top down.

Connections

Never force any connector into the ports of your radio. Make sure your connectors are the correct shape and size before you connect.

Any attached cable should be routed so that it will not apply any pressure to the connection.

Do not use a USB device which will interfere with the operation of opening the display.

Touch Screen

Do not touch the screen with any hard or sharp objects, which could scratch the touch screen surface! (pen, USB stick, jewelry, etc...)

Note: It is possible to use plastic stylus for press screen enabled devices such as PDA and Pocket PC's.

Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.

If necessary, use a lint-free cloth dampened with cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow solvent manufacturer's precautions and directions.

CD/DVD Drive

Do not insert any damaged, warped, scratched or dirty CD's or DVD's into the CD/DVD player.

Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

Do not insert more than 1 (one) CD/DVD at a time into the drive slot.

Do not insert anything other than the supported CD/DVD formats. See **Disc Mode** section for information on supported CD/DVD formats.

GPS Navigation Antenna

The antenna for the navigation GPS system is mounted in various locations (depending on the vehicle model) within the dashboard. Do not place items on the dashboard around the GPS antenna location. Objects placed within the line of sight of the antenna will decrease performance. Do not place items directly on or above the antenna.

Satellite Radio Antenna

The antenna for the satellite radio is mounted on the roof of the vehicle. Do not place items on the roof around the rooftop antenna location. Objects placed within the line of sight of the antenna will cause decreased performance. Larger luggage items should be placed as far forward as possible. Do not place items directly on or above the antenna.

Other Electronic Devices

You may bring other electronic devices into your vehicle (e.g., PDA, iPod, laptop computer, etc.) Some of these devices may cause electromagnetic interference with the GPS. If a degradation in the navigation is observed, turn the devices off, or keep them as far away from the GPS antenna as possible.

GENERAL HANDLING

General Handling

User Interface Elements



Power to operate the navigation radio is supplied through the ignition switch, which must be in the ON, ACC or in ACC Delay mode in order to operate the navigation radio.

(4) ON/OFF VOLUME

It is also possible to set the unit in standby mode during driving, by pressing the ON/OFF VOLUME rotary knob (4).

Note: If the ignition is switched off with the radio in standby mode, the radio memorizes the standby state when the ignition is switched on again. Press the (4) ON/OFF VOLUME rotary knob to switch the radio on. The navigation software is always working when the ignition is switched on, even if the radio is in standby mode. It is possible to eject the CD and to display the time if the unit is switched off.

Soft-Keys

Soft-keys are accessible on the touch screen.

Hard-Keys

Hard-keys on the left and right side of the radio faceplate.

(1) OPEN/CLOSE

To open or close the display, press the OPEN CLOSE hard-key (1).

After opening the display, it takes a few seconds to eject a CD/DVD, if one was in the slot.

When inserting a disc, make sure the label is facing up.

The display will close automatically after inserting the disc.

Note: It may take several seconds to recognize the type of inserted disc (CD, DVD, MP3, etc.)

(2) SEEK UP/ SEEK DOWN

Press the SEEK up and the SEEK down hard-key (2) to seek through radio stations in AM, FM, or SAT bands. Seek through tracks in CD or jukebox modes or through songs in the HDD playlist.

(3) RADIO/MEDIA

Press the RADIO/MEDIA hard-key (3) to toggle between RADIO and MEDIA mode.

(5) VR

Press the VR hard-key (5) and wait for the confirmation beep before you say a voice command.

(6) UConnect™ (optional)

Press the UConnect™ hard-key (6) to either activate the UConnect™ system or to cancel an active phone call.

Note: If you are in one of the navigation menus (NAV Menu, MAP display, etc.), you need to press the UConnect™ hard-key twice to end an active call.

(7) MENU

Press the MENU hard-key (7) to access the system settings menu.

Note: Press the MENU hard-key in an active mode in order to change mode specific settings.

(8) NAV

Press the NAV hard-key (8) either to switch to the navigation mode or to toggle between the navigation menu and the map viewer menu.

(9) USB Connector

Connect a supported device into the USB Connector (9) in order to copy files to the internal hard disk drive.

Note: See USB Connector section for information on supported devices.

GENERAL HANDLING

(10) AUX Connector

Connect an external audio device into the AUX Input (10) (e.g., MP3 player, video-game), to play the device audio through the car audio system.

Electronic Vehicle Information Center (EVIC)

Some vehicles feature an Electronic Vehicle Information Center (EVIC) with driver-interactive display. The EVIC is normally located in the instrument cluster or overhead. It can display radio station preset frequencies, CD disc number, satellite radio channel, and navigation system information.

Steering Wheel Mounted Controls

The remote sound system controls are located on the surface of the steering wheel. Please refer to the vehicle specific owner's manual for detailed information.

The following describes general steering wheel functionality:

1. The VOLUME switch controls the volume of the sound system. Pressing the top of the rocker switch will increase the volume and pressing the bottom of the rocker switch will decrease the volume.
2. The MODE ADVANCED switch changes the mode of the navigation radio between the various modes available (FM, AM, CD, DVD, SAT, NAV etc.). To switch to the navigation mode, push and hold the switch. To leave the navigation mode, push the switch momentarily.
3. The FUNCTION SELECT switch advances the navigation radio to the next preset, changes the current disc when in disc mode, etc. The function is different depending upon which mode is in use.

4. The SCROLL switch changes selections such as radio station, CD track, and satellite radio channel, depending upon the current mode.

The following describes the operation of the SCROLL switch in each mode:

AM/FM/SAT Operation

Pressing the top of the switch will seek up for the next available station and pressing the bottom of the switch will seek down for the next available station.

HDD/Disc/Jukebox Operation

Pressing the top of the switch will go to the next track on the disc, and pressing the bottom of the switch will go to the beginning of the current track, or to the beginning of the previous track, if it is within eight seconds of the start of the current track.

Vehicle Entertainment System™ Operation

If equipped with a remote video player, this control will function the same way as in disc mode.

Audio Settings

Volume

Use the ON/OFF VOLUME hard-key (4) to adjust the volume of the currently playing audio source. While you adjust the volume, the name of the audio source and a volume indicator is displayed in the lower left corner of the display.

GENERAL HANDLING

Audio Control Menu

Press the MENU hard-key (7) on the right side of the radio. Then press the Audio Control soft-key to get to the audio control menu.



Use either the arrow soft-keys or the cross-hair on the screen to change Balance and Fade. The CENTER soft-key resets the settings.



 
Use either the arrow soft-keys or the sliders on the screen to adjust BASS, MID, and/or TREBLE.

Getting Started

Note: The ignition switch must be in the ON or ACC position to operate the navigation radio.

If the unit is off, switch it on using the ON/OFF Volume rotary knob.

Disclaimer for Navigation Radio

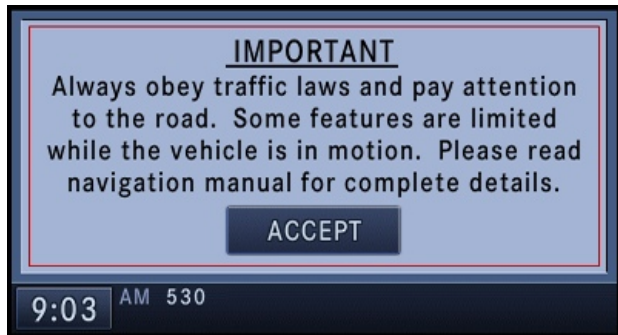

Before using the navigation radio read and accept the disclaimer. The disclaimer will be activated after the ignition is turned on.

Change the Language

The navigation radio will conform to the vehicle language set in the ELECTRONIC VEHICLE INFORMATION CENTER (EVIC), if equipped.

If you change the language in the navigation radio, the vehicle will change the language for all display information. Refer to the vehicles owner's manual.

To change the language with the navigation radio:

1. Press the MENU hard-key on the right side of the radio.
2. Then press the System Setup soft-key to get to the System Setup menu.

GETTING STARTED



3. Press the Language soft-key and select a language.

Set the Time

1. Press the time soft-key in the lower left corner of the screen.



The minutes are set by the GPS system.

2. Press the Set Time Zone soft-key to change to the desired time zone.
3. Press the Daylight Savings soft-key to switch Daylight Saving on or off.

It is possible to set up your own time (ahead or behind actual GPS time), by pressing the USER CLOCK soft-key.

Store Radio Presets

1. Press the Media hard-key repeatedly until AM FM SAT is displayed in the upper left corner of the screen.



2. Select the radio band by touching either the AM, FM or SAT soft-key.

3. Either press the SEEK up/down hard-keys, or touch the SCAN soft-key, DIRECT TUNE soft-key, or the left and right arrows to change the currently playing station.

4. Touch and hold one of the PRESET soft-keys in the list to the right, until you hear a confirmation beep (Approximately 4 seconds).



You can use the PAGE soft-keys to scroll through the list of presets.

Note: If the preset list is not displayed. Press the LIST soft-key located in the bottom line of the screen.



You can use the FULLSCREEN soft-key to toggle between full- and split screen mode. Long preset names are displayed in fullscreen mode.

 


You can use the BACK soft-key to switch to the previous menu.

GETTING STARTED

Connect Bluetooth Phone

1. Press the MENU hard-key on the right side of the radio.
2. Then touch the System Setup soft-key to get to the System Setup menu.
3. Touch the Phone Pairing soft-key to access the Bluetooth Devices menu.

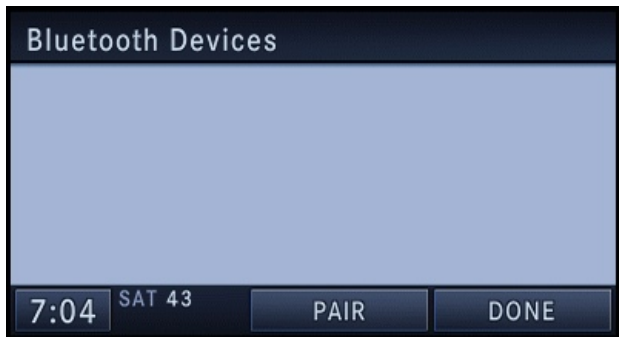


This menu lists all paired bluetooth devices.

4. Press the PAIR soft-key to start a new pairing.



 5. Enter any 4 digit security PIN and touch the PAIR soft-key again.

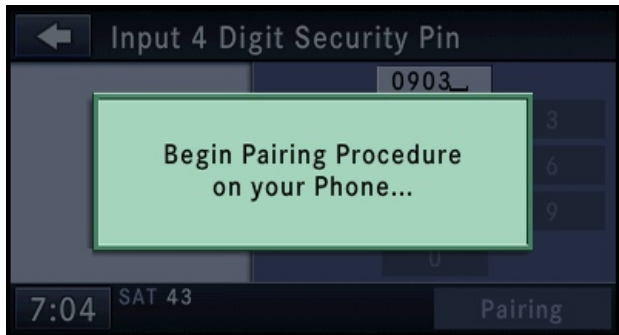

6. The pairing procedure starts. Refer to the user's manual of your phone to complete the procedure.

7. You will then be asked to set a priority for the paired phone. If there is more than one paired phone available, the navigation radio will try to connect to the phone with the highest priority setting.

Set Default Country

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.



2. Touch the NAV Settings soft-key.

3. Touch the Set Default Country soft-key to select your default country.

GETTING STARTED

Set Default State

 
1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.



2. Touch the NAV Settings soft-key.
3. Touch the Set Default State soft-key to choose your default state.

Enter Home Address

1. Press the NAV hard-key on the right side of the radio. If the radio does not display the NAV - Main Menu, press the NAV hard-key again.
2. Touch the Guide Me Home soft-key to enter your home address.

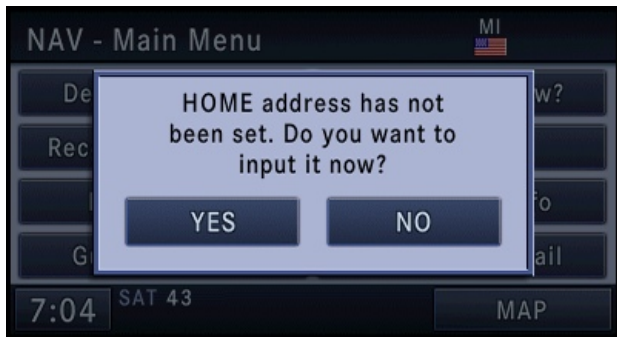

If no home address has been set, touch YES to access the Enter Home Address menu.

3. Touch Street Address to enter your address.

GETTING STARTED



4. Touch the soft-key with your state's name and enter your street name into the speller.

Note: Read more about destination input and the predictive speller in the Navigation section of this manual.

5. Once the street name has been input, touch continue to confirm.

6. Enter the house number into the next screen. If more than one city has this address, you will then need to select your city from a list.

Once the address is entered completely, the system shows a map of your home address area.



7. Touch the SAVE soft-key to confirm the address.

After you have entered your home address, the system will start a route guidance to your home every time you press the Guide Me Home soft-key.

GETTING STARTED

Speech Dialogue System Tutorial

When you press the VR hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a speech dialogue system tutorial.

Press any hard-key or touch the display to cancel the tutorial.

UConnect™ Tutorial

When you press the UConnect™ hard-key, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a UConnect™ system tutorial.

Press any hard-key or touch the display to cancel the tutorial.

Radio

Radio Mode

Overview

The RER navigation radio is equipped with 3 different tuners:

FM 87.7 MHz - 107.9 MHz (RDDBS capable)

AM 530 kHz - 1710 kHz

SAT Sirius Satellite Radio

Toggle between the radio and the media menus by pressing the RADIO/MEDIA hard-key. The different tuner modes can be selected via the tabs in the radio screen.

Satellite Radio Mode

In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.



RADIO

Station Presets

There are 12 station presets available for storing the radio stations in each tuner range.

In order to store the desired station, touch one of the station preset soft-keys for 4 seconds. You will also see the radio station stored in the highlighted soft-key, and you will hear a confirmation beep when the station is saved.

Change a Channel or Frequency

Press the SEEK up or the SEEK down hard-key to play the next available station or channel.

Select DIRECT TUNE to enter a frequency or a channel number, and confirm your selection by pressing the GO soft-key.

Touch the arrows to the left and right of the DIRECT TUNE soft-key to step manually through the frequency or channel roster.

Select SCAN for a five second preview of each listenable station in the frequency band. Touch the SCAN soft-key again to stop

the scan function and to select a radio station.

RBDS (Radio Broadcasting Data System)

This radio navigation system is capable of receiving RBDS signals in the FM band. RBDS is a technology used for transmitting textual information about the music type, song and artist for FM band music. This information is shown on the display.

Note: Not all radio stations support RBDS.

The RBDS information is displayed below the frequency reading of the currently playing radio station.

Radio Text Information

Select INFO to display additional radio text information in the right half of the screen.

Select CLOSE INFO to hide additional radio text information.

MUSIC TYPE (Program Type Filter)



Program Type (PTY) is only available in FM and SAT mode. Radio stations are grouped according to their program (e.g., Soft Rock, Rhythm & Blues, etc.).

Select MUSIC TYPE to enable and/or disable desired program types. The SEEK and SCAN function will then only display stations with matching program types.

RBDS (FM) Program Types

Adult Hits, Classic Rock, Classical, College, Country, Information, Jazz, Language, News, Nostalgia, Oldies, Personality, Public, Religious Music, Religious Talk, Rhythm and Blues, Rock, Soft, Soft Rhythm and Blues, Soft Rock, Sports, Talk, Top 40, Weather.

Sirius Satellite Radio Program Types

Pop, Rock, Electronic/Dance, Hip-Hop/R&B, Country, Christian, Jazz/Blues, Standards, Classical, Latin, International, Talk, Comedy, Lifestyles, Family & Kids, Sports Talk & News, NFL, More Sports, NBA, Financial News, US News, Public Radio, International News, Public Radio, Traffic & Weather, Religion.

You can find Sirius' current terms & conditions at <http://www.sirius.com>

RADIO

Radio Settings

AM / FM MENU

There are no specific settings for this mode.

SAT MENU

While in SAT Mode press the MENU hard-key to display the SAT Menu.



Channel vs. Preset List Selection

Select this feature to allow regular presets as supposed to Sirius Satellite Radio channel list.

Re-Subscribe to Sirius Satellite Radio

New vehicle purchasers or lessees will receive a free one-year subscription to Sirius Satellite Radio and Traffic Services with your navigation radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

Touch the Subscription soft-key to access the Subscription Information screen.



Write down the SIRIUS ID numbers for your receiver. To reactivate your service either call the number listed on the screen or visit the provider online.

Display Settings

Press the MENU hard-key and touch the Display Setting soft-key to access the Display Settings menu.



Select the Daytime Colors soft-key to switch to manual daytime mode and to adjust the brightness of the display using daytime colors.

Select the Nighttime Colors soft-key to switch to manual nighttime mode and to adjust the brightness of the display using nighttime colors.

RADIO

Select the Auto Color soft-key to switch to automatic daytime/nighttime mode and to control the brightness of the display using the light switch of the vehicle.

Touch the DONE soft-key to save your settings and to return to the AM/FM/SAT Menu.

Screen-saver

To activate the screen-saver press the MENU hard-key and touch the screen saver soft-key.

Once the screen saver is active, press any hard-key or touch the display to deactivate it.

View Settings

Press the MENU hard-key and touch the Default View soft-key to enable the default view mode, where the vehicle brand logo is displayed in the right half of the screen.

Touch the Picture View soft-key to enable the picture view mode, where a pictures can be displayed on the right half of the radio screen. Refer to the Hard Disk Drive section for a detailed example.

Touch the Map View soft-key to enable the map view mode, where the navigation map can be displayed on the right half of the radio screen.



Media

Disc Mode

Overview

The navigation radio is equipped with a CD/DVD player.



Toggle between the media and the radio menus by pressing the RADIO/MEDIA hard-key. The different media modes can be selected via the tabs in the radio screen.

Disc Requirements

Caution: this disc player will accept 4 3/4 inch (12 cm) disc only. The use of other sized discs may damage the disc player mechanism.

The radio is capable of playing compact discs (CD), recordable compact discs (CD-R), rewritable compact discs (CD-RW), recordable DVD-R, DVD+R, DVD-RW, and DVD+RW, compact discs

Your radio will play the following formats:

MP3, WMA, CD Audio, DVD Audio, and DVD Video.

Do not insert anything other than the supported CD/DVD formats.

SACD (SACD layer), VCD, DualDisc, SVCD, VCD format on DVD and MPEG-4 are not supported.

A complete list of supported CD/DVD formats is available at <http://www.chrysler.com/mygig/>

MEDIA

Inserting a Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

Note: A faulty CD is NOT automatically ejected. Use only standard size discs. Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

High definition content and media (e.g HD-DVD, Blue-Ray) is not supported.

If the user doesn't remove an ejected CD within approximately 10 seconds, the CD will reload.

Note: On MP3 and WMA CD's with a large number of songs, it may take several seconds to read, play, and display information for all songs on the disc.

Note: Recording your own CD on a home computer at a lower write speed will result in a more consistent quality.

Removing a Disc

1. Press the OPEN/CLOSE hard-key.
2. The disc is ejected and can be removed.

Note: If the disc is not removed within approximately 10 seconds, the unit pulls it back into the slot (park position). The disc may be ejected when the ignition is off.

3. Press the OPEN/CLOSE hard-key to close the display. The display will close within 30 seconds after the disc is pulled from the mechanism.

Selecting Disc Mode

Toggle between the media and the radio menus by pressing the RADIO/MEDIA hard-key. The disc mode can be selected by touching the Disc tab soft-key.

Note: When a disc is inserted, the appropriate mode is automatically selected once the disc is recognized.

Scan Search

Touch the SCAN soft-key.

The individual tracks of the disc will be played in succession for 8 seconds each.

Select STOP SCAN soft-key to stop the scan function.



Next Track

Press the SEEK up hard-key. The next track on the disc is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.



Previous Track

Pressing the SEEK down hard-key plays the previous track. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 1 second when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed in the left center of the screen.

Select Title from list

Select LIST to display a list of the titles of the currently playing disc. Select the desired track you wish to play.
Select HIDE LIST to hide the list.

MEDIA

Disc Info

Select INFO to display Title, Artist, Album, Genre information in the right half of the screen.

Select CLOSE INFO to close the information.

Gracenote Music Recognition Technology



This navigation radio is equipped with the Gracenote Music Recognition Service, with an embedded database to look up album, song title, genre and artist information. Data will be found for most Audio CDs (CDA discs). Data will not be found for DVDs or data discs (those with MP3 or WMA files).

Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

Note: Visit <http://www.chrysler.com/mygig/> for update information.

Copy Disc to Hard-Drive

Read about copying discs in the Hard Disk Drive section of this manual.

Disc Menu

While in disc mode with inserted audio disc, press the MENU hard-key to access the Disc Menu.

Select Random to play the titles on the disc in random order. Select Random again to turn Random off.

Select Rpt. TRK to repeat the currently playing title. Touch the Rpt. TRK soft-key again to stop the repeat mode.

Playing a MP3/WMA Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.



A MP3/WMA disc may contain audio files in a folder structure. The folder, if any, are shown in the list view.

- Touch the LIST soft-key, if the list is not displayed.
- Touch a soft-key with a folder symbol to open a folder.



 
- Touch the BACK soft-key to close a folder.

MEDIA

Playing a Video DVD

To view a DVD video on the RER radio screen, the vehicle must be stopped.

Insert a video DVD first.

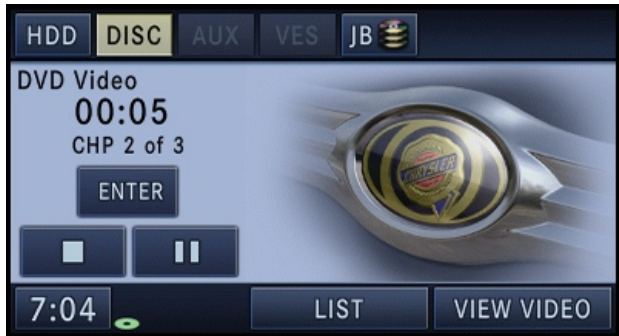

The playback starts automatically after the DVD video is recognized by the disc drive.

Touch the LIST soft-key to display a list of available chapters or tracks. Touch a chapter or track soft-key in the list to start playback from the selected section.


Touch the VIEW VIDEO soft-key to view the video on the screen.


DVD MENU Controls

If you insert a DVD video disc that contains a top menu, a menu may appear.



Touch the cursor arrows soft-keys to select the title you want to view, then touch the ENTER soft-key to start playback.

 
Touch the  soft-key to move the controls to the right part of the screen.


Touch the  soft-key to close the DVD MENU Controls.

DVD Playback Controls

In video playback mode touch anywhere on the screen to show the DVD playback controls.



To pause playback touch the  soft-key.

 
To stop playback touch the  soft-key.


Touch the  soft-key during playback to fast reverse playback.

Touch the  soft-key during playback to fast forward playback.

Touch the NEXT soft-key to locate succeeding chapters or tracks.

Touch the PREV soft-key to start playback from the beginning of the current chapter or track. When you press twice in quick succession, playback starts from the beginning of the preceding chapter or track.

Touch the  soft-key to move the controls to the right part of the screen.

Touch the  soft-key to close the DVD MENU Controls.

MEDIA

DVD Video Menu

While in disc mode with inserted video DVD, press the MENU hard-key to access the DVD Video Menu.



Touch the DVD Setup soft-key to access the DVD Setup menu.



In the DVD Setup menu you may select Menu Language, Audio Language, Subtitle, Camera Angle, Aspect Ratio, and Brightness settings by pressing the corresponding soft-key. Some of the soft-keys are disabled, if the inserted disc does not support the functionality.

Disc Skipping

Skipping is typically caused by a damaged (scratched) disc. This will result in a 10 second jump forward until the damaged area is passed.

Temperature Protection

If the temperature of the disc reader during operation becomes too high, a popup message will inform the user of an over temperature situation. The unit switches to radio mode until the disc reader temperature has dropped to a normal level.

MEDIA

Jukebox Mode (JB)

Overview

The jukebox can contain 12 favorite playlists of songs that reside on the internal hard disk drive.

The total capacity of the hard disk drive for music is about 6 gigabytes.

Selecting Jukebox Mode (JB)

Press the RADIO/MEDIA hard-key repeatedly until the Jukebox tab is shown on the screen. Touch the JB soft-key to access the Jukebox.



Touch the Jukebox Tab to activate the Jukebox mode.

Fill a Jukebox Album from Audio Disc

1. Touch the SHOW DISC soft-key to display a list of available albums.

Note: You cannot fill a Jukebox Album using a disc with MP3 and WMA files. To do this you must first copy the files to the HDD. Refer to the HDD mode in this manual.

When you open the Jukebox for the very first time, a popup menu gives you the option to fill the Jukebox.



2. Select an album slot by touching the corresponding ---NO ALBUM--- soft-key.

Note: Refer to the Edit Jukebox Album section in this manual in order to remove an album from the jukebox slot.



3. Touch the FROM DISC soft-key.
4. Touch the FROM DISC soft-key to open the display.
5. Insert the audio disc you would like to copy.
6. Touch the OK soft-key to confirm the copy process.

MEDIA



You may now switch to the DISC mode by touching the DISC soft-key tab to see the copy progress bar. Disc audio can not be heard in this mode.

Touch the COPY STOP soft-key to stop the copy process.

You may touch the JB soft-key tab after the first track is completed. The jukebox is able to start playing the copied tracks. The album soft-keys of unfinished tracks will be disabled until the track copy is complete.

You may remove the disc after all tracks are copied.

Fill a Jukebox Album from HDD Playlist

1. Touch the SHOW DISC soft-key to display a list of available albums.



2. Select an album slot by touching the corresponding ---NO ALBUM--- soft-key.

Note: Refer to the Edit Jukebox Album section in this manual in order to remove an album from the jukebox slot.



3. Touch the FROM LIST soft-key.
 4. Select an album from the Available Albums list by touching the soft-key with the corresponding album name.
- The selected album starts playing.

Clear a Jukebox Album Slot

1. Touch the JB soft-key tab to select the Jukebox mode.
2. Press the MENU hard-key to select the Jukebox Menu



3. Touch the Edit Jukebox soft-key.

MEDIA



4. Touch the CLEAR soft-key of the album you would like to remove.

Note: Clearing an album slot does not remove the playlist from the hard disk drive. Refer to the Edit a Playlist section in the HDD chapter in this manual.

Selecting a Jukebox Album (Playlist)

Touch the SHOW DISC soft-key to display a list of available albums.



Touch the album soft-key to select and play the desired album.

Touch the ---NO ALBUM--- soft-key to fill an empty album.

Touch the HIDE DISC soft-key to hide the album list.

Touch the LIST soft-key to display a list of songs in the currently playing album.