



Selecting a Track

Touch the LIST soft-key to display a list of available tracks in the selected album.

Touch the soft-key with the desired song name to select and play the track.

Touch the HIDE LIST soft-key to hide the track list.

Next Track

Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.



Previous Track

Press the SEEK down hard-key. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 1 second when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.



Note: By pressing and holding the SEEK button, the track counter advances until the button is released.

MEDIA

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed on the left side of the screen.

Jukebox Menu

While in JB mode press the MENU hard-key to access the Juke Box Menu.

Random Playback

The random play function plays random tracks from the current album. Touch the Random soft-key to switch the random play function on or off.

A red check-mark indicates the active random play function in the Juke Box Menu.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check-mark indicates the active repeat track function in the Juke Box Menu.

Edit Jukebox

1. While in JB mode press the MENU hard-key to access the Juke Box Menu.



2. Touch the Edit Jukebox soft-key either to clear a jukebox albums slot, or to fill an empty album slot.



Note: The CLEAR soft-key in the Edit JukeBox menu does not delete the playlist from the hard disk drive.

MEDIA

Hard Disk Drive Mode (HDD)

The HDD mode gives you access to the audio files on the internal hard disk drive. It functions similar to a CD player, with the exception that the internal HDD can hold more tracks. It can hold approximately 1,600 four-minute CD-quality songs.

Before using the HDD mode, you will need to copy tracks to the internal hard drive.

The files will be stored on the internal hard disk drive and can be used in the HDD mode, or for Jukebox albums.

 
Copy Audio Disc to Hard-Drive

1. Insert a disc.



2. Touch the Copy soft-key to copy music tracks of the inserted disc to the hard disk drive.

During the copy process, the disc player cannot play audio.

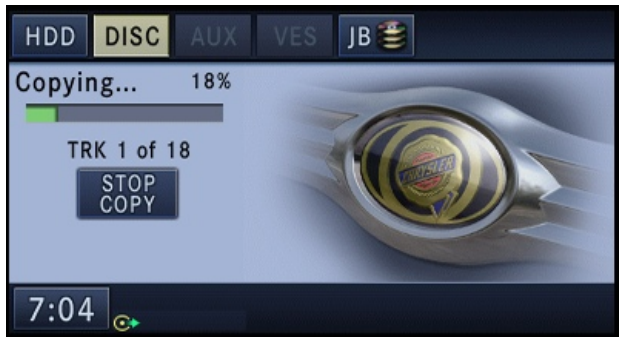

The copy progress is shown in the display.

It is possible to listen radio modes during this process. Copying time is greater than 5x the normal playback rate.


Note: When copying CD-Audio to HDD, audio files are converted from CD Audio to WMA. DVD-Audio cannot be copied to the HDD.

Copy WMA/MP3 Files to Hard-Drive

You can copy MP3, and WMA formatted compressed audio files from a disc or via USB (e.g., USB stick).

It is recommended to sort music files into folders.

Example:

<input type="checkbox"/>  MP3DISC	
Name	Kind
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.wma	Audio File
▼ My Playlist Folder1	Folder
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.mp3	Audio File

MEDIA

Songs located in the root level (top level) of the disc or USB device are saved in a playlist named Root_Level_Songs.

Once the songs are copied, the playlist will be named by the originating folder name.

For the example above the list on the HDD will show the following:

Disc_Root_Level Songs (Playlist 1)

Song 1.mp3 (First song in playlist 1)

Song 2.mp3 (Second song in playlist 1)

Song 3.wma (Third song in playlist 1)

My Playlist Folder 1 (Playlist 2)

01 Song.mp3 (First song in playlist 2)

02 Song.mp3 (Second song in playlist 2)

03 Song.mp3 (Third song in playlist 2)

Copying complete Disc

1. Insert a disc with MP3, WMA files.



2. Touch the Copy soft-key to copy music files of the inserted disc to the hard disk drive.

During the copy process, the disc player cannot play audio.



The copy progress is shown in the display.
It is possible to listen radio modes during this process.

Selective Song Copying from disc

You can select specific songs on a WMA/MP3 disc using the following procedure:



1. While in the DISC mode press the MENU hard-key to access the settings menu.

MEDIA



2. Touch the My Files soft-key.



3. Select My Music.



4. Touch the Import Music Files soft-key.
5. Touch the From DISC soft-key in the next screen .



6. Select the folders or titles you would like to copy.
A red check-mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.
7. Touch the DONE soft-key to start the copy process.
The copy process is shown on the display. It is possible to listen to radio modes during this process.
If you unplug or eject the media before the copying process is finished, the process will be interrupted. You may restart the copying process by repeating the steps above.

MEDIA

Copying from USB

1. Insert a USB device.

 


2. Select My Music.



3. Touch the Import Music Files soft-key.


4. Touch the From USB soft-key in the next screen.

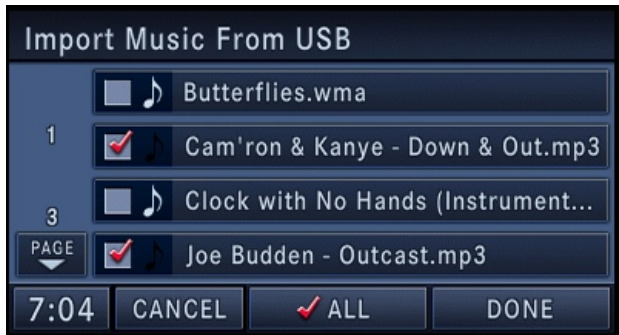

5. Select the folders or titles you would like to copy.
A red check-mark indicates the selected songs and/or folders.
Touch the ALL soft-key to select all files and folders at once.
6. Touch the DONE soft-key to start the copy process.


Playing Audio Files from the Hard Disk Drive

 You can play songs directly from the internal hard disk drive.

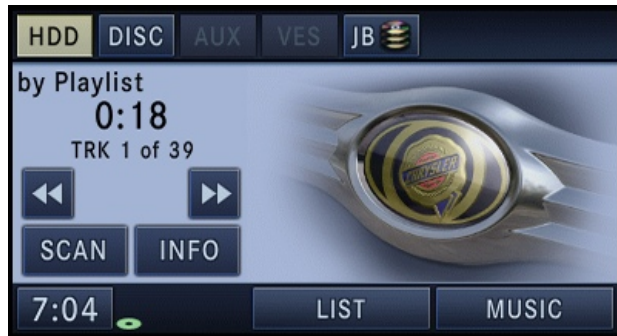


1. Touch the MUSIC soft-key to select an available category.
The navigation radio can sort the files by playlist, by song name, by artist, by genre, by album, or by year.

 MEDIA

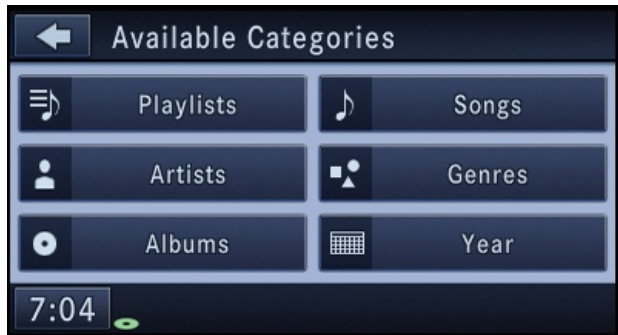

 2. Touch for this example the Playlists soft-key or the desired category soft-key.

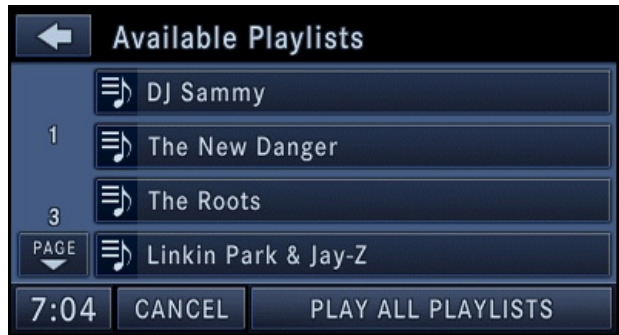

3. Touch a soft-key with the desired playlist name to play a playlist.

Touch the PLAY ALL PLAYLISTS soft-key to play all available playlists.



Next Track

Press the SEEK up hard-key. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track. If a track has been playing for more than 10 seconds when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track, instead of jumping to the previous track.



Previous Track

Press the SEEK down hard-key. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 10 seconds when SEEK down hard-key is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the  soft-key.

Rewind Track

Touch the  soft-key. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the  soft-key.

Displaying the Elapsed Title Time

The elapsed title time of the current playing track is displayed on the left side of the screen.

MEDIA

HDD Menu

While in HDD mode, press the MENU hard-key to access the HDD Menu.

Random Playback

The random play function plays random tracks from the hard disk drive. Touch the Random soft-key to switch the random play function on or off.

 
A red check-mark indicates the random play function is active.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check-mark indicates the repeat track function is active.

Editing Playlists on the Hard Disk Drive

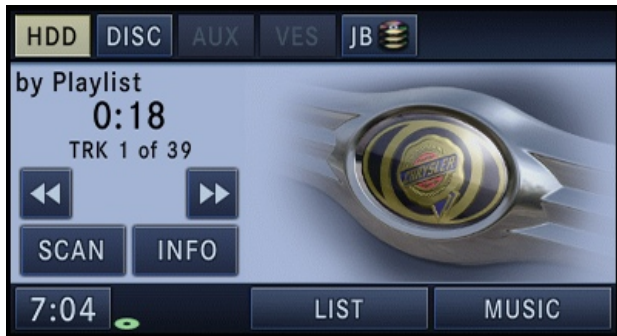

1. While in the HDD mode press the MENU hard-key to access the HDD Menu.



2. Touch the My Files soft-key.

 


3. Select My Music.

MEDIA




4. Touch the My Playlists soft-key.

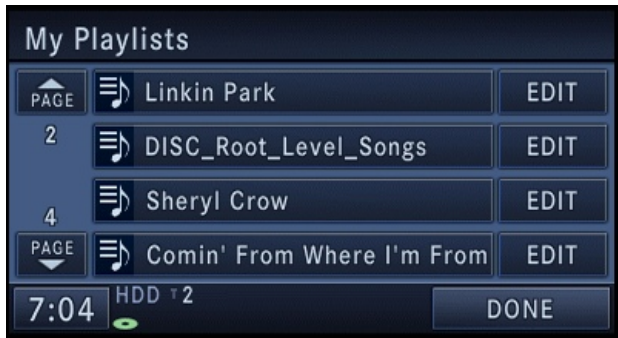

5. Touch the EDIT soft-key (example: DISC_Root_Level_Songs) of the playlist you would like to edit.

 You can rename the selected playlist, delete songs from the selected playlist, or delete the selected playlist.

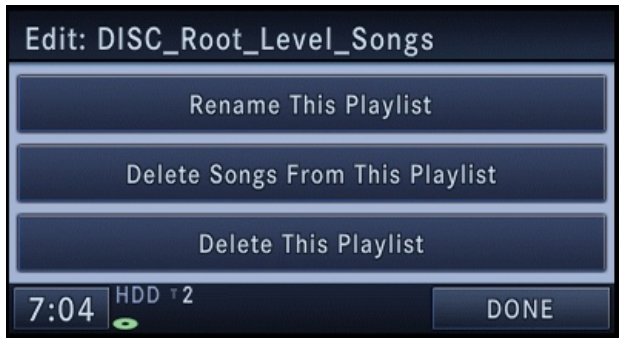

6. Touch the Rename This Playlist soft-key.

 
Note: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it, will be permanently deleted. Neither song nor playlist can be recovered.



7. Type in a new name for the playlist.

8. Touch the SAVE soft-key to confirm the name.

MEDIA

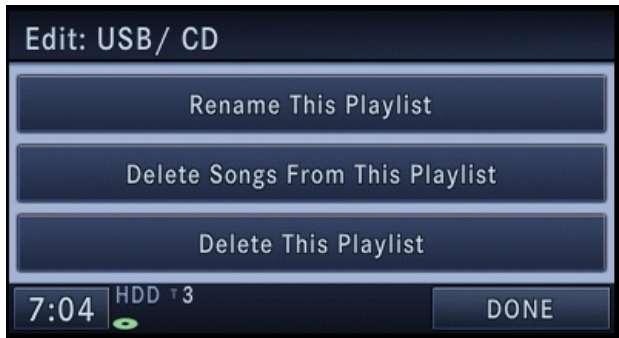

The playlist now has the new name.

9. Touch the Delete Songs From This Playlist soft-key.

Note: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it, will be permanently deleted. Neither song nor playlist can be recovered.



10. Select the titles you would like to delete.

A red check-mark indicates the selected songs.

 
11. Touch the DELETE soft-key to start the delete process.

Note: If you delete a song from the playlist, the song cannot be recovered.

12. Touch the DONE soft-key, when you are done editing the playlist.

Deleting All Playlists from the Hard Disk Drive

1. Press the MENU hard-key on the right side of the radio.
2. Touch the System Setup soft-key to access the System Setup menu.
3. Touch the Manage HDD soft-key to access the Manage HDD menu.

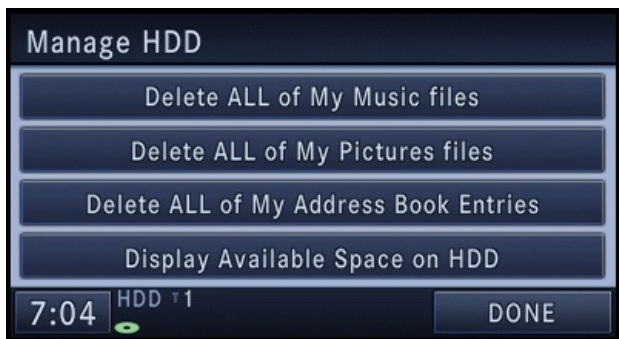


This menu displays the available space on the hard disk drive, and allows you to delete pictures, music files, and address book entries.

Importing Pictures

It is possible to import display pictures to the internal hard disk drive. The pictures can be displayed on the right half of the radio screen.

 Warning: It is not possible to copy files of a USB device while the vehicle is in motion.

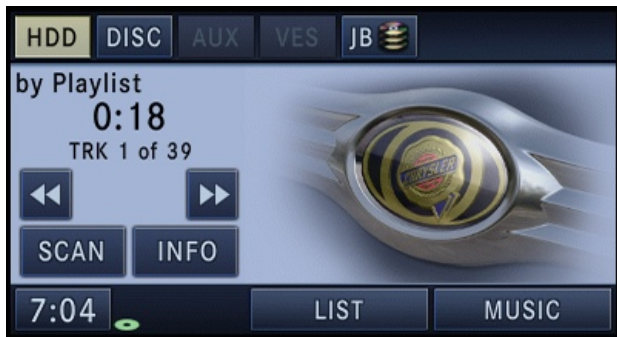

In the default mode, the vehicle brand logo is displayed in the right half of the screen. Press the Menu hard-key on the right side of the radio to access one of the setting menus.

MEDIA

It is recommended to change the picture dimensions on a PC or Digital Camera to 240 by 158 pixels before the import.

Note: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.



1. Touch the My Files soft-key to go to the Manage My Files Screen.

 


2. Touch the My Pictures soft-key to get an overview of the currently stored images.



The navigation radio can store 8 user pictures.

3. Press one of the Add Picture soft-keys.
4. Insert either a CD or a USB Stick containing your pictures.

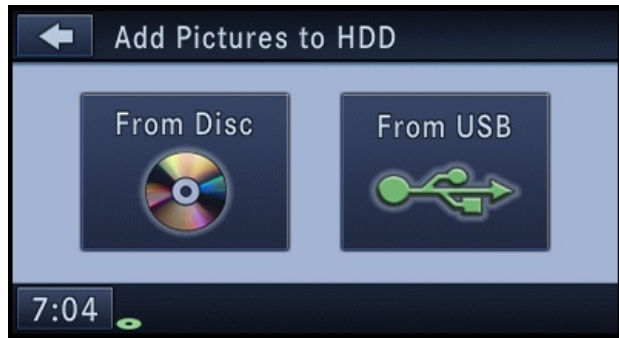

5. Select the type of media inserted.

MEDIA



6. Use the PAGE soft-keys to page through a list of pictures and press the picture you would like to import.

Note: Files must be in the root directory (top level) of the disc or USB device to be recognized.



7. Confirm your selection by touching the YES soft-key.



The imported picture is now available in the Manage My Pictures screen.

8. In order to display the imported picture in the radio screen, touch the desired picture soft-key.



9. Select this picture by pressing the Picture View soft-key. A check-mark indicates the currently used picture.

Use the PREV or NEXT soft-key to step through the list of available pictures.

Touch the DELETE soft-key to delete the picture from the hard disk drive.

10. Press the MENU hard-key twice and then touch the Picture View soft-key to enable the picture view.

MEDIA



The picture is now displayed on the right half of the screen.

Remote Devices

Vehicle Entertainment System™ (VES)

The navigation radio can remotely control the VES. Refer to the VES user's manual for more information.

Receiving audio/video from the VES

You can play audio from the VES through the vehicles speaker system. If you have a VES with a video player, you can also see the video on the radios display, if the vehicle is parked.



The VES tab becomes available after the VES system is turned on. Touch the VES MODES soft-key to select the VES audio source.

REMOTE DEVICES



Touch the soft-key with the desired source to play the selected source in the vehicle cabin.

Availability of the DVD Player soft-key, the Rear AUX 1 soft-key, and the Rear AUX 2 is based on the type of VES in the vehicle.

DVD Player is not available if there is no DVD player in the VES or there is no DVD in the player.

A device must be plugged in to the AUX jack of the VES to be available.

A disabled soft-key indicates an unavailable source. In this example the VES DVD Player is not available, and the Rear AUX 2 audio is playing on the navigation radio. You can play the VES source through the navigation radio sound system.

Sending audio/video and controlling the VES

The navigation radio can also control the VES.

All sources are played through the VES headphones.

Refer to the VES user's manual for more information on controlling the rear VES through the remote control.

To access the rear VES press the MENU hard-key on the right side of the radio.



Touch the Rear VES soft-key to display the Rear VES Controls.



The Rear VES Controls are displayed in the right half of the screen.

Note: Press the HIDE LIST soft-key, and/or the CLOSE INFO soft-key, if you cannot see the Rear VES Controls.

The upper row of tabs controls the headset audio channels 1, or 2. The third tab controls the VES on/off button.

A VES headset can listen to either audio channel 1 or audio channel 2.

REMOTE DEVICES

1 Touch the soft-key-tab 1 to select channel 1. In this example channel one plays the FM RADIO tuner audio.

The left half of the screen displays the audio source information, which is in this case the radio frequency 87.7 MHz of Preset 1. Touch the LIST soft-key to display the selected source details.



In this case the FM preset list within the selected tuner is displayed.

You may touch a preset soft-key to change the station, or touch the DIRECT TUNE soft-key to enter a frequency, or press the SEEK up or SEEK down hard-keys to change the radio station.

2 Touch the 2 soft-key-tab to set the desired audio source for the second VES audio channel. In this example channel two plays MEDIA from the HDD.



The left half of the screen displays the audio source information,

which is in this case track 19 of a playlist on the HDD of the navigation radio.

Touch the LIST soft-key to display the selected source details.



In this case the songs within the selected playlist are displayed.



 
The RADIO soft-key controls the AM/FM tuner, and the SAT tuner of the navigation radio.

Note: The navigation radio cannot play both AM or FM at the same time.

The MEDIA soft-key controls the HDD, DISC, and AUX audio source of the navigation radio.

The VES soft-key controls the DVD Player, Rear AUX 1, and Rear AUX 2 of the VES system.

REMOTE DEVICES

 Touch the on/off soft-key-tab to show the VES ON/OFF display. You may turn the VES system on or off.



Touch the Turn Rear VES OFF soft-key to shut the VES off.
Touch the Turn Rear VES ON soft-key to turn the VES on.

VES LOCK

Press the LOCK soft-key to disable the controls on the VES remote control unit. Once the VES is locked, it is not possible to use the VES controls or the VES remote control.

VES UNLOCK

Press the UNLOCK soft-key to enable the controls on the VES remote control unit.

Playing a Video DVD for the rear VES

1. To view a DVD video on the rear VES radio screen, insert a video DVD.



The playback starts automatically after the DVD video is recognized by the disc drive.

2. Press the MENU hard-key on the right side of the radio.



3. Touch the Rear VES soft-key to display the Rear VES Controls.

4. Touch the 1 soft-key-tab to select audio channel 1.



REMOTE DEVICES



5. Touch the MEDIA soft-key to select the media mode.
6. Touch the DISC soft-key to select the disc player.
7. Touch the PLAY VIDEO soft-key to start the video playback.

USB Connector

It is possible to transfer audio files or pictures files to the navigation radio. Files can be on a disc or on a USB device (e.g., USB stick). The USB connector is covered by a small cover, which protects the connector from dust or damage.

Note: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.

The transfer speed for this USB connector is approximately 2 megabytes per second.

MP3 player devices cannot be controlled through the USB connector. Some player devices save music files in MP4 format, which cannot be played in this radio. Some copy protected music (e.g., downloads from the internet) cannot be played on this radio.

Compatible devices

Please see your DaimlerChrysler Dealership or visit <http://www.chrysler.com/mygig/> for supported devices.

Note: Some MP3 Player do not allow songs to be copied into other devices.

How to open the cover



1. Place finger under the pull arrow.

 
REMOTE DEVICES




2. Pull forward.

Note: The flap is attached and should not be removed! Do not pull off of the frame. Do not use a tool (e.g. screw driver, nail file, etc.) to open the flap, as this could cause damage to the face of the radio.


How to close the cover

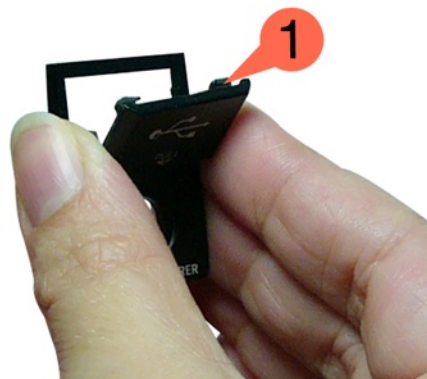

 1. Using your thumb and index finger, grasp the flap. Notice the hooks (1), which must first be inserted into the frame.

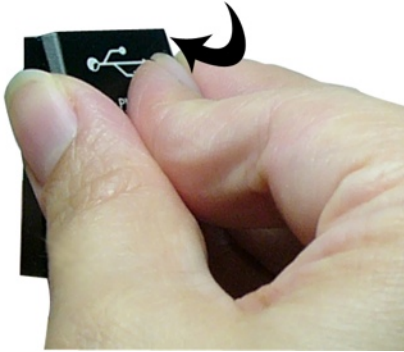

 2. Hook the top hooks (1) into the frame first.

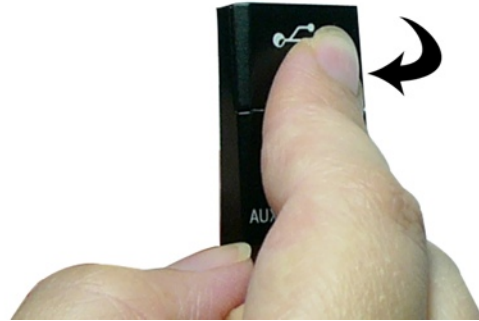

3. Then push on the bottom of the flap, to secure in place.

Caution: Never force any connector into the ports of your radio. Make sure your connectors are the identical shape and size before you connect.

REMOTE DEVICES

AUX Mode

The AUX connector allows you to connect the headset output of an audio device (e.g., MP3 player) to the navigation radio. The audio of the connected device will then be played through the navigation radio sound system.



Connect a 3.5 mm *stereo* mini-jack cable as shown above (not provided with the radio) to the AUX connector on the navigation radio and to the earphone connector of your audio device.

The display will switch automatically to the AUX mode, when a 3.5 mm *stereo* mini-jack cable has been connected. The radio screen will revert back to the last tuner mode when the cable is unplugged.

To change radio modes while the cable is connected to the unit, press the RADIO/MEDIA hard-key until the AUX tab is displayed on the top of the screen. Touch the AUX tab to return to the AUX mode.

Adjust the volume with the ON/OFF VOLUME knob, or with the volume of the attached device.

The control of the external device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead.

Note: Inserting of a *mono* jack will result in improper audio playback.

Speech Dialogue System

Voice Recognition System (VR)

This Voice Recognition System allows you to control your AM and FM radio, satellite radio, disc player, navigation system, hard disk drive storage, and a memo recorder.

WARNING: Any voice commanded system should be used only in safe driving conditions and all attention should be kept on the roadway ahead. In a stressful situation, take care to speak into the Voice Interface System as calmly and normally as possible. The ability of the Voice interface System to recognize user voice commands may be negatively affected by rapid speaking or a raised voice level.

When you press the VR hard-key, you will hear a beep. The beep is your signal to give a command.

Note: If you do not say a command within a few seconds, the system will present you with a list of options.

You can always recall the help menus by saying HELP.

If you ever wish to interrupt the system while it lists options, press the VR hard-key, listen for the beep, and say your command.

Pressing the VR hard-key while the system is speaking is known as “barging in”. The system will be interrupted and you can add

or change commands. This will become helpful once you start to learn the options.

Note: At any time you can say the words CANCEL, REPEAT, HELP, or MAIN MENU.

These commands are universal and can be used from any menu or screen. For other universal commands, refer to the command section in this manual.

All other commands can be used depending upon the active application.

For example: If you are in the navigation menu and you are listening to FM radio, you can speak commands from the navigation menu or from the FM radio menu.

When using this system, you should speak clearly and at a normal speaking volume.

The system will best recognize your speech if the windows are closed, and the heater- / air-conditioning fan is set to low.

At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.

To hear the first available Menu, press the VR hard-key and say HELP or MAIN MENU.

SPEECH DIALOGUE SYSTEM

Display Menu

In addition to audible help, the navigation radio is able to display the most important available commands on the screen.

Note: Press the green voice recognition help screen to CANCEL the currently active voice command session.



Commands

The Voice Recognition understands two types of commands. Global commands are available at all times. Local commands are available if the supported radio mode is active.

Changing the volume

1. Start a dialogue by pressing the VR hard-key.
2. Say a command (e.g., HELP).
3. Use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the voice recognition system is speaking.

Main Menu

Start a dialogue by pressing the VR hard-key.

You may say MAIN MENU to switch to the SDS main menu.

In this mode you can say the following commands:

- RADIO (to switch to the radio mode)
- HARD DRIVE (to switch to the HDD mode)
- DISC (to switch to the disc mode)
- VES (to switch to the VES mode)
- MEMO (to switch to the memo recorder)
- NAVIGATION (to switch to the navigation mode)
- SYSTEM SETUP (to display the system setup menu)

Radio Menu

You may say RADIO to switch to AM, FM, or SAT.

Say RADIO MENU.

In this mode you may say the following commands:

- RADIO AM (to switch to the AM band)
- RADIO FM (to switch to the FM band)
- SATELLITE RADIO (to switch to the satellite radio)

Radio AM

To switch to the AM band say AM or RADIO AM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Radio FM

To switch to the FM band say FM or RADIO FM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)

- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Satellite Radio

To switch to satellite radio mode say SAT or SATELLITE RADIO.

In this mode you may say the following commands:

- STATION (1-250) (to change the station)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- LIST STATIONS (to hear a list of available stations)
- SELECT NAME (to say the name of a station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Disc

To switch to the disc mode say DISC.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

SPEECH DIALOGUE SYSTEM

Hard Drive

To switch to the HDD mode say HARD DRIVE.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

VES

To switch to the VES mode say V E S.

In this mode you may say the following commands:

- VES
- VES REMOTE LOCK (to lock the VES remote)

Memo

To switch to the voice recorder mode say MEMO.

In this mode you may say the following commands:

- NEW MEMO (to record a new memo)

During the recording you may press the VR hard-key to stop recording. You continue by saying one of the following commands:

- SAVE (to save the memo)
- CONTINUE (to continue recording)

- DELETE (to delete the recording)

- PLAY MEMOS (to play previously recorded memos)

During the playback you may press the VR hard-key to stop playing memos. You continue by saying one of the following commands:

- REPEAT (to repeat a memo)
- NEXT (to play the next memo)
- PREVIOUS (to play the previous memo)
- DELETE (to delete a memo)

- DELETE ALL (to delete all memos)

Note: Keep in mind that you have to press the VR hard-key first and wait for the beep, before speaking the “barge in” commands.

Navigation

To switch to the navigation mode say NAVIGATION.

Note: Not all commands will be available at all times, depending upon the system context.

Note: Read the navigation chapter first, to help you understand the functionality of the available commands.

You may say:

- DESTINATION ENTRY
 - GUIDE ME TO A NAME

- STREET ADDRESS
 - .. INPUT COUNTRY
 - .. INPUT STATE
 - .. INPUT CITY NAME
 - .. INPUT STREET NAME
 - .. INPUT HOUSE NUMBER
- POI
 - .. FIND NEARBY POI
 - .. FIND POI NEAR DESTINATION
 - .. FIND WITHIN A CITY
 - .. INPUT PHONE NUMBER
 - .. SELECT POI ICONS
- ADVANCED INPUT
 - .. INPUT ZIP CODE
 - .. INTERSECTION
 - .. CANCEL DESTINATION ENTRY
- RECENT DESTINATIONS
- ROUTING OPTIONS
 - GO
 - STOP ROUTING
 - MUTE GUIDANCE
 - REPEAT GUIDANCE
 - CHANGE METHOD

- .. FASTER ROUTE
- .. SHORTER ROUTE

- TRAVEL INFO
- MAP
- ADDRESS BOOK
 - NEW ENTRY
 - NAVIGATE TO A NAME
 - DELETE
 - ERASE ALL

System Setup

To switch to the system setup say SETUP.

You can say:

- LANGUAGE
 - ENGLISH
 - SPANISH
 - FRENCH
- VOICE TRAINING
- HELP SCREEN
 - ON
 - OFF
- TUTORIAL

SPEECH DIALOGUE SYSTEM

Voice Training

For users experiencing difficulty with the system recognizing their voice commands or numbers, the UConnect system Voice Training feature may be used.

1. Press the VR hard-key.
2. Say VOICE TRAINING.

This will train your own voice to the system and will improve recognition.

Repeat the words and phrases when prompted by the UConnect System. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched off.

This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

If the system does not understand the words VOICE TRAINING:

1. Press the MENU hard-key.
2. Press System Setup.
3. Press the Voice Recognition hard-key to access the Voice Recognition menu.

Note: Voice Training does not alter the capability of the system to recognize other people's voices. It gives the recognition system additional information about your voice.



- Touch the Show Help Screens During VR Sessions to show or hide the help screens when using the speech dialog system.
- Touch the Reset VR System to Factory Defaults when you would like to restore the Voice recognition system to factory default settings.
- Touch the Start Voice Training soft-key to train the voice recognition system.

- Touch the Listen to Tutorial soft-key to hear instructions on voice training.

Note: With rolled down windows, the system performance may be compromised.

In a convertible vehicle, the system performance may be compromised with roof top down.

The Rear view mirror top should be at least 1/2 inch below the overhead console.

Hands Free Cellular Telephone

UConnect™ Overview

UConnect™ is a voice-activated, hands-free, in vehicle communications system. UConnect™ allows you to dial a phone number with your cellular phone using simple voice commands (e.g., “Call” ... “Jim” ... Work” or “Dial” ... “248-555-1212”). Your cellular phone’s audio is transmitted through your vehicle’s audio system; the system will automatically mute your radio when using the UConnect™ system.

Compatible Phones

See the UConnect™ site on <http://www.chrysler.com/mygig/> for a current list of compatible cellular phones and any limitations your phone might have.

Warning: Any voice commanded system should only be used in safe driving conditions and your attention should be kept on the road ahead.

If your cellular phone supports a different profile (e.g., Headset Profile), you may not be able to use any UConnect™ features. Refer to your cellular service provider or the phone manufacturer for details.

SPEECH DIALOGUE SYSTEM

The UConnect™ system is fully integrated with the vehicle's navigation radio audio system. The volume of the UConnect™ system can either be adjusted from the radio volume control knob, or from the steering wheel radio control, if so equipped.

The radio display will be used for visual prompts from the UConnect™ system such as “Incoming Call”, duration of the call, or caller ID.

UConnect™ allows you to transfer calls between the system and your cellular phone as you enter or exit your vehicle, and enables you to mute the system's microphone for private conversations.

The UConnect™ phonebook enables you to store up to 500 names and four numbers per name.

Bluetooth

This system is driven through your Bluetooth™ Hands-Free profile cellular phone. UConnect™ features Bluetooth™ technology – the global standard that enables different electronic devices to connect to each other without wires or a docking station, so UConnect works no matter where you stow your cellular phone

(be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's UConnect™ system. The UConnect™ system allows up to seven cellular phones to be linked to the system. Only one linked (or paired) cellular phone can be used with the system at a time.

See <http://www.bluetooth.org> for more information on bluetooth.

UConnect™ microphone

The rearview mirror contains the microphone for the system and the radio has the two control hard-keys that will enable you to access the system.

Please remember, the UConnect™ system works best when you talk in a normal conversational tone, as if speaking to someone sitting eight feet away from you.

Say phone numbers as you normally would with a pause between the sets of digits. Speak aloud names as you would normally.

If the system does not recognize one of your commands, you will be prompted to repeat it.

If you have trouble with recognition, you should press the VR hard-key, then say Voice Training. This will train your own voice to the system and will improve recognition.

You may always exit the system by saying CANCEL. Other universal commands include HELP and MAIN MENU.

Operations

Voice commands can be used to operate the UConnect™ system and to navigate through the UConnect™ menu structure. Voice commands are required after most UConnect™ system prompts. You will be prompted for a specific command and then guided through the available options.

UConnect™ hard-key

When you press the UConnect™ hard-key you will hear the word UConnect™ followed by a BEEP. The beep is your signal to give a command.

Note: If nothing is said within a few seconds, the system will present a list of menu options.

Listen to the choices and give your command after the beep.

Barge In – Overriding Prompts

The ‘Voice Recognition’ button can be used when you wish to skip part of a prompt and issue your voice recognition command immediately. For example, if a prompt is playing “Would you like to pair a phone, clear a...,” you could press the ‘VR hard-key and say “Pair a Phone” to select that option without having to listen to

the rest of the voice prompt.

Pressing the VR hard-key while the system is speaking is known as “barging-in”. Barging-in must be done with the VR hard-key.

Help Command

If you need assistance at any prompt or if you want to know what your options are at any prompt, say “Help” following the beep. The UConnect™ system will play all the options at any prompt if you ask for help.

To activate the UConnect™ system from idle, simply press the UConnect™ hard-key and follow audible prompts for directions. All UConnect™ system sessions begin with a press of the UConnect™ hard-key.

Cancel Command

At any prompt, after the beep, you can say “Cancel” and you will be returned to the main menu. However, in a few instances the system will take you back to the previous menu.

SPEECH DIALOGUE SYSTEM

Pair (Link) to a Cellular Phone

To begin using your UConnect™ system, you must pair your compatible Bluetooth™ enabled cellular phone (refer to “Introduction” section to learn about the phone type). To complete the pairing process, you will need to reference your cellular phone owner’s manual. One of the following vehicle specific websites may also provide detailed instructions for pairing with the brand of phone that you have:

www.chrysler.com/uconnect or www.dodge.com/uconnect or www.jeep.com/uconnect

Phone pairing can either be done using the touch screen (see Getting Started section in this manual) or using voice commands.

Pairing will walk you through a series of steps that will establish a connection between your handset and the UConnect™ system in the vehicle.

Once set up, you do not need to re- pair your phone with each use. However, every new phone must be paired before it can be used.

The following are general phone to UConnect™ System voice pairing instructions:

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONE PAIRING.
4. When prompted, after the beep, say PAIR A PHONE and follow the audible prompts.
5. You will be asked to say a four-digit pin number which you will later need to enter into your cellular. You can enter any four-digit pin number. You will not need to remember this pin number after the initial pairing process.
6. The UConnect™ system will then prompt you to begin the cellular phone pairing process on your cellular phone. Before attempting to pair phone, please see your cellular phone’s user manual (Bluetooth section) for instructions on how to complete this step.
7. For identification purposes, you will be prompted to give the UConnect™ system a name for your cellular phone. Each cellular phone that is paired should be given a unique phone name.
8. You will then be asked to give your cellular phone a priority level between 1 and 7, 1 being the highest priority.

You can pair up to seven cellular phones to your UConnect™ system. However, at any given time, only one cellular phone can be in use, connected to your UConnect™ System. The priority allows the UConnect™ system to know which cellular phone to use if multiple cellular phones are in the vehicle at the same time.

For example, if priority 3 and priority 5 phones are present in the vehicle, the UConnect™ system will use the priority 3 cellular phone when you make a call. You can select to use a lower priority cellular phone at any time (refer to “Advanced Phone Connectivity” section).

Dial by Saying a Number

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say DIAL.
4. When prompted, after the beep, say the number you want to call.

For example, you can say “234-567-8901.” The phone number that you enter must be of valid length and combination. Based on the Country in which the vehicle was purchased, the UConnect™ limits the user from dialing invalid combination of numbers. For

example, in USA, 234-567-890 is nine digits long, which is not a valid USA phone number - the closest valid phone number has ten digits.

5. The UConnect™ system will ask you to confirm the phone number and then dial. The number will appear in the display of the navigation radio.

Call by Saying a Name

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say CALL.
4. When prompted, after the beep, say the name of the person you want call.

For example, you can say “John Doe,” where John Doe is a previously stored name entry in the UConnect™ phonebook. Refer to section “Add Names to Phonebook,” to learn how to store a name in the phonebook.

5. The UConnect™ system will ask you to confirm the name and then dial the corresponding phone number, which will appear in the display of the navigation radio.

SPEECH DIALOGUE SYSTEM

Phone Book

Accessing the phone book can either be done using the touch screen (see Address Book section in this manual) or using voice commands.

The UConnect™ PHONE BOOK accesses the same database as the navigation radios ADDRESS BOOK.

Add Names to Phonebook

Adding names to phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say NEW ENTRY.

Use of long names helps the voice recognition and is recommended. For example, say “Robert Smith” or “Robert” instead of “Bob.”

5. When prompted, enter the number designation (e.g.: “Home,” “Work,” “Mobile,” or “Pager”). This will allow you to store multiple numbers for each phonebook entry, if desired.

6. When prompted, confirm the phone number for the phonebook entry that you are adding.

7. After you are finished adding an entry into the phonebook, you will be given the opportunity to add more phone numbers to the current entry or to return to the main menu.

The navigation radio will allow you to enter up to 500 names in the phone book with each name having addresses, and up to four associated phone numbers, and designations.

Voice Tags

In step 4 of the Add Names to Phonebook section, the navigation radio is recording your voice. The recording is called Voice Tag. You may edit, delete, or listen to the voice tag in the contact information menu (refer to the Address Book section in this manual for more details).

Note: Only voice tags are saved in regards to the currently selected system language setting. If you switch the language, your voice tag may not be available.

Edit Phonebook Entries

Editing names in the phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say EDIT ENTRY.
5. You will then be asked for the name of the phonebook entry that you wish to edit.
6. Next, choose the number designation (home, work, mobile, or pager) that you wish to edit.
7. When prompted, recite the new phone number for the phonebook entry that you are editing.

After you are finished editing an entry in the phonebook, you will be given the opportunities to edit another entry in the phonebook, call the number you just edited, or return to the main menu.

“Phonebook Edit” can be used to add another phone number to a name entry that already exists in the phonebook. For example, the entry John Doe may have a mobile and a home number, but you can add John Doe’s work number later using the “Phonebook Edit” feature.

Delete Phonebook Entry

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say DELETE ENTRY.
5. After you enter the Phonebook Delete menu, you will then be asked for the name of the entry that you wish to delete.

You can either say the name of a phonebook entry that you wish to delete or you can say “List Names” to hear a list of the entries in the phonebook from which you choose.

6. To select one of the entries from the list, press the “Voice Recognition” hard-key while the UConnect™ system is speaking the desired entry and say DELETE.

After you enter the name, the UConnect™ system will ask you which designation you wish to delete: home, work, mobile, pager or all.

7. Say the designation you wish to delete.

SPEECH DIALOGUE SYSTEM

Delete/Erase “All” Phonebook Entries

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say ERASE ALL.
5. The UConnect™ system will ask you to verify that you wish to delete all the entries from the phonebook.

After confirmation, the phonebook entries will be deleted.

List All Phonebook Names

1. Press the UConnect™ hard-key to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say LIST NAMES.

The UConnect™ system will play the names of all the phonebook entries.

5. To call one of the names in the list, press the “Voice Recognition” hard-key during the playing of the desired name and say CALL.

Note: You can also exercise “Edit” or “Delete” operations at this point.

6. The UConnect™ system will then prompt you as to the number designation you wish to call.
7. The selected number will be dialed.

Phone Call Features

The following features can be accessed through the UConnect™ system if the feature(s) are available on your cellular service plan. For example, if your cellular service plan provides three-way calling, this feature can be accessed through the UConnect™ system. Check with your cellular service provider for the features that you have.

Answer or Reject an Incoming Call when no Call Currently in Progress:

When you receive a call on your cellular phone, the UConnect™ system will interrupt the vehicle audio system, and will ask if you would like to answer the call.

1. Press the UConnect™ button to accept the call.
2. To reject the call, press and hold the UConnect™ button until you hear a single beep indicating that the incoming call was rejected.