



Uconnect™ 6.5"  
Radio Nav

*Giulietta*





# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	<b>3</b>	PREVIOUS/NEXT RADIO STATION	DELETION OF A MOBILE PHONE OR A <b>Bluetooth</b> ® AUDIO DEVICE .....	21	
<b>TIPS, CONTROLS AND GENERAL INFORMATION</b> .....	<b>4</b>	FAST SEARCH.....	21	SETTING A MOBILE PHONE OR A <b>Bluetooth</b> ® AUDIO DEVICE AS FAVOURITE.....	21
TIPS.....	4	AM/FM RADIO STATION TUNING ..	13	TRANSMISSION OF PHONE DATA (PHONEBOOK AND RECENT CALLS) .....	22
MULTIMEDIA DEVICES: SUPPORTED AUDIO FILES AND FORMATS.....	4	DAB RADIO .....	13	DELETION OF PHONE DATA (PHONEBOOK AND RECENT CALLS) .....	22
NOTES ON TRADEMARKS.....	4	SETTING THE PRESETS.....	13	MAKING A PHONE CALL .....	22
EXTERNAL AUDIO SOURCES .....	5	AUDIO SETTINGS.....	14	MANAGING AN INCOMING CALL .	23
ANTI-THEFT PROTECTION.....	5	<b>MEDIA MODE</b> .....	<b>15</b>	MAKING A SECOND PHONE CALL .....	23
SAFETY SETTINGS.....	6	AUDIO SOURCE SELECTION .....	15	MANAGING TWO PHONE CALLS .	24
NAVIGATION ACTIVATION .....	6	TRACK CHANGE (previous/next) ...	16	ENDING A CALL .....	24
GPS (Global Positioning System) RECEPTION.....	6	TRACK FAST		REDIALLING .....	24
TECHNICAL SPECIFICATIONS .....	6	FORWARD/REWIND .....	16	CONTINUING A PHONE CALL .....	24
BASIC LEVEL SYSTEM.....	6	TRACK SELECTION (Browse) .....	16	ACTIVATION/DEACTIVATION OF THE MICROPHONE.....	24
MEDIUM LEVEL SYSTEM.....	6	TRACK INFORMATION DISPLAY ...	16	TRANSFERRING A CALL.....	24
BOSE HI-FI LEVEL SYSTEM .....	6	RANDOM TRACK		SMS MESSAGE READER.....	24
<b>QUICK REFERENCE GUIDE</b> .....	<b>8</b>	REPRODUCTION.....	17	SMS MESSAGE OPTIONS .....	25
CONTROLS ON FRONT PANEL ...	8	TRACK REPETITION.....	17	<b>"MORE" MODE</b> .....	<b>25</b>
FRONT PANEL CONTROL		<b>SOURCE Bluetooth</b> ® .....	<b>17</b>	CLOCK .....	25
SUMMARY TABLE .....	9	PAIRING A <b>Bluetooth</b> ® AUDIO DEVICE .....	17	MEDIA MODE .....	25
<b>STEERING WHEEL CONTROLS..</b>	<b>10</b>	<b>USB/IPOD SUPPORT</b> .....	<b>18</b>	COMPASS .....	25
DESCRIPTION .....	10	USB/iPod MODE .....	18	OUTSIDE TEMPERATURE .....	25
STEERING WHEEL CONTROL		<b>SD CARD SUPPORT</b> .....	<b>18</b>	SETTINGS .....	25
SUMMARY TABLE .....	11	SD Card.....	18	<b>NAVIGATION MODE</b> .....	<b>28</b>
<b>SWITCHING THE SYSTEM ON/OFF</b> .....	<b>12</b>	<b>AUX SUPPORT</b> .....	<b>18</b>	MAIN NAVIGATION MENU .....	28
SWITCHING THE SYSTEM ON/OFF .....	12	<b>PHONE MODE</b> .....	<b>19</b>	WHERE TO? .....	28
RADIO (TUNER) MODE .....	12	PHONE MODE ACTIVATION .....	19	VIEW MAP .....	33
RADIO MODE SELECTION .....	12	MAIN FUNCTIONS.....	19		
SELECTING A FREQUENCY		DISPLAYED INFORMATION .....	19		
BAND .....	12	PAIRING A MOBILE PHONE .....	19		
INFORMATION ON DISPLAY.....	12	STORING NAMES/NUMBERS IN THE MOBILE PHONE			
		PHONEBOOK .....	20		
		CONNECTION/DISCONNECTION OF A MOBILE PHONE OR A <b>Bluetooth</b> ® AUDIO DEVICE.....	20		

INFORMATION.....	35
<b>DRIVING MODES.....</b>	<b>37</b>
DRIVING MODE (DNA)	
INFORMATION ACTIVATION .....	37
<b>VOICE COMMANDS.....</b>	<b>38</b>
INFORMATION ON VOICE	
COMMANDS .....	38
VOLUME LEVEL ADJUSTMENT.....	38
USE OF THE VOICE COMMANDS .	38
USE OF STEERING WHEEL	
CONTROLS TO ACTIVATE VOICE	
COMMANDS .....	39
VOICE SESSION STATUS .....	39
MULTIPLE CHOICE.....	39
GLOBAL VOICE COMMANDS .....	41
PHONE VOICE COMMANDS .....	42
RADIO AM/FM/DAB VOICE	
COMMANDS .....	46
MEDIA VOICE COMMANDS .....	48
NAVIGATION VOICE COMMANDS .	51
SMS MESSAGE READER VOICE	
COMMANDS .....	52
VOICE COMMANDS DURING A	
CALL .....	53
<b>CUSTOMER SERVICE</b>	
<b>NUMBER LIST .....</b>	<b>54</b>

# INTRODUCTION

The car is equipped with an infotematic system designed according to the specific characteristics of the passenger compartment, with a customised design that matches the style of dashboard.

The system is installed in an ergonomic position for the driver and passenger, and controls can be quickly located from the graphical display on the front, making the device easy to use.

To increase protection against theft, the system has a protection system that only allows it to be used on the vehicle in which it was originally fitted.

The instructions for use are given below and we recommend you read them carefully and always keep them to hand (for example, in the glove compartment).

Enjoy reading. Happy motoring!


**The information in this publication is provided by way of example. Fiat Group Automobiles S.p.A. can modify the specifications of the vehicle model described in this publication at any time, for technical or marketing purposes. For further information, contact an Alfa Romeo Dealership.**

## TIPS, CONTROLS AND GENERAL INFORMATION

### TIPS

#### Road safety

Learn how to use the various system functions before setting off.


Read the instructions for the system carefully before setting off.  1) 2)

#### Reception conditions

Reception conditions change constantly while driving. Reception may be interfered with by the presence of mountains, buildings or bridges, especially when you are far away from the broadcaster.

**IMPORTANT** The volume may be increased when receiving traffic alerts and news.

#### Care and maintenance

Observe the following precautions to ensure the system is fully operational:  1)

- the display is sensitive to scratching, liquids and detergents. The display should not come into contact with pointed or rigid objects which could damage its surface. Do not press on the display when cleaning it.
- prevent any liquid from entering the system: this could damage it beyond repair.

### Important information

In the event of a fault, the system must only be checked and repaired by an Alfa Romeo Dealership.

If the temperature is particularly low, the display may take a while to reach optimum brightness.

If the car is stopped for a while and the external temperature is very high, the system may go into "thermal protection" mode, suspending operation until the radio temperature returns to acceptable levels.

### MULTIMEDIA DEVICES: SUPPORTED AUDIO FILES AND FORMATS

For SD, USB and iPod sources the system can play files with the following extensions and formats:

- .MP3 (32 – 320 kbps);
- .WAV;
- .WMA (5 – 320 kbps) mono and stereo;
- .AAC (8 – 96 kHz) mono and stereo;
- .M4A (8 – 96 kHz) mono and stereo;
- .M4B (8 – 96 kHz) mono and stereo;
- .MP4 (8 – 96 kHz) mono and stereo.

For all sources, the system can also play the following Playlist formats:

- .M3U
- .WPL

**NOTE** It makes no difference whether the suffixes are written in capital or small letters.

## NOTES ON TRADEMARKS

iPod, iTunes and iPhone are registered trademarks of Apple Inc.

All other trademarks are the property of their respective owners.



Apple is not responsible for the operation of this device and of its conformity with the safety rules and standards.



The DAB/DAB+/DMB Digital Radio function has been certified according to the specifications of the "ARD" white sticker, for Class A - Audio services. ARD is a trademark of the Associazione per la Radiofonia Digitale in Italia.

## EXTERNAL AUDIO SOURCES

Other electronic devices (e.g. iPod, PDA, etc.) can be used on the car.

Some of them may cause electromagnetic interference however. Disconnect these devices if the system performance worsens.

NOTE The system supports only FAT32-formatted USB devices. The system does not support devices with a capacity higher than 64 GB.

## ANTI-THEFT PROTECTION

The system is equipped with an anti-theft protection system based on the exchange of information with the electronic control unit (Body Computer) on the car.

This guarantees maximum safety and prevents the secret code from being entered after the power supply has been disconnected.

If the check has a positive outcome, the system will start to operate, whereas if the comparison codes are not the same or if the electronic control unit (Body Computer) is replaced, the system will ask the user to enter the secret code according to the procedure described in the paragraph below.

## Entering the secret code

When the system is switched on, if the code is requested, the display will show "Please enter Anti-Theft Code" followed by the video page showing a keypad to enter the secret code.

The secret code is made up of four digits, from 1 to 9: to insert the first number of the code press the corresponding key on the display. Enter the other code digits in the same way.

After entering the fourth figure, the system begins operating.

If an incorrect code is entered, the system displays "Incorrect Code. Please Try Again" to notify the user of the need to enter the correct code.

After the 3 available attempts to enter the code, the system displays "Incorrect Code. Radio locked. Please wait 30 minutes": the waiting time is displayed. Once the text has disappeared you can start the code entering procedure again.

## SAFETY SETTINGS

You are advised to use the safety settings to make driving as safe as possible.

A few options among the safety settings are listed below:

- display of menu buttons which are essential while driving;
- display of safety warnings;
- alert if speed limits are exceeded.

For safer driving, use voice commands to control navigation (see "Voice commands" chapter).

## Important information

Look at the screen only when it is necessary and safe. If you need to look at the screen for a long time, pull over to a safe place so as not to be distracted while driving.

Immediately stop using the system in the event of a fault. Otherwise the system might be damaged. Contact an Alfa Romeo Dealership as soon as possible to have the system repaired.

## NAVIGATION ACTIVATION

Press the NAV button on the front panel to activate navigation mode.

When navigation is activated for the first time, it is necessary to respond to some configuration questions: respond by touching the screen.

## GPS (Global Positioning System) RECEPTION

The GPS is a satellite system which provides worldwide information about time and position. The GPS is exclusively controlled by the government of the United States of America, the only party responsible for the availability and accuracy of this system. The operation of this navigation system can be influenced by any change made to the availability and precision of the GPS or by specific environmental conditions.

When navigation is started for the first time, the system may require several minutes to determine the GPS position and display the current position on the map. Afterwards the position will be found much more quickly (usually a few seconds are required).

The presence of big buildings (or similar obstacles) may sometimes interfere with the GPS signal reception.

## TECHNICAL SPECIFICATIONS

Model: VP4

Maximum Power: 4 x 30W

Operating Temp: -40C -> +65C

Rated Ambient Temp: 55C

Operation Voltage: 9 -> 16 VDC

(13.4 Nominal)

Weight: 1.58 kg

Dimensions: 234x150x100mm

## BASIC LEVEL SYSTEM

### Standard level audio

*Front speakers*

- 2 × Ø 38 mm tweeters;
- 2 × Ø 165 mm mid-woofer speakers.

*Rear speakers*

- 2 × Ø 165 mm full-range speakers.

## MEDIUM LEVEL SYSTEM

### Medium level audio

*Front speakers*

- 2 × Ø 38 mm tweeters;
- 2 × Ø 165 mm mid-woofer speakers.

*Rear speakers*

- 2 × Ø 38 mm tweeters;
- 2 × Ø 165 mm mid-woofer speakers.



## **BOSE HI-FI LEVEL SYSTEM**

(for versions/markets, where provided)

### **HI-FI level audio**

#### *Front speakers*

- 2 × Ø 39 mm tweeters;
- 2 × Ø 165 mm mid-woofer speakers;
- 1 × tweedler (Centerfill) speaker fitted in the dashboard.

#### *Rear speakers*

- 2 × Ø 39 mm tweeters;
- 2 × Ø 165 mm mid-woofer speakers;
- 1 × 8-channel amplifier;
- 1 × bass box.

The Bose Hi-Fi audio system has been carefully designed to provide the best acoustic performance and reproduce sound like a live concert in all areas of the passenger compartment.

The system faithfully reproduces crystalline high tones and full bass tones.

The complete range of sound is reproduced throughout the entire passenger compartment so that the occupants are enveloped with the feeling of space experienced when listening to live music.

The components used have been patented and make use of the most sophisticated technology whilst at the same time being easy to use by even the most inexperienced people.



### **WARNING**

- 1) Follow the safety rules below: otherwise serious injuries may occur to the occupants or the system may be damaged.**
- 2) If the volume is too loud this can be dangerous. Adjust the volume so that you can still hear background noises (e.g. horns, ambulances, police vehicles, etc.).**



### **IMPORTANT**

- 1) Only clean the front panel and the display with a soft, clean, dry, anti-static cloth. Cleaning and polishing products may damage the surface. Do not use alcohol or similar products to clean the panel or the display.**






# QUICK REFERENCE GUIDE

## CONTROLS ON FRONT PANEL



A0K0253

## FRONT PANEL CONTROL SUMMARY TABLE

Button	Functions	Mode
1 	Turn on	Short button press
	Turn off	Short button press
	Adjust volume	Left/right rotation of knob
2 	Volume on/off (Mute/Pause)	Short button press
3 	Display on/off	Short button press
4 	Access to the Vehicle Settings menu	Short button press
5 	Exit from selection/return to previous screen	Short button press
6 – <b>BROWSE ENTER</b>	Scroll list or tune to a radio station	Left/right rotation of knob
	Confirm displayed option	Short button press
7 – <b>MORE</b>	Access to the additional functions: display of Time, Compass, Outside temperature, Media Player	Short button press
8 – <b>PHONE</b>	Phone data displaying	Short button press
9 – <b>NAV</b>	Access to Navigation menu	Short button press
10 – <b>MEDIA</b>	Source selection	Short button press
11 – <b>RADIO</b>	Access to Radio mode	Short button press


## STEERING WHEEL CONTROLS

(for versions/markets, where provided)

### DESCRIPTION




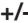


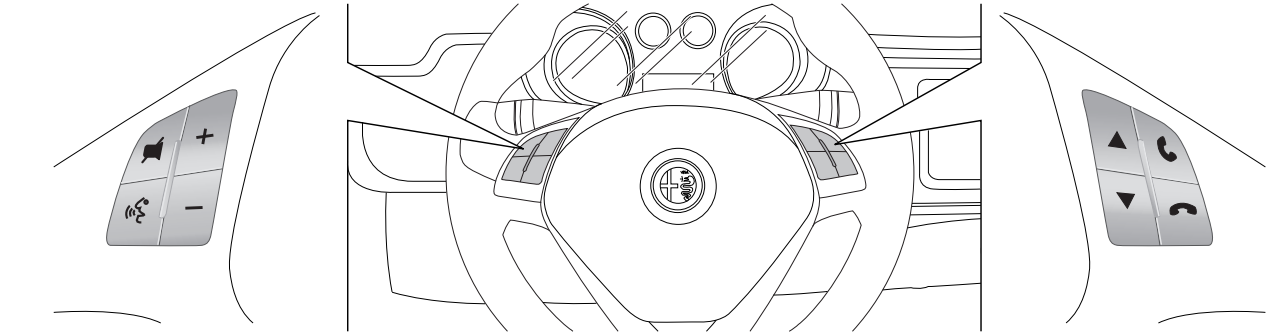The controls for the main system functions are present on the steering wheel to make things easier.

The activation of the function selected is controlled, in some cases, by how long the button is pressed (short or long press) as described in the table below.




A0K0365

## STEERING WHEEL CONTROL SUMMARY TABLE

Button	Interaction
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Acceptance of incoming call</li> <li><input type="checkbox"/> Acceptance of the second incoming phone call and putting the active phone call on hold</li> <li><input type="checkbox"/> Activation of voice recognition for Phone function</li> <li><input type="checkbox"/> Interruption of the voice message in order to give a new voice command</li> <li><input type="checkbox"/> Interruption of voice recognition</li> </ul>
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Rejection of incoming call</li> <li><input type="checkbox"/> Ending of call in progress</li> </ul>
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Deactivate/reactivate the microphone during a phone conversation</li> <li><input type="checkbox"/> Activation/deactivation of the SD, USB/iPod, <b>Bluetooth</b>® source Pause</li> <li><input type="checkbox"/> Activation/deactivation of radio Mute function</li> </ul>
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Adjustment of the audio volume: hands-free, SMS message reader, voice announcements and music sources</li> </ul>
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Activation of voice recognition</li> <li><input type="checkbox"/> Interruption of the voice message in order to give a new voice command</li> <li><input type="checkbox"/> Interruption of voice recognition</li> </ul>
	<ul style="list-style-type: none"> <li><input type="checkbox"/> Short press (Radio mode): select next/previous station</li> <li><input type="checkbox"/> Long press (Radio mode): scan higher/lower frequencies until released</li> <li><input type="checkbox"/> Short press (SD, USB/iPod, <b>Bluetooth</b>® mode): selection of previous/next track</li> <li><input type="checkbox"/> Long press (SD, USB/iPod, <b>Bluetooth</b>® mode): fast forward/rewind until released or until the previous/next track is reached</li> </ul>

## SWITCHING THE SYSTEM ON/OFF

### SWITCHING THE SYSTEM ON/OFF

The system switches on/off when the  (ON/OFF) button/knob is pressed (1-fig. 1).

The electronic volume adjustment control rotates continuously (360°) in both directions, without stop positions.

Turn the button/knob clockwise to increase the volume or anticlockwise to decrease it.

### RADIO (TUNER) MODE

The system has the following tuners: AM, FM and DAB (for versions/markets, where provided).

### RADIO MODE SELECTION

Press the RADIO button (11-fig. 1) on the front panel to activate Radio mode.

The different tuning modes can be selected with the corresponding button on the display (see fig. 3).

Up to 12 favourite radio stations can be stored in each mode.



3

AOK2008

## SELECTING A FREQUENCY BAND

Press one of the buttons at the left of the display to select the frequency band.

The available frequency bands are AM, FM and DAB (for versions/markets, where provided).



## INFORMATION ON DISPLAY

After the desired radio station is selected on the display (see fig. 3), the following information is shown:

**At the top:** stored radio station (preset) list. If the current station is in the list of presets, it will be highlighted on the display.





**In the middle:** the name of the current radio station and the buttons for selecting the previous or next radio station.

**At the bottom:** the following buttons:

- "browse": search available radio stations
- "tune": manual radio station tuning (not available for DAB radio)
- "audio": access to the "Audio settings" screen
-  and : permits searching for the desired radio station.

## SELECTING PREVIOUS/NEXT RADIO STATION

The previous/next radio station can be selected using the following methods:

- turning the BROWSE ENTER button/knob (6-fig. 1)
- briefly pressing the  or  buttons on the display
- pressing the  or  controls on the steering wheel.

Holding down the  or  buttons on the display activates rapid scrolling through the list of stations.


## PREVIOUS/NEXT RADIO STATION FAST SEARCH

Hold down the **◀◀** or **▶▶** buttons on the display, or the corresponding steering wheel controls, to carry out a fast search: when the button is released, the first available radio station is played.

## AM/FM RADIO STATION TUNING

The "tune" button can be used to select a radio station directly.

Press the "tune" button on the display, then select the first digit of the desired radio station (see fig. 4).

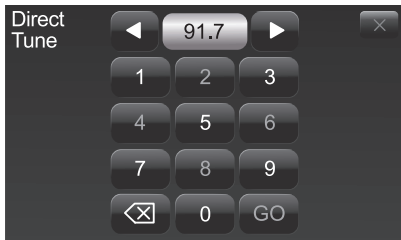

4

A0K2018

The graphic keyboard on the display is used to enter only the number that corresponds to the station.

Using this method, the **+** and **-** buttons allow you to fine-tune the frequency.

To delete an incorrect number (and enter the correct station number) press the **⊗** (Delete) button.

After the last digit of the station is entered, the "tune" screen is deactivated and the system tunes into the selected station automatically.

The screen will disappear automatically after 5 seconds or can be deactivated manually by pressing the "GO" or **⊗** (Delete) buttons.

## Partial radio station selection ("GO")

Press the "GO" button on the display to tune into the selected radio station and close the "Direct Tune" (manual tuning) screen.

## Exiting the "Direct Tune" screen

Press the X or **⊗** (Delete) button on the display to return to the system's main screen.

## DAB RADIO

(for versions/markets, where provided)

Once the DAB radio mode on the display is selected, the information on the current station is displayed (see fig. 5) and the following functions will be available:



5

A0K2036

## The "browse" button is used to display:

- the list of all DAB stations;
- the list of stations filtered by "Genres";
- the list of stations filtered by "Ensembles" (broadcast group).

Within each list, the "ABC" button allows the user to skip to the desired letter in the list.

The "Refresh" button requests an update of the DAB radio station list: the update may last from a few seconds to about two minutes.

## SETTING THE PRESETS

Presets are available in all system modes and are activated by touching one of the preset buttons located in the upper area of the display.

If you are tuned into a radio station that you wish to store, hold down the button on the display which corresponds to the desired preset until an acoustic confirmation signal is emitted.

The system can store up to 12 radio stations in each mode: 4 of these are displayed in the upper area.

Press the "browse" button on the display to show all the radio stations stored in the selected frequency band.

## AUDIO SETTINGS

The Audio Settings menu, which can be accessed by pressing the "audio" button at the bottom of the display, can be used to change the following settings:

- "Equalizer" (for versions/markets, where provided)
- "Balance/Fader" (left/right and front/rear audio balance adjustment)
- "Volume/Speed" (excluding versions with Hi-Fi system) automatic speed-dependent volume adjustment

- "Loudness" (for versions/markets, where provided)
- "Auto-On Radio".

To exit the "audio" menu, press the ◀/Done button.


NOTE When a setting is changed, the ◀ button is replaced with the word "Done".

## Equalizer

(for versions/markets, where provided)

Select the "Equalizer" option on the display to adjust the bass, medium and treble tones.

Then use the "+" or "-" buttons to make the desired adjustments (see fig. 6).

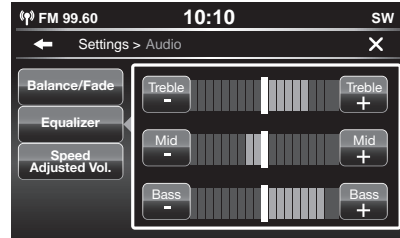

6


A0K2039

Once the adjustments are complete, press the ◀/Done button to return to the "Audio" menu.

## Balance/Fader

Press the "Balance/Fader" button to adjust the balance of the sound from the front and rear seat speakers.

Press the ▲ or ▼ buttons to adjust the balance of the front and rear speakers (see fig. 7).

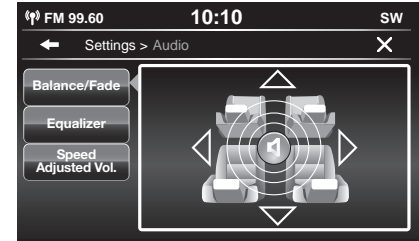

7

A0K2038

Press the ◀ or ▶ buttons to adjust the balance of the speakers on the left and the right side.

The adjustment is also possible by moving the 📢 symbol on the right side of the display upwards/downwards/to the left/to the right.

Press the central "C" button to balance the adjustments.


Once the adjustments are complete, press the ◀/Done button to return to the "Audio" menu.



## Volume/Speed

Press the "Volume/Speed" button to choose between "Off" and "1", "2" or "3".

The option selected is highlighted on the display (see fig. 8).

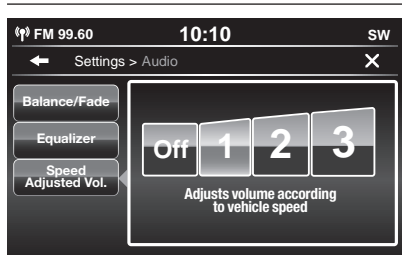

8

A0K2037

Choose "1", "2" or "3" to increase the volume proportionally to the selection made.

Once the adjustments are complete, press the /Done button to return to the "audio" menu.

## Loudness

(for versions/markets, where provided)

Allows you to activate/deactivate the "Loudness" function, which improves the sound quality at low volumes.

## Auto-On Radio

Allows you to set the radio behaviour when the ignition key is turned to MAR-ON.


The options are radio on, radio off or restore status when the ignition key was last turned to STOP.

## MEDIA MODE

### AUDIO SOURCE SELECTION

This chapter describes the interaction modes concerning the operation of SD, **Bluetooth**®, AUX and USB/iPod.


Press the "select source" button fig. 9: the display shows the screen for selecting the desired audio source from those available: SD, AUX, USB/iPod or **Bluetooth**® fig. 10.

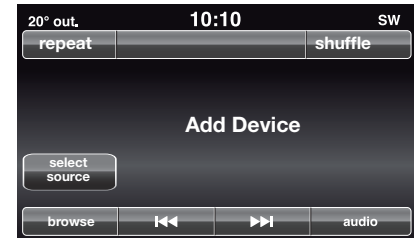

9

A0K2045

If no source is selected, the screen disappears after a few seconds and the display shows the main screen again.

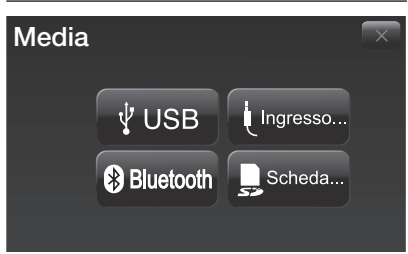

10

AOK2017

### TRACK CHANGE (previous/next)

Briefly press the button or the steering wheel control ►► or turn the BROWSE ENTER button/knob (6-fig. 1) clockwise to play the next track or briefly press the button or the steering wheel control ◄◄ or turn the BROWSE ENTER button/knob anticlockwise to return to the beginning of the selected track or to the beginning of the previous track if this has been played for less than 8 seconds.

### TRACK FAST FORWARD/REWIND

Press and hold down the ►► button to fast forward the selected track or keep the ◄◄ button pressed to fast rewind the track.

The fast forward/rewind will stop once the button is released or when the previous/next track is reached.

### TRACK SELECTION (Browse)

Use this function to scroll through or select the tracks on the active device.

The choices available depend on the device connected.

NOTE A few **Bluetooth**® devices do not offer the possibility of scrolling tracks through all categories.

Use the "ABC" button inside each list to skip to the desired letter within the list.

NOTE This button may be disabled for some **Apple**® devices.

NOTE The "Browse" button does not allow any operation on an AUX device.

NOTE Not all **Bluetooth**® devices enable to scroll the information on the tracks. To consult the list of audio **Bluetooth**® devices and supported functions, visit the [www.alfaromeo.it](http://www.alfaromeo.it) website (for Italy) or the [www.alfaromeo.com](http://www.alfaromeo.com) website (for other countries) or call Customer Service on 00800.2532.0000 (the number may vary depending on the country: please refer to the reference table in the "Customer Service number list" paragraph herein).

Press the "Browse" button to activate this function on the source being played.

Turn the BROWSE ENTER (6-fig. 1) button/knob to select the desired category and then press the button/knob to confirm the selection.

Press the "X" button to cancel the function.

NOTE The indexing time of a USB device can vary according to the media inserted (in some cases it can take a few minutes).

### TRACK INFORMATION DISPLAY

Press the "Info" button to show on the display the information on the track being listened to for devices that support the function.

Press the "X" button to exit the screen.

## RANDOM TRACK REPRODUCTION

Press the ">" button then the "Shuffle" button to play the tracks on the SD card, USB/iPod or **Bluetooth**® in a random order.

Press the "Shuffle" button again to deactivate the function.

## TRACK REPETITION

Press the ">" button then the "Repeat" button to activate the function.

Press the "Repeat" button again to deactivate the function.

## SOURCE Bluetooth®

This mode is activated by pairing a **Bluetooth**® device containing music tracks with the system.

### PAIRING A Bluetooth® AUDIO DEVICE

To pair a **Bluetooth**® audio device, proceed as follows:

- activate the **Bluetooth**® function on the device;
- press the MEDIA button (10-fig. 1) on the front panel;
- if the "Media" source is active, press the "Source" button;
- select the **Bluetooth**® media source;
- press the "Add Device" button;
- search for **uconnect™ on the Bluetooth**® audio device (during the pairing stage a screen is displayed showing the progress of the operation);
- when requested by the audio device, enter the PIN code shown on the system display or confirm on the device the PIN displayed;

- if the pairing procedure is completed successfully, a screen is displayed. Answer "Yes" to the question to pair the **Bluetooth**® audio device as favourite (the device will have priority over all other devices that will be paired subsequently). If "No" is selected, the priority is determined according to the order of connection. The last device connected will have the highest priority;
- an audio device can also be paired by pressing the MORE button (7-fig. 1) on the front panel and then selecting "Settings" and "Bluetooth", or pressing the MEDIA button (10-fig. 1) on the front panel and then selecting "Device" and "Bluetooth".


**IMPORTANT** If the **Bluetooth**® connection between mobile phone and system is lost, consult the mobile phone owner's handbook.

## **USB/iPod SUPPORT**

### **USB/iPod MODE**

To activate the USB/iPod mode insert the corresponding device (USB or iPod) in the USB port fig. 11 present on the car.

If a USB/iPod device is inserted with the system on, this starts playing the tracks present on the device.

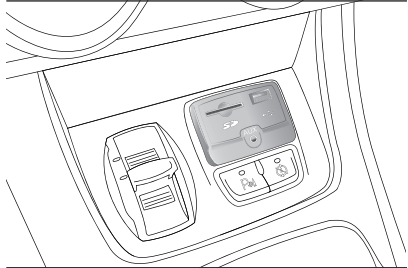

11

AOK0627

## **SD Card SUPPORT**

### **SD Card**

The system is equipped with an SD and SD-HC card reader able to read/manage cards with SPI technology.

To activate SD mode, insert an SD Card in the dedicated slot on the car (see "USB/iPod Support" paragraph).


**IMPORTANT** Only use SD cards dedicated to a single function (e.g. SD cards for navigation only separate from SD cards for MP3 use only). Avoid transferring content from one SD card to another.

## **AUX SUPPORT**

To activate AUX mode, insert an appropriate device in the AUX socket on the car (see "USB/iPod Support" paragraph).



Inserting a device with AUX outlet socket the system starts playing the AUX source connected, if it is already being played.

Adjust the volume by the button/knob  (1 - fig. 1) on the front or by the volume adjustment control on the connected device.

As for the "Audio source selection" function, see the chapter "Media Mode".

### **IMPORTANT**

The functions of the device connected with the AUX socket are directly managed by the device itself: it is not possible to change track/folder/playlist or control playing start/end/pause with the controls on the front panel or on the steering wheel.

Do not leave the cable of your portable player connected with the AUX socket after disconnection, to avoid possible hiss from the speakers.



## WARNING

3) *When inserting a device in the AUX socket, make sure that it does not obstruct the operation of the handbrake lever.*

## PHONE MODE

### PHONE MODE ACTIVATION

Press the PHONE button (8-fig. 1) on the front panel to activate Phone mode.

The following screen appears on the display (see fig. 12).



12

AOK2024

### MAIN FUNCTIONS

The buttons on the display can be used to:

- compose the phone number (using the graphic keypad on the display);
- display and call the contacts on the mobile phone phonebook;
- display and call contacts from the registers of previous calls;
- pair up to 10 phones to make access and connection easier and quicker;

- transfer calls from the system to the mobile phone and vice versa and deactivate the microphone audio for private conversations.

The mobile phone audio is transmitted through the car's audio system; the system automatically mutes the radio when the Phone function is used.

### DISPLAYED INFORMATION

When a phone is connected to the system, the display shows various information (if available):

- status of roaming;
- network signal intensity;
- mobile phone battery charge;
- mobile phone name.

To consult the list of mobile phones and supported functions, visit the [www.alfaromeo.it](http://www.alfaromeo.it) website (for Italy) or the [www.alfaromeo.com](http://www.alfaromeo.com) website (for other countries) or call Customer Service on 00800.2532.0000 (the number may vary depending on the country: please refer to the reference table in the "Customer Service number list" section herein).

## PAIRING A MOBILE PHONE

**IMPORTANT** Carry out this operation only with car stationary and in safety conditions; this function is deactivated when the car is moving.

The pairing procedure for a mobile phone is described below: always consult the handbook for the mobile phone in any case.

To pair the mobile phone, proceed as follows:

- activate the **Bluetooth** ® function on the mobile phone;
- press the PHONE button (8-fig. 1) on the front panel;
- if no phone is paired with the system yet, the display shows a dedicated screen;
- select "Yes" to start the pairing procedure then search for the **uconnect™** device on the mobile phone (if "No" is selected, the Phone main screen is displayed);
- when prompted by the mobile phone, use its keyboard to enter the PIN code shown on the system display or confirm on the mobile phone the PIN displayed;

- from the "Phone" screen you can always pair a mobile phone by pressing the "Settings" button: press the "Add Device" button and proceed as described above;
- during the pairing stage a screen is displayed showing the progress of the operation;
- when the pairing procedure is completed successfully, a screen is displayed: answer "Yes" to the question to pair the mobile phone as favourite (the mobile phone will have priority over all other mobile phones that will be paired subsequently). If no other devices are paired, the system will consider the first associated device as favourite.

**NOTE** The priority is determined according to the order of connection for mobile phones which are not set as favourites. The last phone connected will have the highest priority.

## STORING NAMES/ NUMBERS IN THE MOBILE PHONE PHONEBOOK

Before pairing your mobile phone, you must make sure you have stored the names you want to contact in the phonebook on your mobile phone so that you can call them using the car's hands-free system.

If your phonebook does not contain any names, enter new names for the most frequently used numbers.

For further details, consult your mobile phone owner's handbook.


**IMPORTANT** The names in the phonebook not containing phone numbers or name and surname will not be displayed.

## CONNECTION/ DISCONNECTION OF A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE

### Connection


The system connects automatically to the mobile phone paired with the highest priority.

To choose a specific mobile phone or **Bluetooth®** audio device, proceed as follows:

- press the  button (4-fig. 1) or the MEDIA button (10-fig. 1) on the front panel, then "Source";
- select the "Tel./Blth" option on the display;
- select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- select the specific device (mobile phone or **Bluetooth®** device);
- press the "Connect" button;
- during the connection stage a screen is displayed showing the progress of the operation;
- the device connected is highlighted in the list.


### Disconnection

To disconnect a specific mobile phone or **Bluetooth®** audio device, proceed as follows:

- press the  button (4-fig. 1) or the MEDIA button (10-fig. 1) on the front panel, then "Source";
- select the "Tel./Blth" option on the display;
- select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- select the specific device (mobile phone or **Bluetooth®** device);
- press the "Disconnect" button.


## DELETION OF A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE

To delete a mobile phone or **Bluetooth®** audio device from a list, proceed as follows:

- press the  button (4-fig. 1) or the MEDIA button (10-fig. 1) on the front panel, then "Source";
- select the "Tel./Blth" option on the display;
- select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- select the device (mobile phone or **Bluetooth®** device);
- press the "Delete Device" button;
- a confirmation screen will appear on the display: press "Yes" to delete the device or "No" to cancel the operation.

## SETTING A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE AS FAVOURITE

To set a mobile phone or **Bluetooth®** audio device as favourite, proceed as follows:

- press the  button (4-fig. 1) or the MEDIA button (10-fig. 1) on the front panel, then "Source";
- select the "Tel./Blth" option on the display;
- select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- select the specific device (mobile phone or **Bluetooth®** device);
- press the "Make Favourite" button;
- the device selected is moved to the top of the list.

## TRANSMISSION OF PHONE DATA (PHONEBOOK AND RECENT CALLS)

If your mobile phone has a function for sending the phonebook via **Bluetooth®** technology.

During the pairing procedure a screen will appear with the request "Do you want to download you phone data and recent calls?".

Answer "Yes" to copy the whole phonebook and the list of recent calls to the system.

Answer "No" to carry out the operation later on.

After the first phone data transmission, the procedure for transmitting and updating the phonebook (if supported) starts as soon as a **Bluetooth®** connection is established between mobile phone and system.

Whenever a mobile phone is connected to the system, a maximum of 1000 contacts can be downloaded and updated for each phone.

Depending on the amount of items downloaded from the phonebook, a slight delay can occur before the last names downloaded can be used. Up to then the phonebook downloaded previously (if present) will be available.

Only the phonebook of the mobile phone currently connected to the system can be accessed.

The phonebook downloaded from the mobile phone can neither be modified nor be deleted through the system: changes will be transmitted and updated in the system when the mobile phone is next connected.

## DELETION OF PHONE DATA (PHONEBOOK AND RECENT CALLS)



Select "Delete Phone Data" on the display to delete the list of recent calls and the phonebook copy.

## MAKING A PHONE CALL

The operations described below can only be accessed if supported by the mobile phone in use.

For all functions available, refer to the mobile phone owner's handbook.

A call can be made by:


- selecting the  icon (mobile phone phonebook);
- selecting "Recent Calls";
- selecting the  icon;
- pressing the "Redial" button.



## Dialling the phone number using the "keyboard" icon on the display

Enter the phone number using the graphic keyboard displayed.

Proceed as follows:

- press the PHONE button (8-fig. 1) on the front panel;
- press the  button on the display and use the numbered buttons to enter the number;
- press the "Call" button to make a call.

## Dialling the phone number using the mobile phone

It is possible to dial a phone number with the mobile phone and continue using the system (never allow yourself to be distracted while driving).

When a phone number is dialled with the keyboard of the mobile phone, the audio of the call is played over your car's sound system.

## Recent calls

The list of the last calls made for each of the following call types can be displayed:

- Calls received;
- Calls made;
- Calls without a reply;
- All calls.

To access these types of call, press the "Recent Calls" button on the Phone menu main screen.

## MANAGING AN INCOMING CALL


### Call controls

The buttons on the display allow the following phone call functions to be managed:


- Answer;
- End;
- Ignore;
- Put on hold/resume;
- Deactivate/activate the microphone;
- Transfer the call;
- Switch from one call to the other;
- Conference/merge two active calls.

## Answering a call

When a phone call is received on the mobile phone, the system deactivates the audio system (if active) and displays a screen.

Press the "Answer" button or the  button on the steering wheel controls to answer.

## Rejecting a call

Press the "Ignore" button or the  button on the steering wheel controls to reject.

## Answering an incoming call during a conversation

To answer an incoming call whilst another phone conversation is in progress, press the "Answer" button to put the ongoing call on hold and answer the new incoming call.

**IMPORTANT** Not all mobile phones may support the management of an incoming call when another phone conversation is active.

## **MAKING A SECOND PHONE CALL**

When a phone conversation is active, a second phone call can be made as follows:


- select the number/contact from the list of recent calls;
- select the contact from the phonebook;
- press the "Hold" button and dial the number using the graphic keyboard of the display.

## **MANAGING TWO PHONE CALLS**

If two calls are in progress (one active and one on hold), it is possible to switch between them pressing the "Call On Hold" button or to merge the two calls in a conference pressing the "Merge calls" button.

NOTE Check whether the phone in use supports the management of a second call and the "Conference" mode.

## **ENDING A CALL**

Press the "End" button or the  button on the steering wheel controls to end a call in progress.

Only the ongoing call is ended and any call on hold becomes the new active call.

Depending on the type of mobile phone, if the ongoing call is ended by the caller, the call on hold may not be activated automatically.

## **REDIALLING**

To call the number/contact of last call made, press the "Redial" button.


## **CONTINUING A PHONE CALL**

After the engine is switched off, it is still possible to continue a phone call.

The call continues until it is ended manually or for a maximum period of about 20 minutes.

When the system is switched off the call is transferred to the mobile phone.

## **ACTIVATION/ DEACTIVATION OF THE MICROPHONE**

During a call the microphone can be deactivated pressing the  button on the front panel (or on the steering wheel controls) or the "Mute" button on the display.

When the microphone is deactivated it is still possible to listen to the call in progress.

To reactivate the microphone, press the corresponding button again.

## **TRANSFERRING A CALL**


The ongoing calls can be transferred from the mobile phone to the system and vice versa without ending the calls.

To transfer the call, press the "Transfer" button.


## SMS MESSAGE READER

The system can read the messages received by the mobile phone.

To use this function the mobile phone must support the SMS exchange function via **Bluetooth**®.

If this function is not supported by the phone, the corresponding  button is deactivated (greyed out).

When a text message is received, the display will show a screen where the options "Listen", "Call" or "Ignore" can be selected.

The list of SMS messages received from the mobile phone can be accessed by pressing the  button.


## SMS MESSAGE OPTIONS

Default SMS messages are stored in the system and can be sent to answer a received message or as a new message.

When receiving an SMS, the systems also allows the same message to be forwarded.

## "MORE" MODE

Press the MORE button (7-fig. 1) on the front panel to display (see fig. 13) the following operating settings:

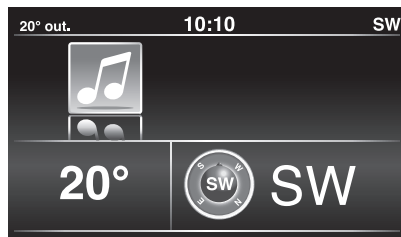

13


AOK2040

- Clock
- Media mode
- Outside temperature
- Compass

### CLOCK

Pressing the time at the middle of the top of the display (see fig. 13) allows you to set the time.

## MEDIA MODE

Pressing the  button (see fig. 13) allows you to display "Media mode" information.

## COMPASS

Press the "Compass" button (see fig. 13) to display the direction in which you are driving and "Navigation mode" information.

## OUTSIDE TEMPERATURE

The display (see fig. 13) shows the outside temperature with the unit of measurement defined in the settings (°C or °F).


## SETTINGS

Press the  button (4-fig. 1) on the front panel to display the "Settings" menu (see fig. 14).

NOTE The menu items displayed vary according to the versions.

The menu comprises the following options:

- Display
- Clock
- Safety & Driving Assist.
- Lights
- Doors & Locks

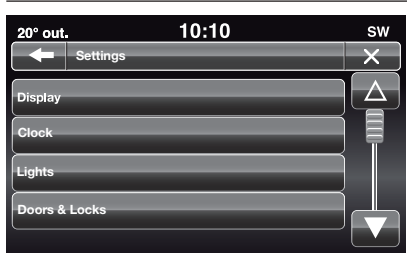

14

AOK2041

- Engine Off Options
- Audio
- Phone/Bluetooth
- Radio Setup
- System Information.

## Display

The "Display" menu shows the following options:

- "*Brightness*" (this setting is not available when the display mode is set to "Automatic"): select "Brightness" and press the "+" or "-" buttons to adjust the display brightness with the headlights on or off (the setting not corresponding to the active headlight condition is greyed out).

- "*Display Mode*": allows the brightness of the display to be set according to "Day", "Night" or "AUTO" status. In "Auto" mode the display brightness is aligned to that of the instrument panel.
- "*Display Brightness Day/Night*": press the "+" or "-" buttons to adjust the brightness of the display to "Day" or "Night".
- "*Set Language*": allows you to select one of the available languages.
- "*Distance*": allows you to select the units of measurement for "Distance" ("km" or "mi").
- "*Fuel Consumption*": allows you to select the units of measurement for fuel consumption. If the unit of measurement for distance is "km", "km/l" or "l/100km" can be selected, while if the unit of measurement for distance is "mi" (miles), "mpg" is set automatically.
- "*Temperature*": allows you to select the units of measurement for temperature ("°C" or "°F").
- "*Trip*": allows you to activate/deactivate Trip B on the instrument panel display.

- "*Voice Response Length*": allows you to set the detail level of the voice messages supplied by the system and the suggestions displayed.
- "*Touchscreen Beep*": press the relevant button to activate/deactivate the acoustic signal when the buttons on the display are pressed.

## Clock

Use this function to set the clock.

"*Set Time Hours*": allows you to set the hours on the clock.

"*Set Time Minutes*": allows you to set the minutes on the clock.

"*Time Format*": allows you to set the time format to "12h" (12-hour) or "24h" (24-hour).

"*Show Time in Status Bar*": allows you to activate/deactivate the clock on the top part of the display.

"*Sync time with GPS*": allows you to activate/deactivate time synchronisation via GPS signal.

"*Set Day*": allows you to set the day.

"*Set Month*": allows you to set the month.

"*Set Year*": allows you to set the year.

## **Safety & Driving Assist.** (for versions/markets, where provided)

### *Rain sensor*

The sensitivity of the rain sensor can be adjusted with this function (for versions/markets, where provided).

## **Lights** (for versions/markets, where provided)

This function can be used to make the following adjustments:

- "Headlamp sensor" (for versions/markets, where provided): adjustment of headlight activation sensitivity;
- "Day lights": activation/deactivation of the daytime running lights (DRLs) (for versions/markets, where provided);
- "Greeting Lights": activation/deactivation of the courtesy lights (for versions/markets, where provided);
- "Adaptive lights": activation/deactivation of the adaptive lights (for versions/markets, where provided).

## **Doors & Locks**

Use this function to activate/deactivate automatic door locking when the car is moving ("Autoclose" function).

## **Audio**

This option accesses the audio settings menu.

For the description of the available settings, see the description in the "Audio settings" paragraph in the "Switching the system on/off" chapter.

## **Engine Off Options**

"Radio off delay": permits the system to be kept on for a preset time after the ignition key is turned to STOP.

"Auto-On Radio": allows the choice of whether to switch on the radio or leave it off when the car is started, or to recall the state of the radio when the engine was stopped.

## **Phone/Bluetooth**

See the description in the "Connecting/disconnecting a mobile phone or a **Bluetooth**® audio device" paragraph in the "Phone Mode" section.

## **Radio Setup**

This function can be used to configure the following options:

- "Playing Traffic Announcement": activation/deactivation of automatic tuning to traffic announcements ("TA" function);
- "Altern. Frequency": activation/deactivation of automatic tuning to the strongest signal for the station selected ("AF" function);
- "Regional": activation/deactivation of automatic tuning to a station which broadcasts regional news ("REG" function);
- "DAB Announc." (for versions/markets, where provided): activation/deactivation of automatic tuning to DAB announcements and selection of announcement categories of interest from those available;
- "DAB to FM Linking": allows the DAB/FM link function to be activated/deactivated;
- "FM to DAB Linking": allows the FM/DAB link function to be deactivated.


## System Information

Allows some information on the software installed to be shown.

## NAVIGATION MODE

### MAIN NAVIGATION MENU

To activate the main navigation menu, press the NAV button (9-fig. 1) on the front panel, then press one of the following buttons fig. 15:

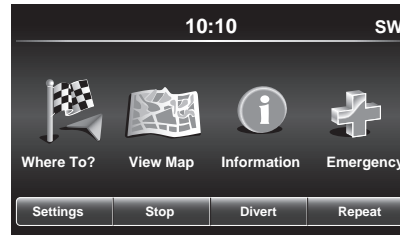

15

A0K2029

- press the "Where To?" button to search or navigate to the destination;
- press the "View Map" button to view the map on the display;
- press the "Information" button to show the information related to navigation on the display;

- press the "Emergency" button to search for Hospitals, Police Stations or Fire Stations located near the destination. It is also possible to view your current position on the display and save, in "Favourites", the location of the Hospitals, Police Stations or Fire Stations.

The "Settings", "Stop", "Divert" and "Repeat" buttons are also present.

Pressing the "Settings" button activates the navigation Settings Menu (see description in the "Settings Menu" paragraph).

Pressing the "Stop" button during navigation interrupts it.

Pressing the "Divert" button during navigation displays the possible deviations from the set route.

Pressing the "Repeat" button will recalculate the journey towards the last destination selected.

## WHERE TO?

From the Main Navigation Menu, press the "Where To?" button fig. 15 then select one of the following options to reach the destination:

- ❑ **"Address"**: press this button to search for the destination by entering the number or name of the road;
- ❑ **"Recent"**: press this button to recall previously entered addresses and destinations;
- ❑ **"Point of Interest"**: press this button to calculate a journey to a Point of Interest (POI). Points of Interest allow you to select a destination from a list of locations and public places;
- ❑ **"Favourites"**: press this button to recall previously stored addresses and destinations;
- ❑ **"Intersection"**: press this button to navigate to an intersection;
- ❑ **"Go Home"**: press this button to calculate or confirm a journey to your home address;
- ❑ **"Trip"**: press this button to calculate a new journey or recall one which is already stored;

- ❑ **"GEO Coord"**: press this button to enter a journey using geographical coordinates. The coordinates can be determined with the help of the navigation system's GPS receiver;
- ❑ **"Point on Map"**: press this button to select a destination directly from the Map. You can select the road icon to rapidly enter the destination without having to type the name of the city or the road itself;
- ❑ **"Town Centre"**: press this button to reach the centre of the desire town;
- ❑ **"Closest Towns"**: press this button to take a trip near a town. The display will show an alphabetical list of the towns: the navigation system will calculate the route to the centre of the selected town;
- ❑ **"Trails"**: press this button to store the route that you are taking in order to recall it later on. Select "Stop trail recording" to end the storage procedure;
- ❑ **"Phone Number"**: press this button to calculate a journey to a location or Point of Interest (POI) using its telephone number.

You can press the  button to return to the previously active screen or the "X" button to exit.

## Address

To enter a destination using its address, proceed as follows:

- ❑ from the Main Navigation Menu, press the "Where To?" button then select "Address". To change the State and/or the Town, press the "Select a state" and/or "Select Country" button and follow the procedure on the display;
- ❑ press the "Spell Town" or "Spell Street" button to start the procedure of entering the address of the destination;

You can use "Spell Town" to enter and then select the name of the town, then enter the name of the street and the street number.

You can use "Spell Street" to enter and then select the name of the street, then enter the street number.


After entering the Town/Street/Number correctly, the navigation system will request confirmation of the destination using the "OK" button. Press the "Yes" button to confirm the selection and start navigation to the set destination.


If you press the "Recent" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Recent

To take a trip to one of the last destinations stored, press the "Recent" button in the Main Navigation Menu.

Press the button with the name of the desired destination then confirm the selection by pressing the "Yes" button: this will begin navigation to the destination.

To delete a destination from the list, press the  button.

To view the options for a destination, press the "Options" button, represented on the display by the  icon.

The following modifications can be made to each destination:

- name entry
- telephone number entry
- moving upwards through the list
- moving downwards through the list
- postcode entry.

## Point of Interest (POI)

To enter a destination using a Point of Interest (POI), press the "Point of Interest" button in the main Navigation Menu.

The list of Points of Interest facilitates the selection of the destination, providing a list of locations and places of interest to the public, i.e. Points of Interest.

One of the following categories of Points of Interest can be selected:

- Service stations
- Restaurants
- Hotels/Motels
- ATMs/Banks
- All POIs (Points of Interest)
- Enter Name.

It is also possible to change the Point of Interest search area by pressing the "Change Search Area" button.


The display will present the following search options:

- "Around Me"
- "In a Town"
- "Near Destination" (available only during navigation)
- "Along Route" (available only during navigation).


## Favourites

To take a trip to a destination which is already stored, press the "Favourites" button in the Main Navigation Menu.

Press the button with the name of the destination, then confirm the selection by pressing "Yes" to begin navigation.

To delete a destination from the list, press the  button.

To save a destination in the "Favourites", press the "Add Favourite" button and follow the same procedure for entering an address (see previous pages).

To view the options for a destination, press the "Options" button, represented on the display by the  icon.

The following modifications can be made to each destination:

- name entry
- telephone number entry

If you press the "Favourite" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".



## Intersection

To enter a destination using an intersection, press the "Intersection" button in the main Navigation Menu.

The display will show the name of the current Country and Town.

To change the Town and/or Country, press the appropriate button on the display and follow the procedure indicated.

The following screen shows the basic Country and Town setting.

You can use "Spell City" to enter and then select the name of the town, then enter the name of the street and the intersection number.

You can use "Spell Street" to enter and then select the name of the street then enter the intersection number.

After entering the name of the town and the number of the intersection correctly, the navigation system will request confirmation of the destination. Press the "Yes" button to confirm and begin navigation.

If you press the "Intersection" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Go Home

To enter your home address, proceed as follows:

- press the "Go Home" button in the main Navigation Menu: if no address has been entered yet, press "Yes" to do so;
- to select the address, choose one of the following options: "Address", "Recent", "Point of Interest", "Favourites", "Intersection", "GEO Coord", "Point on Map", "Town Centre", "Closest Town", "Phone Number";
- after entering the address, press the "Save" button to save the modifications and begin navigation.

The address entered will be stored and it will be possible to recall it at any time by pressing the "Go Home" button in the main Navigation Menu.

### *Changing/Clearing home address*

To change/clear your home address, proceed as follows:

- press the "Go Home" button in the main Navigation Menu;
- press the "Options" button on the Map;

- press the "Clear Home" button then select "Yes" to delete the address.

To enter a new address, proceed according to the instructions above.

## Trips


To navigate to a destination which is already stored, press the "Trips" button in the Main Navigation Menu.

Then press the button with the name of the destination and finally select "Yes" to begin navigation.

To add a new trip, proceed as follows:

- press the "Create new Trip" button;
- enter the name of the new destination;
- select "Add Destination" to add the new destination;
- to select the address, choose one of the following options: "Address", "Recent", "Point of Interest", "Favourites", "Intersection", "GEO Coord", "Point on Map", "Town Centre", "Closest Town", "Phone Number";
- if you wish to add other destinations, proceed in the same way. Every destination is added to a list;

To delete a destination from the list, press the  button.

To view the options for a destination, press the "Options" button, represented on the display by the  icon.

The following modifications can be made to each destination:


- name entry
- telephone number entry
- moving upwards through the list.

## GEO Coord

To enter a destination using its geographical coordinates, press the "GEO Coord" button in the main Navigation Menu.

Proceed as follows:

- use the graphic keyboard to enter the *latitude* fig. 16. Use the "<" and ">" buttons to select the digits specific to the location. Then press the "OK" button to confirm the selection;

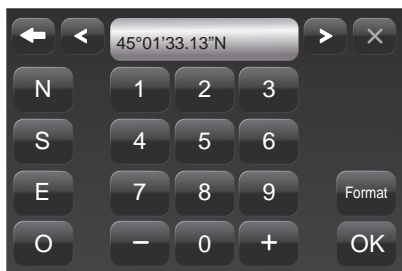

16

AOK2042

- proceed in the same way to enter the *longitude*;
- then press the "Yes" button to confirm the selection and begin navigation.

NOTE Press the "Format" button to change the format for entering the latitude/longitude.

If you press the "GEO Coord" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Point on Map

To enter a destination using a Point of Interest (POI), press the "Point on Map" button in the main Navigation Menu.

Proceed as follows:

- select the destination that you want to reach on the display;
- press the bar in the middle of the display to confirm the choice, or press the "Details" button at the top right to display the locations available next to the point on the map;
- press the "Yes" button to confirm the destination and begin navigation.

If you press the "Point on Map" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Town Centre

To begin navigation to a town centre, press the "Town Centre" button in the main Navigation Menu then proceed as follows:

- enter the name of the town you wish to reach;
- select the town from the list on the display;
- press the "Yes" button to confirm the destination and begin navigation.

If you press the "Town Centre" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Closest town

To take a trip near a town, press the "Closest Town" button in the main Navigation Menu then proceed as follows:

- select the town from the list on the display;
- press the "Yes" button to confirm the destination and begin navigation.

If you press the "Closest Town" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

## Trails

To store a route, press the "Trails" button in the main Navigation Menu.

To end storage, select "Stop Trail Recording".

The route will be added to a specific list, so that it can be recalled at another time.

## Phone Number

To enter a destination using its telephone number, press the "Phone Number" button in the main Navigation Menu then proceed as follows:


- enter the telephone number of the location you wish to reach;
- select the location from the list on the display;
- press the "Yes" button to confirm the destination and begin navigation.

If you press the "Phone Number" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

Before confirming navigation by pressing the "Yes" button, you can select various options from the list on the display.

- "Options": press this button to display a list of options relating to the current trip. To select one of the options, press it.
- "Avoid": press this button to select the types of route to avoid during the trip. To select one of the options, press it. Toll roads, tunnels and ferries are built to reduce distance travelled: avoiding these types of route may increase the trip distance and time.
- "Save": press this button to save the destination in "Favourites".

Press the "Yes" button to confirm the destination and begin navigation.

NOTE For all the above options, pressing the  button switches to the previously active screen, while pressing the "X" button exits the screen.

## VIEW MAP

Press the "View Map" button in the main Navigation Menu to display fig. 17 the map relative to the current position.



17

A0K2043

When the display shows the map, the following options are available:

- "Menu"**: press this button to return to the main Navigation Menu;
- "+/-"**: press the "+" or "-" button to zoom the map (it is not possible to zoom in on minor roads);
- "Time of Arrival/Time to Destination/Distance"** (only during navigation): press this button at the top right of the display to view one of the following options: "Time of Arrival", "Time to Destination", "Distance".

- "Turn List"** (only during navigation): press the list of possible deviations along the route at the middle of the top of the display. Select a deviation through the following options: "Show on Map" or "Avoid Street".

- "Options"**: press this button to display the following options:

**"2D North Up/Vista Mappa 2D/3D"**: press this button to select one of the three possible map view options;

**"Settings"**: press this button to view all possible settings on the display;

**"Repeat"**: press this button to repeat the last voice command given;

**"Turn List"**: press this button to view the list of possible deviations on the display;

**"Stop Guidance"**: press this button to interrupt navigation;


- "Where To?"**: press the middle of the bottom of the display to show the position (using the geographical coordinates) relative to the current position. Press the "GPS" button to show the GPS information. Press the "Save" button to save the position in the "Favourites".

You can press the  button to return to the previously active screen or the "X" button to exit.

## Settings Menu

When the map is on the display, press the "Options" button then "Settings": the Settings menu will appear on the display.

It is also possible to access the Settings Menu by pressing the "Settings" button at the bottom left of the main Menu fig. 18.

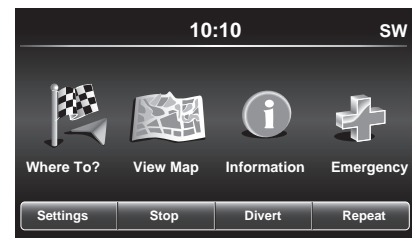

18

A0K2029

The following settings are available for the Map:

- "Map Setup"**: press this button to display the options for customising the map display mode;

- "Speed Limit"**: press this button to activate/deactivate the acoustic speed limit exceeded signal and enter a speed limit (above which the acoustic signal is emitted);
- "Guidance"**: press this button to display the options for customising navigation;
- "DMS"**: press this button to change the appearance of the GPS signal on the display;
- "TMC Station List"**: press this button to display the list of radio stations that transmit TMC (Traffic Message Channel) traffic information.

#### *Map Setup*

After pressing the "Map Setup" button, the following options can be displayed:

- "2D" (or 3D)
- "Orientation"
- "Current Street"
- "Time of Arrival"
- "AutoZoom"
- "Show POI Icons"
- "POI Icon List"
- "3D Town Models"
- "3D Landmarks"
- "Digital Terrain Model"

- "Park Areas"
- "Railways"
- "Urban Areas"
- "River Names".

#### *Speed Limit*

After pressing the "Speed Limit" button, the following options can be displayed:

- "Announce Speed Limit Warning"
- "Over limit: XX km/h"
- "Show Safety Cameras on Map".

#### *Guidance*

After pressing the "Guidance" button, the following options can be displayed:

- "Play Voice Guidance Prompts"
- "Nav Volume Adjustment"
- "Lane Recommendation"
- "Junction View"
- "TMC Route Mode"
- "TMC Avoidance Types"
- "Avoid"

#### *DMS*

After pressing the "DMS" button, the following options can be displayed:

- "Decimal"
- "DMS"
- "DM".

#### *TMC Station List*

After pressing the "TMC Station List" button, you can display the list of radio stations that transmit TMC (Traffic Message Channel) traffic information.

### **INFORMATION**

Press the "Information" button in the main Navigation Menu to select from the following information:

- Traffic
- Where Am I?
- Trip Computer

You can press the ◀ button to return to the previously active screen or the "X" button to exit.

## Where Am I?

To select "Where Am I?" information, press the "Information" button in the main Navigation Menu then select "Where Am I?".

"Where Am I?" displays the geographical coordinates of your current position:

- press the "GPS" button to show the GPS information.
- press the "Save" button to save the position in the "Favourites".

You can press the ◀ button to return to the previously active screen or the "X" button to exit.

## Emergency

Press the "Emergency" button in the main Navigation Menu to select one of the following options for searching for fig. 19 and navigating towards a destination:

- "Hospital"*: press this button to set a trip to a hospital near the destination;
- "Police"*: press this button to set a trip to a police station near the destination;
- "Fire Brigade"*: press this button to set a trip to a fire station near the destination;



19

AOK2044

Press the "Location" button to show your exact position.

Press the "Save" button to save the position in the "Favourites".

You can press the ◀ button to return to the previously active screen or the "X" button to exit.

### *"Hospital"*

To search for a hospital near the destination, press the "Emergency" button then select "Hospital": the list of hospitals will be displayed.

### *"Police"*

To search for a police station near the destination, press the "Emergency" button then select "Police": the list of police stations will be displayed.

### *"Fire Brigade"*

To search for a fire station near the destination, press the "Emergency" button then select "Fire Brigade": the list of fire stations will be displayed.

## Notes

For the three options listed above, if you select "Yes" after making a selection, navigation will begin to the predetermined destination.

It is possible to search for a hospital or police/fire station using one of the following options:

- Name
- Distance
- ABC (search)

If you press the "Hospital", "Police" or "Fire Brigade" button during navigation, the navigation system will ask you to select one of the following options: "Cancel previous route", "Add as first destination" and "Add as last destination".

Pressing the ◀ button switches to the previously active screen: pressing the "X" button, on the other hand, exits the active screen.

## DRIVING MODES

### DRIVING MODE (DNA) INFORMATION ACTIVATION

When the driving mode is changed using the "Alfa DNA" system, the information related to that mode is shown on the display.

#### "Dynamic" mode

The information shown on the display is as follows fig. 20:



20

A0K2033

- "Engine Set Up": PERFORMANCE (greater response + Overboost to maximise the torque level - for versions/markets, where provided)

- "ESC": SPORT (intervention thresholds for more enjoyable, sporty driving, guaranteeing stability in case control of the car is lost. Improves traction whilst accelerating on bends)
- "Q2" ("Electronic Q2" system): ON
- "Steering": SPORT (sports mode operation)
- "Brakes": PREFILL (pre-positioning of the brake pads following rapid release of the accelerator pedal to enhance braking response, reduce stopping distances and improve the feel at the brake pedal).

#### "Natural" mode

The information shown on the display is as follows fig. 21:



21

A0K2034

- "Engine Set Up": ECO (standard response)
- "ESC": NORMAL (intervention thresholds intended for comfort in normal conditions of use and normal driving conditions)
- "Q2" ("Electronic Q2" system): OFF
- "Steering": COMFORT (operation intended for comfort in normal conditions of use)
- "Brakes": ECO (standard response).

#### "All Weather" mode

The information shown on the display is as follows fig. 22:



22

A0K2035

- "Engine Set Up": CONTROL (standard response)

- "ESC": TRACTION (intervention thresholds that permit maximum safety and control of the car even in critical road conditions)
- "Q2" ("*Electronic Q2*" system): ON
- "Steering": COMFORT (maximum comfort)
- "Brakes": PREFILL (pre-positioning of the brake pads following rapid release of the accelerator pedal to enhance braking response, reduce stopping distances and improve the feel at the brake pedal).

To return to the previous screen, press the "X" button or wait for about 5 seconds. Alternatively, you can press any button on the panel to exit.

## **VOICE COMMANDS**

### **INFORMATION ON VOICE COMMANDS**

The navigation system uses voice commands for some or all of the following functions:

- driving information;
- warnings that you set.

Two types of voices are available during navigation:

- computer voices*: they are generated by the navigation system. They read responses to voice commands and traffic;
- human voices*: which have been recorded by an actor and provide instructions about the route.

### **VOLUME LEVEL ADJUSTMENT**

The volume of the navigation system can be adjusted on the main unit.

Proceed as follows to activate/deactivate the navigation instructions:

- in the "Driving view": touch the central box of the status bar to activate the navigation instruction audio again (if previously deactivated);

- in the "Setting menu": touch "Settings" in the Main menu, then touch "Turn on/off voice guidance".

### **USE OF THE VOICE COMMANDS**

Instead of touching the screen, voice can be used to give voice commands to the navigation system.

For example, just say "2D view" to switch to the 2D view.

To display the list of available commands, touch "Help" in the Main menu, then touch "What can I say?".

Please follow the suggestions below to be sure that the voice commands are always recognised by the system:

- speak at a normal volume;
- always wait for the "beep" before speaking;
- the system is capable of recognising the voice commands given, irrespective of gender, tone of voice and intonation of the person giving the instructions;
- if possible, try and keep the noise in the passenger compartment to a minimum;





- ❑ before giving voice commands, ask other passengers not to talk. This is to prevent misunderstanding since the system may recognise other words (in addition to or different from your voice command) if several people are speaking;
- ❑ for optimum operation it is advisable to close the windows and the sun roof (for versions/markets, where provided) to avoid external interference.

IMPORTANT Voice commands must always be given in safe driving conditions, in compliance with the laws in force in the country where you are driving.


## USE OF STEERING WHEEL CONTROLS TO ACTIVATE VOICE COMMANDS

### "Phone" button


The  button on the steering wheel controls enable to activate the "Phone" voice recognition system to make calls, display recent incoming and outgoing calls and phonebook, etc.

Every time the  button is pressed, there is a "beep" and the display shows a suggestion screen inviting the user to give a command.



### "Voice" button

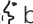

The  button on the steering wheel controls activates the "Radio/Media" voice recognition system to:



- ❑ tune to a specific radio station;
- ❑ tune into a specific AM, FM and DAB radio frequency (for versions/markets, where provided);
- ❑ play a track on a USB storage device/iPod/MP3 SD;
- ❑ play an album on a USB storage device/iPod/MP3 SD.

Every time the  button is pressed, there is a "beep" and the display shows a suggestion screen inviting the user to give a command.

### Quick use of voice interaction





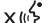
The  or  buttons, when pressed during a system voice message, allow a voice command to be given directly.

For example, if the system is saying a help voice message and you know the command to be given to the system, pressing the  or  buttons the voice message is interrupted and you can give the wished voice command directly (without having to listen to the whole help voice message).

The  or  buttons, if pressed when the system is waiting for a voice command by the user, close the voice session.


## VOICE SESSION STATUS

The system displays the voice session status with specific icons:

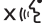- ❑  (green icon): displayed when the system is listening. In this case you can give a voice command;
- ❑  (green icon): displayed when the system has interpreted the given voice command and its function is performed. In this case you cannot give a voice command;
- ❑  (yellow icon): displayed when the system is processing the given voice command. In this case you cannot give a voice command;
- ❑  (yellow icon): displayed when the system is saying a help, information or multiple choice voice message. In this case you cannot give a voice command;
- ❑  (red icon): displayed when the voice interaction is ended by the user. In this case you cannot give a voice command.

## MULTIPLE CHOICE

In a few specific cases the system cannot define univocally the given voice command and asks for choosing among max. four alternatives.

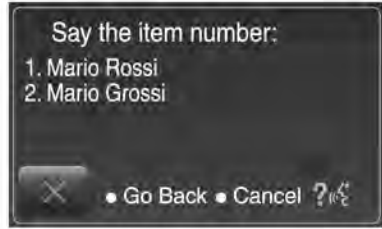



23


F0Y1046

For example, if you ask to call a name in the phonebook and there are similar names, the system will suggest a numerical list of the available alternatives (see fig. 23), asking to say the associated number.

# GLOBAL VOICE COMMANDS

## Uconnect™ VOICE COMMANDS GLOBAL voice commands


These commands can be given by any display after pressing control button  or  on the steering wheel, provided that there are no ongoing phone calls.

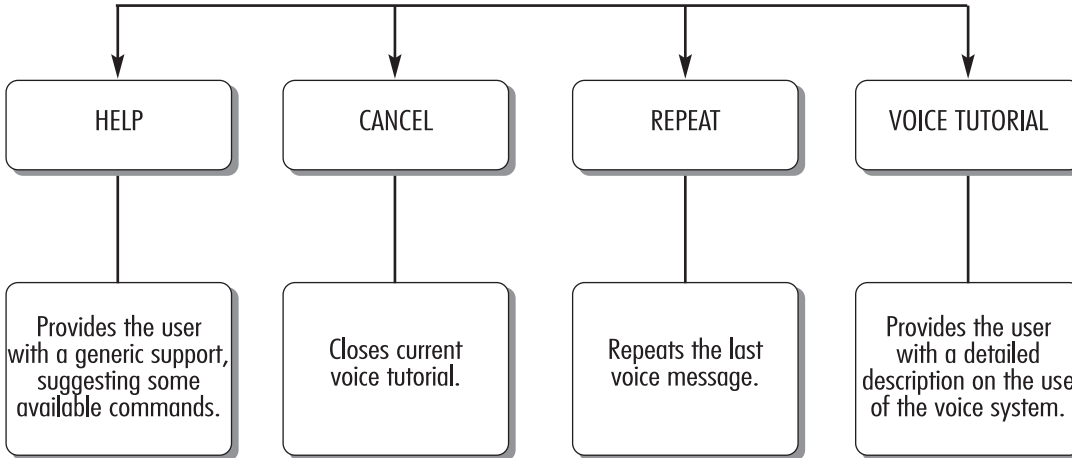

**PHONE VOICE COMMANDS**

**Uconnect™ VOICE COMMANDS**  
PHONE voice commands

If a phone is connected via **Bluetooth®** to the **Uconnect™** system, these commands can be given by any of the main displays after pressing button  provided that there are no ongoing phone calls. If no phone is connected via **Bluetooth®**, the **Uconnect™** system will provide voice message: "There are no paired phones. Pair a phone and try again" and session will be ended.

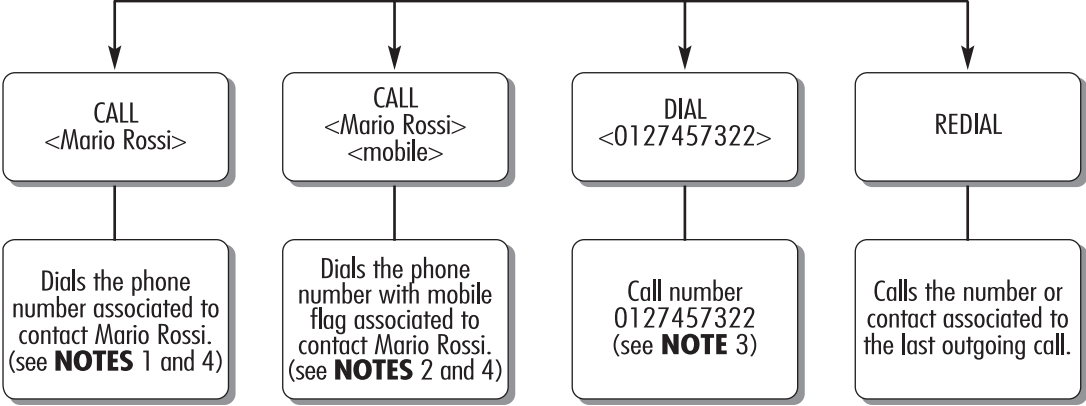


*continued* ⇨


A0J1561

follows ⇨

## Uconnect™ VOICE COMMANDS

PHONE voice commands

If a phone is connected via **Bluetooth®** to the **Uconnect™** system, these commands can be given by any of the main displays after pressing button  provided that there are no ongoing phone calls. If no phone is connected via **Bluetooth®**, the **Uconnect™** system will provide voice message: "There are no paired phones. Pair a phone and try again" and session will be ended.

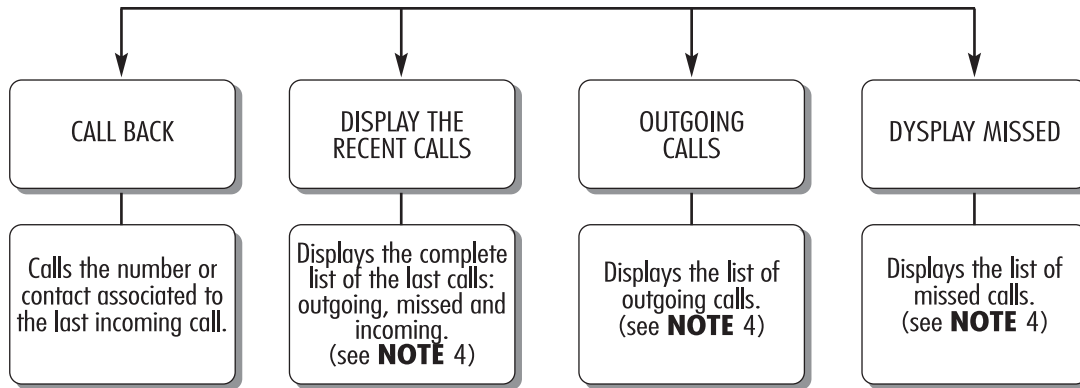


continued ⇨


A0J1562

follows →

## Uconnect™ VOICE COMMANDS

PHONE voice commands

If a phone is connected via **Bluetooth®** to the **Uconnect™** system, these commands can be given by any of the main displays after pressing button  provided that there are no ongoing phone calls. If no phone is connected via **Bluetooth®**, the **Uconnect™** system will provide voice message: "There are no paired phones. Pair a phone and try again" and session will be ended.

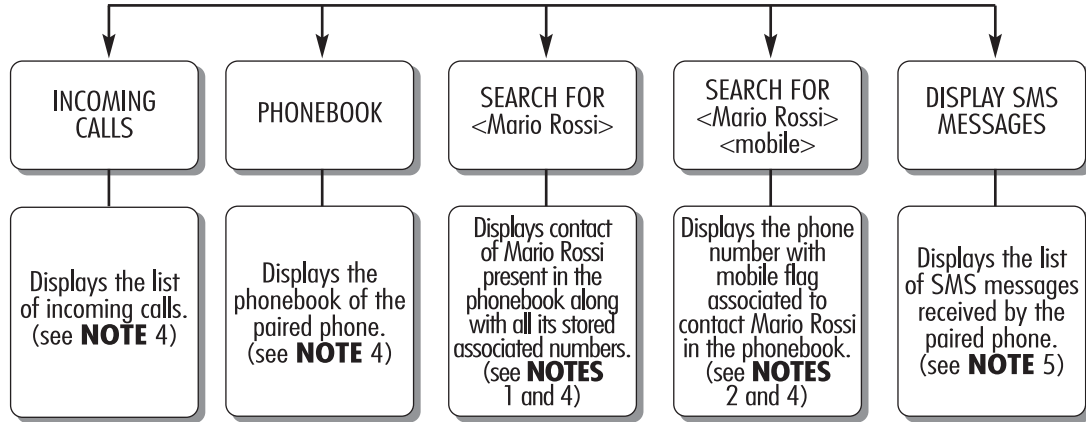

27

A0J1563

## NOTES

1. <Mario Rossi> can be replaced with any name in the phonebook of your mobile phone.

If the phone allows storing of <name> (Mario) and <surname> (Rossi) in two different fields, the following voice commands can be given:

CALL <Mario> <Rossi>

CALL <Rossi> <Mario>

SEARCH FOR <Mario> <Rossi>

SEARCH FOR <Rossi> <Mario>

2. <mobile> can be replaced with one of the 3 available flags: <home>, <office>, <other>.

If the phone allows storing of <name> (Mario) and <surname> (Rossi) in two different fields, the following voice commands can be given:

CALL <Mario> <Rossi> <mobile>

CALL <Rossi> <Mario> <mobile>

SEARCH FOR <Mario> <Rossi> <mobile>

SEARCH FOR <Rossi> <Mario> <mobile>


3. Phone number <0127457322> can be replaced with any other phone number.


4. This function is only available if the phone, connected via Bluetooth, supports download of the phonebook and of the last calls on the **Uconnect™** system and if the download has been carried out.

5. This function is only available if the phone, connected via **Bluetooth®** to the **Uconnect™** system, supports SMS message voice reading function.

**RADIO AM/FM/DAB VOICE COMMANDS**

**Uconnect™ VOICE COMMANDS**  
 RADIO AM/FM/DAB voice commands

These commands can be given by any main display after pressing control button  on the steering wheel, provided that there are no ongoing phone calls.

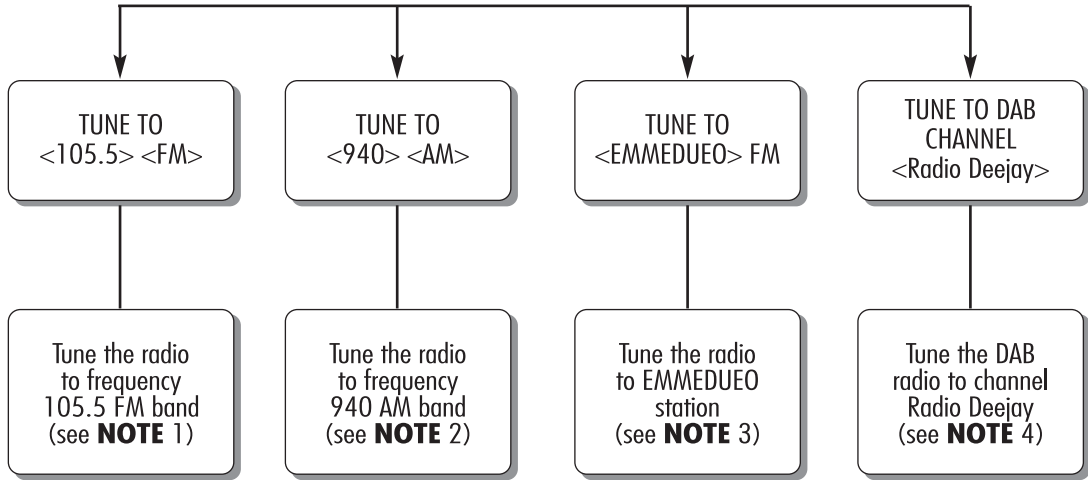




### NOTES

1. <105.5> can be replaced with any other available frequency of the FM band.
2. <940> can be replaced with any other available frequency of the AM band.
3. <EMMEDUEO> can be replaced with any other name of FM station received by the radio.  
Not all the radio stations provide this service.
4. <Radio DeeJay> can be replaced with any other DAB channel name received by the DAB radio.  
Not all the DAB channels provide this service.

**MEDIA VOICE COMMANDS**

**Uconnect™ VOICE COMMANDS**  
 MEDIA voice commands

These commands can be given by any main display after pressing control button  on the steering wheel provided that there are no ongoing phone calls.

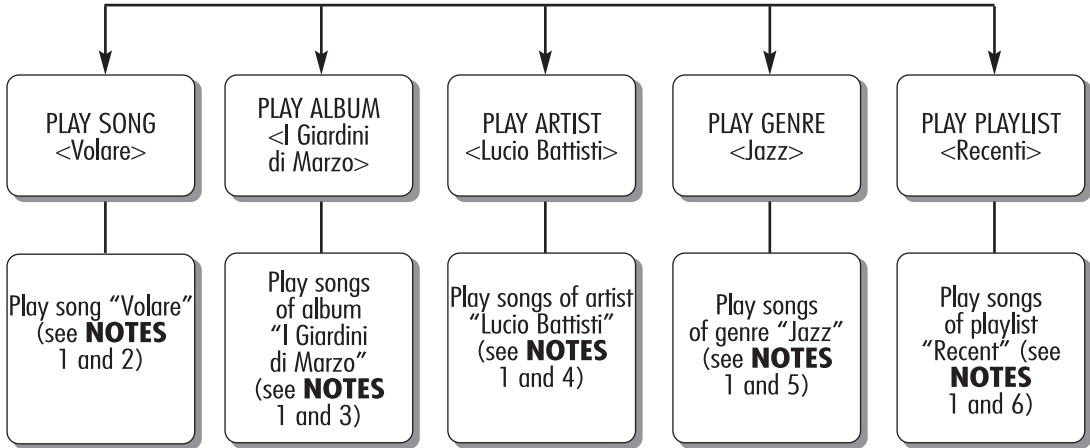

*continued* 


A0J1567

follows ⇨

## Uconnect™ VOICE COMMANDS

MEDIA voice commands

These commands can be given by any main display after pressing control button  on the steering wheel provided that there are no ongoing phone calls.

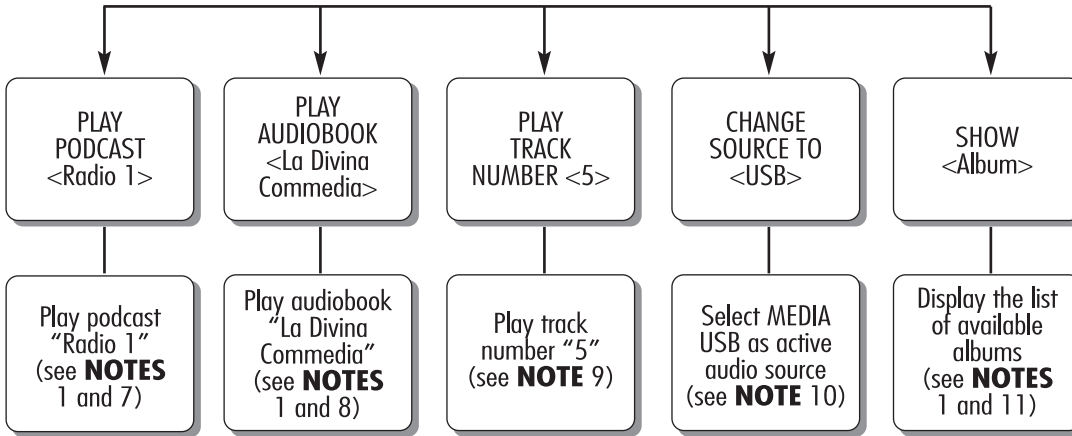

32

A0J1568


**NOTES**

1. Multimedia files stored in MEDIA sources (USB memory stick, iPod via USB, MP3 CD) should have information about songs correctly set (song title, artist, album, genre, podcast, audiobook) otherwise they will not be available via voice commands.
2. <Volare> can be replaced with any other title of a song available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
3. <I Giardini di Marzo> can be replaced with any other title of an album available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
4. <Lucio Battisti> can be replaced with any other name of an artist available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
5. <Jazz> can be replaced with any other genre available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
6. <Recent> can be replaced with any other name of a playlist available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
7. <Radio 1> can be replaced with any other name of a podcast available in the MEDIA source (available on iPod via USB) inserted and active.
8. <La Divina Commedia> can be replaced with any other title of an audiobook available in the MEDIA source (available on iPod via USB) inserted and active.
9. <5> can be replaced with any track number available in the MEDIA source (available on audio CD) inserted and active.
10. <USB> can be replaced with any other MEDIA source: "USB", "iPod", "CD", "AUX" and "Bluetooth".
11. <Album> can be replaced with any other category:
  - "Songs", "Artists", "Albums", "Genres", "Playlists" (available on USB memory stick, iPod via USB, MP3 CD)
  - "Folders" (available on USB memory stick, MP3 CD)
  - "podcasts", "audiobooks" (available on iPod via USB).

## NAVIGATION VOICE COMMANDS

### Uconnect™ VOICE COMMANDS NAVIGATION voice commands


These commands can be given any main display after pressing control  on the steering wheel provided that there are no ongoing phone calls.

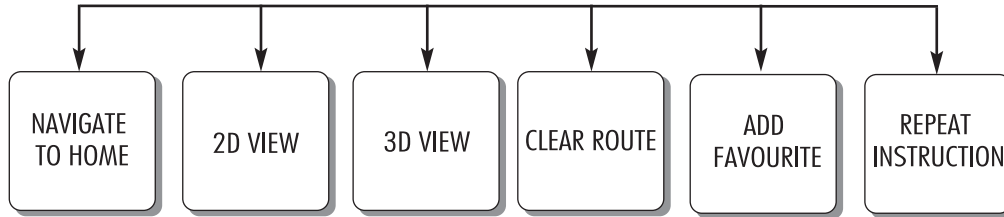

## SMS MESSAGE READER VOICE COMMANDS


### Uconnect™ VOICE COMMAND PHONE voice commands


The commands can be spoken from any screen after pressing button  on the steering wheel.

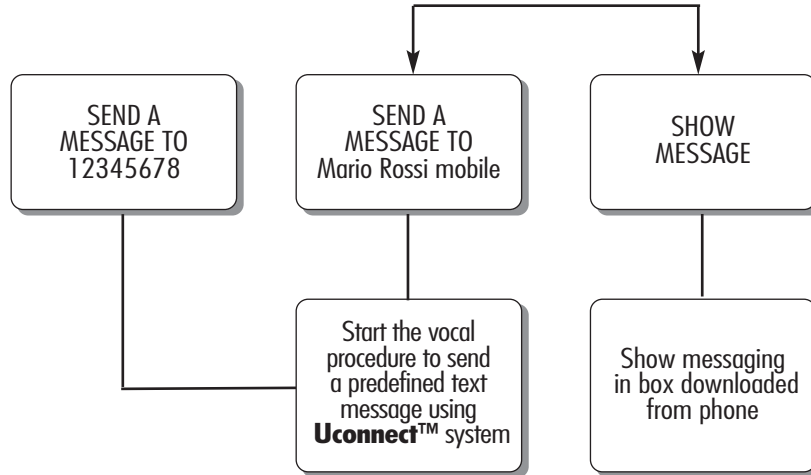

## VOICE COMMANDS DURING A CALL

### Uconnect™ VOICE COMMANDS HANDS-FREE CALLING voice commands

Available commands while phone call is in progress. The commands can be spoken from any screen while a call is active after pressing  button on the steering wheel.

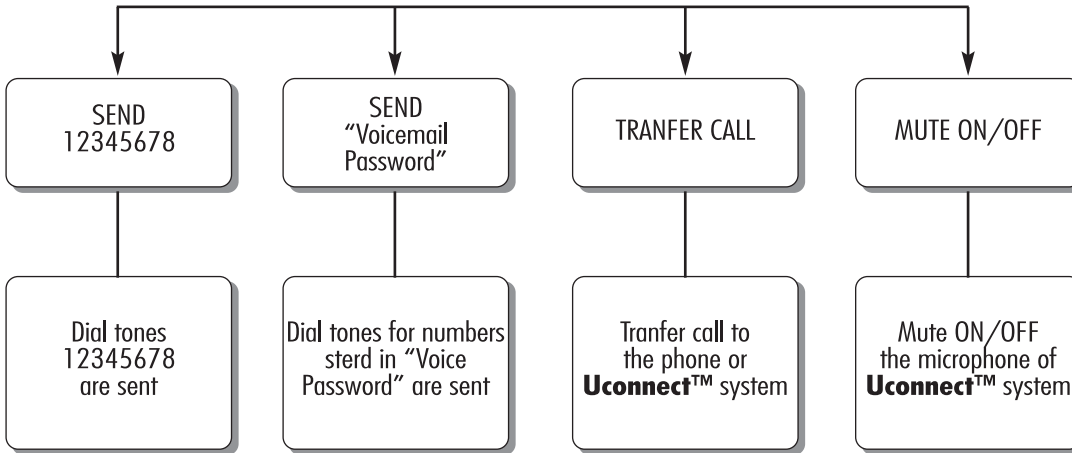

36

A0J1572

## CUSTOMER SERVICE NUMBER LIST

The following table shows the specific Customer Service numbers for each country.

Country	Universal Freephone Number	National Freephone Number	Toll number
Austria	00800.2532.0000		+39.02.4441.2042
Belgium	00800.2532.0000 (*)	0800 55666	+39.02.4441.2042
Denmark	00800.2532.0000 (*)	80 608900	+39.02.4441.2042
France	00800.2532.0000	0800 253200	+39.02.4441.2042
Germany	00800.2532.0000	0800 2532000	+39.02.4441.2042
Greece		80011500800 (*)	+30 210 99 88 542
Ireland	00800.2532.0000	1800253200	+39.02.4441.2042
Italy	00800.2532.0000	800253200	+39.02.4441.2042
Luxembourg	00800.2532.0000 (*)	800 28666	
Morocco		0801 001920	
The Netherlands	00800.2532.0000		+39.02.4441.2042
Poland	00800.2532.0000		+39.02.4441.2042
Portugal	00800.2532.0000		+39.02.4441.2042
United Kingdom	00800.2532.0000		+39.02.4441.2042
Spain	00800.2532.0000	900 253200	+39.02.4441.2042
Sweden	00800.2532.0000 (*)	020100501	+39.02.4441.2042
Switzerland	00800.2532.0000	0800 253200	+39.02.4441.2042

(\*) This number is not available for some mobile system operators.



# Regulatory Information

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Additional statement for Digital Devices / Computer Peripheral Devices

### FCC §15.105 statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF exposure rules and regulations:

- This device/antenna must be installed to provide a separation distance of at least 20 cm from all the persons and must not be co-located or operating in conjunction with any other antenna or transmitter, except in accordance with FCC and Industry Canada multi-transmitter product procedures.
- Antenna gain including cable loss must not exceed 4.25 dBi in Cellular Band and 6.1 dBi in PCS band for RF exposure purposes of 2.1091.

# Europe

Česky [Czech]	<i>Harman Becker Automotive Systems, Inc.</i> tímto prohlašuje, že tento <i>Automotive Infotainment Unit</i> je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]	Undertegnede <i>Harman Becker Automotive Systems, Inc.</i> erklærer herved, at følgende udstyr <i>Automotive Infotainment Unit</i> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erkläre <i>Harman Becker Automotive Systems, Inc.</i> , dass sich das Gerät <i>Automotive Infotainment Unit</i> in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab <i>Harman Becker Automotive Systems, Inc.</i> seadme <i>Automotive Infotainment Unit</i> vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, <i>Harman Becker Automotive Systems, Inc.</i> , declares that this <i>Automotive Infotainment Unit</i> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente <i>Harman Becker Automotive Systems, Inc.</i> declara que el <i>Automotive Infotainment Unit</i> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>Harman Becker Automotive Systems, Inc.</i> ΔΗΛΩΝΕΙ ΟΤΙ <i>Automotive Infotainment Unit</i> ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français [French]	Par la présente <i>Harman Becker Automotive Systems, Inc.</i> déclare que l'appareil <i>Automotive Infotainment Unit</i> est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano [Italian]	Con la presente <i>Harman Becker Automotive Systems, Inc.</i> dichiara che questo <i>Automotive Infotainment Unit</i> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo <i>Harman Becker Automotive Systems, Inc.</i> deklarē, ka <i>Automotive Infotainment Unit</i> atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo <i>Harman Becker Automotive Systems, Inc.</i> deklaruoją, kad šis <i>Automotive Infotainment Unit</i> atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart <i>Harman Becker Automotive Systems, Inc.</i> dat het toestel <i>Automotive Infotainment Unit</i> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]	Hawnhekk, <i>Harman Becker Automotive Systems, Inc.</i> , jiddikjara li dan <i>Automotive Infotainment Unit</i> jikkonforma mal-ftejjiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]	Alulírott, <i>Harman Becker Automotive Systems, Inc.</i> nyilatkozom, hogy a <i>Automotive Infotainment Unit</i> megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym <i>Harman Becker Automotive Systems, Inc.</i> oświadczam, że <i>Automotive Infotainment Unit</i> jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	<i>Harman Becker Automotive Systems, Inc.</i> declara que este <i>Automotive Infotainment Unit</i> está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]	<i>Harman Becker Automotive Systems, Inc.</i> izjavlja, da je ta <i>Automotive Infotainment Unit</i> v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	<i>Harman Becker Automotive Systems, Inc.</i> týmto vyhlasuje, že <i>Automotive Infotainment Unit</i> spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]	<i>Harman Becker Automotive Systems, Inc.</i> vakuuttaa täten että <i>Automotive Infotainment Unit</i> tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar <i>Harman Becker Automotive Systems, Inc.</i> att denna <i>Automotive Infotainment Unit</i> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska [Icelandic]	Hér með lýsir <i>Harman Becker Automotive Systems, Inc.</i> yfir því að <i>Automotive Infotainment Unit</i> er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	<i>Harman Becker Automotive Systems, Inc.</i> erklærer herved at utstyret <i>Automotive Infotainment Unit</i> er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

# CE0168

The EC Declaration of Conformity is available at [www.harman.com/EN-US/ContactUs/Pages/Compliance.aspx](http://www.harman.com/EN-US/ContactUs/Pages/Compliance.aspx).





















**PARTS&SERVICES**

TECHNICAL SERVICES - SERVICE ENGINEERING  
Largo Senatore G. Agnelli, 3 - 10040 Volvera - Turin (Italy)  
Fiat Group Automobiles S.p.A.

Print no. 604.38.624 - 1st Edition - 09/2013

All rights reserved. Reproduction, even partial, is prohibited without written authorisation  
of Fiat Group Automobiles S.p.A.

ENGLISH

**Alfa Services**

