



jbl six button remote

RF Remote control

User Guide

English
Deutsch
Français
Español
Italiano



English

Important Safety Instructions

Please read the following operation precautions before use:


- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do Not use this apparatus near water.
- Clean only with dry cloth.
- Do Not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do Not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do Not defeat the safety purpose of the polarized or grounding type plug. A polarizing plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong, are provided for safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT, PLEASE REFER SERVICING TO QUALIFIED HARMAN JBL CORPORATION SERVICE PERSONNEL.
- Never remove grille covers in order to service the speaker system. The speaker system does not contain any user serviceable parts. Refer all servicing to the JBL Technical Support Group.

Important Note For All Electronic Products: Before inserting or unplugging audio cables from the source device's headphones or line-level output jacks, it is good practice to turn off the device. This will prolong the life of your unit, help protect your device from static electricity, and avoid potential damage.

WARNING: To prevent fire or electrical shock hazard, DO NOT expose this product to rain or moisture.

WARNING: The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, drinking glasses and so forth, shall be placed on the apparatus.

WARNING: The apparatus may be static sensitive in some circumstances and may have to be reset after suffering an electrostatic discharge

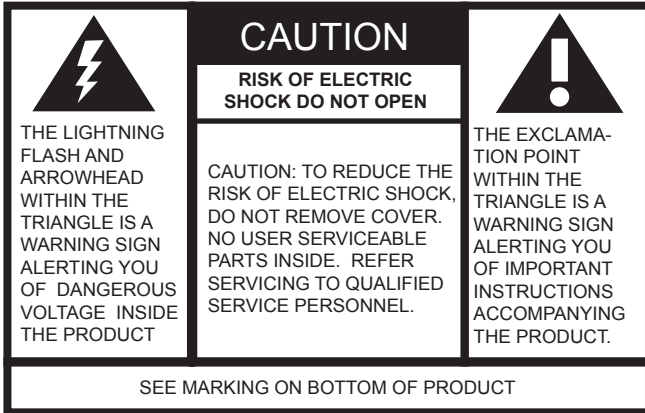

REGULATORY

FCC Statement and Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions;

- 1) This device may not cause interference
- 2) This device must accept interference, including interference that may cause undesired operation of the device

IC Statement and Warning:

Operation is subject to the following two conditions;

- 1) This device may not cause interference
- 2) This device must accept interference, including interference that may cause undesired operation of the device

MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT UNDER FCC RULES.

Music Browsing

Before proceeding, make sure the iPod® is securely docked to your JBL product.

Music Control Mode is indicated by **BLUE** light. iPod® Navigation Mode is indicated by **AMBER** light.

Music Control Mode

| | |
|-------------------------|--|
| Turn iPod® On: | Press any button on the remote control to wake the iPod®. |
| Turn iPod® Off: | Press and hold the Play/Pause button for 2 seconds. |
| Play a Track: | Press the Play/Pause button. Note: If the iPod® is at the Main Menu, pressing Play/Pause will cause the iPod® to start playing all of its music. |
| Pause a Track: | Press the Play/Pause button while a song is playing. |
| Skip to Next Track: | Press the Forward button. |
| Skip to Previous Track: | Press the Reverse button. |
| Fast Advance Track: | Press and hold the Forward button. |
| Fast Reverse Track: | Press and hold the Reverse button. |
| Increase Volume: | Press the Volume Up button. |
| Decrease Volume: | Press the Volume Down button. |
| Mute: | Press the Volume Up and Volume Down buttons at the same time. |
| Change to iPod® Mode: | Press the Mode button. |

iPod® Mode

| | |
|----------------------------|---|
| Turn iPod® On: | Press any button on the remote control to wake the iPod®. |
| Turn iPod® Off: | Press and hold the Play/Pause button for 2 seconds. |
| Scroll iPod® Cursor Up: | Press the Reverse button. |
| Scroll iPod® Cursor Down: | Press the Forward button. |
| Go to Previous Menu: | Press the Volume Down button. |
| Select Menu/Track/Feature: | Press the Volume Up button. |
| Change to Navigation Mode: | Press the Mode button. |

Troubleshooting

| SYMPTOM | POSSIBLE PROBLEM | SOLUTION | NOTE |
|---|--|---|------|
| Command Transmission | | | |
| iPod does not respond to remote commands. | The remote battery power may be low. | Redock the iPod. If problem persists, reset the iPod. Replace battery. | |
| Remote only operates at close range. | The remote range is up to 20 feet. The remote battery power may be low. | Move the source unit closer to the remote. Replace the battery. | |

Technical Specifications

| | |
|-----------------------------|------------------------|
| Transmission: | Radio Frequency |
| Frequency: | 2.4 GHz |
| Operating Range: | Up to 20 ft. |
| Battery: | CR2032 3V |
| Dimensions: | 2-7/8" x 2-1/4" x 5/8" |
| Weight (Including Battery): | 1.2 oz. |

Battery Replacement

The JBL remote's battery should last a year under normal usage. To replace the battery, release the battery cover on the back of the remote and replace the old battery with a CR2032 type battery or equivalent.