

# ***Heath*<sup>®</sup>/*Zenith***

 
## **Wireless Accessory Doorbell Button**

SL-6190 Series

The Heath/Zenith Wireless Accessory Doorbell Button works with existing U, V, W channel or Heath/Zenith jumper or dip switch doorbells.

- Battery powered transmitter- No wires to run.
- Channels are selectable to allow more than one doorbell set in the same house.



- 1. Open the transmitter button case.** Insert a flat blade screw driver into notch on bottom, push in on the tab, and twist the screwdriver.

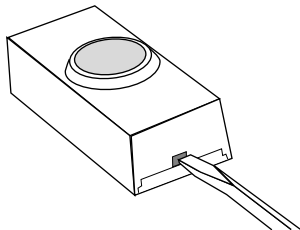

- 2. Set the doorbell button jumpers to match the chime receiver channel.** This button works with channel U, V or W or jumper and dip switch receivers. The doorbell button is ready to use for channel "U".

Heath/Zenith reserves the right to discontinue and to change specifications at any time without notice without incurring any obligation to incorporate new features in previously sold products.

  **Set the jumpers 1 thru 7 to match the chime receiver.** For receivers with switches: jumper on for switch up, jumper off for switch down. For channels V or W insert the jumpers shown below. For chimes with front and backdoor sounds, insert doorbell button jumper 8 for back door sound, remove jumper 8 for front door sound.

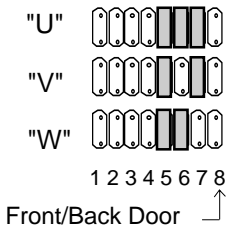


**Bottom of Open  
Doorbell Button**

**Channel Jumper Settings**

 **3. Before mounting, test the doorbell range** by holding the button where you want to mount it and **pressing the doorbell button.**

If the chime doesn't sound when you press the doorbell button, see page 6 for troubleshooting.

**4. Mount the Button.**




The button can be mounted by using the 2 holes in the back of the case, or double sided tape can be used.



Snap the front of button back onto the case.

# Battery Replacement

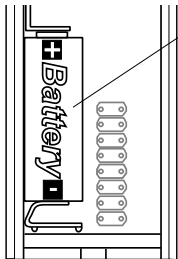 

Remove back cover and old battery. Replace with an alkaline type A23 12 V battery. The positive terminal should be at the top of the case.

## Regulatory Information

The user is cautioned that changes or modifications not expressly approved by the party responsible for regulatory compliance could void the user's authority to operate the equipment.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Troubleshooting

If you are having problems with this product, please try the solutions listed below. If you continue to have problems, consult your warranty.

## **Chime doesn't sound:**

- Make sure the doorbell button and the chime channels are the same (See page 3).
- Check orientation of doorbell button battery.
- Check the doorbell button and chime batteries, replace if necessary.

## **Batteries are OK, but the chime doesn't work:**

- Don't mount the chime or doorbell button on metal or near metal studs. This reduces the transmitter range. Use 1/4" to 1/2" wood shims to move the chime or doorbell button off the metal surface.
- Don't mount the chime too close to ground level concrete slabs. This may also reduce the range. Mount the chime away from the floor.
- Try different locations for the chime closer to the doorbell button. Also try to orient the chime at a different angle to increase the range.

The range of the doorbell depends on location, temperature and battery condition.

## YOUR HEATH/ZENITH FIVE YEAR LIMITED WARRANTY

This is a "Limited Warranty" which gives you specific legal rights. You may also have other rights which vary from state to state or province to province.

For a period of five years from the date of purchase, any malfunction caused by factory defective parts or workmanship will be corrected at no charge to you. **Batteries are not covered.** To obtain a refund or a replacement, return the product to the place of purchase.

**Not Covered** - Repair service, adjustment and calibration due to misuse, abuse or negligence, light bulbs and other expendable items are not covered by this warranty. Unauthorized service or modification of the product or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.

This warranty covers only Heath/Zenith assembled products and is not extended to other equipment and components that a customer uses in conjunction with our products.

This warranty is expressly in lieu of all other warranties, express or implied, including any warranty, representation or condition of merchant ability or that the products are fit for any particular purpose or use, and specifically in lieu of all special, indirect, incidental, or consequential damages.

Repair or replacement shall be the sole remedy of the customer and there shall be no liability on the part of heath for any special, indirect, incidental, or consequential damages, including but not limited to any loss of business or profits, whether or not foreseeable. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Retain receipt for warranty claims.