



Basic R/C control for PRORIDE SKATEBOARD:


Follow hand control illustrations to perform tricks.

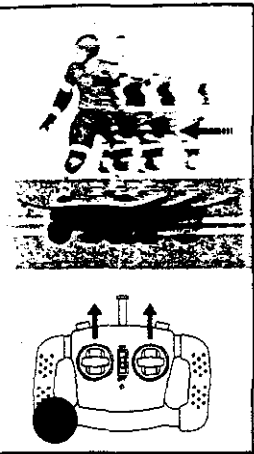


Forward Direction.

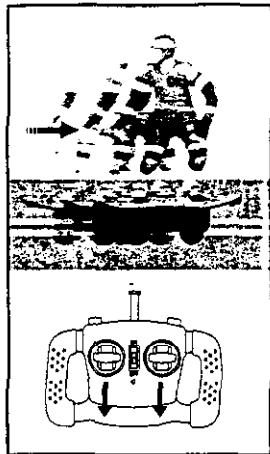


Backward Direction.

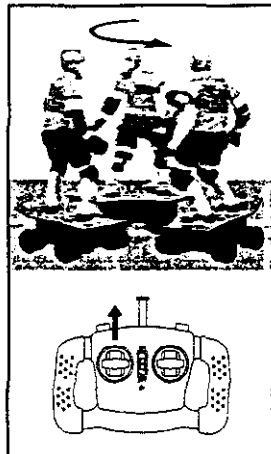


Forward Circle - facing in (anti-clockwise).

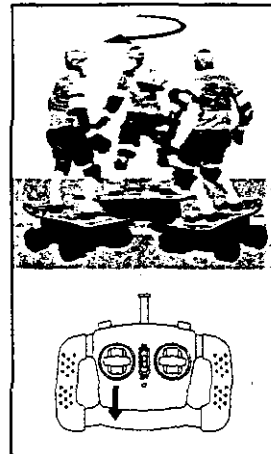


Backward Circle - facing in (clockwise).

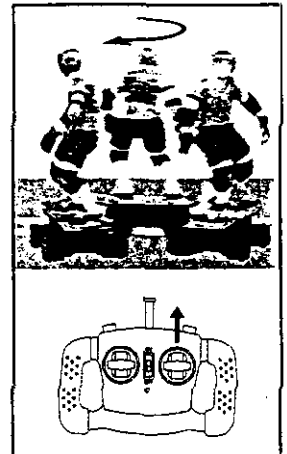


Forward Circle - facing out (clockwise).

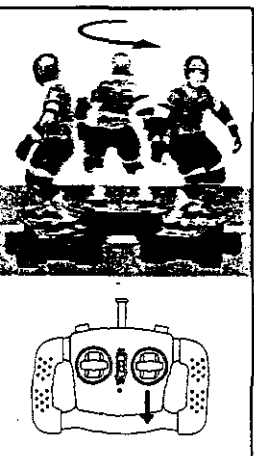


Backward Circle - facing out (anti-clockwise).

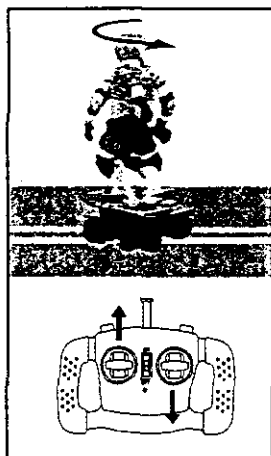


Backward Spin- on spot (anti-clockwise).

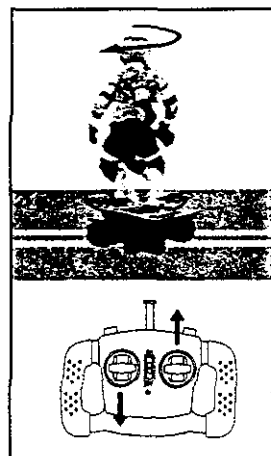


Forward Spin - on spot (clockwise).

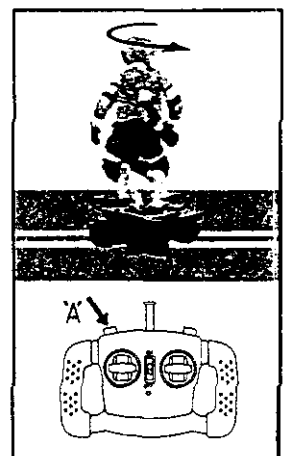


Pre-programmed button 'A': Press button 'A' to Spin on the spot.

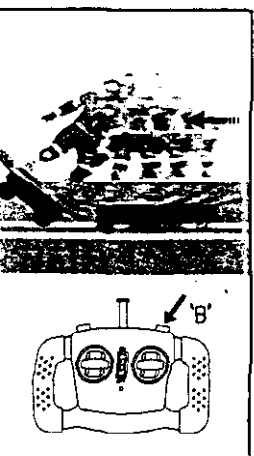

Pre-programmed button 'B': Press button 'B' to perform Pop-up stunt.

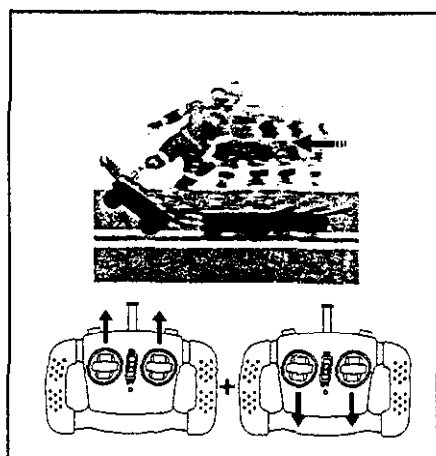

For Wheelie - Push both controls forward & pull backward fast, for Pop-up stunt.

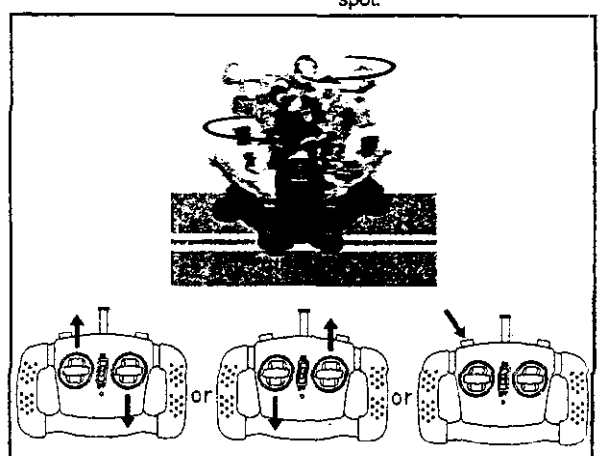

In Wheelie position use normal controls, or button 'A' for Spin function.

With practice you can learn to perform many trick combinations and realistic skateboard stunts!

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



BATTERY & ON/OFF SWITCH DIAGRAM

BATTERY INSTALLATION



- *Remove the battery compartment using a screwdriver as shown.
- *Insert correct battery—as shown in diagram, making sure to match the polarity direction.
- *Replace the battery cover.

TO REPLACE BATTERIES UNSCREW SINGLE SCREW ON BATTERY COVER AS SHOWN IN ILLUSTRATION AND REPLACE BATTERIES.


SIZE "AA" LR6
UM-3 DC 1.5V

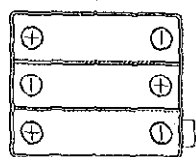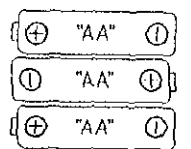

TO REPLACE BATTERIES UNSCREW SINGLE SCREW ON BATTERY COVER AS SHOWN IN ILLUSTRATION AND REPLACE BATTERIES.

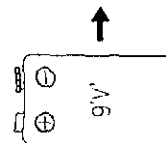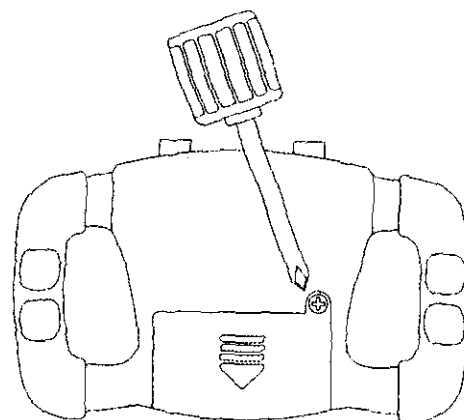

REMOTE CONTROL

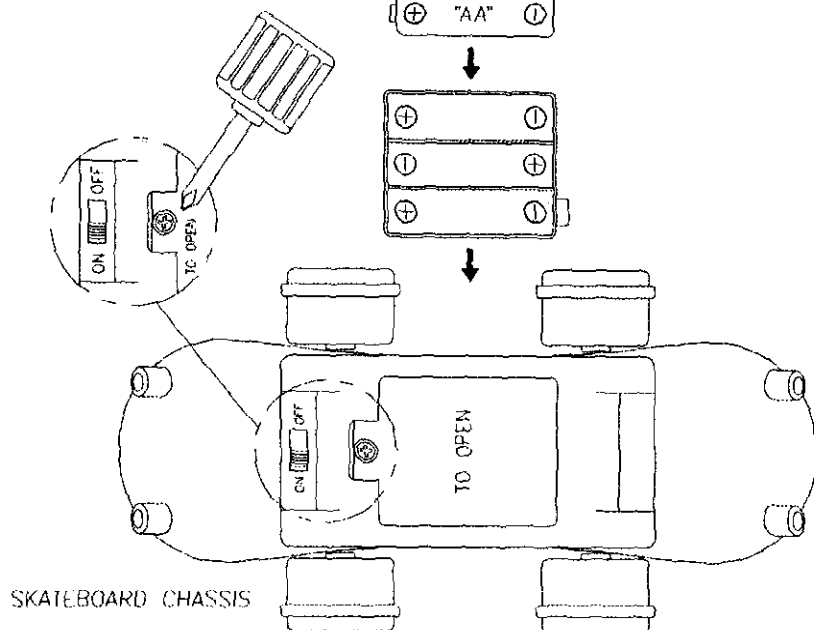

IMPORTANT BATTERY INFORMATION

- *Do not mix old and new batteries.
- *Do not mix alkaline, standard (Carbon Zinc) or rechargeable (nickel-cadmium) batteries.
- *Rechargeable batteries not recommended.
- *Batteries should be replaced by adults because of small parts.

Batteries are to be inserted with correct polarity.

Non-rechargeable batteries are not to be recharged.

Only batteries of the same or equivalent types as recommended are to be used.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect one equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.