

P909 9" Polaroid Tablet User Guide

08/01/2016

Polaroid | 9" HD TABLET HENA

P909 /MID-9526L

User Guide

In the box

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries do not fully charge.
- New batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself!
- Do not use the tablet in rain or other wet locations.
- Avoid rolling any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use flammable liquids, solvents, alcohol, or abrasives to clean the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage or broken parts, remove the tablet from use.
- If for any reason the screen displays a fractured or cracked, immediately remove this product from use and contact Customer Support.
- If you are not advised by experts to be exposed to light flames or patterns such as those on computer or TV screens, to reduce exposure to this potential hazard, play/watch in a well-lit room, at an appropriate distance from the screen and take 10-to-15 minute breaks every hour.
- Cords should be kept away from children's reach.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury, or death. Adult supervision required during use.
- Long-term exposure to loud sound, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment, turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Care & safety precautions

WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED DANGEROUS VOLTAGE PARTS IN THE PRODUCTS ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE SERVICING INSTRUCTIONS ON THE LITERATURE ACCOMPANYING THE PRODUCT.

Buttons, ports & hardware

FRONT

- ① 9" HD display
- ② Built-in camera (video chat)
- ③ Power button
- ④ Headphone jack
- ⑤ Micro USB port

SIDE

- ⑥ Volume buttons
- ⑦ Microphone

BACK

- ⑧ Micro SD card slot
- ⑨ Reset button
- ⑩ Speaker

Specifications:

- 9.0" HD display (1024 x 600)
- Android 6.0, Marshmallow
- Quad-Core processor
- 8GB internal storage
- Micro SD card slot
- Built-in camera (video chat)
- Wi-Fi
- Bluetooth®

Charging

Wall outlet Charger USB charging cable Micro USB plug Tablet (SIDE)

When charging, the lightning indicator will appear in the battery icon.

Connect the tablet to a wall outlet using the included charger and USB charging cable as shown below.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Initial Setupx

Turning on the tablet

Press & hold the Power button until the startup screen appears.

Power off the tablet

Press & hold the Power button until the "Power off" option appears.

Tablet (SIDE)

- ① Press and hold the Power button to get started.
- ② Follow the initial setup wizard prompts.
- ③ To use the Google Play store, sign into or create a Google account.

Lock the tablet (standby)

Briefly press the Power button. (Lock the tablet to conserve the battery).

Unlock the tablet

Briefly press the Power button, and slide the "Lock icon" up.

Lock screen

If you use Gmail™, you already have a Google account — if not, you can create an account now.

Google Play™

Google Play

Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub: you can access it from the web or from your Android device, and all your content is instantly available across your devices.

Home screen

Widgets
To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

Press and hold widgets to place them on the home screen as shown below.

Apps Screen

Press icon on the home screen to access the Apps Screen.

Notifications panel and Quick Settings

Notifications panel
Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

Quick Settings panel
Swipe down **twice** from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

Connecting

Wi-Fi and Bluetooth
To enable/disable Wi-Fi or Bluetooth, simply tap the icons on the Quick Settings panel as shown below.
To access more settings options, select the icon.

Expanding the storage

Inserting a Micro SD card
The tablet supports Micro SD cards up to 64GB (not included).

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

Transferring files

- Connect the tablet to the computer using the included USB charging cable as shown below.
- Tap the "USB for charging" notification on the tablet screen.
- Select "File transfers".
- The internal storage of the tablet will appear on your PC.

Reset

If the tablet malfunctions or freezes, you can use the reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below.

The tablet will restart.

Legal Information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference with radio communications. It is your responsibility to take measures to prevent such interference. In particular, if this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Information Regarding Exposure to Radio Frequency Energy
This device is designed and manufactured not to exceed the emission limits for Class B devices set by the Federal Communications Commission of the United States (FCC). Information on your device is on file with the FCC and can be found under the Display Name section of <http://www.fcc.gov/etfs> after searching on the FCC ID for your device, which can be found on the back of the device.

PLP-R Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid creating e-waste, you should properly dispose of this product in compliance with applicable regulations, directives or other governmental rules in the area where you reside. Please check with local authorities or the retailer where you purchased the product to determine a location where you can appropriately dispose of the product.

You may also go to www.electronicstake.com and reference social responsibility <http://www.plp-r.com/social-responsibility> to learn more about the specific laws in your area and to locate a collection facility near your home.

Battery Disposal & Recycle
This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal. ☎ 1-800-232-8837

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CUSTOMER
This product is warranted in the original packaging (as supplied and distributed new by an authorized retailer) to be free from defects in materials and workmanship ("Warranty") as follows:
Warranty type: Tablet, Tablet (Accessory) / Canada, Part Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:
• Call the Customer Support number located below, or go to our website portal or email to receive an RMA number.
• Provide proof of date of purchase within the package (Dated bill of sale).
• Prepay all shipping costs to the authorized service center, and remember to insure your return.
• Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
• Describe the defect or reason you are returning the product.

Customer Support:
☎ 1-877-768-8481 (Toll Free)
Monday - Friday 9AM - 5PM (EST)
www.southernhometek.com
Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

☎ Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Savannah, GA 31407

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THESE PRODUCTS EXPLICITLY DESCRIBED, HEREIN, FURTHER DISCLAIM ALL WARRANTIES, AFTER THE ORIGINAL PURCHASE PRICE DATE ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY IN CONNECTION WITH THE SALE OF THIS PRODUCT, WITH RESPECT TO THE PRODUCT, BEING AN OBJECT OF REFUND IS THE ORIGINAL PURCHASE PRICE. AT THE DISTRIBUTOR'S SOLE DISCRETION, ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL THE DISTRIBUTOR OR MANUFACTURER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR NON-USE OF THE PRODUCT, AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMERS' RECOVERY AGAINST THE DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THE WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CUSTOMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusion may not apply to you, and you may have other rights that vary from state to state or province or provision to provide. Contact your authorized dealer to determine if another warranty applies.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.