### **HESTANCUE**<sup>™</sup>

# Safety Instructions and Warnings

11" FRY PAN STAINLESS STEEL



## The Hestan Cue™ Cooking System



#### IMPORTANT SAFETY AND CARE INFORMATION AND WARNINGS

Thank you for choosing Hestan Cue cookware. To ensure a long life for your cookware and a pleasant experience, please read this information before you use your cookware. These instructions are for your general safety, for proper product use and care, and to prevent personal injury and damage to your cookware or property. Complete and updated documents are available at hestancue.com/support/guides.

Please read through these documents before using the Hestan Cue Smart Cooking System.

- Quick Start Guide
- Safety Instructions and Warnings
- Product and System Guide

Hestan Cue Smart Cooking System requires the following: Hestan Cue Smart Induction Burner, one or more pieces of Hestan Cue cookware (each with matching Smart Capsule) and the Hestan Cue App. The complete system is required for guided cooking functionality.

### General Safety Information

- WARNING: NEVER PLACE ANY PART OF THE HESTAN CUE SMART COOKING SYSTEM ON OR NEAR HEATED COOKING RANGES, COOKTOPS, OVENS, BROILER/GRILLERS OR MICROWAVES. This includes the Hestan Cue Smart Induction Burner, Smart Capsule and Hestan Cue cookware, such as the Fry Pan. Extreme damage, including fire and explosion, may occur.
- WARNING: NEVER PUT HESTAN CUE COOKWARE OR SMART CAPSULES INTO DISHWASHER. Extreme damage, including explosion, may occur. Do not submerge the cookware in water. Moisture may affect the Smart Capsule.
- WARNING: ADDING INGREDIENTS TO A HOT PAN CAN RESULT IN HOT SPLATTER, LOUD NOISES AND POPPING, ESPECIALLY WHEN HOT OIL IS PRESENT. Use extreme caution when cooking to avoid bodily injury and burns. It is best to remove metal jewelry when cooking with heat. Hestan Smart Cooking Inc. will not be held liable for any injuries or damages resulting from the use of the Hestan Cue Smart Cooking System. Never stand closer than 8" [20.3 cm] from the Hestan Cue Smart Cooking System. If the contents of the pan is spilling over, or excessively splattering, calmly unplug the Hestan Cue Smart Cooking System and wait for contents to cool entirely before cleaning and removing.
- Do not allow liquids to boil over cookware. Do not allow food or liquids to heat directly on the Hestan Cue cooktop. Do not allow food or liquids to enter the internal parts of the Hestan Cue Smart Induction Burner. Follow cooking instructions carefully, and never overfill the cooking vessel with foods or liquids, as they may boil over and compromise the performance and safety of the Hestan Cue Smart Induction Burner. If liquids appear to be boiling over the cookware, unplug the unit immediately, allow to cool before cleaning or recommencing cooking. If liquid enters the induction burner, unplug the unit immediately and discontinue use. If liquids enter the internal parts of the Hestan Cue System, it may cause the system to short circuit and may cause electric shock.

- When using the Hestan Cue Smart Cooking System, follow cooking instructions carefully to avoid adverse effects.
- <u>Unattended Cooking</u>: CAUTION: Never leave cookware unattended while in use. Never allow your cookware to boil dry, and never leave empty cookware on a hot burner. Unattended, empty cookware on a hot burner can get extremely hot, which can cause personal injury and/or property damage. It may also cause permanent damage to the internal circuitry of the Hestan Cue cookware.
- Remove and discard all packaging materials and labels before use.
- Do not use the Hestan Cue Smart Cooking System for any purpose other than its intended purpose as described in the separate Product and System Guide.
- The cookware does not contain user-serviceable parts. Never attempt to modify, repair or replace any of its parts.
- This system is intended for adults. Do not allow a child to cook, use or operate any part of the system without adult supervision
- Hestan Smart Cooking will not be responsible for any damage to persons or property, such as stovetops, ovens and other cooking appliances, resulting from the misuse of the system.
- **Exclusive use:** Hestan Cue cookware must only be used with a compatible Hestan Cue Smart Induction Burner. Never use Hestan Cue cookware with any other model or make of stove, oven, third-party induction burner or other type of cooking appliance.
- **Safety:** Keep small children away from the Hestan Cue Smart Induction Burner while you are cooking. Never allow a child to sit near or under the burner while cooking. Be careful around the burner when it is turned on, as heat, steam, hot foods/liquids and splatters can cause burns.
- **Pet Warning:** Fumes from everyday cooking particularly smoke from burning foods – can be harmful to your bird and other small pets. Overheating cooking sprays, oils, fats, margarine and butter will create dangerous fumes that a bird's respiratory system cannot handle. Scorched plastic handles or utensils can also contaminate the air and endanger birds and other pets. Never allow a pan to overheat, and never cook with birds or small pets in or near the kitchen.
- <u>Undercooking:</u> Some recipes used by the Hestan Smart Cooking System do not reach USDA recommended temperatures. Consuming raw or undercooked meats, poultry, seafood, shellfish or eggs may increase your risk of foodborne illness, especially if you

have certain medical conditions. If this is a concern of yours, please adhere to the Safe Minimum Internal Temperature Chart available at usda.gov.

- **Clad Stainless Steel:** If your cookware boils dry and/or if you see molten aluminum or other metal, do not pick up your pan. Turn the burner off, allow the pan to cool, then remove from the burner and discard. Do not reuse a pan that has been allowed to boil dry. Clad stainless steel cookware may also become discolored or warped if allowed to boil dry.
- **Sliding Pans:** Avoid excessively sliding or dragging your cookware directly over the surface of your Hestan Cue Smart Induction Burner cooktop, as scratches may result that may compromise the effectiveness and safety of the burner. Hestan Smart Cooking is not responsible for scratched cooktops or cookware.
- **Utensils:** Metal utensils are safe to use with stainless steel pans; however, they will scratch the stainless steel surface. Scratches due to metal utensils are not covered under warranty. Sharp-edged tools such as forks and knives should not be used, and knives should never be used to cut against the cookware surface, inside or outside. Scratches, shavings and similar markings and deformities due to sharp-edged utensils are not covered under warranty.
- **Disposal:** Do not dispose of any part of the Hestan Cue system in garbage or fire. Comply with local applicable disposal/recycling laws.
- This cookware is not intended for commercial use or restaurant use.

#### **PROHIBITED USES:**

- Microwaves: Never use Hestan Cue cookware or Smart Capsule in the microwave.
- **Ovens:** Hestan Cue cookware and Smart Capsules are not oven safe to any temperature. Extreme damage, including explosion, may occur.
- **Broiler/Griller:** Never place Hestan Cue cookware or Smart Capsules under the broiler. Extreme damage, including explosion, may occur.

### Smart Capsule Information and Warnings

• Use designated Smart Capsule only within specific Hestan Cue cookware for which it is intended. For example, use only the specific 11" Stainless Steel Fry Pan capsule inside the 11" Stainless Steel Fry Pan cookware.

- Follow installation instructions for proper and safe usage. Installation instructions are available at hestancue.com/support/guides. Hestan Cue cookware usage described in this and other literature assumes Smart Capsule is installed and functioning.
- Do not use Hestan Cue cookware that does not have a properly installed Smart Capsule. Damage may occur.
- Do not allow young children to handle the Smart Capsule or perform the installation, especially children under age 3. The Smart Capsule is not a toy. It contains small parts that can become choking hazards.
- The Smart Capsule does not contain user-serviceable parts. Never attempt to modify, repair or replace any of its parts except to replace the battery.

### Smart Capsule Battery Handling and Usage

- Keep batteries away from children and pets. Batteries may be harmful if swallowed. Should a battery be swallowed, seek medical assistance immediately.
- Battery may explode or leak and cause burn injury if recharged; disposed of in fire; inserted backward; dismantled; or placed in a heated oven, cooking appliance or in dishwasher.
- Do not short-circuit the terminals of the battery.
- Do not dispose of battery or Smart Capsule with household waste. Comply with local applicable disposal/recycling laws.
- Remove battery before a long period of nonuse or before storing for a long period.
- Exhausted battery from Smart Capsule should be removed promptly.
- Only insert battery with correct polarity, and follow installation instructions completely. Installation instructions are available at hestancue.com/support/guides.
- When installing or replacing the battery, use a new alkaline AAA battery for best results. The Hestan Cue app will indicate current battery levels.

### Cleaning

#### • WARNING: NEVER WASH HESTAN CUE COOKWARE OR SMART CAPSULES IN

**DISHWASHER.** Extreme damage, including explosion, may occur. Do not submerge the cookware or Smart Capsule in water or other liquid. Moisture may affect the Smart Capsule.

- **Standard Care (Stainless Steel):** Do not remove Smart Capsule from cookware when cleaning. Before first use and after each use, hand-wash cookware with warm water mild, nonabrasive dish soap and a non-scratch scrub sponge. If food remains on the surface after use or cleaning, use the Hestan Cue Smart Induction Burner to boil a mixture of 1 part baking soda, 1 part vinegar and 3 parts water in the pan to dislodge the food particles, then clean again as stated above.
- **Smart Capsule Care:** If the Smart Capsule exterior has become dirty or soiled, wipe clean with a damp cloth.
- **Discoloration, Spots and Stains:** Discoloration (which may appear as a rainbow hue) can occur on stainless steel cookware if cooking with high heat or continuous heat. Similarly, household water containing higher levels of calcium may create a spotted white film from regular contact with the cookware over time. In either case, remove by boiling a solution of 1 part baking soda, 1 part vinegar and 3 parts water. If necessary, wait for solution to completely cool down, then scrub with a non-scratch scrub sponge. Never use oven cleaners or abrasive cleaners to clean cookware. They will ruin the cookware.
- **Storage:** To avoid scratches, place cloth or paper pan protectors or paper towels between pans when storing.

### Handles and Knobs

#### CAUTION:

- <u>Hot Handles and Knobs</u>: Handles and knobs can get very hot under some conditions. Use caution when touching them, and always have dry potholders available for use.
- **Potholders:** Potholders that are not completely dry will conduct heat and produce steam when used on hot surfaces or cookware. Burning and permanent injury may result. Do not let potholders remain on hot surfaces. Never use or create substitutes for a potholder, such as a towel, piece of fabric, other material or apparatus.

- Handle Position when Cooking: Hestan Cue cookware should never be used without a Hestan Cue Smart Induction Burner. Cookware should be placed in the center of the burner. This ensures even cooking, maximum burner efficiency and minimum danger from cookware tipping. Take care to position pans so that the handle is not over or near other hot burners or heated surfaces. Take care that the handle does not accidentally knock cookware off the burner cooktop.
- Loose Handles: Periodically check handles and knobs to be sure they are not loose.
  NEVER USE COOKWARE THAT HAS A LOOSE HANDLE.

### Lids

Hestan Cue Smart Fry Pan does not come with a lid and is not intended for use with a lid. If using lids from other cookware, please exercise caution.

- **Steam:** When removing lids or cooking with steam-vented lids, always position the lid so that the steam is directed away from you. Always use a potholder when adjusting lids with steam vents. Rising steam can cause burns.
- Locking/Straining Lids: Do not use locking or straining lids with the Hestan Cue Pan.
- Lid Vacuum: Leaving a lid on a pan after turning down the heat or turning off the Hestan Cue Smart Induction Burner may create a vacuum that causes the lid to seal to the pan. If a lid vacuum seal occurs, DO NOT attempt to remove the lid from pan in any way. If your lid is vacuum-sealed to your pan, return it to the burner on low heat so that the air inside the pan gently warms and expands and releases the seal. The lid should lift effortlessly from the pan. To prevent a lid seal from recurring, remove the lid or set it ajar before turning heat off.

### Warranty Details

This Hestan Cue cookware is manufactured and inspected to ensure quality and performance. It is warranted to be free from defects in material and workmanship under normal household use for a period of one year after the date of purchase by the original purchaser. This guarantee does not cover damage caused by accident, misuse such as not

following product instructions, abuse, or commercial use. Scratches, stains, discoloration, damage from overheating or damage from use of an automatic dishwasher are not covered by this guarantee. Incidental or consequential damages and normal wear and tear are not covered by this guarantee. Hestan Smart Cooking Inc. promises the original purchaser to replace any defective part or item during the guarantee period. Should you have a problem with this item, please contact us via our website at hestancue.com. This guarantee gives you specific rights, and you may also have other rights, which may vary from state to state. Thank you for purchasing this item. We wish you years of cooking enjoyment.

#### **<u>California Proposition 65</u>** (applicable to California residents only):

**WARNING:** This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

### Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 8" [20cm] between the radiator and your body.

The transmitter must not be co-located or operating in conjunction with another antenna or transmitters. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in the manual.

Compliance information: Model number: 31519 (11" Stainless Steel Fry Pan Smart Capsule) FCC ID: YYY-EDCBA

Hestan Smart Cooking Inc 1 Meyer Plaza Vallejo, CA 94590



## #hestancue

Find us @HestanCue on social media: ( f) 📀 💿 💿

Product Guide hestancue.com/support/guides

hestancue.com

Copyright © 2016 Hestan Smart Cooking Inc. All Rights Reserved.









Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hestan Smart Cooking Inc is under license.